

Recommended Service Parts Stock List for

NEOTHERM® XTR

NT2(H,V) 0399 - 1500



Part Number	Description	Used on Size	Recommended Quantity
R2093400	Blower with gaskets	399-500	1
R2093600	Blower with gaskets	650	1
R2093601	Blower with gaskets	800-1500	1
R2091900	Condensate trap assembly	399-1500	1
R2092200	Main burner with gasket	399	1
R2092300	Main burner with gasket	500	1
R2092400	Main burner with gasket	650	1
R2092500	Main burner with gasket	800	1
R2092600	Main burner with gasket	999	1
R2092700	Main burner with gasket	1500	1
R2093800	Gas valve with orings	399-500	1
R2093900	Gas valve with orings	650-800	1
R2090800	Gas valve with orings	999-1500	1
R2091000	Flame sensor with gasket	399-1500	3
R2090900	Ignitor with gasket	399-1500	3
E2389700	Pressure switch	399-1500	1
R2090300	Spark generator assembly	399-1500	1
R2090500	Control board assembly	399-1500	2
R2090400	Display module (includes protector)	399-1500	1
RE2320600	Temperature sensor, water inlet	399-1500	2
E2395500	Temperature sensor, water outlet	399-1500	2
R2091200	Flue temperature probe	399-1500	2
E2428700	Thermal cutout	399-1500	1
R2092000	Front insulation	399-1500	1
R2092100	Rear insulation	399-1500	1
R2093000	Gasket set, containing: - Ignitor gasket - Flame sensor gasket - Intake manifold gaskets - Burner door gasket - Burner gasket	399-1500	6