



Installation and Operation Instructions for

NEOTHERM[®] LC

Modulating Boiler

Model NTH1000
1,000 MBTU/h

Model NTH1200
1,200 MBTU/h

Water Heater

Model NTV1000
1,000 MBTU/h

Model NTV1200
1,200 MBTU/h

FOR YOUR SAFETY: This product must be installed and serviced by a professional service technician, qualified in hot water boiler and heater installation and maintenance. Improper installation and/or operation could create carbon monoxide gas in flue gases which could cause serious injury, property damage, or death. Improper installation and/or operation will void the warranty.

⚠ WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a nearby phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or gas supplier.

⚠ AVERTISSEMENT

Assurez-vous de bien suivre les instructions données dans cette notice pour réduire au minimum le risque d'incendie ou d'explosion ou pour éviter tout dommage matériel, toute blessure ou la mort.

Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables dans le voisinage de cet appareil ou de tout autre appareil.

QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ:

- Ne pas tenter d'allumer d'appareils.
- Ne touchez à aucun interrupteur. Ne pas vous servir des téléphones dans le bâtiment où vous vous trouvez.
- Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur.
- Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le service des incendies.

L'installation et l'entretien doivent être assurés par un installateur ou un service d'entretien qualifié ou par le fournisseur de gaz.

Table of Contents**SECTION 1 General Information**

1.A	Introduction	5
1.B	Warranty	5
1.C	Model Identification	5
1.D	Safety Notes	6
1.E	Model Overview	8
1.F	Dimensions	8
1.G	The Installation Kit	9
1.H	Optional Pump Kit	9

SECTION 2 Locating the unit

2.A	Locating the unit	10
2.B	Correct Vent Distance from Outside Wall or Roof Termination	10

SECTION 3 Venting and Combustion Air

3.A	General Venting	10
3.B	Combustion Air	12
3.B.1	Combustion Air From Room	12
3.B.2	Ducted Combustion Air	13
3.C	Venting	14
3.C.1	Common Venting	14
3.C.2	Venting Requirements Unique to Canada	14
3.D	Locating the Vent and Combust Air Terminals	15
3.D.1	Side Wall Vent Terminal	15
3.D.2	Side Wall Combustion Air Terminal	17
3.D.3	Vertical Vent Terminal	18
3.D.4	Vertical Combustion Air Terminal	18
3.D.5	Installations in the Commonwealth of Massachusetts	18
3.E	Common Vent Test	19
3.F	Outdoor Installation	19
3.G	Condensate Drain Trap	19

SECTION 4 Gas Supply and Piping

4.A	Gas Supply and Piping	20
-----	-----------------------------	----

SECTION 5 Pump Requirements

5.A	Boiler Flow and Head Requirements	22
-----	---	----

SECTION 6 Water Connections

6.A	Boiler systems	23
6.A.1	Boiler System Piping: Hot Supply Connections	23
6.A.2	Boiler Cold Water Make-Up	23
6.A.3	Boiler Freeze Protection	24
6.A.4	Condensate Drain Trap	24
6.A.5	Boiler Suggested Piping Schematics	24
6.B	WATER Heater systems	29
6.B.1	Water Heater Quality	29
6.B.2	Water Heater Piping Requirements	29
6.B.3	Heater Cold Water Make-Up	30
6.B.4	Heater Freeze Protection	30
6.B.5	Heater Suggested Pumps	30
6.B.6	Condensate Drain Trap	30
6.B.7	Water Heater Suggested Piping Schematics	31

SECTION 7 Electrical Connections

7.A	Main Power	33
7.B	Pump Connections	33
7.C	Vari-Prime (Optional Variable Speed Pump Control)	35
7.D	24 VAC Transf w/ Integral Circuit Breaker	35
7.E	Signal Connections	35
7.F	Optional Low Water Cutoff (LWCO)	35
7.G	Other Optional Field Connections	35
7.H	Building Automation System Connections	36
7.I	Lead Lag Connections & Wiring Diagram	37
7.J	Wiring Diagram	38
7.K	Ladder Diagrams	40
7.L	About the Touch Screen Display	42

SECTION 8 Using the touch screen

8.A	Using the Touch Screen	44
8.B	The Gauges	46
8.C	While Operating - Checking Lead Lag Operating Information	46
8.D	Checking the Lead Lag Leader	46
8.E	Checking Individual Parameters	47
8.F	Checking Individual Details	48
8.G	Configuring Parameters on Controllers	48
8.H	Verification Process for Safety Parameters	49

SECTION 9 Setup and Configuration

9.A	Review of Lead Lag Control System	51
9.A.1	About Lead Lag Operation	51
9.A.2	Lead Lag Modulation Cycle	52
9.A.3	Boiler Lead Lag with Indirect Domestic Hot Water.....	53
9.B	Connection Terminals	53
9.C	System Configurations	54
9.D	Installation Jobs.....	62
9.E	Setup for Domestic Hot Water on a Lead Lag System.....	83
9.F	Gateway Connections to a Building Automation System.....	87
9.G	Installer Parameters	88
9H	Variable Speed Pump Control	95

SECTION 10 Initial startup Instructions

10.A	Filling the Boiler System	96
10.B	Initial Burner Operation.....	97
10.C	Shutting Down the Unit.....	97
10.D	Restarting the Unit.....	97

SECTION 11 Maintenance

11.A	System Maintenance	98
11.B	Maintenance Notes.....	98
11.B.1	Burner.....	98
11.B.2	Modulating Gas Valve/ Venturi	98
11.B.3	Controllers	99
11.B.4	Ignitor Assembly	99
11.B.5	Flame Sensor	99
11.B.6	Transformer with Integral Circuit Breaker	99
11.B.7	Blower.....	99
11.B.8	Heat Exchanger Coils.....	100
11.B.9	Gas Pressure Switches (optional)	100
11.B.10	Natural/Propane Gas Conversion.....	101
11.B.11	Condensate Trap	101
11.B.12	Battery for Date and Time Back-Up	101

SECTION 12 Troubleshooting

12.A	Potential Setup and Synch Problems	102
12.A.1	Controller Synchronization	102
12.A.2	Flap Valve Status Check	103
12.B	About Lockouts, Holds, and Alerts.....	103
12.B.1	Responding to a Lockout, Hold, or Alert.....	103
12.B.2	Viewing the Lockout and Alert Histories	104
12.C	Troubleshooting Table	106
12.D	Diagnostic Tests & Input/Output Indicators...	115
12.E	Lead Lag Follower Diagnostics	116
12.F	Statistics	116
12.G	Analysis	116
12.H	Control Snapshot.....	116
12.I	Operating Sequence.....	117

SECTION 13 Replacement Parts

13.A	General Information.....	120
13.B	Parts List.....	120
13.C	Parts Illustrations	124




SECTION 1 General Information

1.A Introduction

This manual provides information necessary for the installation, operation, and maintenance of LAARS Heating Systems NeoTherm boilers and water heaters.

All application and installation procedures should be reviewed completely before proceeding with the installation. Consult the LAARS Heating Systems factory, or your LAARS representative, with any problems or questions regarding this equipment. Experience has shown that most operating problems are caused by improper installation. NeoTherm is protected against over pressurization. A pressure relief valve is included with each NeoTherm. Some NeoTherms may require that the PRV be installed prior to filling the system.

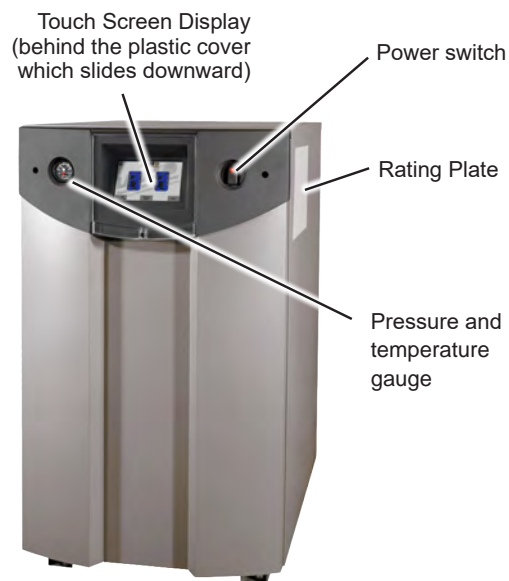

1.B Warranty

LAARS Heating Systems NeoTherms are covered by a limited warranty. The owner should complete the warranty registration at www.Laars.com.

All warranty claims must be made to an authorized Laars representative. Claims must include the serial number and model (This information can be found on the rating plate). The claim must also include the installation date and name of the installer. Shipping costs are not included in the warranty coverage.

Some accessory items may be shipped in separate packages. Verify receipt of all packages listed on the packing slip. Inspect everything for damage immediately upon delivery, and advise the carrier of any shortages or damage. Any such claims should be filed with the carrier.

The carrier, not the shipper, is responsible for shortages and damage to the shipment whether visible or concealed.


**NOTE: Throughout the content of this manual, the NeoTherm will be referred to as a 'unit'.
unit = NeoTherm**

1.C Model Identification

Consult the rating plate on the outside of the unit. The following information describes the model number structure.

- (1-2) **Model Series Designation**
N T = Unit
- (3) **Usage**
H = Hydronic
V = Volume Water
- (4-7) **Size**
1 0 0 0 = 1,000,000 BTU/hr input
1 2 0 0 = 1,200,000 BTU/hr input
- (8) **Fuel**
N = Natural Gas
P = LP Gas
- (9) **Options Code**
X = U.S. Standard
J = U.S. CSD-1
C = Canada Standard
D = Canada CSD-1
- (10) **Pump Options**
N = Pump included
X = No pump
W = HLW w/ pump (opt. NTV only)
L = HLW no pump (opt. NTV only)
- (11) **Revision**
1 = First version

Model Nomenclature

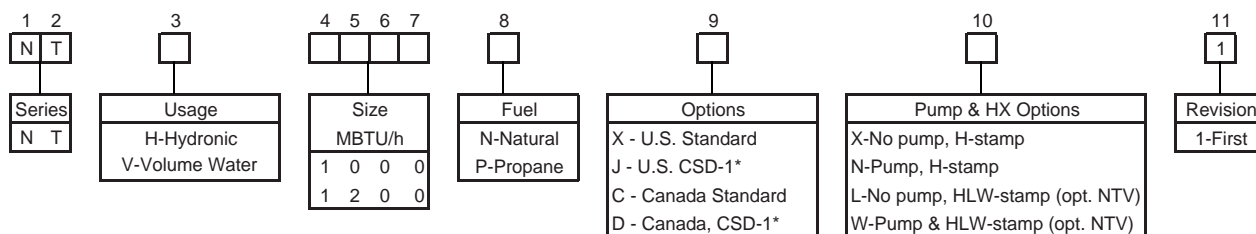

*CSD-1, FM, GAP, IL (model character 9 = J or D) includes low water cutoff and high/low gas pressure switches


1.D Safety Notes

Safety notes are used throughout this manual to bring attention to the presence of hazards with various risk levels and to offer important information concerning the life of this product. There are 3 basic types.

1	⚠ WARNING	Indicates an imminently hazardous situation which, if not avoided, can or will result in death or serious injury and can or will result in catastrophic property damage.
2	⚠ CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in moderate injury and/or property damage.
3	NOTE:	Indicates instructions that are important to that topic but not related to personal injury or property damage.

⚠ WARNING

- Water temperature over 125°F (52°C) can cause severe burns instantly or death from scalds.
- Children, disabled and elderly are at highest risk of being scalded.
- See instruction manual before setting temperature at the unit.
- Feel water before bathing or showering.
- If this unit is used to produce water that could scald if too hot, such as domestic hot water use, adjust the outlet control (limit) or use temperature limiting valves to obtain a maximum water temperature of 125°F (52°C).



⚠ WARNING

This unit must be installed in accordance with the procedures detailed in this manual, or the manufacturers warranty will be voided. The installation must conform to the requirements of the local jurisdiction having authority, and, in the United States, to the latest edition of the National Fuel Gas Code, ANSI Z223.1/NFPA54. In Canada, the installation must conform to the latest edition of CSA B149.1 Natural Gas and Propane Gas Installation Code, and/or local codes. Where required by the authority having jurisdiction, the installation of these units must conform to the Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ASME CSD-1. Any modifications to the boiler, its gas controls, or wiring may void the warranty. If field conditions require modifications, consult the factory representative before initiating such modifications.

⚠ WARNING

Fire or Explosion Hazard

Improper configuration can cause fuel buildup and explosion. Improper user operation may result in property loss, severe physical injury, or death.

Any change to safety-related configuration parameters must only be done by experienced and/or licensed burner/boiler operators and mechanics.

Should overheating occur or the gas supply fails to shut off, turn off the manual gas control valve to the appliance.

If any odor of gas is detected, or if the gas burner does not appear to be functioning in a normal manner, close the main gas shutoff valve. Do not shut off the power switch. Contact your heating contractor, gas company, or factory representative.

⚠ WARNING

Carbon Monoxide Hazard

This product burns gas to produce heat. The appliance must be properly installed, operated, and maintained to avoid exposure to appreciable levels of carbon monoxide.

The installer must verify that at least one carbon monoxide alarm has been installed within a residential living space or home following the alarm manufacturer's instructions and applicable local codes before putting the appliance into operation. It is important for carbon monoxide alarms to be installed, maintained, and replaced following the alarm manufacturer's instructions and applicable local codes.

⚠ AVERTISSEMENT

En cas de surchauffe ou si l'alimentation en gaz ne s'arrête pas, fermez.

⚠ AVERTISSEMENT

L'installateur est tenu de vérifier qu'au moins une alarme de détection de monoxyde de carbone soit installée dans un espace résidentiel ou dans un domicile conformément aux directives du fabricant de l'alarme et aux codes locaux applicables avant de mettre l'appareil en service.

⚠ WARNING**Electrical Shock Hazard**

Electrical shock can cause severe injury, death or property damage. Disconnect the power supply before beginning installation or changing the wiring to prevent electrical shock or damage to the equipment. It may be necessary to turn off more than one power supply to disconnect.

All electrical wiring is to be done in accordance with local codes, or in the absence of local codes, with: 1) The National Electrical Code ANSI/NFPA No. 70 - latest Edition, or 2) CSA STD. C22.1 "Canadian Electrical Code - Part 1." This appliance must be electrically grounded in accordance with these codes.

⚠ WARNING

The Repair Parts list designates parts that contain refractory ceramic fibers (RCF). RCF has been classified as a possible human carcinogen. When exposed to temperatures above 180°F, such as during direct flame contact, RCF changes into crystalline silica, a known carcinogen. When disturbed as a result of servicing or repair, these substances become airborne and, if inhaled, may be hazardous to your health.

Do not remove or replace RCF parts or attempt any service or repair work involving RCF without wearing the following protective gear:

1. A National Institute for Occupational Safety and Health (NIOSH) approved respirator.
2. Long sleeved, loose fitting clothing.
3. Gloves.
4. Eye Protection.

⚠ WARNING

CANCER AND REPRODUCTIVE HARM.
WWW.P65WARNINGS.CA.GOV.
AS REQUIRED BY THE STATE OF
CALIFORNIA PROPOSITION 65.

⚠ CAUTION

The supply voltage to this unit must not be disengaged, except for service or isolation, or unless otherwise instructed by procedures outlined in this manual. To signal a call for heat, use the correct terminals as instructed in SECTION 7 of this manual.

⚠ CAUTION

CO needs to be less than 150 ppm.

⚠ ATTENTION

Le CO doit être inférieur à 150 ppm.

NOTE: All installations must be made in accordance with 1) American National Standard Z223.1/NFPA54-Latest Edition "National Fuel Gas Code" or 2) CSA B149.1 "Natural Gas and Propane Installation Code" or in Canada reference the B149.1 latest edition and with the requirement of the local utility or other authorities having jurisdiction. Such applicable requirements take precedence over the general instructions contained herein. All electrical wiring is to be done in accordance with the local codes, or in the absence of local codes, with: 1) The National Electrical Code ANSI/NFPA No. 70-latest Edition, or 2) CSA STD. C22.1 "Canadian Electrical Code - Part 1". This appliance must be electrically grounded in accordance with these codes.

NOTE: A pressure relief valve is included with each unit and must be installed prior to filling the system.

1.E Model Overview

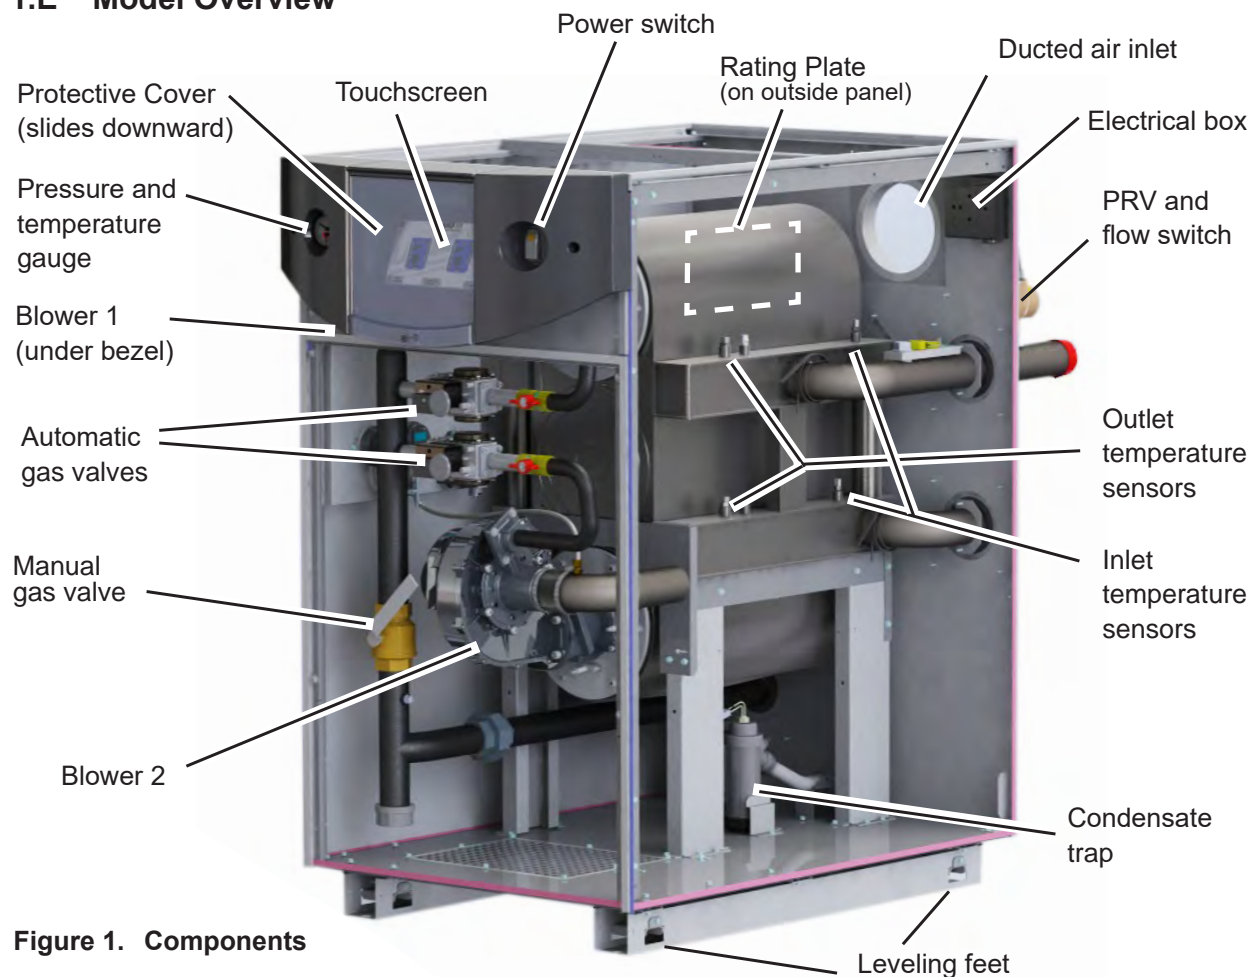


Figure 1. Components

1.F Dimensions

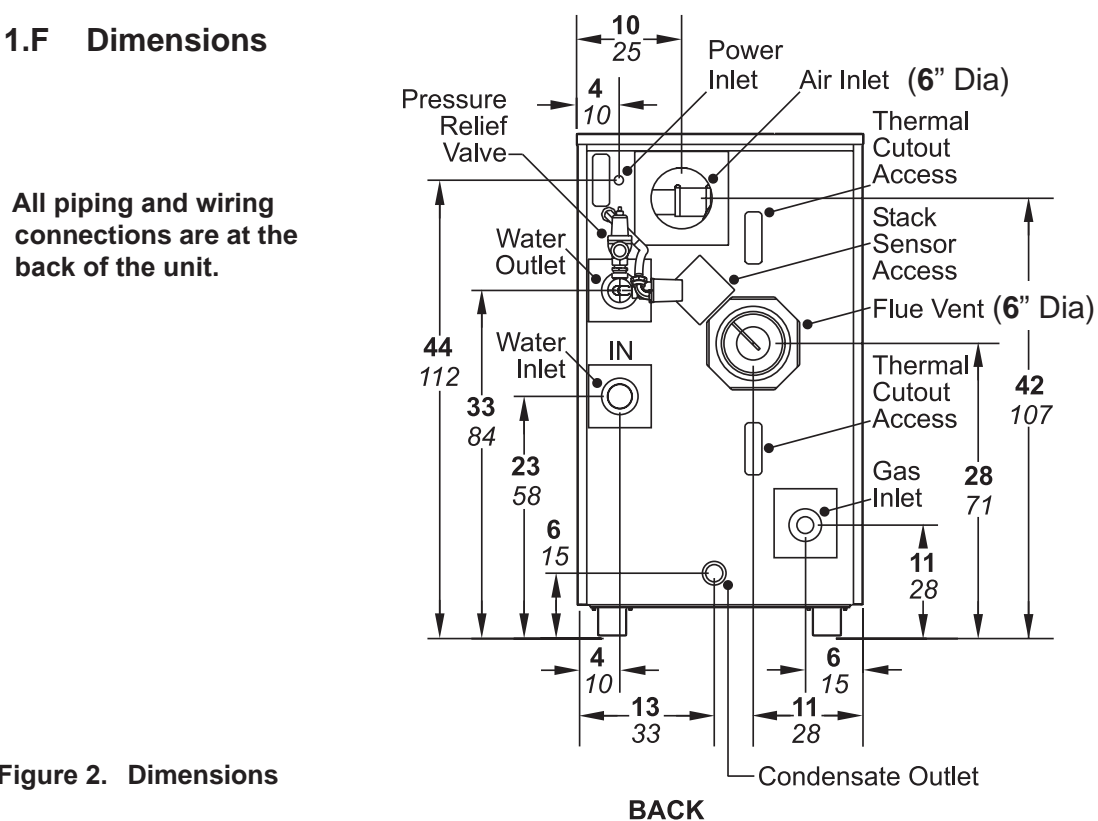


Figure 2. Dimensions

Dimensions (continued)

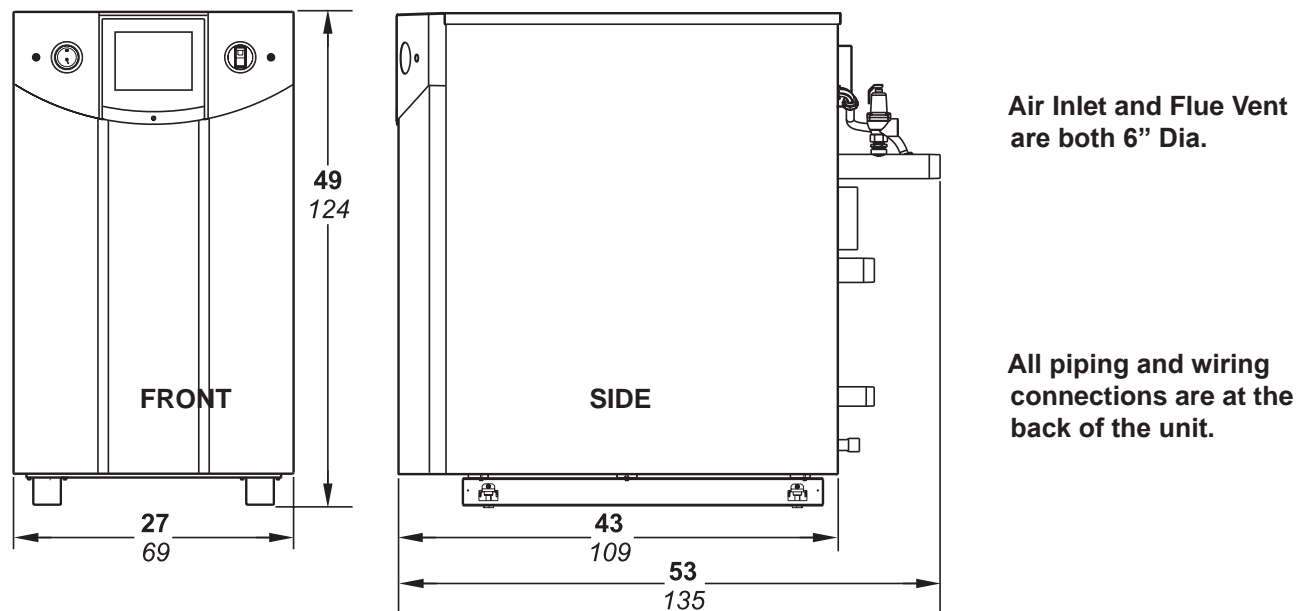


Figure 3. Dimensions overall

1.G The Installation Kit



The unit is shipped in a single crate with a boxed installation kit that contains these components.

- Vent Pipe Adapter, 6" PVC to 6" Stainless Steel
- Vent Pipe, CPVC, 6" SCH 40 @ 6" dia.
- Cable Tie for Vent Pipe.
- Sensor, system temp
- Sensor, outdoor temp (boiler only)
- Sensor, tank temperature
- Clip, spring
- Instructions, sensor(s) installation
- Bushing, nylon


1. Inspect the crate and the unit for any damage. If the crate or the unit shows any damage, take photos and report the damage immediately to your shipping provider.
2. Remove all packing and tie-down materials.

1.H Optional Pump Kit

The optional pump kit includes these components.

- Pump
- Relay, 115 VAC DPST
- Harness, Pump, NTOD, H & VW 600-1200
- Top Panel, Pump Cover
- Side Panels (2), Pump Cover
- Hardware plastic bag containing bolts, nuts, washers and wire nuts.

Remove the pump from the crate and inspect pump and all parts for damage.

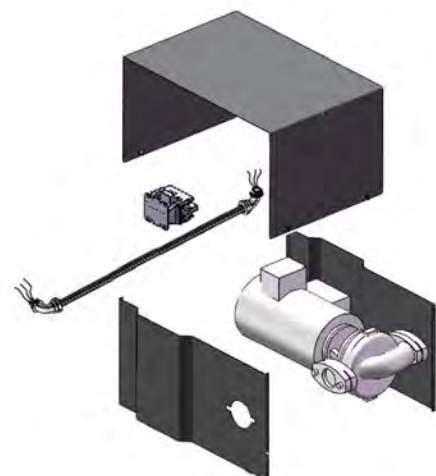

SECTION 2 Locating the unit

2.A Locating the unit

This unit may be installed indoors or outdoors. If installing in a location that may experience freezing temperatures, precautions must be taken to prevent water in the heat exchanger and condensate inside and outside of the boiler from freezing. Damage due to freezing water or condensate is not covered by the warranty.

NOTE: Outdoor installation of volume water heaters is not permitted in Canada.

This unit should be located to provide clearances on all sides for maintenance and inspection. It should not be located in an area where leakage of any connections will result in damage to the area adjacent to the unit or to lower floors of the structure. When such a location is not available, it is recommended that a suitable drain pan, adequately drained, be installed under the unit.

Always install the unit on a firm, level surface. The unit is design-certified by CSA-International for installation on combustible flooring; in basements; in closets, utility rooms or alcoves. **These boilers and water heaters must never be installed on carpeting.** The location should be chosen with regard to the vent pipe lengths and external plumbing.

The unit shall be installed such that the gas ignition system components are protected from water (dripping, spraying, rain, etc.) during operation and service (circulator replacement, control replacement, etc.).

When vented vertically, this unit must be located as close as practical to the vertical section of the vent. If the vent terminal and/or combustion air terminal terminate through a wall, and there is potential for snow accumulation in the local area, both terminals should be installed at an appropriate level above grade or the maximum expected snow line.

The dimensions and requirements that are shown

Note - When located on the same wall, the units combustion air intake terminal must be installed a minimum of 12" below the exhaust terminal. There must also be a minimum horizontal distance from intake to the exhaust terminal of 36."

For the concentric vent terminal kit (optional), follow the installation instructions included with the kit.

SUGGESTED SERVICE CLEARANCE

SURFACE	INCHES	CM
Front	24	60.9
Left Side	12	30.5
Right Side	18	45.7
Back	24	60.9
Top	24	60.9

REQUIRED CLEARANCE TO COMBUSTIBLES

SURFACE	INCHES	CM
Front	2	5.1
Left Side	0	0
Right Side	0	0
Back	0	0
Top	8	20.3
Vent	1	2.6

Table 1. Clearances

in Table 1 should be met when choosing the locations for the appliance.

2.B Correct Vent Distance from Outside Wall or Roof Termination

The forced draft combustion air blower in the appliance has sufficient power to vent properly when the guidelines in Table 2 are followed.

SECTION 3 Venting and Combustion Air

3.A General Venting

This unit requires a special venting system. Refer to venting supplier's instructions for complete parts list and method of installation. The manufacturers and their product lines listed on the following tables have been tested and authorized to safely operate with this equipment. Suppliers of stainless steel and polypropylene venting that are not listed on these tables are not permitted for use with

vent category IV products.

Do not mix venting suppliers and models in venting systems. Failure to comply could result in personal injury, property damage, or death.

Installations must comply with applicable national, state and local codes.

Vent Diameter		MIN Equiv Intake		MIN Equiv Vent		MAX Equiv Vent Intake	
Inches	cm	FT.	M	FT.	M	FT.	M
6	15	0	0	3	1	100	30

Combustion Intake and Vent must be the same size.

Installations in the U.S. require exhaust vent pipe that is PVC or CPVC complying with ANSI/ASTM D1785 F441, polypropylene complying with ULC-S636, or stainless steel complying with UL1738. Installations in Canada require exhaust vent pipe that is certified to ULC S636.

Intake (air) pipe must be PVC or CPVC that complies with ANSI/ASTM D1785 F441, ABS that complies with ANSI/ASTM D1527, stainless steel, or galvanized material.

Closet and alcove installations do not allow the use of PVC under any circumstances

To calculate max equivalent length, measure the linear feet of the pipe, and add 5 feet (1.5 m) for each elbow used.

Appliance needs to vent outdoors using approved vent caps and following all guidelines as noted in our IO manual. Proper protection against debris in the air intake (through using a downward spout and/or screen) to avoid debris pick-up / falling into the appliance is required.

Table 2. Vent / Air Pipe Sizes and Equivalent Lengths

Example Components	MFR MODEL NUMBER (ABBREVIATED)		
	Selkirk	DuraVent	NovaFlex
	Trade Name / Model		
	Safe-T Vent EZ Seal	FasNSeal	Z Flex
90° Elbow	9x14	FSELB90xx	2SVEExx90
Pipe	9x07	FSVLxxxx	2SVEPxxxx
Boiler Adapter	5x01BOI	FSAAUx	2SVSAxx (OD) 2SVSTTAxx (ID)
Horizontal Termination (bird screen)	9x92	FSBSx	2SVSTPXxx
Vertical Termination (rain cap)	5X00CI	FSRCx	2SVSRCxx
Inlet Air Termination	9xTERM	FSAIHXX*	2SVSTEXxx90
Adapter, SS to CPVC		FSA-xxFNSM-xPVCf	
Manufacturer Approved Hanger Straps	Distance between Hanger Straps (Horizontal Run) - 6' MAX. Distance between Hanger Straps (Vertical Run) - 30' MAX.	Distance between Hanger Straps (Horizontal Run) - 6' MAX. Distance between Hanger Straps (Vertical Run) - 12' MAX.	Distance between Hanger Straps (Horizontal Run) - 4' MAX. Distance between Hanger Straps (Vertical Run) - 16' MAX.
Adapter SS to PP		FSAAUx-xPP	2ZDCPVCx**

*4", 6" & 7" only

**up to 6"

Table 3. Allowable Single Wall Stainless Steel Vent Suppliers and Part Numbers

Example Components	MFR MODEL NUMBER (ABBREVIATED)			
	CentroTherm	DuraVent	Selkirk	NovaFlex
	Trade Name / Model			
	InnoFlue	PolyPro	PolyFlue	Z-Dens
Single Wall Pipe	ISVLxxxx	xPPS-x	83x002	ZDPx
Elbow	ISELxxxx	xPPS-E90L	83x08	2ZDEx87
PVC Adapter	ISAGLxxxx	xPPS-ADL (to 4") xPPS-xxPVCm-xPPF (>4")	83x040	2ZDCPVCx
Horizontal Termination (bird screen)	IASPPxx (2" - 4") IASSSxx (5" - 12")	xPPS-BG (2" - 6")	83x050	2ZDESx
Vertical Termination	IASPPxx (2" - 4") IASSSxx (5" - 12")	xPPS-VKL (<5") xPPS-VTML (5"-8")	83x050	2ZDESx
Air Inlet				2ZDESx
Manufacturer Approved Hanger Straps	Distance between Hanger Straps (Horizontal Run) - 3' MAX. Distance between Hanger Straps (Vertical Run) - 6' MAX.	Distance between Hanger Straps (Horizontal Run) - 5' MAX. Distance between Hanger Straps (Vertical Run) - 10' MAX.	Distance between Hanger Straps (Horizontal Run) - 2.5' MAX. Distance between Hanger Straps (Vertical Run) - 16' MAX.	Distance between Hanger Straps (Horizontal Run) - 3' MAX. Distance between Hanger Straps (Vertical Run) - 6' MAX.

NOTE: "x", "xx", and "xxxx" refer to variations in nominal size. See manufacturer's catalog for a particular application.

Table 4. Allowable Polypropylene Vent Suppliers and Part Numbers

3.B Combustion Air

These boilers and water heaters must have provisions for combustion and ventilation air in accordance with the applicable requirements for Combustion Air Supply and Ventilation in the National Fuel Gas Code, ANSI Z223.1; or in Canada, the Natural Gas and Propane Installation Code, CSA B149.1. All applicable provisions of local building codes must also be adhered to.

This unit can take combustion air from the space in which it is installed, or the combustion air can be ducted directly to the unit. Ventilation air must be provided in either case.

3.B.1 Combustion Air From Room

In the United States, the most common requirements specify that the space shall communicate with the outdoors in accordance with Method 1 or 2. (See the

following descriptions.) Where ducts are used, they shall be of the same cross-sectional area as the free area of the openings to which they connect.

Method 1: Two permanent openings, one commencing within 12" (300 mm) of the top and one commencing within 12" (300 mm) of the bottom, of the enclosure shall be provided. The openings shall communicate directly, or by ducts, with the outdoors or spaces that freely communicate with the outdoors. When directly communicating with the outdoors, or when communicating to the outdoors through vertical ducts, each opening shall have a minimum free area of 1 square inch per 4000 Btu/hr (550 square mm/kW) of total input rating of all equipment in the enclosure. When communicating to the outdoors through horizontal ducts, each opening shall have a minimum free area of not less than 1 square inch per 2000 Btu/hr (1100 square mm/kW) of total input rating of all equipment in the enclosure.

	PVC		CPVC		Stainless Steel		Polypropylene	
Model	Ducted Air	Exhaust	Ducted Air	Exhaust	Ducted Air	Exhaust	Ducted Air	Exhaust
1,000	CA008100	CA008300	CA008100	CA008300	CA008200	D2004500	CA008500	CS008500
1,200	CA008100	CA008300	CA008100	CA008300	CA008200	D2004500	CA008500	CS008500

Table 5a - Horizontal Termination Kits for Indoor Use

	PVC		CPVC		Stainless Steel		Polypropylene	
Model	Ducted Air	Exhaust	Ducted Air	Exhaust	Ducted Air	Exhaust	Ducted Air	Exhaust
1,000	CA008400	CA008300	CA008400	CA008300	CA008500	CA008500	CA008500	CA008500
1,200	CA008400	CA008300	CA008400	CA008300	CA008500	CA008500	CA008500	CA008500

Table 5b - Vertical Termination Kits for Indoor Use

Model	Ducted Air	Exhaust
1,000	CA008700	CA008900
1,200	CA008700	CA008900

Table 5c - Outdoor Termination Kits

Material	United States	Canada
ABS	ANSI/ASTM D1527	The air pipe material must be chosen based upon the intended application of the boiler, and must be installed according to the vent manufacturers installation instructions.
PVC, sch. 40	ANSI/ASTM D1785 or D2665	
CPVC, sch. 40	ANSI/ASTM F441	
Single wall galv. steel	26 gauge	
Polypropylene	ULC-S636 Class 2C	

Table 6. Required Combustion Air Pipe Material

Method 2: One permanent opening, commencing within 12" (300 mm) of the top of the enclosure, shall be permitted. The opening shall directly communicate with the outdoors or shall communicate through a vertical or horizontal duct to the outdoors or spaces that directly communicate with the outdoors and shall have a minimum free area of 1 square inch per 3000 Btu/hr (734 square mm/kW) of the total input rating of all equipment located in the enclosure. This opening must not be less than the sum of the areas of all vent connectors in the confined space.

Other methods of introducing combustion and ventilation air are acceptable, providing they conform to the requirements in the applicable codes listed above.

In Canada, consult local building and safety codes or, in absence of such requirements, follow CAN/CSA B149.

3.B.2 Ducted Combustion Air

The combustion air can be taken through the wall, or through the roof. When taken from the wall, it must be taken from out-of-doors by means of the manufacturers horizontal wall terminal, shown in Table 5a. See Table 2 to select the appropriate diameter air pipe. When taken from the roof, a field-supplied rain cap or an elbow arrangement must be used to prevent entry of rain water. (See Figure 4).

Use ABS, PVC, CPVC, polypropylene, stainless steel, or galvanized pipe for the combustion air intake. (See Table 7.) The intake must be sized per Table 2. Route the intake to the boiler as directly as possible. Seal all joints. Provide adequate hangers. The unit must not support the weight of the combustion air intake pipe. The maximum linear pipe length allowed is 100 feet (39 m). Subtract 5 allowable linear ft. (1.5 m) for every elbow used.

When using polypropylene or stainless steel materials in horizontal duct configurations, a single elbow must be installed on the end of the air inlet to act as an outdoor terminal. In vertical

duct applications, two elbows must be installed on the end of the inlet to act as a vent terminal. In both installation types, Manufacturer part number CA008500 (for Model 1,000 and 1,200) or CA011300 (for Model 1,700) can then be installed into the elbow to prevent foreign objects from entering the air inlet system. The elbow(s) required to complete the vent terminal is not included.

The connection for the intake air pipe is on the back panel.

In addition to air needed for combustion, air shall also be supplied for ventilation, including air required for comfort and proper working conditions for personnel. Refer to the applicable codes.

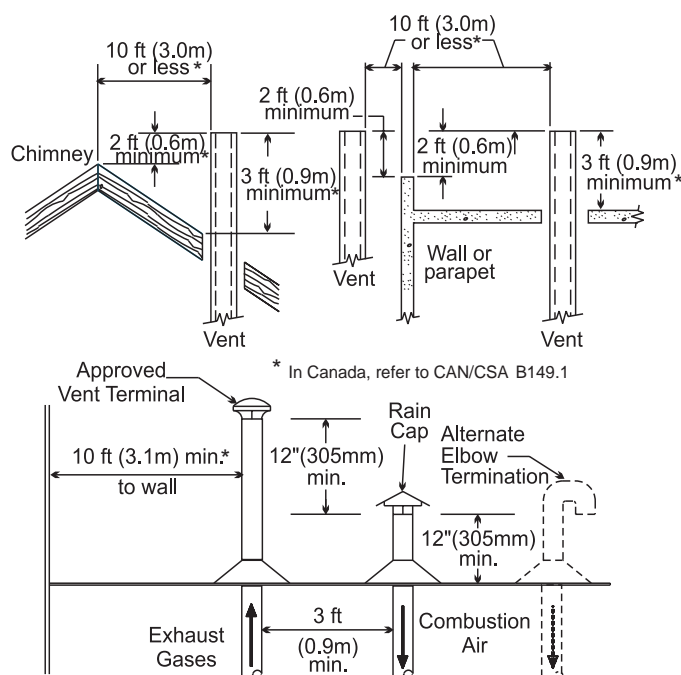


Figure 4. Combustion Air and Vent Through Roof

Installation Standards		
Material	United States	Canada
Stainless steel	UL 1738	Venting must be ULC-S636 certified for use as venting material. The venting material class must be chosen based upon the intended application of the boiler, and must be installed according to the maximum flue gas temperature and the vent manufacturers instructions.
PVC*, sch 40	ANSI/ASTM D178	
CPVC, sch 40	ANSI/ASTM F441	
Polypropylene	UL-S636 Class 2C	

* PVC cannot be used for the first 12 inches of vent material

Table 7. Required Exhaust Vent Material

3.C Venting

**WARNING**

When an existing Cat I appliance is removed or replaced, the original venting system may no longer be sized to properly vent the attached appliances. Under no circumstances should an improperly sized vent be used. An improperly sized vent may cause operational and safety problems, and could result in serious injury, death, or property damage.

**WARNING**

Selection of improper vent materials for installations that are installed in closets, or will be operated in high ambient temperature levels, may lead to property damage, personal injury, or death.

**WARNING**

A 12" or 305 mm section of CPVC must be connected directly to the boiler before a PVC vent system can be used. Connecting PVC directly to the boiler's flue collar may cause vent failure, leading to property damage, personal injury, or death.

**WARNING**

Failure to use the appropriate vent material, installation techniques, or glues and sealants could lead to vent failure causing property damage, personal injury or death.

**WARNING**

Use of cellular core PVC (ASTM F891), cellular core CPVC, or Radel® (polyphenolsulfone) used in non-metallic venting systems is prohibited.

Non-metallic vent pipe (PVC, CPVC, polypropylene or other) shall NOT be insulated or covered. Insulating or covering non-metallic venting may cause overheating which diminishes the integrity of the pipe.

**WARNING**

All venting must be installed according to this manual and any other applicable local codes, including but not limited to, ANSI Z223.1/NFPA 54, CSA B149.1, CSAB149.2 and ULC-S636. Failure to follow this manual and applicable codes may lead to property damage, severe injury, or death.

The flue temperature of the unit changes dramatically with changes in operating water temperature. Therefore, it is necessary to assess the application of the boiler to determine the required certified vent class. If the unit is installed in an application where the ambient temperature is elevated, and/or installed in a closet/alcove, CPVC, polypropylene, or stainless steel material is required. If the system temperatures are unknown at the time of installation, class IIC or higher venting material is recommended.

This unit is a Category IV appliance and may be installed with PVC, CPVC that complies with ANSI/ASTM D1785 F441, or polypropylene that complies with ULC-S636 Class 2C, or a stainless steel venting system that complies with the UL 1738 Standard. (See Table 7.) The vent can terminate through the roof, or through an outside wall.

The use of polypropylene vent material has been accepted by CSA for use with exhaust and combustion. The polypropylene vent manufacturer shall have ULCS636 Class 2C approval or higher with a recognized listing agency for all components used in the venting system. All components used must be from the same manufacturer and designed for use with exhaust temperatures of 195°F (90°C) or higher. When installing polypropylene vent systems, please, refer to the vent suppliers installation instructions for proper installation techniques.

When using PVC/CPVC for the vent material, the first 12 inches or 305 mm of vent must be connected to the CPVC section included with the unit. The CPVC vent section included with the unit may be broken by CPVC fittings if necessary, but never reduced in total length. See Table 2 on page 11 to select the appropriate vent pipe diameter.

When using polypropylene, all vent material must be from the same manufacturer and UL-S636 rated.

All installations must be done following the vent suppliers recommended installation techniques. If these are not available, refer to the manufacturers recommendations for the material used.

The vent pipe must pitch upward, toward the vent terminal, not less than 1/4" per foot, so that condensate will run back to the unit to drain. Route the vent pipe to the heater as directly as possible. Seal all joints. Provide adequate hangers as required in the venting system manufacturers installation instructions. Horizontal portions of the venting system must be supported to prevent sagging and may not have any low sections that could trap condensate. The unit must not support the weight of the vent pipe.

\

3.C.1 Common Venting

A single vent that is shared by multiple units **must** be engineered by a competent venting specialist, and could involve the selection of draft inducing equipment, hardware and controls to properly balance flue gas pressures. **Do not common vent unless the vent system meets this requirement. These units are never permitted to share a vent with Category I appliances.**

3.C.2 Venting Requirements Unique to Canada

These boilers and water heaters are Vent Category IV appliances. Per the requirements of CAN/CSA-B149.1, only BH vent systems can be connected to these units and such vent systems, either ULC S636 certified stainless steel or other ULC S636 certified BH vent (eg. plastics) must be installed per the vent manufacturers certified installation instructions.

It is the responsibility of the appropriately licensed technician installing this unit to use ULC S636 certified vent material consistent with the requirements as described in the Venting and Combustion Air section.

Class I venting systems are suitable for gas-fired appliances producing flue gas temperature of more than 135°C, but not more than 245°C.

Class II venting systems are suitable for gas-fired appliances producing flue gas temperatures of 135°C or less.

Class II venting systems are further classified into four temperature ratings as follows:

- A Up to and including 65°C
- B Up to and including 90°C
- C Up to and including 110°C, and
- D Up to and including 135°C

Flue Gas Sampling Port -

It is also the responsibility of the installer to ensure that a flue gas sampling port is installed in the vent system. This flue gas sampling port must be installed near the flue connection of the unit; and within 2 feet of the flue connection. There is no flue gas sampling port internal to the unit, so one must be installed in the vent system external to the unit. A flue gas sampling port available as a component of the ULC S636 certified vent system is preferred. However, if one is not available with the certified vent system, The manufacturer suggests using a tee with the branch connection sized to allow for insertion of a flue gas analyzer probe. The branch

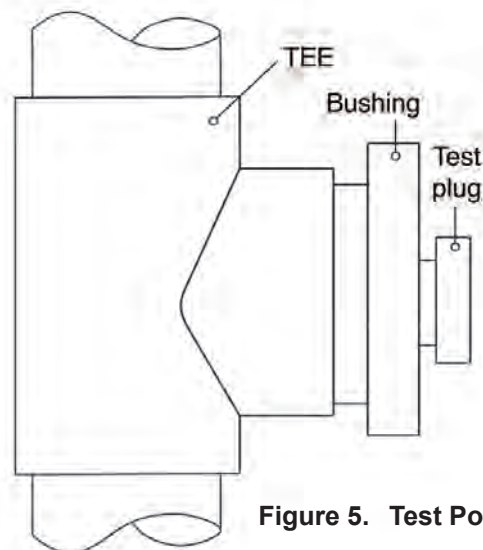


Figure 5. Test Port

connection must be resealable with a cap or other means to ensure the vent system remains sealed. (See Figure 5.)

Consideration must be given to the placement and orientation of the flue gas sampling port to ensure that condensate is free to flow back into the unit and not collect anywhere in the vent system - including in the flue gas sampling port.

Exhaust Vent Terminal -

An exhaust vent terminal must be installed. If an exhaust vent terminal is not available with the certified vent system, Manufacturer suggests the use of a coupler fitting from the certified vent system into which the vent terminal screen can be installed. Be sure to install and terminate both vent and combustion air pipes per the instructions in this section.

3.D Locating the Vent and Combustion Air Terminals

3.D.1 Side Wall Vent Terminal

The appropriate manufacturers side wall vent terminal must be used. The terminal must be located in accordance with ANSI Z223.1/NFPA 54 and applicable local codes. In Canada, the installation must be in accordance with CSA B149.1 or .2 and local applicable codes.

Consider the following when installing the terminal:

- Figure 6 shows the requirements for mechanical vent terminal clearances for the U.S. and Canada.
- Vent terminals for condensing appliances or appliances with condensing vents are **not** permitted to terminate above a public walkway, or over an area where condensate or vapor could create a nuisance or hazard.

		Canadian Installations ¹	U.S. Installations ²
A =	Clearance above grade, veranda, porch, deck, or balcony	12 in (30 cm)	12 in (30 cm)
B =	Clearance to window or door that may be opened	<ul style="list-style-type: none"> 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW) 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW) 36 in (91 cm) for appliances > 100,000 Btuh (30 kW) 	<ul style="list-style-type: none"> 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW) 9 in (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW) 12 in (30 cm) for appliances > 50,000 Btuh (15 kW)
C =	Clearance to permanently closed window	See Note 4	See Note 5
D =	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 ft (61 cm) from the center line of the terminal	See Note 4	See Note 5
E =	Clearance to unventilated soffit	See Note 4	See Note 5
F =	Clearance to outside corner	See Note 4	See Note 5
G =	Clearance to inside corner	See Note 4	See Note 5
H =	Clearance to each side of centerline extended above meter / regulator assy	3 ft (91 cm) within a height of 15 ft (4.6 m)	See Note 5
I =	Clearance to service regulator vent outlet	3 ft (91 cm)	See Note 5
J =	Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance	<ul style="list-style-type: none"> 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW) 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW) 36 in (91 cm) for appliances > 100,000 Btuh (30 kW) 	<ul style="list-style-type: none"> 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW) 9 in (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW) 12 in (30 cm) for appliances > 50,000 Btuh (15 kW)
K =	Clearance to a mechanical air supply inlet	6 ft (1.83 m)	3 ft (91 cm) above if within 10 ft (3 m) horizontally
L =	Clearance above paved sidewalk or paved driveway located on public property	7 ft (2.13 m)†	7 ft (2.13 m) for mechanical draft systems (Category I appliances). Vents for Category II and IV appliances cannot be located above public walkways or other areas where condensate or vapor can cause a nuisance or hazard*
M =	Clearance under veranda, porch, deck, or balcony	12 in (30 cm)‡	See Note 5

† A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.

‡ Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

Notes:

- 1) In accordance with the current CSA B149.1, Natural Gas and Propane Installation Code.
- 2) In accordance with the current ANSI Z223.1/NFPA 54, Natural Fuel Gas Code.
- 3) If locally adopted installation codes specify clearances different than those illustrated, then the most stringent clearance shall prevail.
- 4) For clearances not specified in CAN/CSA-B149, clearance is in accordance with local installation codes and the requirements of the gas supplier.
- 5) For clearances not specified in ANSI Z223.1/ NFPA 54, clearance is in accordance with local installation codes and the requirements of the gas supplier.
- 6) IMPORTANT: Terminal must be placed such that it remains a minimum of 12" above maximum expected snow line. Local codes may have more specific requirements, and must be consulted.


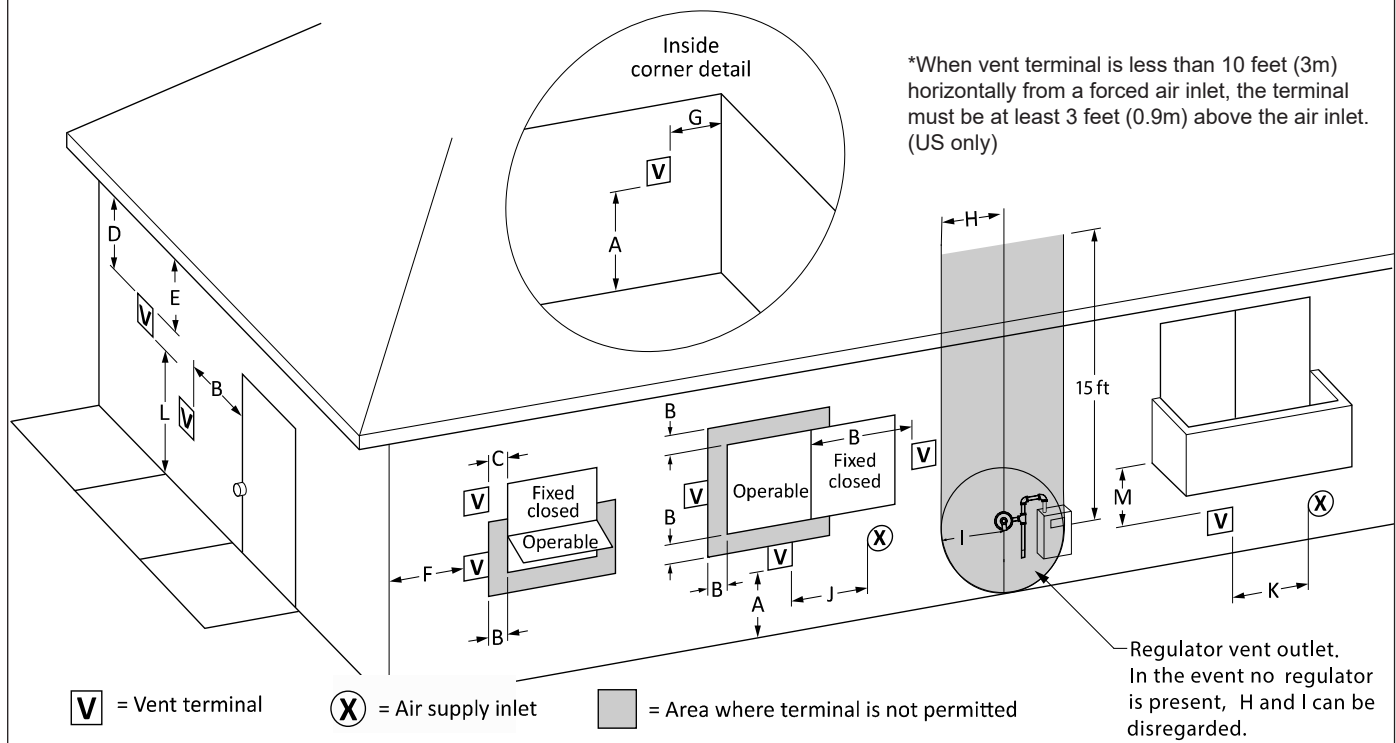


Figure 6. Combustion Air and Vent Through Side Wall

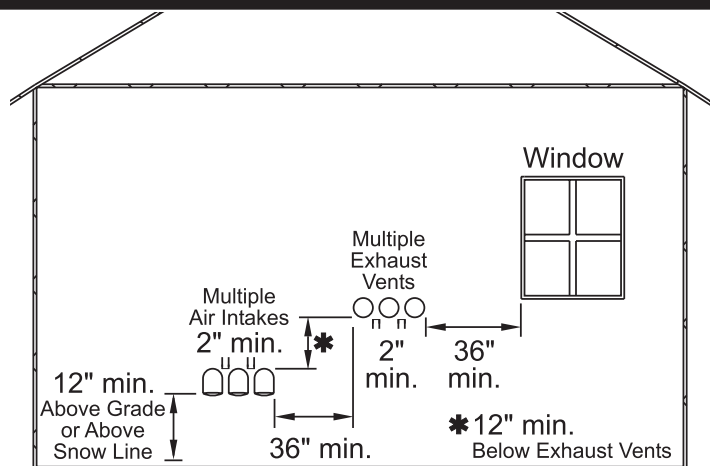

IMPORTANT: All terminals must be placed so that they remain at least 12" above the expected snow line. Local codes may have more specific requirements, and must be consulted. Refer to the NFPA54 National Fuel Gas Code and your local codes for all required clearances for venting.

Figure 7. Multiple Side-Wall Terminals, Air and Vent

3. Locate the vent terminal so that vent gases cannot be drawn into air conditioning system inlets.
4. Locate the vent terminal so that vent gases cannot enter the building through doors, windows, gravity inlets or other openings. Whenever possible, avoid locations under windows or near doors.
5. **Locate the vent terminal so that it cannot be blocked by snow. The installer may determine that a vent terminal must be higher than the minimum shown in codes, depending upon local conditions.**
6. Locate the terminal so the vent exhaust does not settle on building surfaces or other nearby objects. Vent products may damage surfaces or objects.
7. If the boiler or water heater uses ducted combustion air from an intake terminal located on the same wall, see Figure 6 through Figure 8 for proper spacing and orientation.

If the vent termination is located in an area exposed to high winds, an optional PVC tee (the same diameter as the vent pipe) may be used. The tee'd vent termination offers greater protection from wind related operating issues.

3.D.2 Side Wall Combustion Air Terminal

The manufacturer's side wall combustion air terminal must be used when the heater takes air from a side wall. (See Figure 7.) Contact manufacturer for AL29-4C termination fittings. Consider the following when installing the terminal. (See Figure 7 and Figure 8).

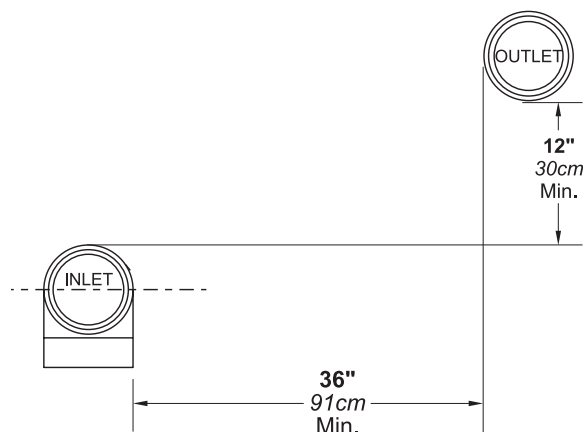


Figure 8. Minimum Venting Distance

NOTE:

For US installations, the vent for this appliance shall not terminate:

- i) over public walkways; or
- ii) near soffit vents or crawl space vents or other areas where condensate or vapor could create a nuisance or hazard or cause property damage; or
- iii) where condensate vapor could cause damage or could be detrimental to the operation of regulators, relief valves, or other equipment.

1. Do not locate the air inlet terminal near a source of corrosive chemical fumes (e.g., cleaning fluid, chlorine compounds, etc.).
2. Locate the terminal so that it will not be subject to damage by accident or vandalism. It must be at least 7 feet (2.1 m) above a public walkway.
3. Locate the combustion air terminal so that it cannot be blocked by snow. The National Fuel Gas Code requires that it be at least 12 inches (30 cm) above grade, but the installer may determine it should be higher, depending upon local conditions.
4. If the unit is side-wall vented to the same wall, locate the vent terminal at least 1 foot (0.3 m) above the combustion air terminal.
5. Multiple vent kits should be installed such that the horizontal distance between outlet group and inlet group is 36" (90 cm). (See Figure 8.)
6. The vent outlet must be at least 12" above the top of the air inlet, and must be at least 36" (90 cm) horizontally from the air inlet.

3.D.3 Vertical Vent Terminal

When the unit is vented through the roof, the vent must extend at least 3 feet (0.9 m) above the point at which it penetrates the roof. It must extend at least 2 feet (0.6 m) higher than any portion of a building within a horizontal distance of 10 feet (3.0 m), and high enough above the roof line to prevent blockage from snow. The vent terminal offered with the unit can be used in both vertical and horizontal applications. When the combustion air is taken from the roof, the combustion air must terminate at least 12" (30 cm) below the vent terminal.

3.D.4 Vertical Combustion Air Terminal

When combustion air is taken from the roof, a field-supplied rain cap or an elbow arrangement must be used to prevent entry of rain water. The opening on the end of the terminal must be at least 12" (30 cm) above the point at which it penetrates the roof, and high enough above the roof line to prevent blockage from snow. When the vent terminates on the roof, the combustion air must terminate at least 12" (30 cm) below the vent terminal.

3.D.5 Installations in the Commonwealth of Massachusetts

In Massachusetts the following items are required if the side-wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches. (From Massachusetts Rules and regulations 248 CMR 5.08.)

1. Installation of Carbon Monoxide Detectors

At the time of installation of the side wall vented gas fueled appliance, the installing plumber or gas-fitter shall observe that a hard-wired carbon monoxide detector with an alarm battery back-up is installed on the floor level where the gas appliance is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard-wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side-wall horizontally vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for installation of hard-wired carbon monoxide detectors.

a. In the event that the side-wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard-wired carbon monoxide with alarm and battery back-up may be installed on the next adjacent floor level.

b. In the event that the requirements of the

subdivision cannot be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements, provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm be installed.

2. Approved Carbon Monoxide Detectors

Each carbon monoxide detector shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

3. Signage

A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print no less than one-half (1/2) inch in size: "GAS VENT DIRECTLY BELOW, KEEP CLEAR OF ALL OBSTRUCTIONS."

4. Inspection

The state or local gas inspector of the side-wall horizontally vented gas fueled appliance shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a) 1-4.

3.E Common Vent Test

Note -This section does not describe a method for common venting units. It describes what must be done when a unit is removed from a common vent system. These high efficiency condensing units require special vent systems and fans for common vent. Contact the units manufacturer if you have questions about common venting these units.

WARNING

When an existing boiler is removed from a common venting system, the common venting system is likely to be too large for proper venting of the appliances remaining connected to it.

At the time of removal of an existing boiler, the following steps shall be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

1. Seal any unused openings in the common venting system.
2. Visually inspect the venting system for proper size and horizontal pitch and determine there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
3. Insofar as it is practical, close all building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building. Turn on clothes dryers and any appliance not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
4. Place in operation the appliance being inspected. Follow the lighting instructions. Adjust the thermostat so the appliance will operate continuously.
5. Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar or pipe.
6. After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas burning appliance to their previous conditions of use.
7. Any improper operation of the common venting system should be corrected so that the installation conforms to the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and/or CSA B149.1, Installation Codes. When resizing any portion of the common venting system, the common venting system should be resized to approach the minimum size as determined using the appropriate tables and guidelines in the National Fuel Gas Code, ANSI Z223.1 NFPA 54 and/or CSA B149.1, Installation Codes.

AVERTISSEMENT

Lorsqu'une chaudière existante est supprimée d'un système de ventilation commun, le système de ventilation commun est susceptible d'être trop grande pour garantir une aération correcte des appareils restant connecté à elle. Lors de la dépose d'une chaudière existante, les étapes suivantes doivent être suivies avec chaque appareil reste connecté à la système de ventilation commun mis en opération, alors que les autres appareils connectés restants à la politique commune de système d'aération ne sont pas en opération.

1. Joint les ouvertures inutilisées dans le système de ventilation commun.
2. Inspecter visuellement le système de ventilation à la taille correcte et espacement horizontal et déterminer il n'y a pas de blocage ou de restriction, de fuite, de corrosion et d'autres lacunes que pourrait causer une condition dangereuse
3. Dans la mesure où cela est pratique, fermer tous les bâtiments de portes et fenêtres et toutes les portes entre l'espace dans lequel les appareils connectés restants à la système de ventilation commun sont situés et d'autres espaces du bâtiment. Allumer les sècheuses et tout appareil non connecté au système de ventilation commun. Mettez sous tension tous les ventilateurs d'échappement d'air, tels que les hottes de cuisine et salle de bains exhausts, afin qu'ils fonctionnent à la vitesse maximum. Ne pas faire fonctionner un ventilateur d'échappement d'été. Fermer cheminée amortisseurs.
4. Place dans le fonctionnement de l'appareil inspecté. Suivez les instructions d'éclairage. Réglez le thermostat de sorte que l'appareil fonctionnera en continu.
5. Test pour les pertes sur les projets d'ouverture de secours de capot après 5 minutes de fonctionnement du brûleur principal. Utilisez la flamme d'une allumette ou une bougie allumée, ou de la fumée d'une cigarette, un cigare ou une pipe.
6. Après qu'il a été déterminé que chaque appareil reste connecté au système de ventilation commun correctement événements lorsque testé comme décrit ci-dessus, le retour des portes, des fenêtres, ventilateurs d'échappement, amortisseurs de cheminée et tout autre appareil de combustion du gaz à leurs conditions d'utilisation précédente.
7. Tout fonctionnement incorrect du système de ventilation commun devrait être corrigée de sorte que l'installation est conforme aux code de gaz combustible National, ANSI Z223.1/NFPA 54 et/ou CSA B149.1, Codes d'installation. Lors du redimensionnement de toute portion de la système de ventilation commun, le système de ventilation commun doit être redimensionné à l'approche de la taille minimale, déterminée en utilisant les tableaux appropriés et des lignes directrices dans le National Code de gaz combustible, ANSI Z223.1 NFPA 54 et/ou CSA B149.1, Codes d'installation.

3.F Outdoor Installation

This unit may only be installed outdoors in applications where the outdoor temperature doesn't drop below freezing. For proper operation in outdoor installations, the boiler must be equipped with the inlet air and exhaust terminal kits listed in Table 6 on page 12. The bottom panel cover plate must be removed. Additional instructions are supplied with the terminal kits.

3.G Condensate Drain Trap

A condensate drain trap is included with the unit and is designed to drain the boiler of condensate. The vent condensate should be drained through a drain tee located in the vent line. This will help prevent excessive condensate from entering the boiler condensate trap and preventing the boiler from operating.

Connect a 3/4" PVC pipe between the drain connection and a floor drain (or condensate pump if a floor drain is not accessible).

The condensate drain must be installed to prevent the accumulation of condensate. When a condensate pump is not used, the tubing must continuously slope downward toward the drain with no spiraling.

Consult local codes for the disposal method.



Caution

Condensate is mildly acidic (pH=5), and may harm some floor drains and/or pipes, particularly those that are metal. Ensure that the drain, drainpipe, and anything that will come in contact with the condensate can withstand the acidity, or neutralize the condensate before disposal. **Damage caused by failure to install a neutralizer kit or to adequately treat condensate will not be the manufacturers responsibility.**

SECTION 4 Gas Supply and Piping

4.A Gas Supply and Piping

All Installations must conform to the National Fuel Gas Code ANSI Z223.1/NFPA54, and/or local codes. In Canada, the installation must conform to the latest edition of CSA B149.1 Natural Gas and Propane Gas Installation Code, and/or local codes. Gas piping should be supported by suitable hangers or floor stands, not the appliance.

Review the following instructions before proceeding with the installation.

1. Verify that the unit is fitted for the proper type of gas by checking the rating plate. This unit will function properly without the use of high altitude modification at elevations up to 10,000 feet (3050 m).
2. Verify that the Min and Max inlet gas supply pressures are within the parameters shown in Table 8
3. Refer to Tables on next page to size the piping.
4. Run the gas supply line in accordance with all applicable codes.
5. Locate and install manual shutoff valves in accordance with state and local requirements.
6. A sediment trap must be provided upstream of the gas controls.
7. All threaded joints should be coated with piping compound resistant to the action of liquefied petroleum gas.
8. The unit and its individual shutoff valve must be disconnected from the gas supply piping during any pressure testing of that system at test pressures in excess of 1/2 PSIG (3.45 kPa).
9. The unit must be isolated from the gas supply system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 PSIG (3.45 kPa).
10. The unit and its gas connection must be leak tested before placing it in operation.
11. Purge all air from gas lines.

Inlet Gas Supply Pressure		
	Min	Max
Natural Gas	3.5" W.C.	10.5" W.C.
Propane	8" W.C.	13" W.C.

Table 8. Gas Pressure

**WARNING**

Open flame can cause gas to ignite and result in property damage, severe injury, or loss of life.

NOTE: This unit and all other gas appliances sharing the gas supply line must be firing at maximum capacity to properly measure the inlet supply pressure. The pressure can be measured at the supply pressure port on the gas valve. Low gas pressure could be an indication of an undersized gas meter, undersized gas supply lines and/or an obstructed gas supply line. Some units are equipped with low and high pressure gas switches that are integrally vent limited. These types of devices do not require venting to atmosphere.

**WARNING**

If an inline high gas pressure regulator is used, it **MUST** be of the lockup type and located a minimum of 10 feet from the unit.

Failure to do so may result in insufficient gas volume supplied to the unit.

To size piping:

Measure linear distance from meter outlet to last boiler. Add total input of all boilers and divide by 1000 to obtain cu ft / hr required. Add total equivalent length of fittings used according to Table 10. Align total length (pipe and fittings) on left side column of Table 11 with highest cubic feet of gas required.

Required			
Propane		Natural Gas	
Size	CUFT/HR	Size	CUFT/HR
1000	400	1000	1000
1200	480	1200	1200

Notes:

Consult and confirm with Applicable Fuel Gas Code before beginning work.

Verify gas inlet pressure is correct using Table 8 before starting boiler.

Table 9. To Size Your Gas Piping**EQUIVALENT LENGTHS OF STRAIGHT PIPE FOR TYPICAL SCH 40 FITTINGS**

FITTING	NOMINAL PIPE SIZE					
	1/2"	3/4"	1"	1-1/4"	1-1/2"	2"
LINEAR FEET						
90° ELBOW	3.6	4.4	5.2	6.6	7.4	8.5
TEE	4.2	5.3	6.6	8.7	9.9	12

Table 10. Equivalent Pipe Lengths**SCH 40 METAL PIPE CAPACITY FOR 0.60 SPECIFIC GRAVITY NATURAL GAS**

NOMINAL PIPE SIZE @ 0.30" W.C. PRESSURE DROP						
LENGTH	1/2"	3/4"	1"	1-1/4"	1-1/2"	2"
FT	CUBIC FEET OF GAS PER HOUR					
20	92	190	350	730	1100	2100
40		130	245	500	760	1450
60		105	195	400	610	1150
80		90	170	350	530	990
100			150	305	460	870

Table 11. Pipe Capacity for Natural Gas**SCHED 40 METAL PIPE CAPACITY FOR 1.50 SPECIFIC GRAVITY UNDILUTED PROPANE**

NOMINAL PIPE SIZE @ 11" W.C. INLET AND 0.5" W.C. PRESSURE DROP						
SIZE	1/2"	3/4"	1"	1-1/4"	1-1/2"	2"
LENGTH MAXIMUM CAPACITY IN THOUSANDS OF BTU PER HOUR						
20	200	418	787	1616	2422	4664
40	137	287	541	1111	1664	3205
60	110	231	434	892	1337	2574
80	94	197	372	763	1144	2203
100	84	175	330	677	1014	1952

Notes:

1. Follow all local and national LP gas codes for line sizing and equipment requirements.

Table 12. Pipe Capacity for Propane

SECTION 5 Pump Requirements

5.A Boiler Flow and Head Requirements

	15		20		25		30	
	Flow	H/L	Flow	H/L	Flow	H/L	Flow	H/L
	gpm	feet	gpm	feet	gpm	feet	gpm	feet
1000	126	43.6	95	26.7	75	17.8	62	12.8
1200	151	59.7	114	36.6	91	24.8	76	18.2

	35		40		45		50		55		60	
	Flow	H/L	Flow	H/L	Flow	H/L	Flow	H/L	Flow	H/L	Flow	H/L
	gpm	feet	gpm	feet	gpm	feet	gpm	feet	gpm	feet	gpm	feet
	54	10.1	48	8.2	42.2	6.6	38	5.5	34.5	4.7	31.7	4
	65	13.9	57	11.1	50.7	9	45.6	7.5	41.5	6.4	38	5.5

English

Metric

	8		11		14		17	
	Flow	H/L	Flow	H/L	Flow	H/L	Flow	H/L
	lpm	m	lpm	m	lpm	m	lpm	m
1000	477.0	13.3	359.6	8.1	283.9	5.4	234.7	3.9
1200	571.6	18.2	431.5	11.2	344.5	7.6	287.7	5.5

	19		22		25		28		31		33	
	Flow	H/L	Flow	H/L	Flow	H/L	Flow	H/L	Flow	H/L	Flow	H/L
	lpm	m	lpm	m	lpm	m	lpm	m	lpm	m	lpm	m
	204.4	3.1	181.7	2.5	159.7	2.0	143.8	1.7	130.6	1.4	120.0	1.2
	246.1	4.2	215.8	3.4	191.9	2.7	172.6	2.3	157.1	2.0	143.8	1.7

Table 13. Boiler Water Flow Requirements

5.2 Water Heater Flow and Head Requirements

	Flow	H/L	Temp Rise
	gpm	feet	F
1000	75	18	25
1200	75	18	30

	Flow	H/L	Temp Rise
	lpm	m	C
1000	283.9	5.5	14
1200	283.9	5.5	17

Table 14. Water Heater Flow Data

Design Temperature Rise Across Boiler									
Size	40°F	50°F	60°F	70°F	80°F	90 °F	100°F	120°F	140°F
	gph	gph	gph	gph	gph	gph	gph	gph	gph
1000	2857	2286	1905	1633	1429	1270	1143	952	816
1200	3420	2736	2280	1954	1710	1520	1368	1140	977
Design Temperature Rise Across Boiler									
Size	22°C	28°C	33°C	39°C	44°C	50°C	56°C	67°C	78°C
	L/h	L/h	L/h	L/h	L/h	L/h	L/h	L/h	L/h
1000	10799	8641	7201	6173	5402	4801	4321	3599	3084
1200	12927	10369	8641	7407	6482	5761	5185	4319	3701

Table 15. Water Heater Recovery Data

SECTION 6 Water Connections

Section 6 is divided into TWO parts. Section 6A covers Boilers models designed for hydronic heating. Many installations include indirect domestic hot water. Section 6B covers Heater models, which are designed exclusively for “volume water” domestic hot water applications. Refer to the proper section for instructions on installing and piping your unit/model. Refer to Table 16 for the connection pipe sizes required.

6.A BOILER Systems

6.A.1 Boiler System Piping: Hot Supply Connections

Note -This unit must be installed in a closed pressure system with a minimum of 12 psi (82.7 kPa) static pressure at the boiler.

The hot water piping should be supported by suitable hangers or floor stands. Do not support the piping with this unit. The hangers used should allow for expansion and contraction of copper pipe. Rigid hangers may transmit noise through the system resulting from the piping sliding in the hangers. We recommend that padding be used when rigid hangers are installed. Maintain 1" (2.5 cm) clearance to combustibles for all hot water pipes.

Pipe the discharge of the relief valve (full size) to a drain or in a manner to prevent injury in the event of pressure relief. Install an air purger, an air vent, a diaphragm-type expansion tank, a hydronic flow check in the system supply loop, and any other devices required by local codes. The minimum fill pressure must be 12 psig (82.7 kPa). Install shutoff valves where required by code.

Suggested piping diagrams are shown in Figure 9 through Figure 12. These diagrams are meant only as guides. Components required by local codes must be properly installed.

The unit's efficiency is higher with lower return water

BOILER SIZE	PIPE SIZE, INCHES	HEATER SIZE	PIPE SIZE, INCHES
1000	2	1000	2
1200	2	1200	2

Table 16. Water Connection Pipe Sizes

temperatures. Therefore, to get the best low return temperature with multiple boilers, pipe as shown in Figure 12 and Figure 13 on page 29

6.A.1.a Boiler Pumps

All boiler models can be ordered with a pump. When the pump is included with the boiler, the boiler must be located within 15 feet (4.6m) of the supply/return header (or hydraulic separator). These units must be piped in a primary-secondary fashion, such that the pump that is included only serves the boiler. The pumps are sized for the headloss of the boiler and a maximum of 30 feet (9.1m) of piping that is the same size as the boiler water connections. See Table 15 on page 22.

If longer pipe lengths or alternate piping methods are being used, the pump must be sized for the boiler and the piping it will serve. See Table 13 on page 22 for water flow and headloss requirements.

The manufacturer strongly recommends primary-secondary piping.

6.A.2 Boiler Cold Water Make-Up

1. Connect the cold water supply to the inlet connection of an automatic fill valve.
2. Install a suitable back flow preventer between the automatic fill valve and the cold water supply.
3. Install shut off valves where required.

In some installations, a hot water heating boiler is connected to heating coils located in an air handling appliance where the coils may be exposed to refrigerated air circulation. In these cases, the boiler piping system must be equipped with flow control valves or other automatic means to prevent gravity circulation of the boiler water during the cooling cycle.

WARNING

When a boiler is installed above radiation level, it is required that a Low Water Cutoff (LWCO) be installed unless this requirement is superceded by Jurisdictional requirements.

Specific instructions for the installation of a Low Water Cutoff (LWCO) are the following:

Locate the wiring diagram within this manual. On the

wiring diagram, locate the connection points marked LWCO or Field Interlocks. These are the electrical connection points for the LWCO. Follow LWCO manufacturers wiring instructions.

Mechanically, install the LWCO device in a tee fitting in the supply piping above the highest point of the boiler (unless the boiler has an existing fitting for that purpose). Follow LWCO manufacturers instructions for minimum pipe sizing.

NOTE: ANSI/ASME CSD-1 and the National Fuel Gas Code ANSI Z223.1/NFPA 54 state that a low water cutoff device is required on boilers. Both standards also state that in lieu of a low water cutoff, water tube boilers (like NeoTherm) which require forced circulation to prevent overheating and failure shall have a water flow sensing device arranged to shut down the boiler when the flow rate is inadequate, to protect the boiler against overheating.

6.A.3 Boiler Freeze Protection



WARNING

Glycol must not be used in domestic hot water applications. Refer to 6.B.4 on page 30 for instructions on freeze protection and domestic hot water applications.

These units may be installed indoors or outdoors. If installed outdoors, the unit must never be installed in a location which may experience freezing temperatures. If installed indoors, and there is an event such as a power outage, interruption of gas supply, failure of system components, activation of safety devices, etc., this may prevent a boiler from firing. **Any time a boiler is subjected to freezing conditions, and the boiler is not able to fire, and/or the water is not able to circulate, there is a risk of freezing in the boiler or in the pipes in the system.** When water freezes, it expands. This may result in bursting of pipes, or damage to the boiler, and this could result in leaking or flooding conditions.

Do not use automotive antifreeze. To help prevent freezing, the manufacturer recommends the use of inhibited glycol concentrations between 20% and 35% glycol. Typically, this concentration will serve as burst protection for temperatures down to approximately -5°F (-20°C). If temperatures are expected to be lower than -5°F (-20°C), glycol concentrations up to 50% can be used. **When concentrations greater than 35% are used, water flow rates must be increased to maintain a 20°F to 25°F temperature rise through the boiler.**

Different glycol products may provide varying degrees of protection. Glycol products must

be maintained properly in a heating system, or they may become ineffective. Consult the glycol specifications, or the glycol manufacturer, for information about specific products, maintenance of solutions, and set up according to your particular conditions.

The following manufacturers offer glycols, inhibitors, and anti foamants that are suitable for use in the unit. Please refer to the manufacturers instructions for proper selection and application.

- Sentinel Performance Solutions Group
- Hercules Chemical Company
- Dow Chemical Company

6.A.4 Condensate Drain Trap

A condensate drain trap is included with the unit and is designed to drain the boiler of condensate. The vent condensate should be drained through a drain tee located in the vent line. This will help prevent excessive condensate from entering the boiler condensate trap and preventing the boiler from operating.

Connect a 3/4" PVC pipe between the drain connection and a floor drain (or condensate pump if a floor drain is not accessible).

The condensate drain must be installed to prevent the accumulation of condensate. When a condensate pump is not used, the tubing must continuously slope downward toward the drain with no spiraling.

Consult local codes for the disposal method.



Caution

Condensate is mildly acidic (pH=5), and may harm some floor drains and/or pipes, particularly those that are metal. Ensure that the drain, drainpipe, and anything that will come in contact with the condensate can withstand the acidity, or neutralize the condensate before disposal. **Damage caused by failure to install a neutralizer kit or to adequately treat condensate will not be the manufacturers responsibility.**

6.A.5 Boiler Suggested Piping Schematics

Figure 9 through Figure 12 (the next several pages) show suggested piping configurations for boilers. These diagrams are only meant as guides. All components or piping required by local code must be installed.

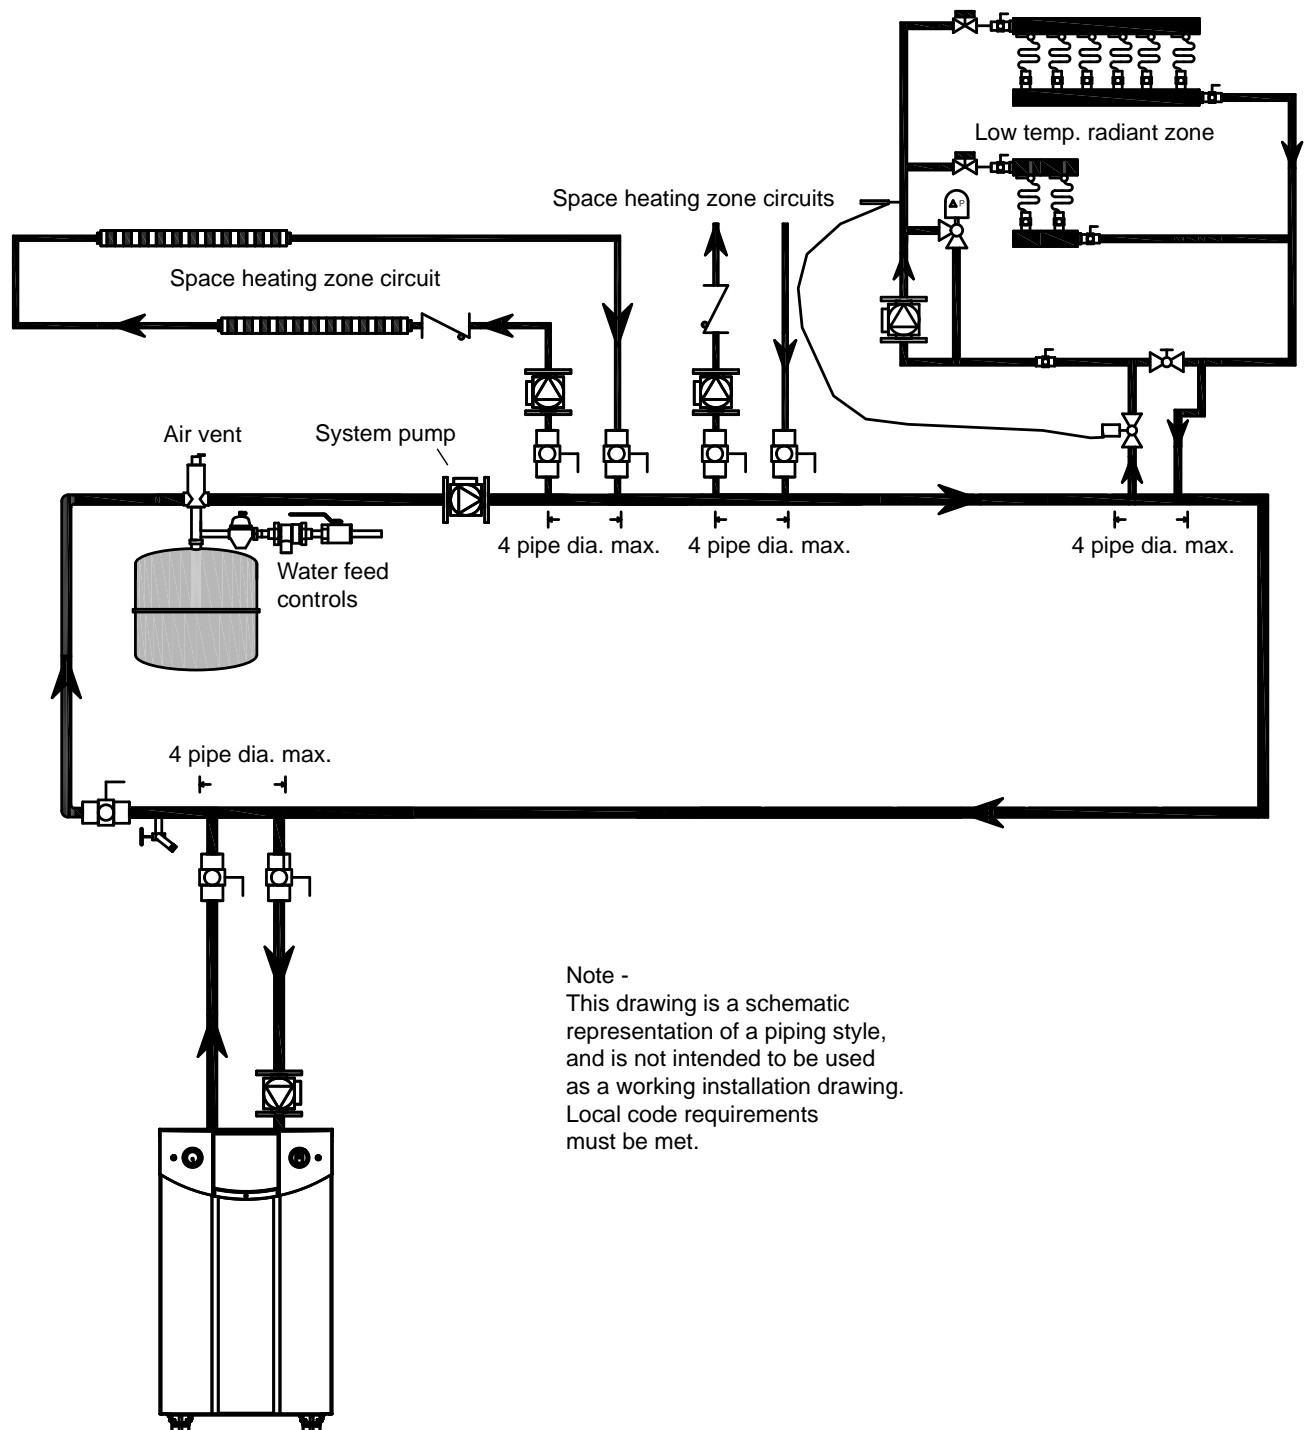


Figure 9. Hydronic Piping — Single Boiler, Multiple Temperature Zones. Zoning with circulators

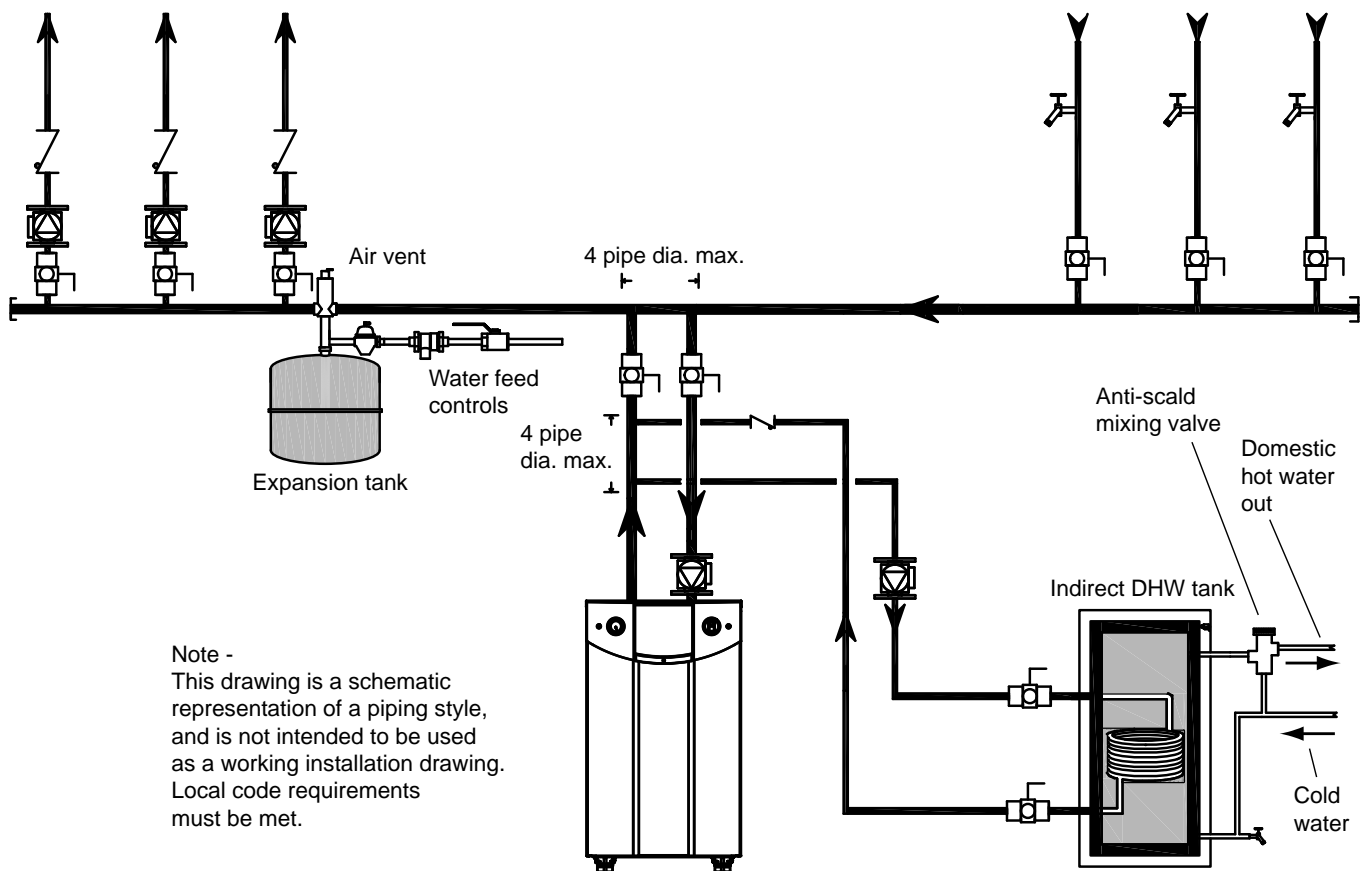


Figure 10. Hydronic Piping — Single Boiler, Zoning with Circulators, Indirect DHW Tank with Zone Pumps
Indirect tank directly off of boiler

Note -

This drawing is a schematic representation of a piping style, and is not intended to be used as a working installation drawing. Local code requirements must be met.

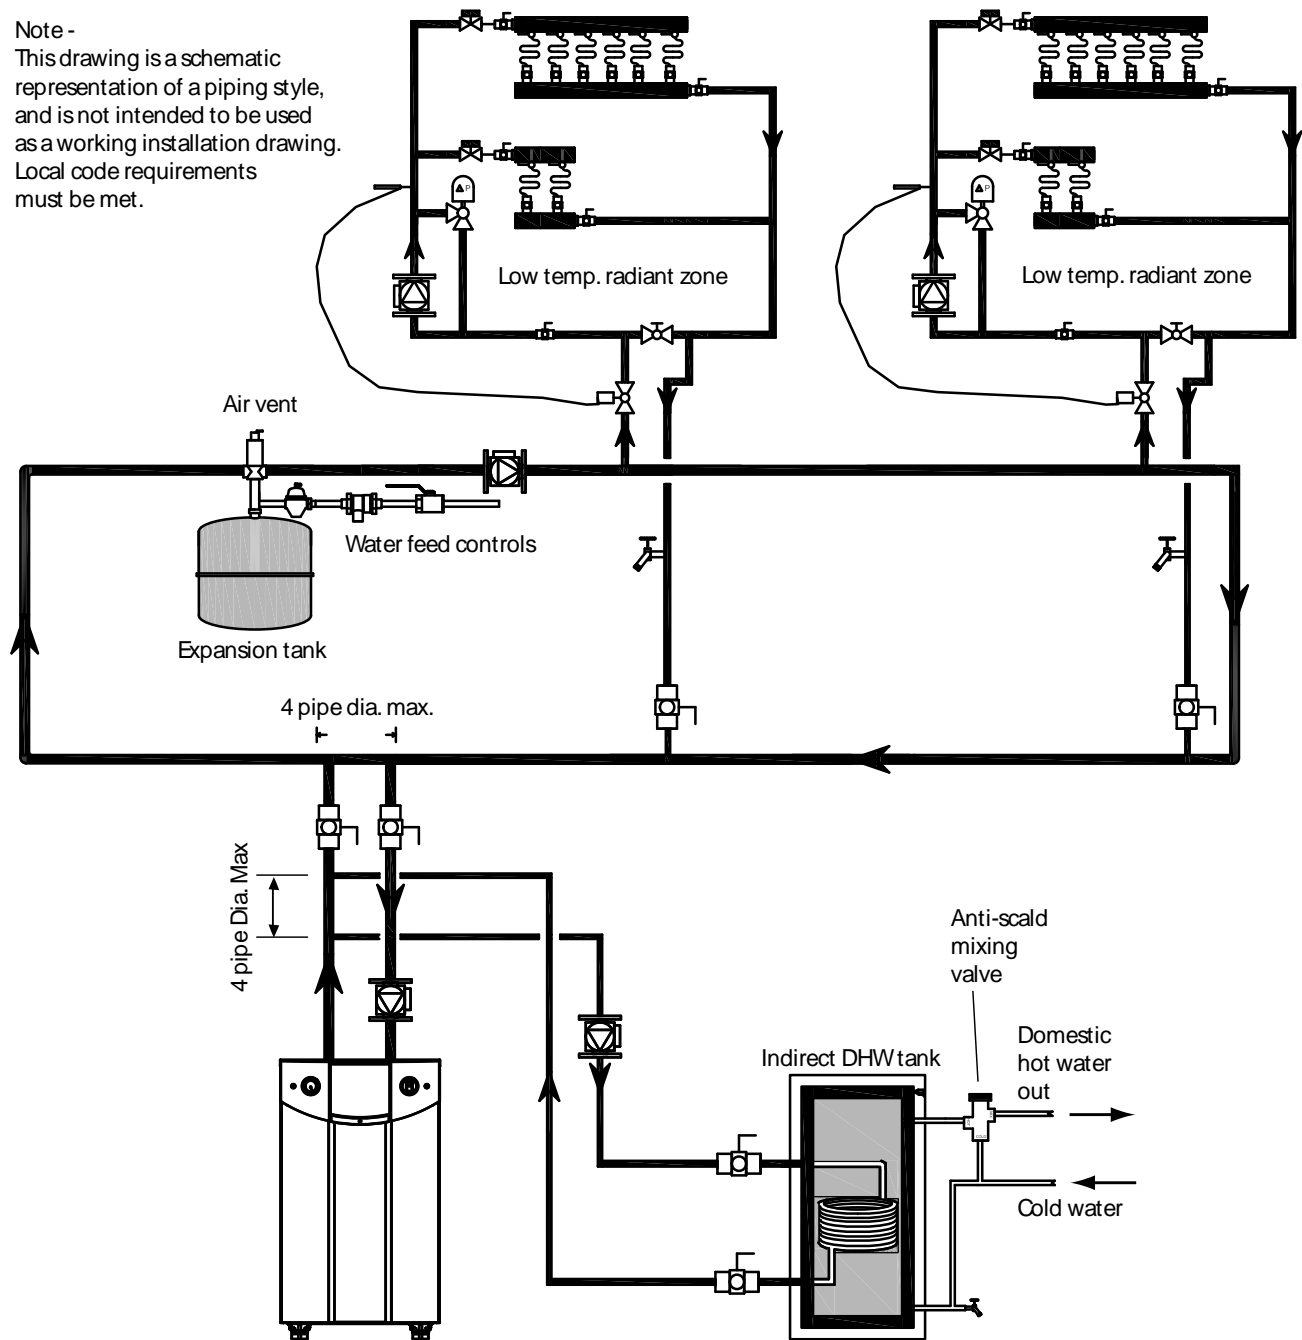


Figure 11. Hydronic Piping — Single Boiler with Low Temperature Zones and Indirect DHW Tank

Indirect tank directly off of boiler

Note -

This drawing is a schematic representation of a piping style, and is not intended to be used as a working installation drawing. Local code requirements must be met.

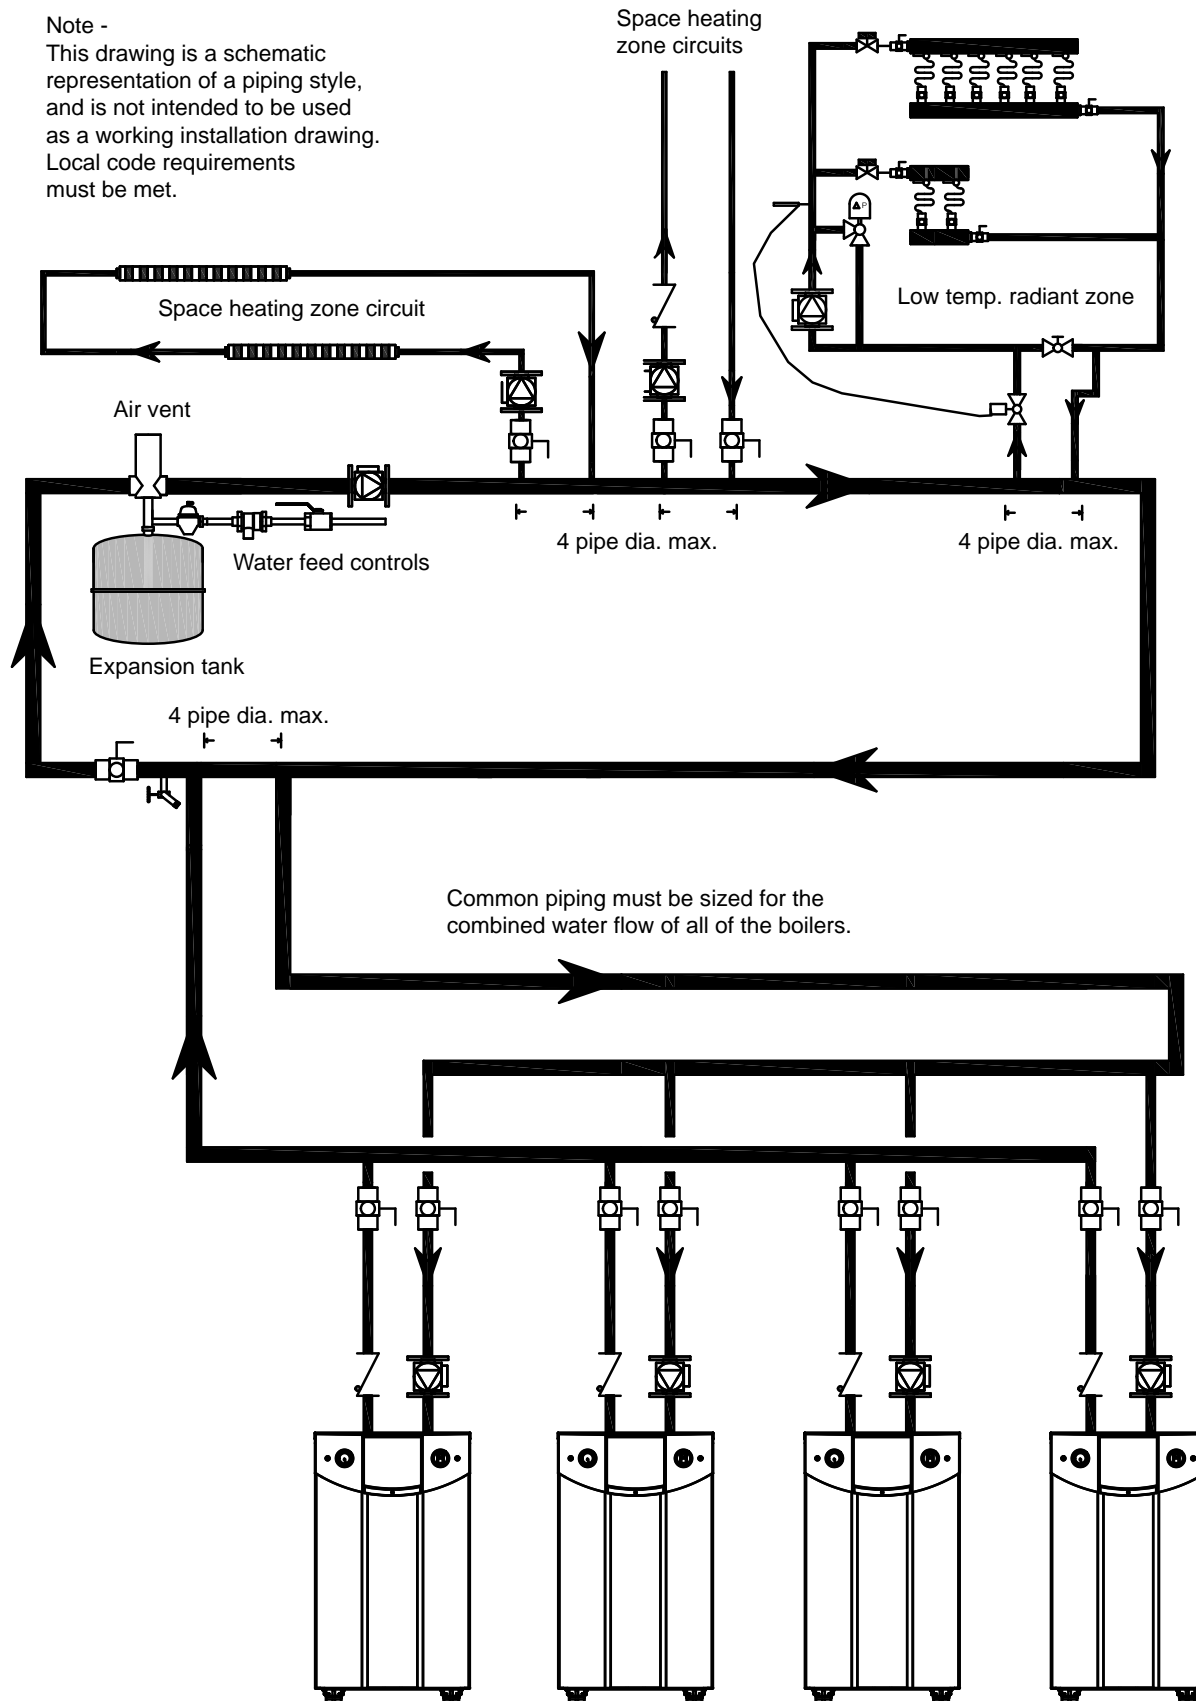


Figure 12. Hydronic Piping — Multiple Boilers, Multiple Temperature Zones, Reverse Return
Zoning with circulators

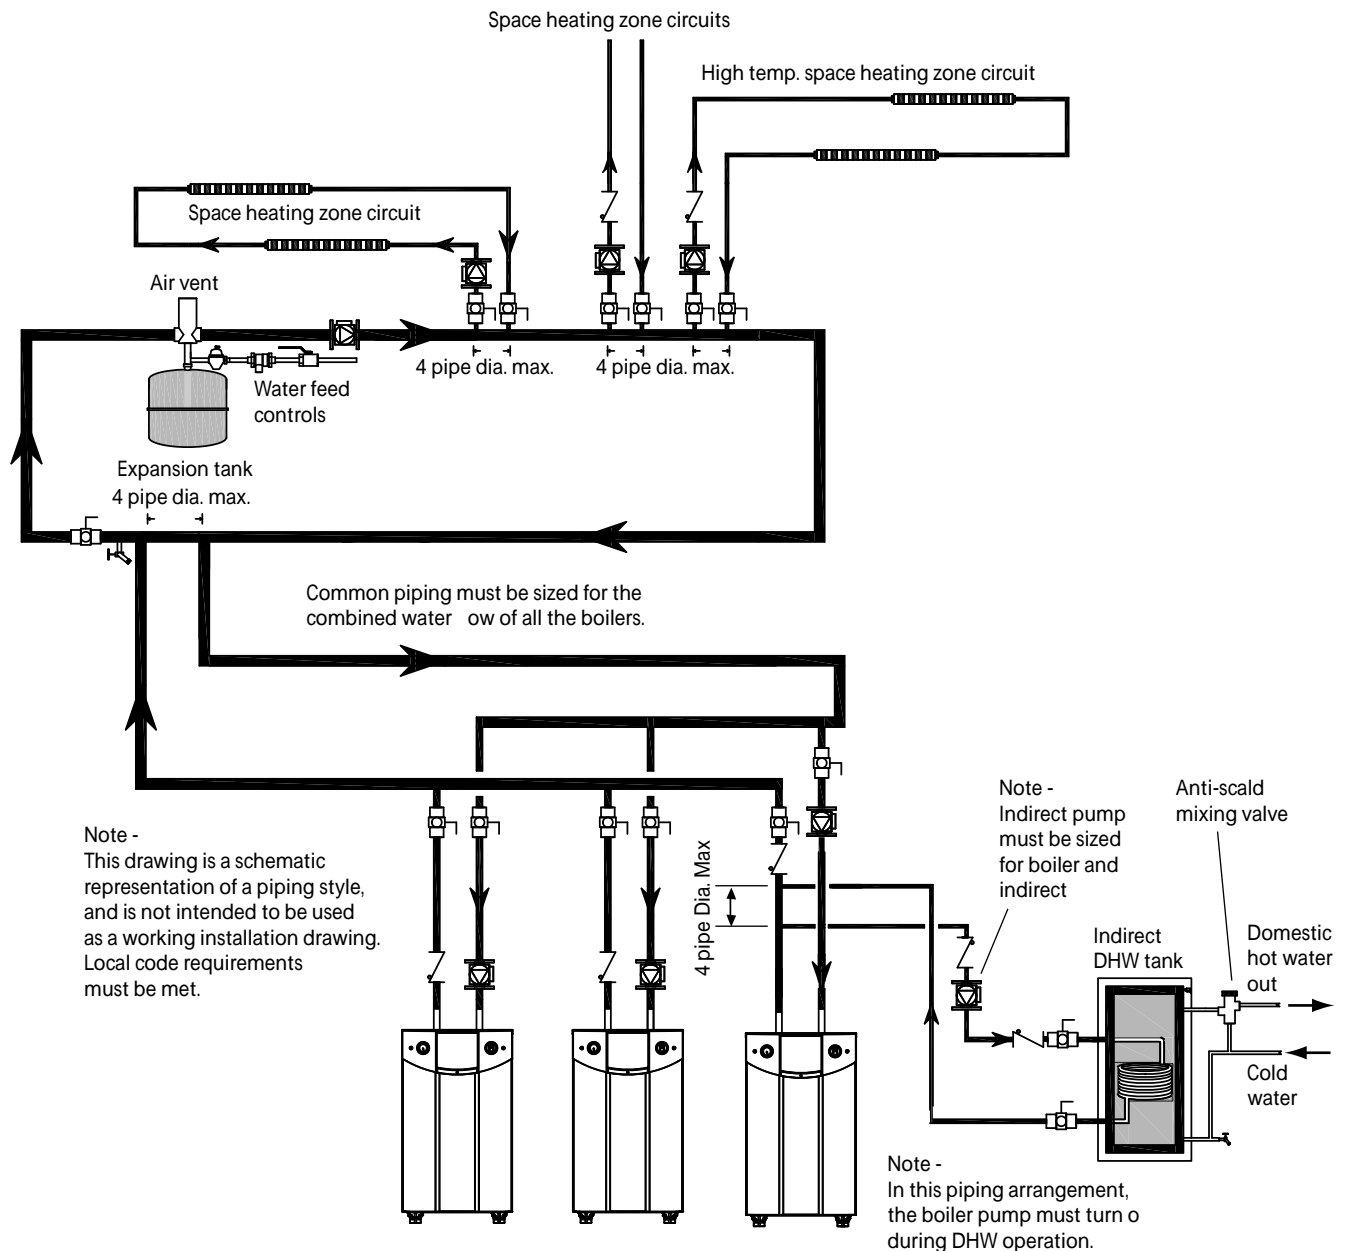


Figure 13. Hydronic Piping — Multiple Boilers, Indirect DHW Off of One Boiler

6.B WATER HEATER Systems

6.B.1 Water Quality

Water heaters must be installed in water conditions of 10 gpg hardness or less, with a pH range of 6.5 to 9.5 pH. Values outside of this range may reduce the life expectancy of the product. Operating the heater in water with higher hardness levels will cause heat exchanger fouling, erosion, or corrosion, leading to premature component failure, reduced efficiency, heat exchanger failure or system failure. Failure of this type will not be warranted. If the water in use exceeds the conditions recommended, water softeners or other devices should be installed to improve water quality.

6.B.2 Water Heater Piping Requirements

The water piping should be supported by suitable hangers and floor stands. Do not support the piping with this appliance. The hangers used should allow for expansion and contraction of copper pipe. Rigid hangers may transmit noise through the system resulting from piping sliding in the hangers. We recommend that padding be used when rigid hangers are installed. Maintain 1" (2.5 cm) clearance to combustibles for hot water pipes.

Pipe the discharge of the relief valve (full size) to the drain or in a manner to prevent injury in the event of

pressure relief. Install a diaphragm-type expansion tank, flow check, and shutoff valves where needed or as required by code.

The piping should be installed so that each pump supplies flow only to the heater to which it is attached.

6.B.3 Water Heater Cold Water Make-Up

The cold water make-up may be connected to the tank or to the inlet of the boiler as shown in Figure 14 thru Figure 16. Install back-flow preventers and shut-offs where needed or required by code.

WARNING

When a water heater is installed above radiation level, it is required that a Low Water Cutoff (LWCO) be installed unless this requirement is superseded by Jurisdictional requirements.

Specific instructions for the installation of a Low Water Cutoff (LWCO) are the following:

Locate the wiring diagram within this manual. On the wiring diagram, locate the connection points marked LWCO or Field Interlocks. These are the electrical connection points for the LWCO. Follow LWCO manufacturers Wiring Instructions.

Mechanically, install the LWCO device in a tee fitting in the supply piping above the highest point of the water heater (unless the water heater has an existing fitting for that purpose). Follow LWCO manufacturers Instructions for minimum pipe sizing.

NOTE: ANSI/ASME CSD-1 and the National Fuel Gas Code ANSI Z223.1/NFPA 54 state that a low water cutoff device is required on boilers. Both standards also state that in lieu of a low water cutoff, water tube boilers which require forced circulation to prevent overheating and failure, shall have a water flow sensing device arranged to shut down the boiler when the flow rate is inadequate, to protect the boiler against overheating.

6.B.4 Water Heater Freeze Protection

NOTE: Outdoor installation of volume water heaters is not permitted in Canada.

This water heater must never be installed outdoors in a location which may experience freezing temperatures. If installed indoors and there is an event such as a power outage, component failure, or other issue when freezing is likely, the heater and system must be drained to avoid the risk of damage

due to freezing. Glycol must **not** be used in volume water heating applications.

6.B.5 Water Heater Pumps

These water heaters can be ordered with a pump that is sized to serve only one heater. When the pump is included with the heater, the heater must be located within 15 feet (4.6m) of the storage tank. The pumps are sized for the headloss of the heater and a maximum of 30 feet (9.1m) of piping that is the same size as the heater water connections 15 feet between the heater. See Table 15 on page 22.

If longer pipe lengths or alternate piping methods are being used, the pump must be sized for the heater and the piping it will serve.

The manufacturer recommends that each heater have its own pump. Table 14 on page 22 shows water flow and headloss data for the heater. Improper pipe sizing may result in conditions that cause internal scale buildup and failure of the heat exchanger.

6.B.6 Condensate Drain Trap

A condensate drain trap is included with the unit and is designed to drain the boiler of condensate. The vent condensate should be drained through a drain tee located in the vent line. This will help prevent excessive condensate from entering the boiler condensate trap and preventing the boiler from operating.

Connect a 3/4" PVC pipe between the drain connection and a floor drain (or condensate pump if a floor drain is not accessible).

The condensate drain must be installed to prevent the accumulation of condensate. When a condensate pump is not used, the tubing must continuously slope downward toward the drain with no spiraling.

Consult local codes for the disposal method.


Caution

Condensate is mildly acidic (pH=5), and may harm some floor drains and/or pipes, particularly those that are metal. Ensure that the drain, drainpipe, and anything that will come in contact with the condensate can withstand the acidity, or neutralize the condensate before disposal. **Damage caused by failure to install a neutralizer kit or to adequately treat condensate will not be the manufacturers responsibility.**

6.B.7 Water Heater Suggested Piping Schematics

Figure 14 thru Figure 16 show suggested piping configurations for water heaters. These diagrams are only meant as guides. All components or piping required by local code must be installed.


WARNING: This drawing shows suggested piping configuration and valving. Check with local codes and ordinances for additional requirements.

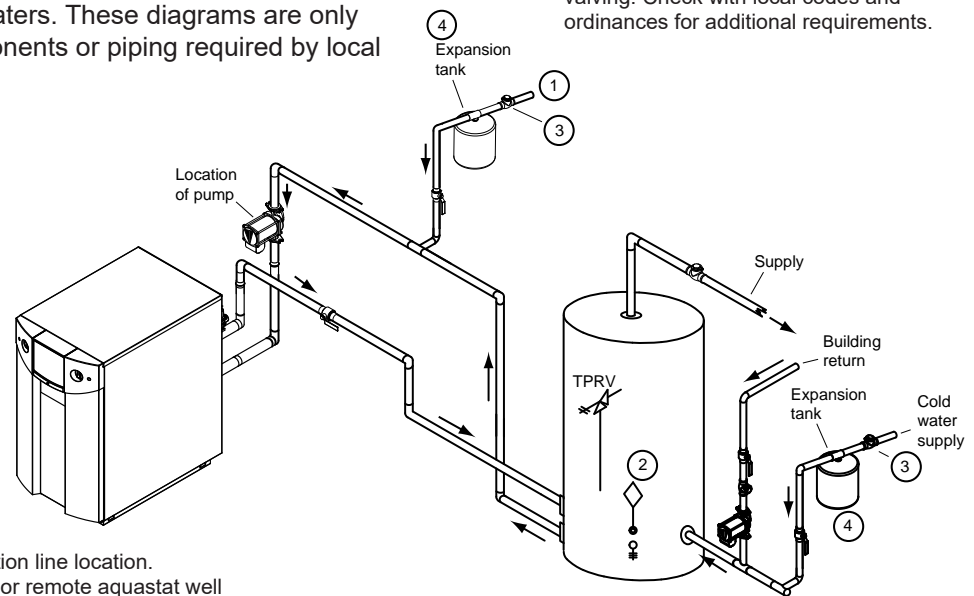

NOTES:

1. Optional CWMU & recirculation line location.
2. Locate Heater DHW sensor or remote aquastat well in lower 1/3 of tank.
3. Back flow preventer may be required - check local codes.
4. Thermal expansion tank may be required - check local codes.

Figure 14. DHW Piping - One Heater, One Vertical Tank

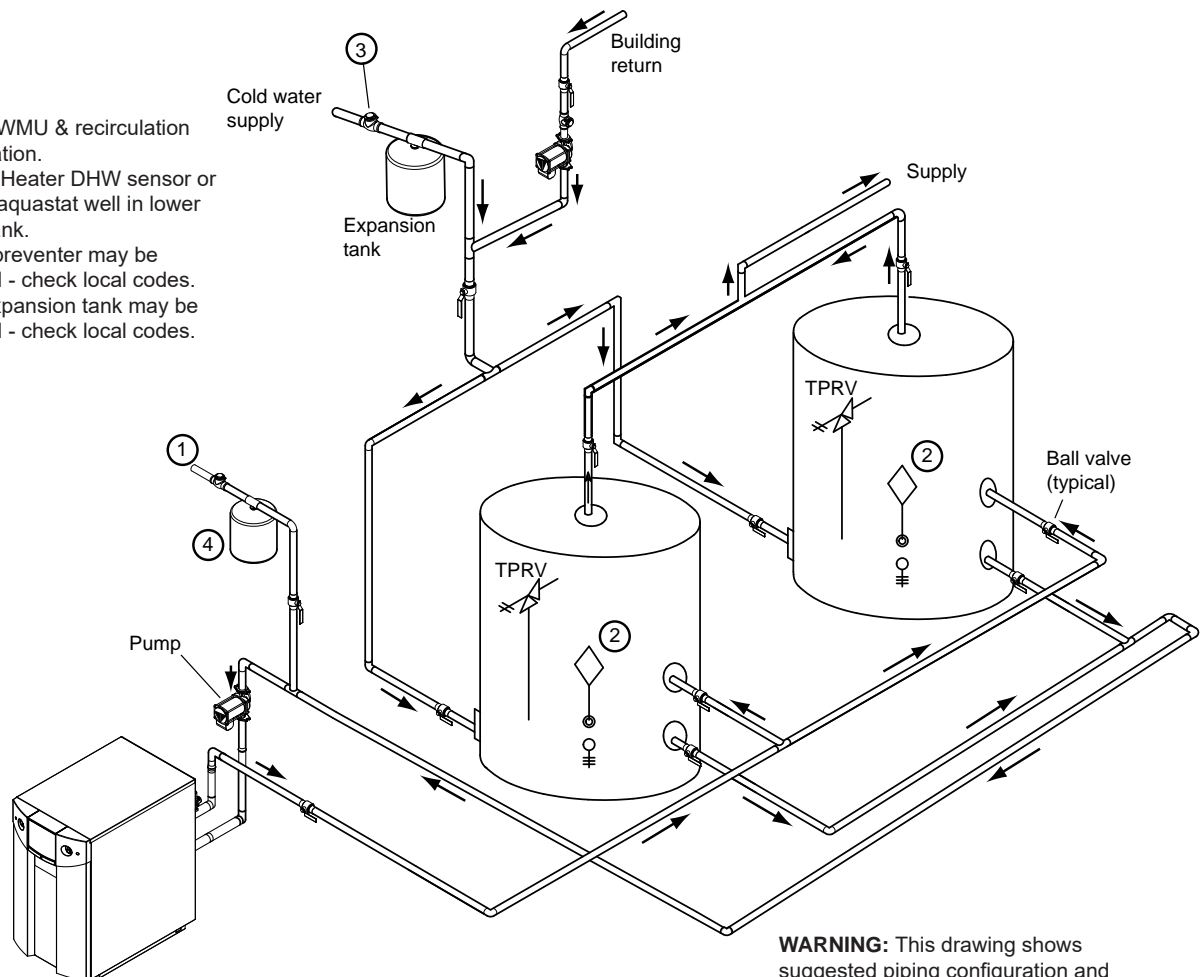

WARNING: This drawing shows suggested piping configuration and valving. Check with local codes and ordinances for additional requirements.

Figure 15. DHW Piping - One Heater, Two Vertical Tanks

NOTES:

1. Optional CWMU & recirculation line location.
2. Locate the Heater DHW sensor or remote aquastat well in lower 1/3 of tank.
3. Back flow preventer may be required - check local codes.
4. Thermal expansion tank may be required - check local codes.

WARNING: This drawing shows suggested piping configuration and valving. Check with local codes and ordinances for additional requirements.

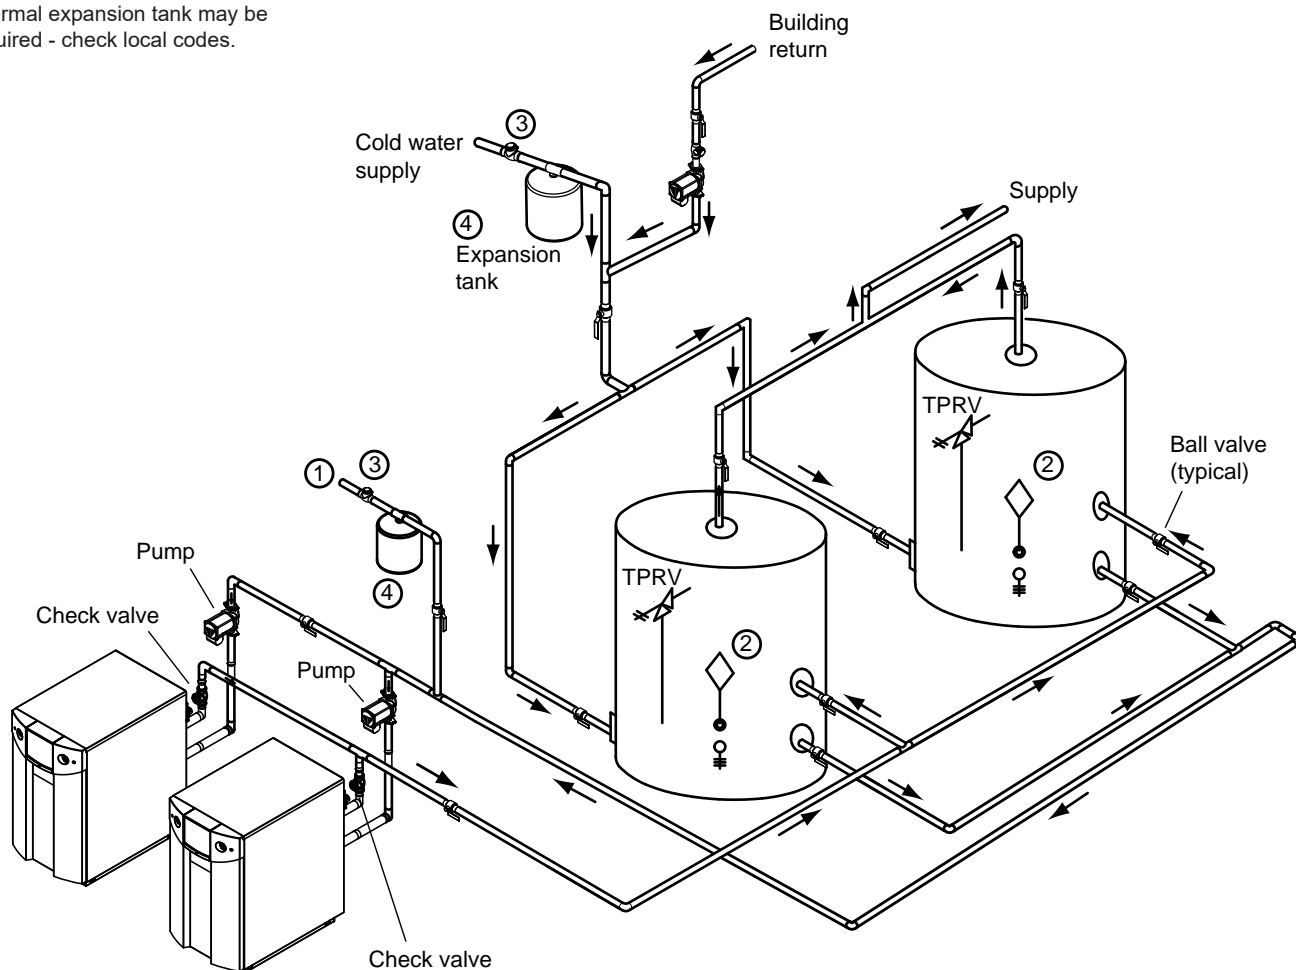


Figure 16. DHW Piping - Two Heaters, Two Vertical Tanks

SECTION 7 Electrical Connections

Single pole switches, including those in safety controls and protective devices, must not be wired in a grounded line.

All electrical connections are made on the terminal blocks that are located inside the control panel.

Note - All internal electrical components have been prewired. No attempt should be made to connect electrical wires to any other locations except the terminal blocks.

The wiring connections are shown in Figure 17 thru Figure 21.

Note - Do not make and break the line voltage to the unit as a signal to call for heat.

On a system operating as a Lead Lag installation - A "call for heat/ end call for heat" **must** be connected to the Primary TT or Interlock terminals (terminals 5 and 6 on TB7) on the controller which is acting as the Lead Lag Leader.

On a boiler operating individually - A "call for heat/ end call for heat" **must** be connected to the Primary Thermostat terminals (terminals 5 and 6 on TB7). Any jumper to the System terminals

**WARNING**

This unit must be electrically grounded in accordance with the requirements of the authority having jurisdiction or, in the absence of such requirements, with the latest edition of the National Electrical Code, ANSI/NFPA 70, in the U.S. and with latest edition of CSA C22.1 Canadian Electrical Code, Part 1, in Canada. Do not rely on the gas or water piping to ground the metal parts of the boiler. Plastic pipe or dielectric unions may isolate the boiler electrically. Service and maintenance personnel who work on or around the boiler, may be standing on wet floors and could be electrocuted by an ungrounded boiler. Electrocution can result in severe injury or death.

(terminals 3 and 4 on TB6) must be removed. For details, see Section 9.

Some of the units components are designed to have constant voltage during normal operation. If the units supply voltage is toggled as a call for heat signal, premature failure of these components may result.

The unit does not recognize 4 mA as a signal to shut off. If the call for heat is not connected between the field interlock terminals, the unit will remain in low fire when it sees 4 mA as a modulating signal.

7.A Main Power

For the convenience of the installer, a junction box has been placed at the rear of the boiler (internal) for power connections. These connections include three pre-stripped wires (black, white and green) for power connections. The unit uses a single 120-volt supply capable of 30 amps. The size of this main power supply should be determined by Table 17. This table indicates the unit's maximum overcurrent protection (MOP) and Minimum Circuit Ampacity (MCA). An overcurrent protection value should be selected based on these numbers, never to exceed 30 amps.

**Caution**

The supply voltage to the unit must not be disengaged, except for service or isolation, or unless otherwise instructed by procedures outlined in this manual. To signal a call for heat, use the correct terminals as instructed in Section 9.

7.B Pump Connections

The unit energizes the boiler pump contacts (120V) when it receives a call for heat. Once the call for heat is satisfied, the pump will remain on for the defined pump overrun time.

The contacts for the System and DHW pump are dry contacts. Appropriate voltage must be supplied to the system and DHW pumps or relay controlling the pumps for proper operation.

All pump connections are located on terminal block 5 (TB5) in the control panel (See Figure 32 on page 54). Any pump using the unit's control relay may not exceed 7.4 amps as governed by the integrated control board (this includes all units that are 'pump included'). If more current is required, an additional pump contactor must be installed. Pump contactors are not included, unless the unit was ordered with a pump. If the unit was ordered with a pump, a pump contactor that is rated for 3hP is included. Power for the coil may be supplied by TB5. TB5 is a dry contact and will accommodate low voltage as well as 120V.

LC units are available with boiler pump. See Table 17 for electrical data. The unit and the pump may be powered individually with two circuits or together using one circuit.

When using one circuit review the available MCA and MOP, if the appropriate overcurrent protection exceeds 30 AMP, the circuit should be separated.

Boiler / Water Heater	Boiler Circuit		Pump Circuit
Size - MBH	1000	1200	1000/1200
FLA	6 amp	11 amp	16 amp
MCA	8 amp	14 amp	20 amp
MOP	14 amp	25 amp	36 amp

NOTE: All Boilers and Water Heaters require a pump contactor. All circuits are 120V.

Table 17. Electrical Data

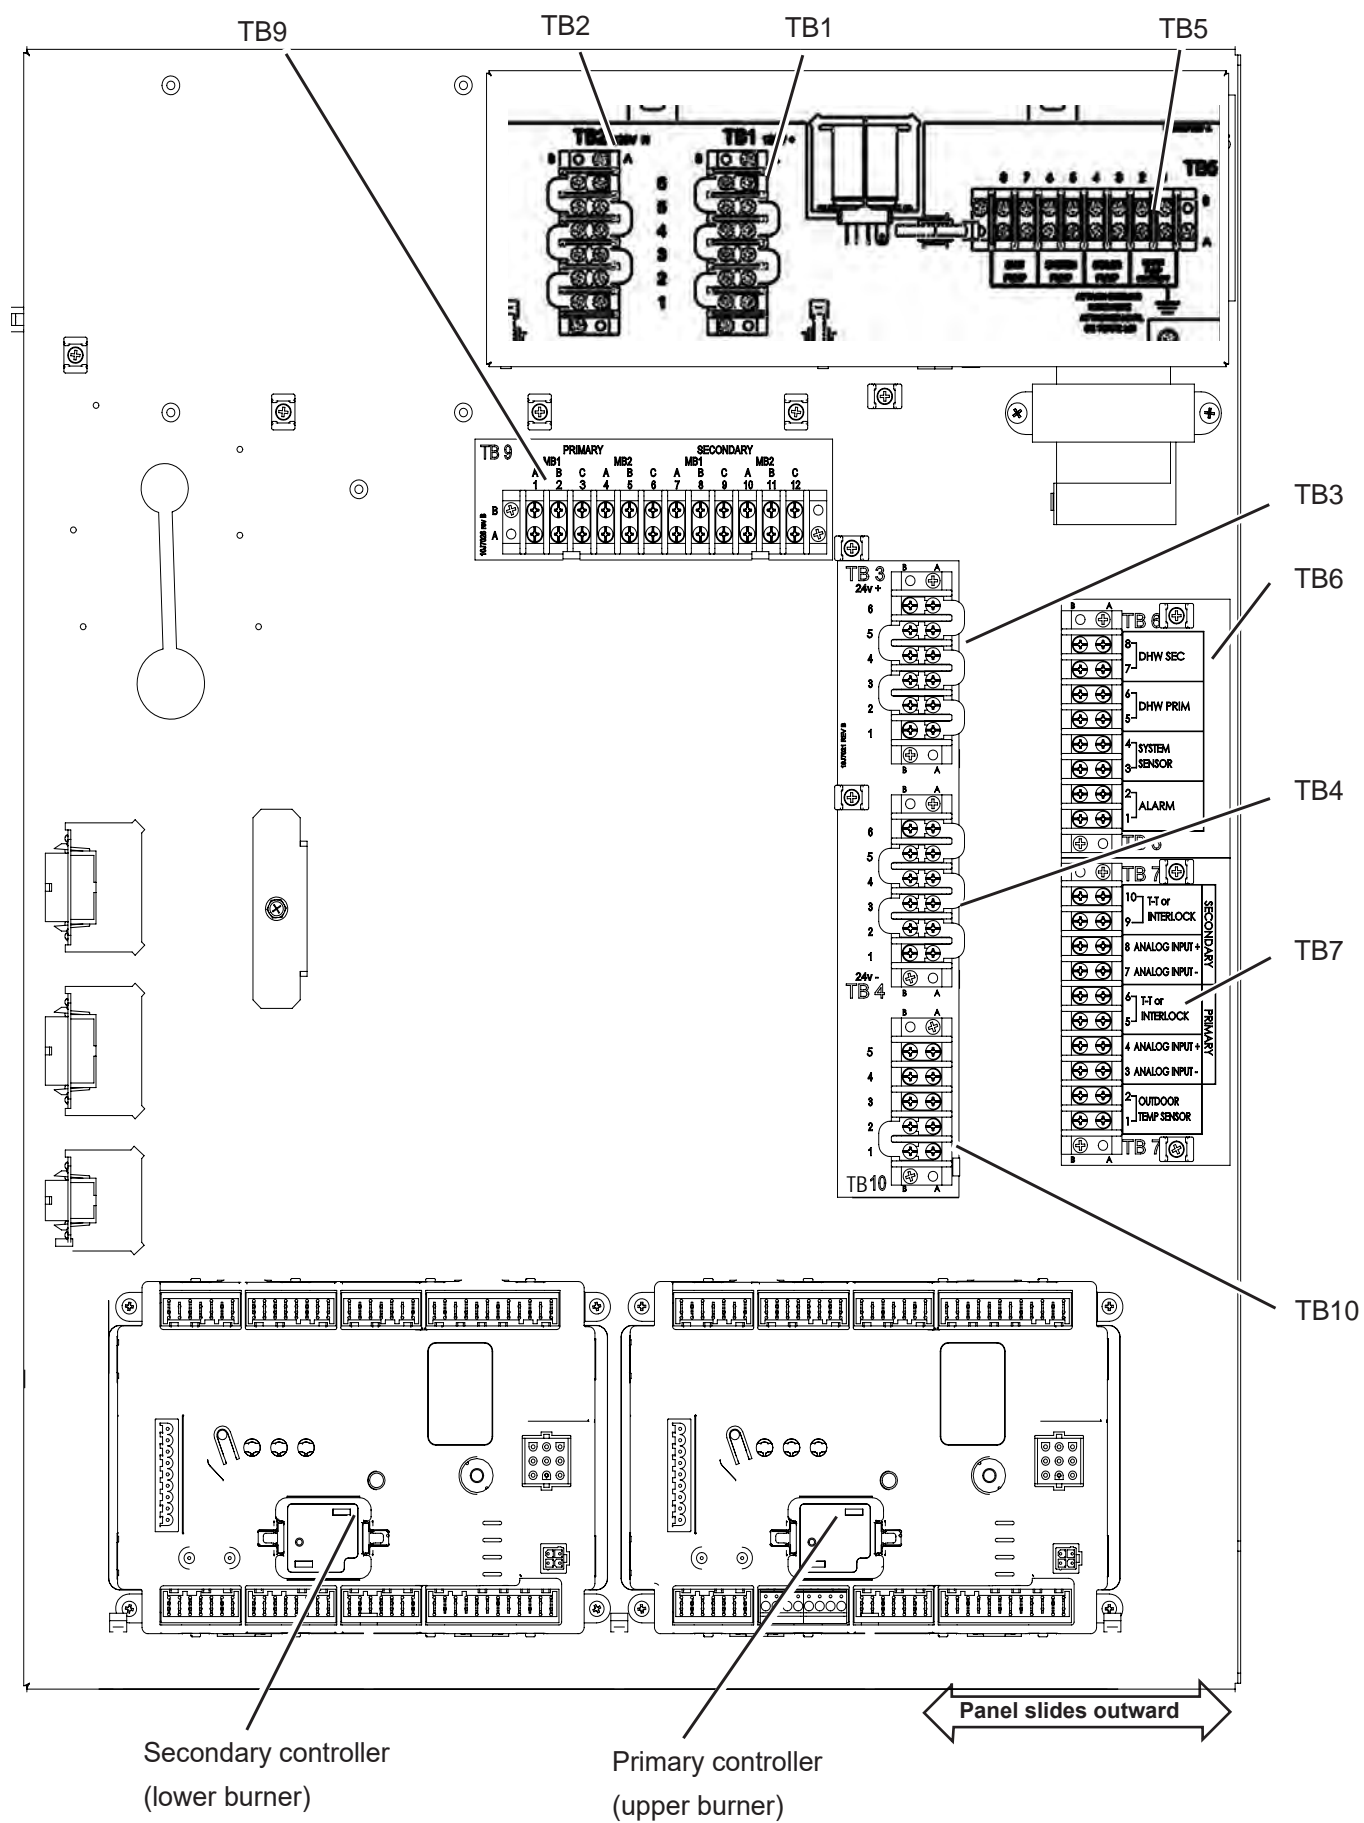


Figure 17. Electronics Panel Layout

7.C VARI-PRIME (Optional Variable Speed Pump Control)

V.S.P.C. is optional equipment on the hydronic boilers only. It is not available on the water heaters. With variable speed pump control, the pump speed is controlled to maintain a user-chosen temperature rise between the inlet and outlet of the unit of the hydronic boiler.

V.S.P.C. will operate the boiler pump at maximum flow during boiler startup to ensure stable operation is reached before introducing variable water flow. This key feature keeps the boiler's combustion and variable speed pump's flow in phase with each other, protecting the heat exchanger from potential low flow conditions.

Contact your Manufacturer's Representative for more details.

7.D 24 VAC Transformer with Integral Circuit Breaker

24 VAC is supplied by a transformer mounted on the control panel. All 24 VAC power is supplied through a circuit breaker that is part of the transformer. The transformer is then connected to terminal blocks 1 and 2 (TB1 and TB2).

7.E Signal Connections

See Section 9 for details on the following connections:

- System sensor
- Call for heat/thermostat
- Outdoor air temperature sensor
- Aquastat for domestic hot water
- External control connections

7.F Optional Low Water Cutoff (LWCO)

Specific instructions for the installation of a Low Water Cutoff (LWCO) are the following:

Locate the wiring diagram (Figure 19). On the wiring diagram, locate the connection points marked Low Water Cutoff. These are the electrical connection points for the LWCO. Follow LWCO manufacturers wiring Instructions.

Mechanically, install the LWCO device in a tee fitting in the supply piping above the highest point of the boiler (unless the boiler has an existing fitting for that purpose). Follow LWCO manufacturers instructions for minimum pipe sizing.

WARNING

When a boiler is installed above radiation level, it is required that a Low Water Cutoff (LWCO) be installed unless this requirement is superseded by jurisdictional requirements.

NOTE: ANSI/ASME CSD-1 and the National Fuel Gas Code ANSI Z223.1/NFPA 54 state that a low water cutoff device is required on boilers. Both standards also state that in lieu of a low water cutoff, water tube boilers (like NeoTherm) which require forced circulation to prevent overheating and failure shall have a water flow sensing device arranged to shut down the boiler when the flow rate is inadequate, to protect the boiler against overheating.

7.G Other Optional Field Connections

Other optional components, such as flow switches, additional high limits and other field supplied devices can be installed as shown on the wiring diagram (Figure 19).

7.H Building Automation System Connections

This unit can be controlled (in either single or cascade) and monitored through the included Modbus ports.

Signals from a Building Automation System can be connected to the MB2 Modbus connections on the controller. Follow instructions included with the BAS control to mount it to the provided holes in the unit Control Panel as shown in Figure 18. Laars Gateway Control (Kit and Instructions, H2354400 Doc# 4236).


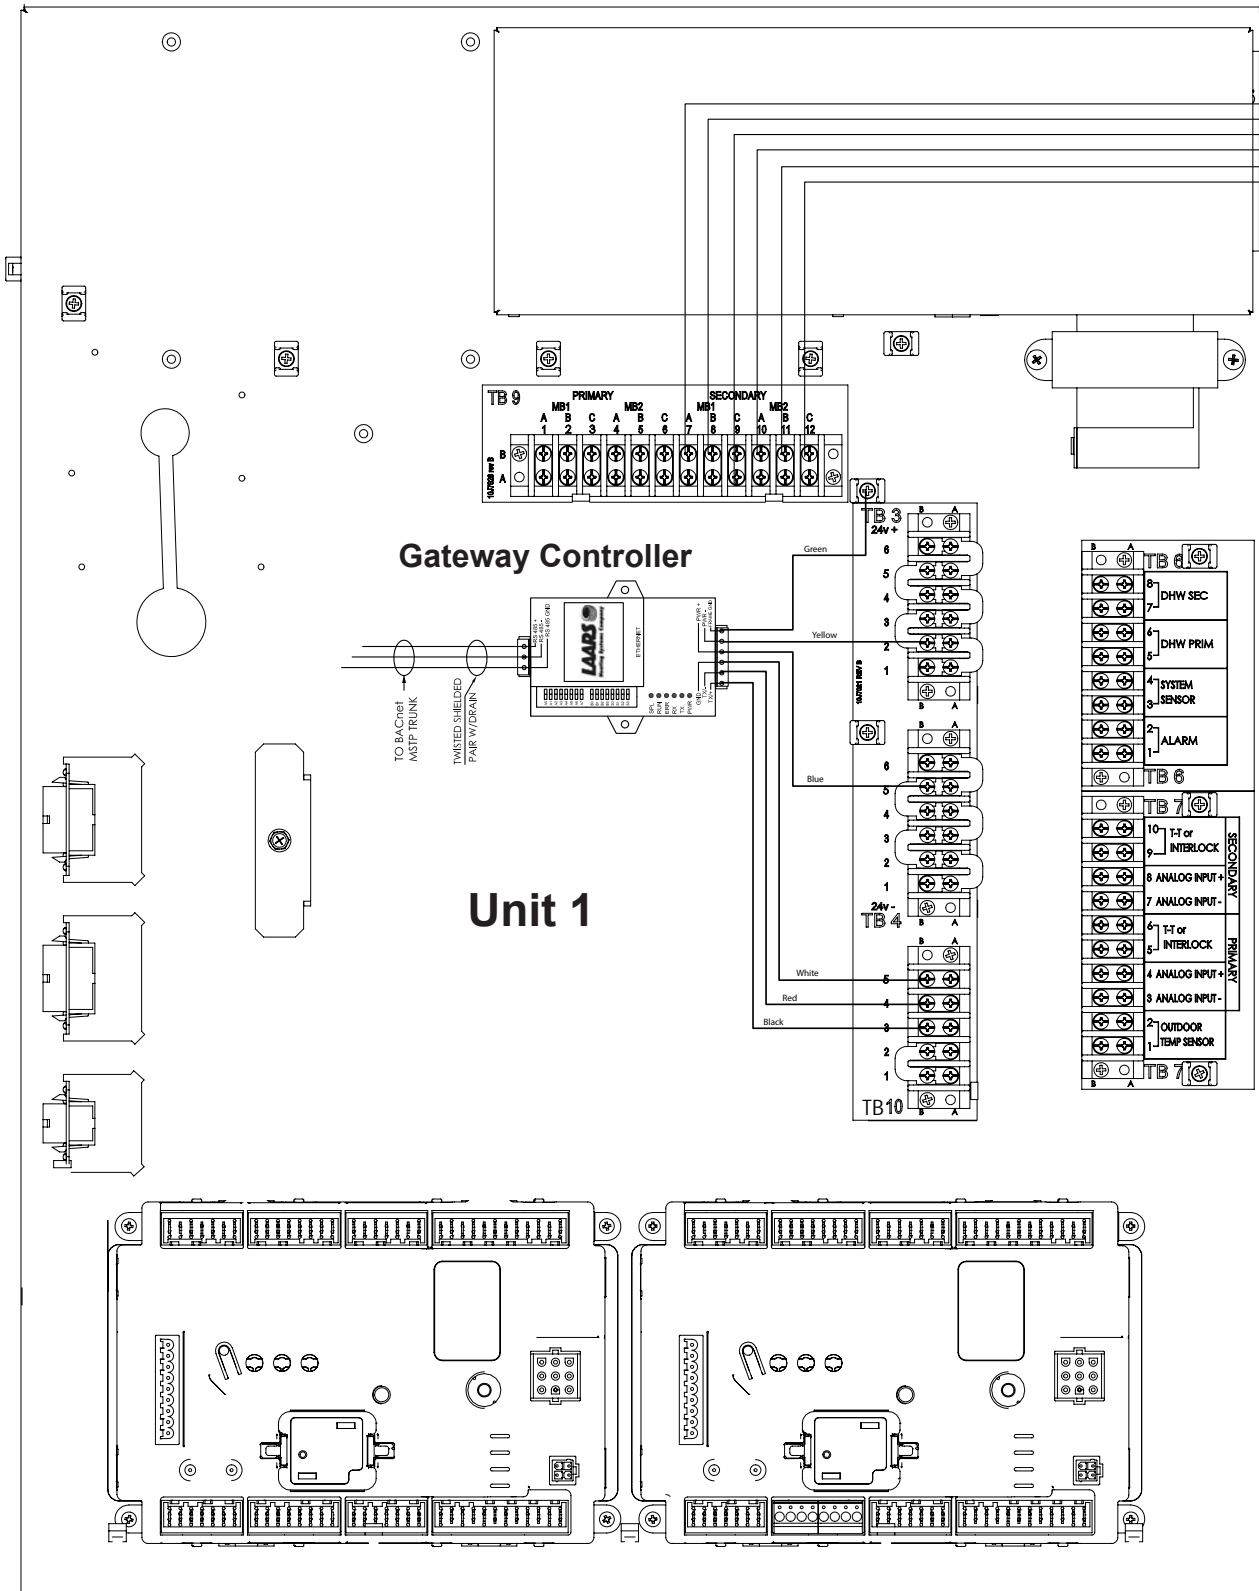


Figure 18. Connections for Gateway Controller and Lead Lag.

7.1 Lead Lag Connections & Wiring Diagram

Units can be connected in a lead lag up to 4 units with their 8 controllers total. One as the Lead control and 7 more controllers (2 per unit) as the following controllers. See Figure 18

For general info and menu set-up for Lead Lag using your units touchscreen, Please see Section 9.6 on page 87

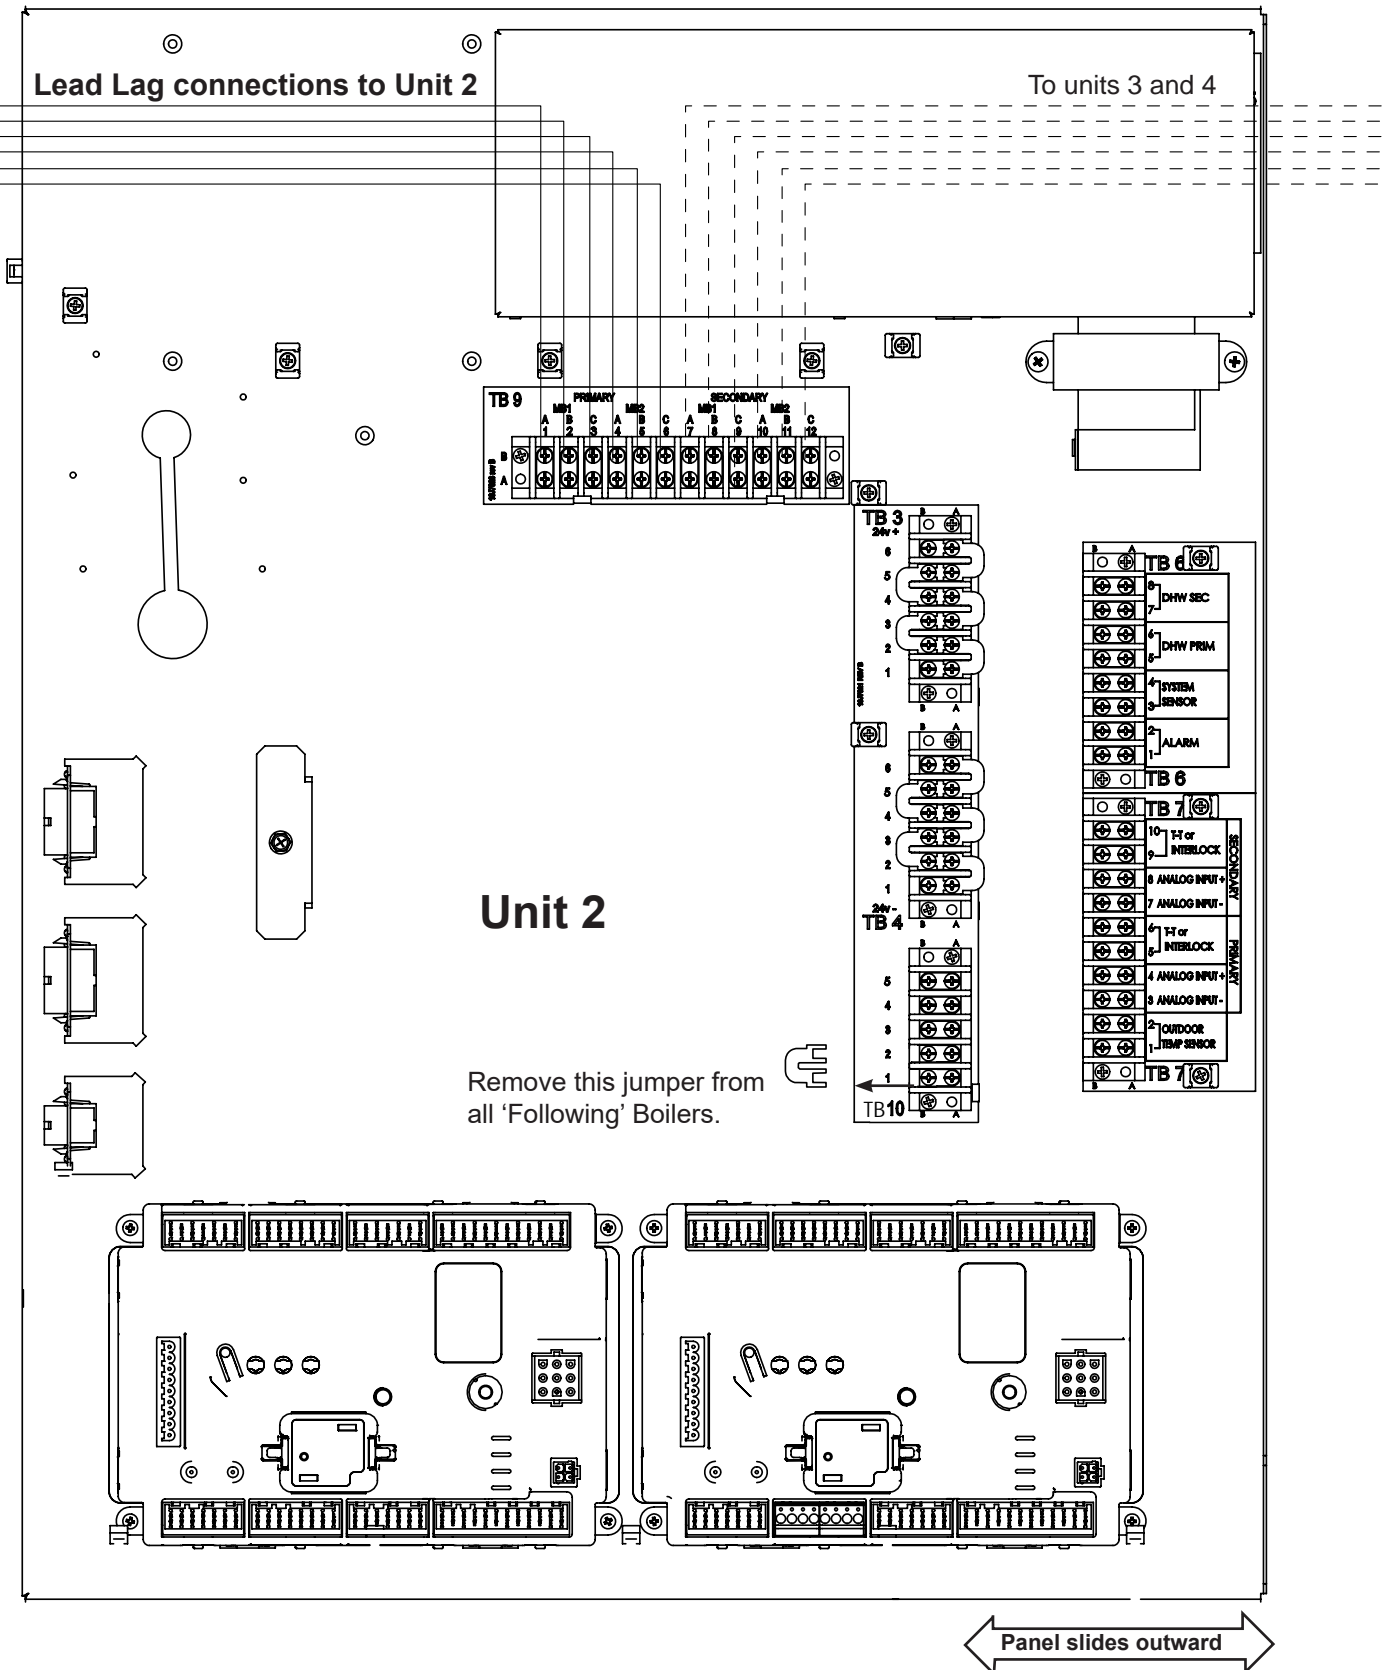

7.J Wiring Diagram

WIRE COLOR ABBREVIATIONS			
BK	BLACK	OR	ORANGE
BK/O	BLACK/ORANGE	OR/BK	ORANGE/BLACK
BK/R	BLACK/RED	OR/W	ORANGE/WHITE
BK/V	BLACK/VIOLET	PK	PINK
BK/Y	BLACK/YELLOW	PK/BK	PINK/BLACK
BL	BLUE	PK/W	PINK/WHITE
BL/Y	BLUE/YELLOW	R	RED
BL/R	BLUE/RED	R/BK	RED/BLACK
BL/BK	BLUE/BLACK	TN	TAN
BL/G	BLUE/GREEN	TN/BL	TAN/BLUE
BL/R	BLUE/RED	TN/R	TAN/RED
BL/V	BLUE/VIOLET	TN/Y	TAN/YELLOW
BL/W	BLUE/WHITE	V	VIOLET
BN	BROWN	V/BK	VIOLET/BLACK
BN/BK	BROWN/BLACK	V/W	VIOLET/WHITE
BN/G	BROWN/GREEN	W	WHITE
BN/R	BROWN/RED	W/BL	WHITE/BLUE
BN/W	BROWN/WHITE	W/BK	WHITE/BLACK
BN/Y	BROWN/YELLOW	W/G	WHITE/GREEN
DKBL	DARK BLUE	W/GY	WHITE/GRAY
DKBL/Y	DARK BLUE/YELLOW	W/O	WHITE/ORANGE
G	GREEN	W/R	WHITE/RED
G/R	GREEN/RED	W/V	WHITE/VIOLET
GY	GRAY	Y	YELLOW
GY/BK	GRAY/BLACK	Y/BK	YELLOW/BLACK
GY/R	GRAY/RED	Y/G	YELLOW/GREEN
GY/V	GRAY/VIOLET	Y/R	YELLOW/RED
GY/W	GRAY/WHITE	Y/W	YELLOW/WHITE
LTBL/W	LIGHTBLUE/WHITE		

WIRE VOLTAGE KEY

24V = _____

120V = _____



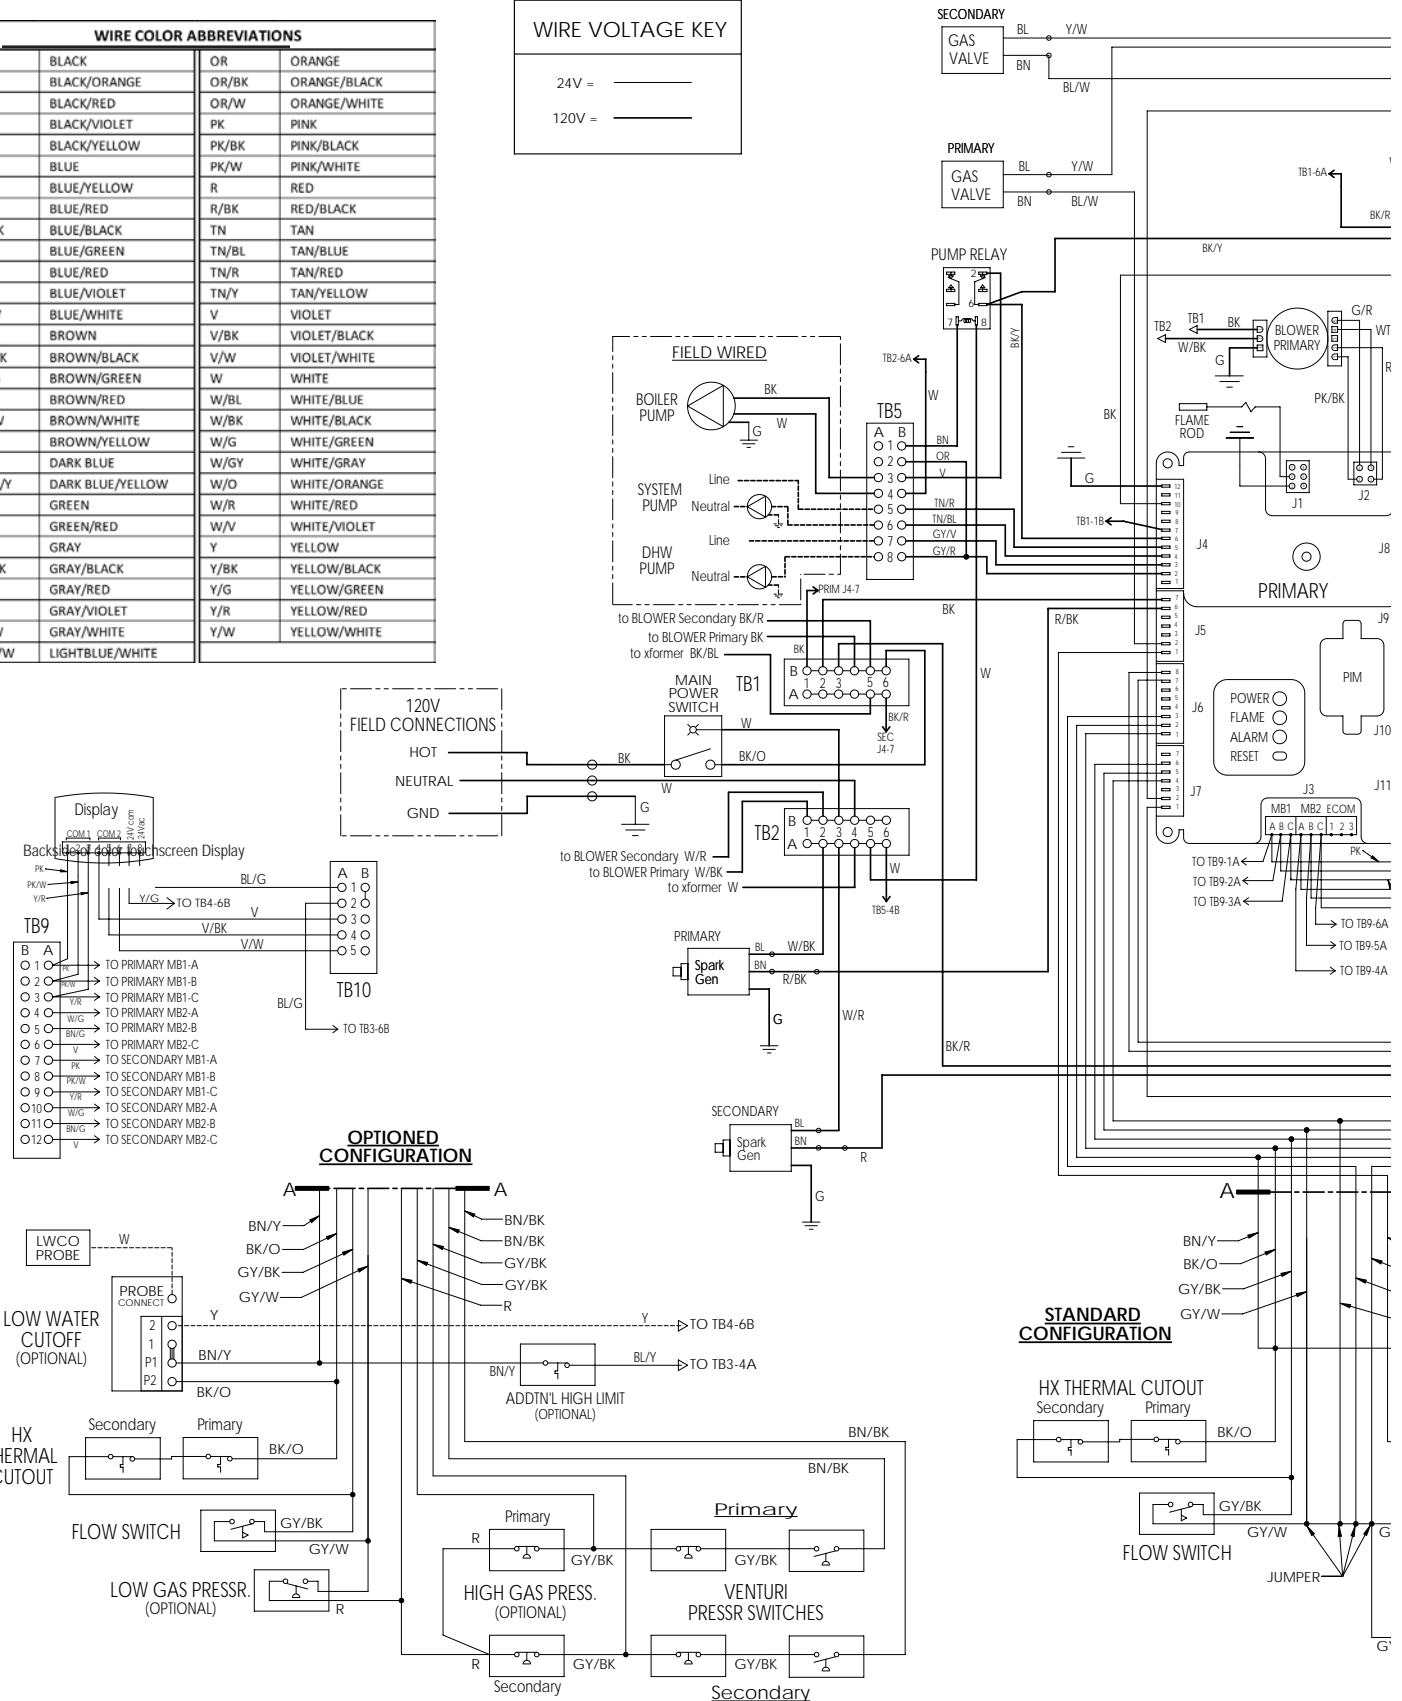


Figure 19. Wiring Diagram

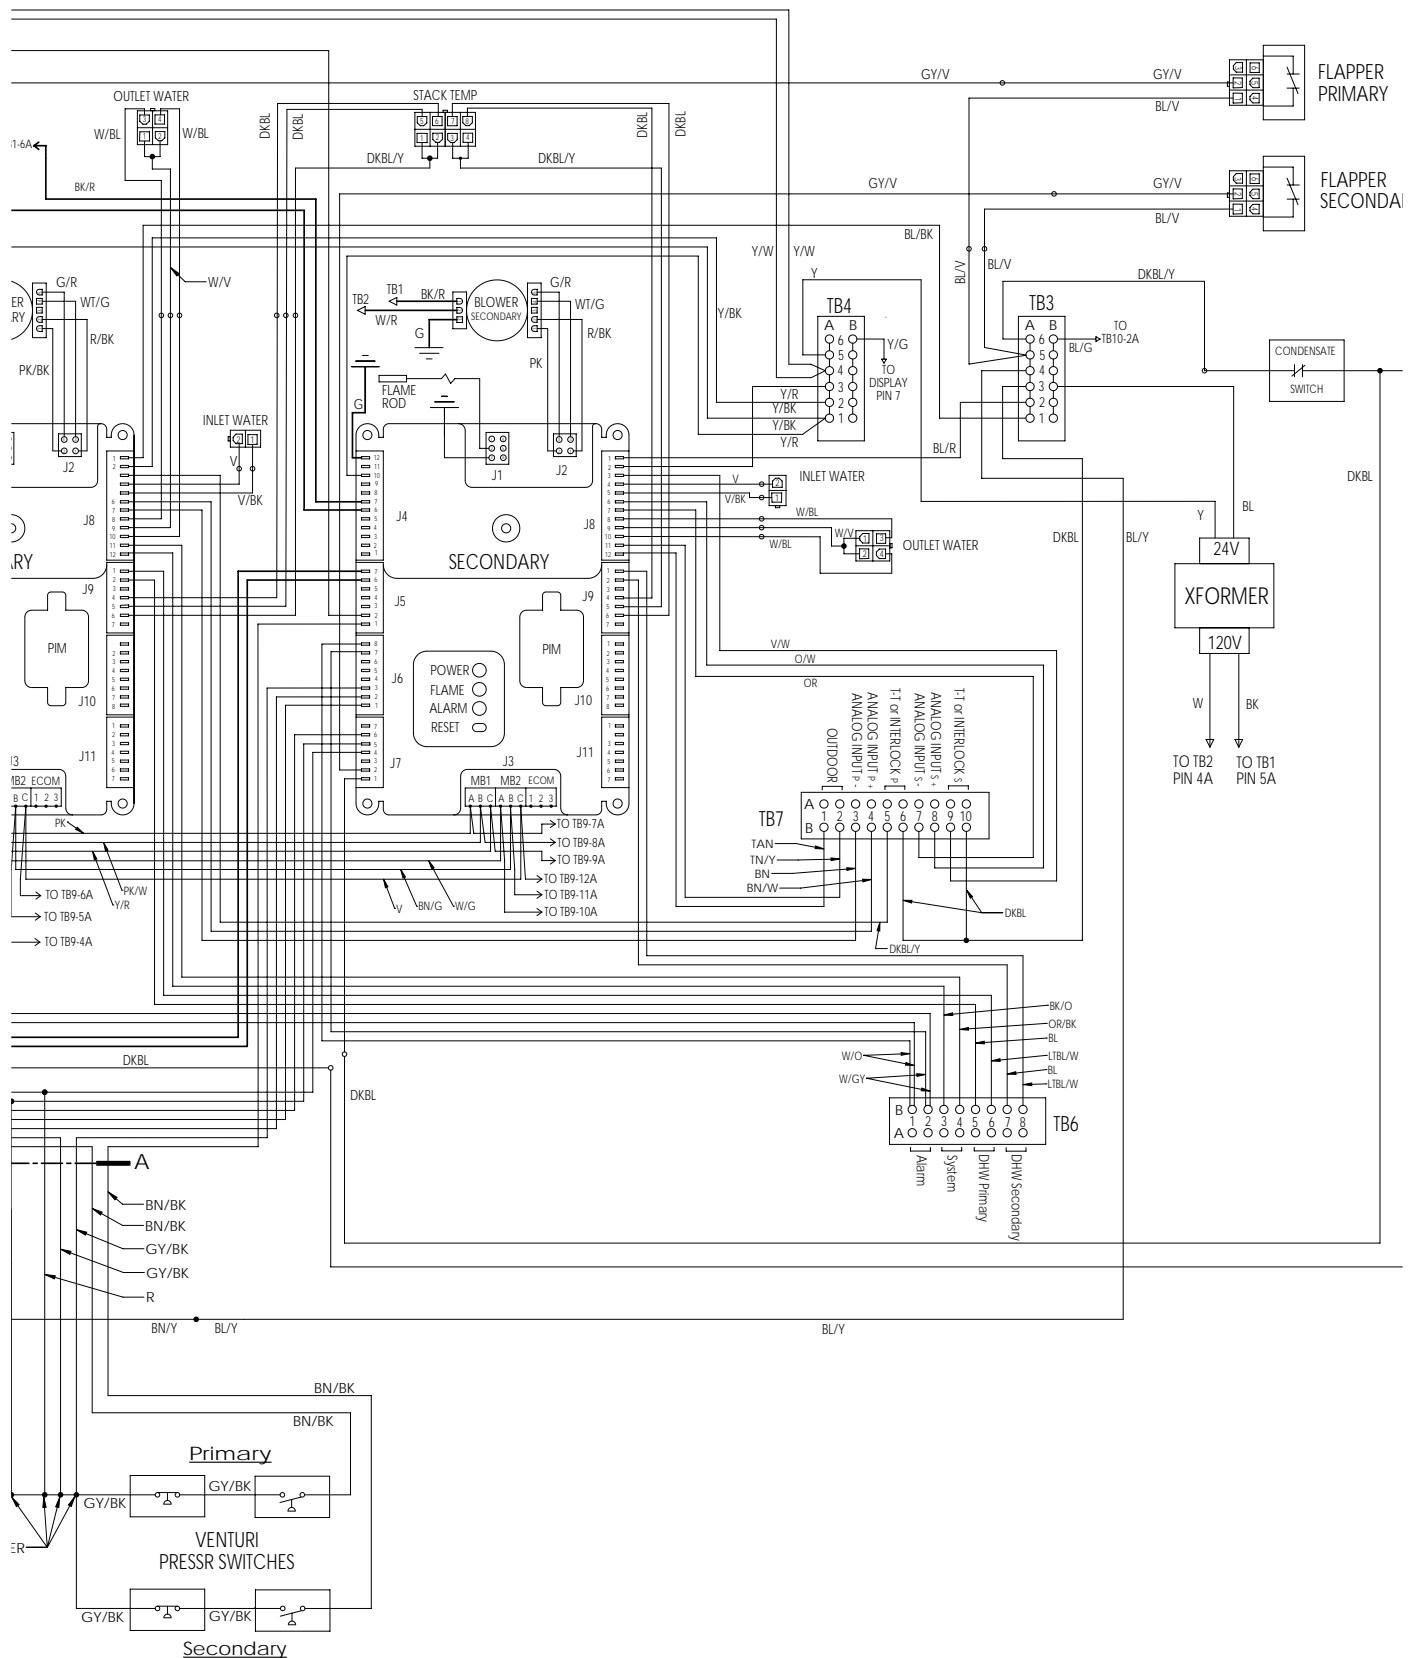

7.K Ladder Diagrams

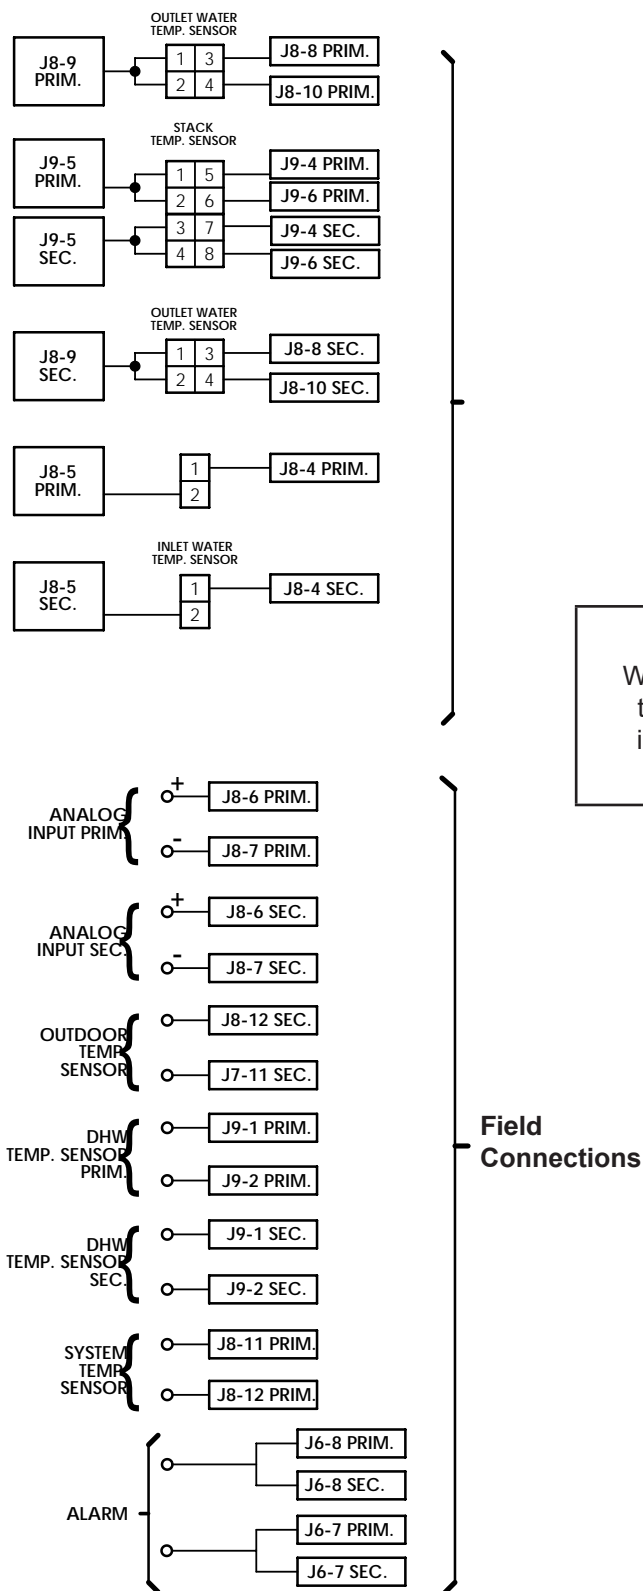

Caution

When servicing controls, label all wires prior to disconnection. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing

Figure 20. Ladder Diagram, Field Connections

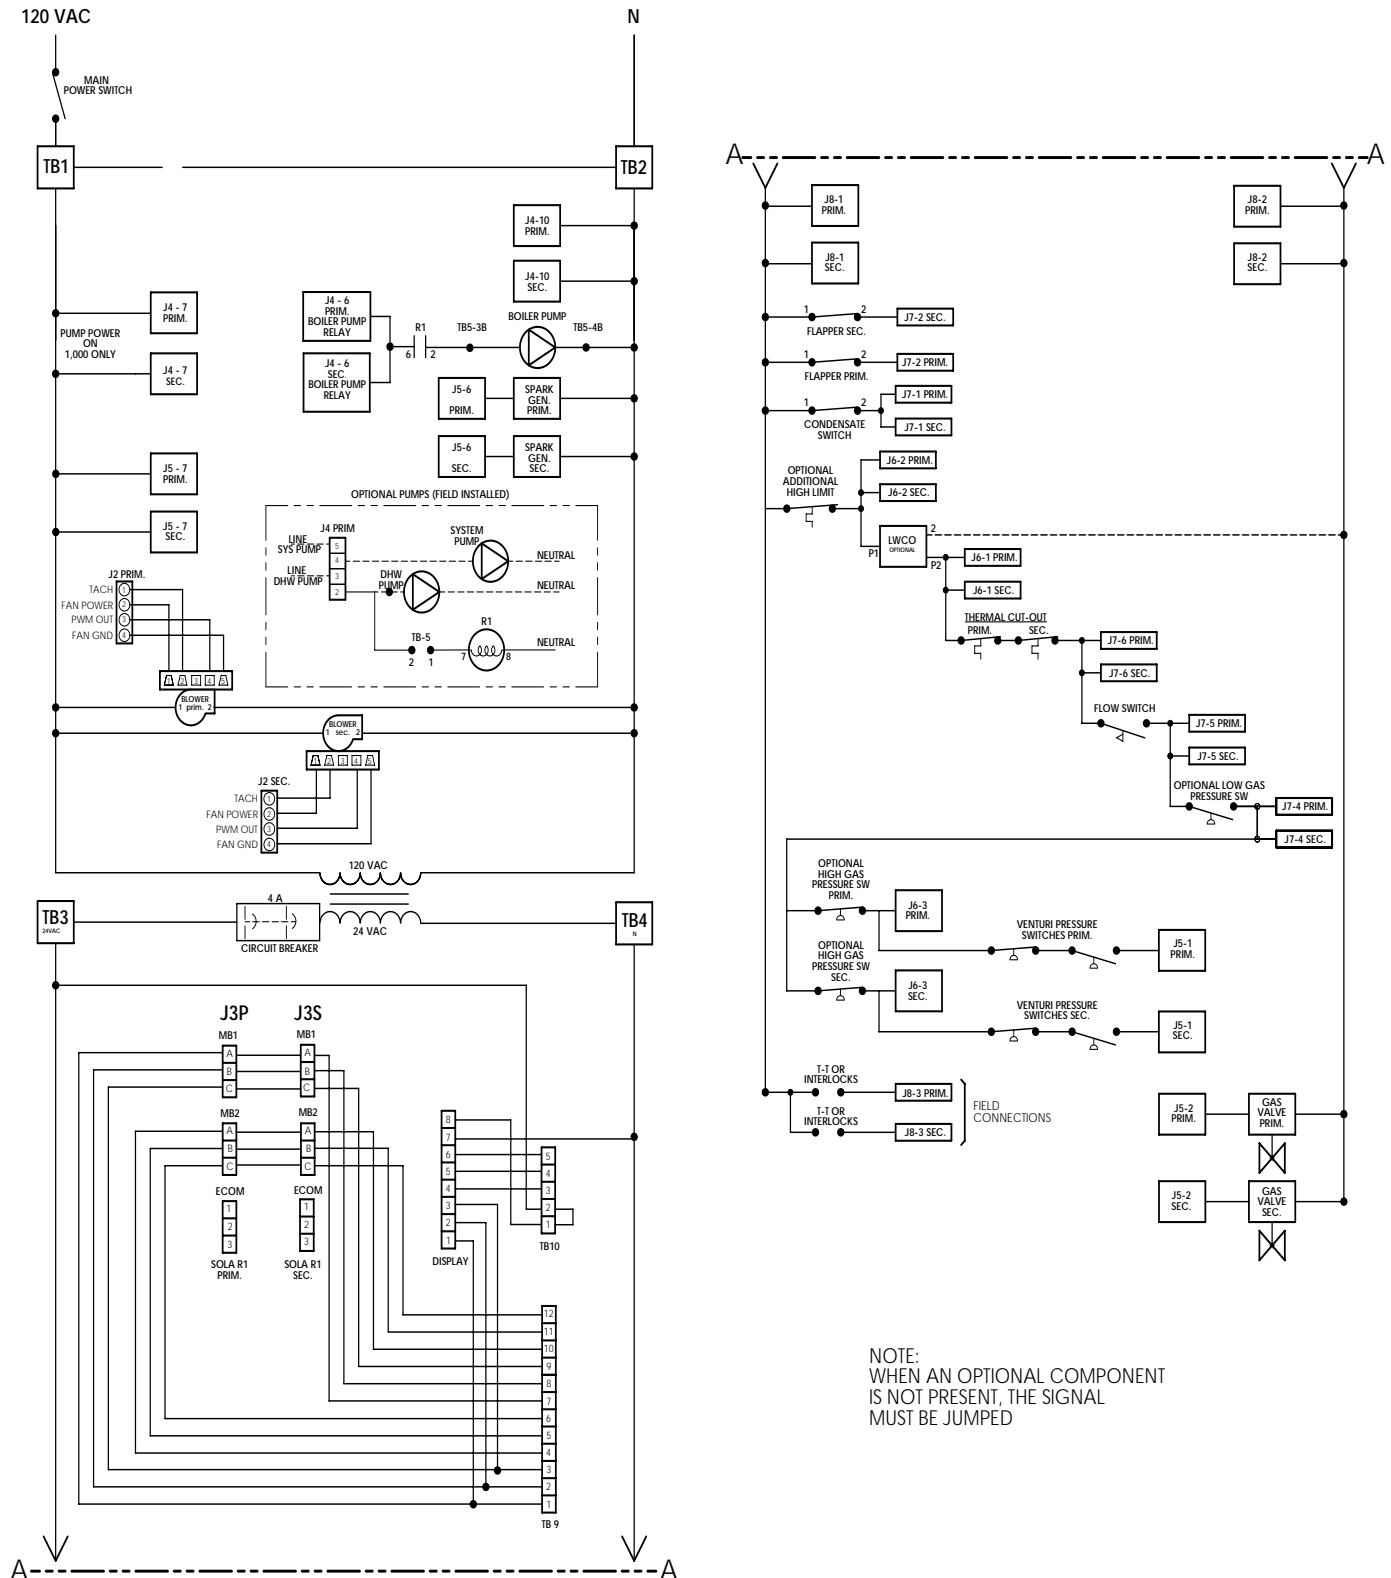


Figure 21. Ladder Diagram

7.L About the Touch Screen Display

This unit has an advanced control system which can perform many functions. This is part of the reason why the models 1000 and 1200 can deliver such outstanding performance. You can access the control system using the 'Touch Screen Display' (see Section 8). There are several "branches" in the control software, and many different display screens. For clarity, throughout this manual we have made a special effort to show you how to reach each of the important setup and operating functions. We have done this in two ways:

- In many cases, we have shown you the actual touch screen display that you will see while performing a function.
- Sometimes, instead of showing the screens, we have just listed the series of choices you should make in order to reach the section you want.

The arrangement of the control software is actually quite logical, and after you have worked with it a bit, you will not have any problems "finding your way around." We just want to give you some help with the first part of the process, when you are "getting used to" the control system.

Later in this manual, we will detail information on the setup and operating procedures. There are a couple of concepts you will need to understand right from the start.

- Each boiler has two controllers (internal electronic burner controllers) and two burners, as shown in Figure 22.
- A single Touch Screen is used to communicate with these two controllers.

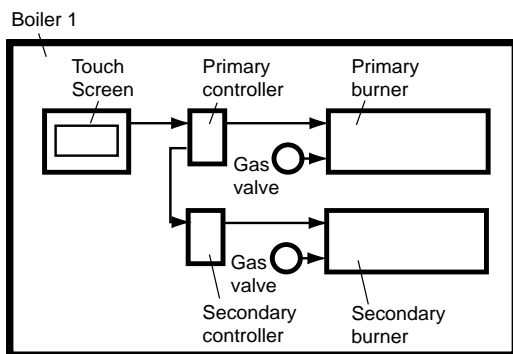


Figure 22. Control Arrangement in a Single-Boiler Installation

- Each controller and burner work together. Each boiler includes two of these controller/burner combinations.

Notice the different terms we are using here. The term **boiler** refers to the whole unit – the complete Unit 1000 or 1200. Each boiler includes two separate **controller/burner pairs**.

- Both the 1000 and 1200 models are always set

up for "Lead Lag" operation. The term "Lead Lag" means that, as the heating load increases, the control system brings additional burners on automatically.

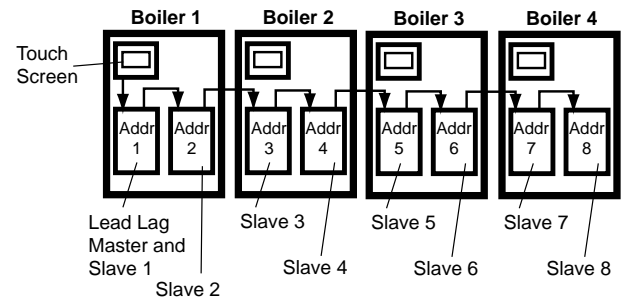


Figure 23. Lead Lag Arrangement in a Multiple-Boiler Installation

On a multiple-boiler installation, each of the individual boilers is still set up as shown in Figure 23 above, but the controller/burner pairs on all of the boilers are arranged in a "daisy chain." Up to four boilers, with up to eight controller/burner pairs, can be connected in this way.

In all multiple-boiler installations, just one of the Touch Screens is active. It can communicate with all of the controller/burner pairs in the system, so it displays information from all of the burners. A single system sensor provides the control input for the system.

All units that are set up as a single boiler will still use a Lead Lag operation. If the heating load becomes too great for the first burner, the control system automatically starts the second burner.

To work with this control system, you will need to understand the difference between two kinds of control functions:

- **SYSTEM FUNCTIONS**, Some of the functions control all of the controller/burner pairs, working together as part of the Lead Lag system. As an example, the setpoint for a whole multiple-boiler system is set by a single value: "Central Heat Lead Lag Setpoint." By changing this one value, you change the setpoint used by the whole system. The action of all of the controller/burner pairs will refer back to that single value.

On the Touch Screen, from the 'home' screen you can reach all of the Lead Lag functions by pressing the View Lead Lag button. Figure 24.

- **INDIVIDUAL FUNCTIONS**, Other functions apply only to each separate controller/burner pair. As an example, each controller/burner has a name, and this can be changed.

The 'home' screen on the Touch Screen will show icons for each of the controller/burner pairs

connected to the system. To reach one of the functions for an individual controller/burner, press the icon for that controller/burner. On the following screen, press the Configure button. This will take you to all of the configuration options for that individual controller/burner.

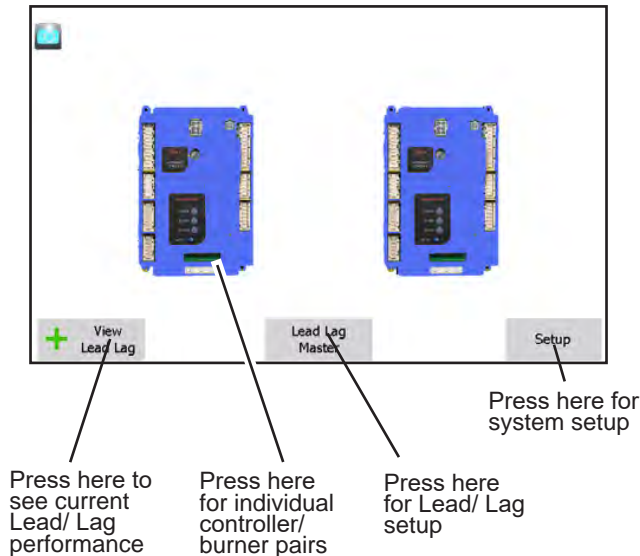


Figure 24. Going to Lead Lag and Individual Functions

NOTE – For individual functions, if you want to make a change on all of the controller/burner pairs in the system, you will have to go to each controller/burner separately and repeat the change for each of them. If there are eight controller/burners in the system, and you want to make the same change on all of them, go to each of the eight controller/burner pairs separately.

As we go through the explanations in this manual, we will point out whether a control function affects the whole Lead Lag system, or just an individual controller/burner pair.

This has been just a quick introduction, but this manual includes two longer sections that will help you to work with the control system:

- **Section 8 – “Using the Touch Screen”**

This section will explain how to “Navigate” through the Touch Screen : how to enter and change values, etc.

- **Section 9 – “Setup and Configuration”**

The first part of this section includes a more complete explanation of the Lead Lag system. The rest of the section includes detailed setup instructions.

If you are not familiar with the control system, the installation and setup process will go much more smoothly if you read through these three sections before beginning work.

SECTION 8 Using the touch screen

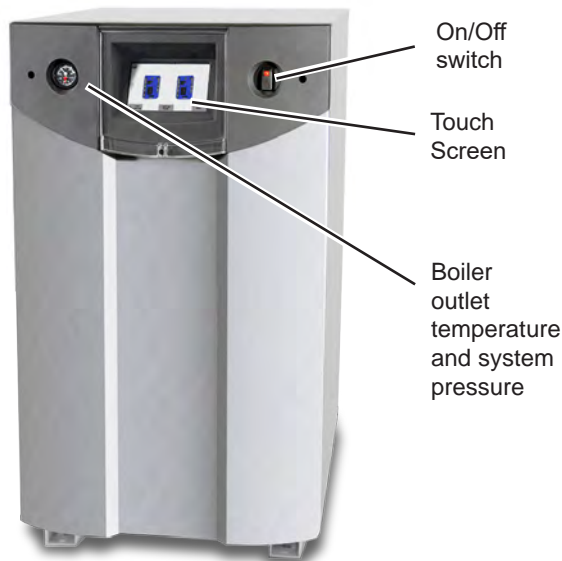


Figure 27. Touch Screen and Gauges

8.A Using the Touch Screen

This unit uses a color touch screen to get input from the operator or installer, and to present information about the operation of the boiler.

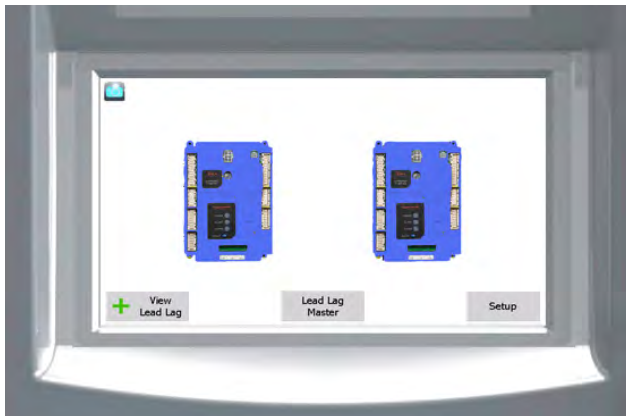


Figure 25. Touch Screen, shown with the 'home' screen of a SINGLE boiler configuration, all conditions normal.

In multiple boiler configurations, each unit will still have its own touch screen, but only the touch screen on the lead boiler will be active. Up to 8 controllers (4 boilers) can be displayed on the 'home' screen. See Figure 26 on page 44



Figure 26. Touch Screen, shown with the 'home' screen of the lead boiler in a four boiler configuration, all conditions normal.

The icons on the 'home' screen for each controller may appear in one of four colors, indicating their basic operational status (See Section 8.3)

Almost all of the control functions are done using the touch screen. There only a few functions that must be done manually by opening the front panel.

So let's get started by selecting the lead boiler control icon. Here's a typical screen or "page" presented by the system:

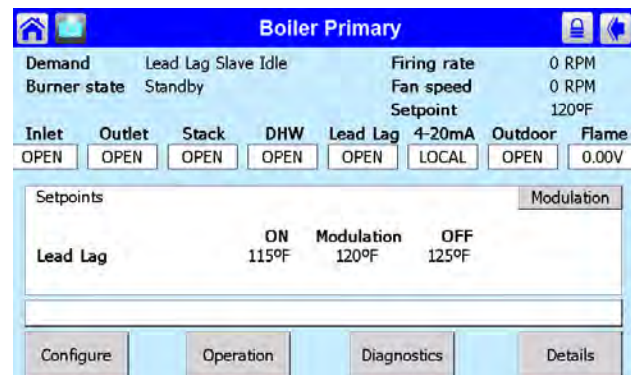


Figure 25. Touch Screen, shown with the 'home' screen of a SINGLE boiler configuration, all conditions normal.

In multiple boiler configurations, each unit will still have its own touch screen, but only the touch screen on the lead boiler will be active. Up to 8 controllers (4 boilers) can be displayed on the 'home' screen. See Figure 26 on page 44

Menu 1. Status Summary Screen

Useful Icons at the top of most screens		
Home	Upper left-hand corner	Return to Home page
Bell	Upper left-hand corner	System in Lockout, Reset required
Padlock	Upper right-hand corner	Shows whether a password has been entered so parameters can be changed
Back	Upper right-hand corner	Return to previous screen

Sometimes a screen is used to present a list, and often the list is too long to present on a single screen view. To see the rest of the list, pull down on the bar on the right side of the screen, or use the up-and-down-arrows.


To make a change, or to get more information about one of the items on the list, press on the line for that item.

If you are installing the system you will find many situations where you will need to enter a name or password. The control system includes three levels of password protection:

OEM Password	Setup and parameter changes made at the factory.
Installer Password	Setup and parameter changes made when the system is installed, and some diagnostic and troubleshooting functions. The installer level password is "Int" (lower case "LNT.")
User Level	Non-critical adjustments and functions, including adjusting the Central Heat and Domestic Hot Water setpoints, monitoring the input and output variables, reading parameters from the controller, and reading the error log

(For some special safety-related functions, besides entering the correct password, the system will ask you to go through an additional "verification" process. For more information, see the section on "Configuration.")

When a password is necessary, the system will present the keyboard screen.

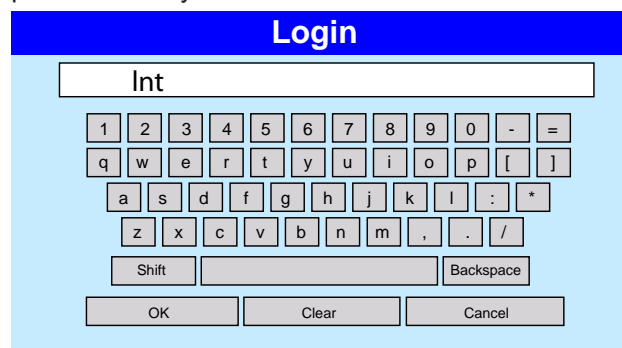


Menu 2. Keyboard Screen

The passwords used by this system are "case sensitive" – it matters whether a letter in the password is capitalized or not. Pressing the Shift key changes all of the keys to produce capital letters. Press Shift again to go back to lower-case letters. "BS" stands for "Back Space," and also works as a Delete key.

It may be difficult for some operators to press the small keys on this screen. In this case, use the back of a plastic pen, or the eraser section at the back of a pencil. (Do not use sharp metal tools – these will scratch the plastic surface of the screen.) You can also tap a key with the tip of your finger, using the fingernail. Each time you press a key, the system will respond with a beep. If you are entering a password, an asterisk (*) will appear for each character you enter. The beeps and asterisks will help you to enter the correct number of characters for your password.


The process would be the same if you wanted to change a numerical value, except that system would present a numeric entry screen. See Menu 3.

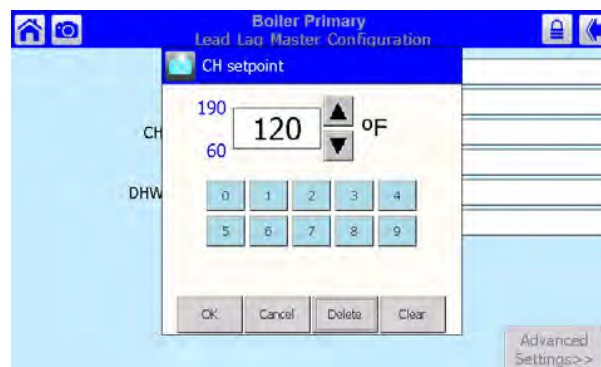

Menu 3. Numeric Entry Screen

Anyone can view all of the parameters. However, to change most of the parameters, you will need a password.

At the bottom of the screen shown in Menu 4, the system is telling you that it wants you to log in.

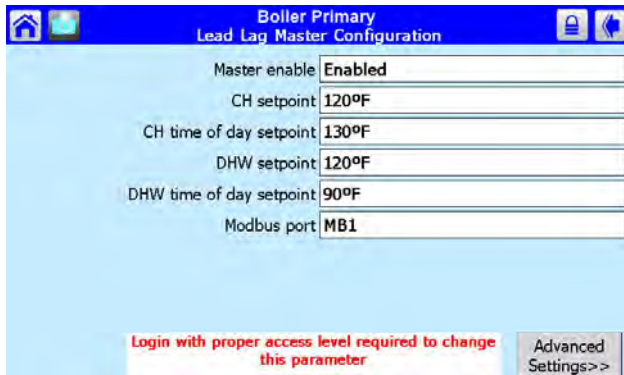

Menu 4. Login Required

The screen used to Login is similar to the Keyboard screen shown in Menu 2.

8.B The Gauges


There are only a few gauges on the front of the unit and they are Outlet Temp and System Pressure. See Figure 1 on page 8. Other than the On/Off switch, ALL of the control functions are done using the Touch Screen.

8.C While Operating - Checking Lead Lag Operating Information

The Lead Lag function controls the operation of all of the boilers connected to the system, and some system components. For a complete explanation of Lead Lag, see Section 9.

In this section, we will explain how to check the Lead Lag information while the system is running.


1. Start at the 'home' screen.

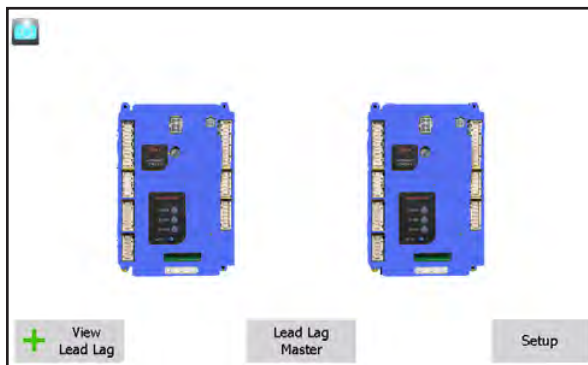

Menu 5. 'Home' screen. Single Unit system

Color and Status	
Blue	Normal operation
Red	Lockout
Gray	Standby mode (Burner switch off)
Gray and crossed out	Communication problem
Yellow	Hold state. This could be Anti short cycle, fan speed transitions, etc.

2. Press the View Lead Lag button to go to a screen that shows the status of the whole Lead Lag system.

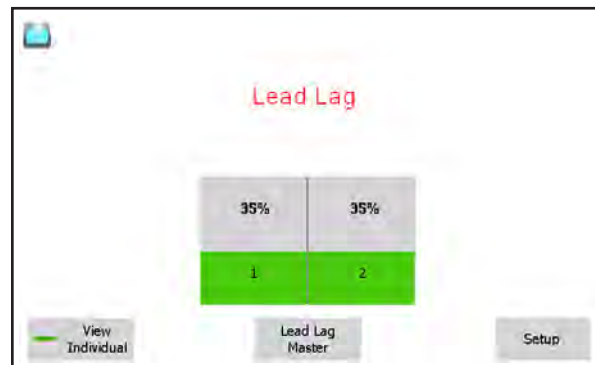


Menu 6. Lead Lag Screen

In the example shown here, the complete system includes two burners. Both burners are firing at 35% fan speed.

8.D Checking the Lead Lag Leader


The system also gives you a way to check some of the details of the Lead Lag setup.

1. From the 'home' screen, press the button for Lead Lag Leader.

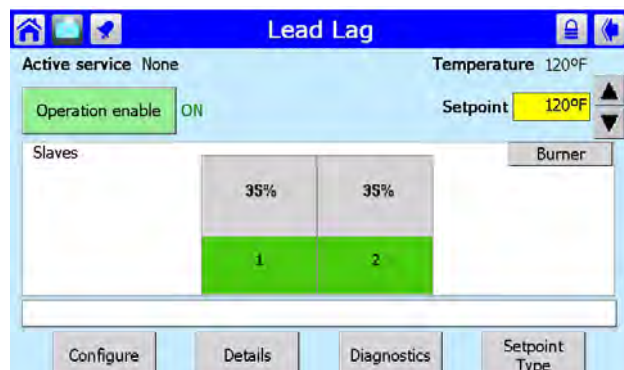

Menu 7. Lead Lag Leader Screen

- You can change the setpoints from this screen. When you press the yellow box beside Setpoint, the controller presents this screen:

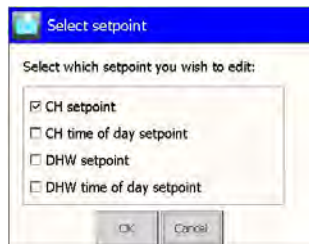

Menu 8. Setpoints Screen


Select the setpoint you want to change, then enter the new value

- If you press the Details button, the control software leads you to a “ring” of screens that include some information about the way the Lead Lag system is set up. The screens in this section are “read only” – you can read the values, but you cannot change them using these screens.

8.E While Operating - Checking Individual Parameters


As we said, the Lead Lag functions control the operation of the whole system. You might also want to check the functions on one of the individual controllers, and the system gives you a way to do this.

- From the ‘home’ screen, press the icon for the individual controller you want to check. In this example, we will press the icon on the left.

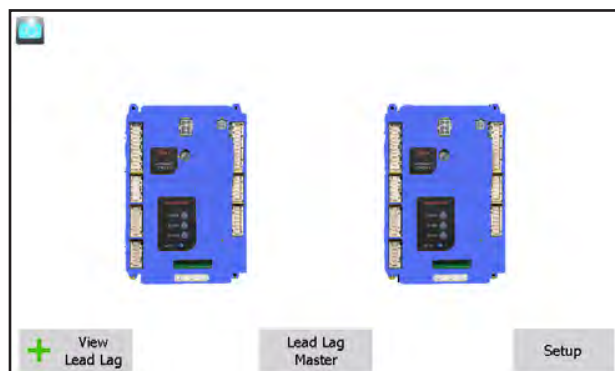

Menu 9. ‘home’ screen

- The Status Summary page for that controller will appear. This shows the current operating condition of that controller, and also shows some of the configuration settings. .

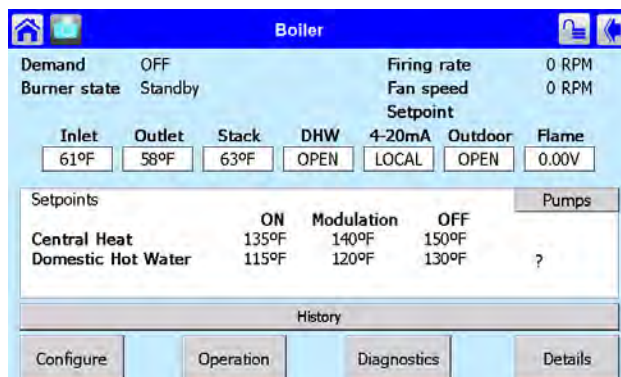


Menu 10. Status Summary Screen Showing Setpoint Information

Notice the four buttons at the bottom of each Status Summary screen:

- Configure – Allows an installer to change some of the setup parameters used by the system. A password may be required.
- Operation – Used to adjust the setpoints, change the fan speed, turn a burner on or off, or turn the pumps on or off.
- Diagnostics – Allows you to run diagnostic tests, or check the inputs and outputs used by the system.
- Details – Allows you to check the status of all of the setup parameters on the control system.


- You can also press the button for Modulation (on the right side of the screen) to bring up another version of this screen showing modulation information. .

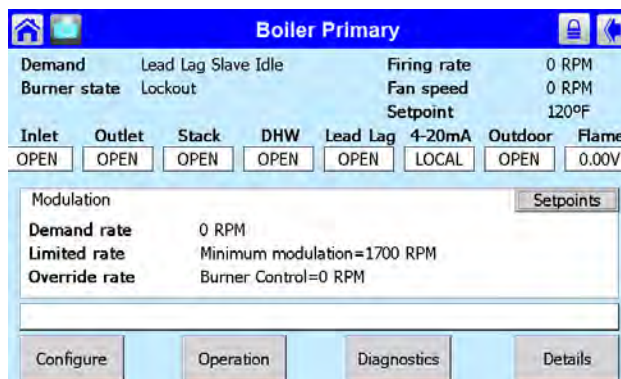

Menu 11. Status Summary Screen Showing Modulation Information

8.F Checking Individual Details

The Details button on the Status Summary screen leads to a series of screens that show all of the setup parameters entered for the controller you have selected. Let's say that the first screen presented in this series is the screen for Frost Protection.

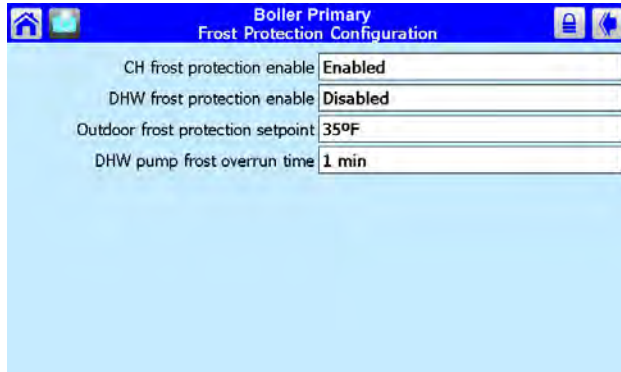

Menu 12. Typical Details Screen – Frost Protection

The list presented here is too long to fit onto a single screen, so you must scroll down to see the rest. The bar graph on the left side of the screen shows the current performance in relation to a setpoint or the total load or signal range.

You can get more detailed information on a parameter by touching the line for that parameter.

The screens presented under Details are “read only” – you can read the parameters, but you can't change them from these screens. (To go to screens that allow you to change the parameters, use the Configure button.)

The screen shown in Menu 12 is part of a large loop that covers all of the parameters used by the system. To go to another part of the loop, press the left-arrow or right-arrow at the top of the screen. Here are the screens which are included in the loop:

- Burner Control
- Demand and Modulation
- Fan
- DHW Pump
- Boiler Pump
- System Pump
- Flame Detection
- Statistics
- Stack Limit
- CH Frost Protection
- Lead Lag Follower
- Lead Lag Leader


8.G Configuring Parameters on Individual Controllers

In this section, we will just give you a quick explanation of how to change parameters on one of the controllers. (This is an individual function. You would set this kind of parameter on one controller at a time.)

The unit is always set up for “Lead Lag” operation, so most of your configuration changes would be made using the Lead Lag section of the control software, and this uses a different procedure. (A Lead Lag parameter controls a collective function. You change one parameter that controls the whole Lead Lag system, and all of the controllers at once.) For an explanation of the Lead Lag setup, see Section 9.1.


For now, we'll explain how to change a setting on just a single controller.

1. From the Home Page screen, press the icon for the controller you want to configure. In this example, we will change some settings for the Primary controller, so we will press the icon on the left.

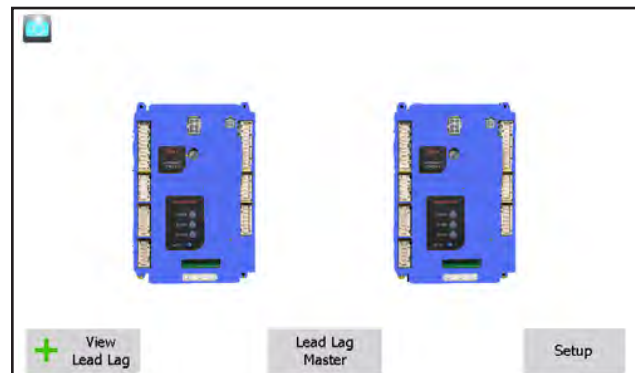


Menu 13. Home Page Screen

2. The Status Summary page for that controller will appear. See Menu 14.

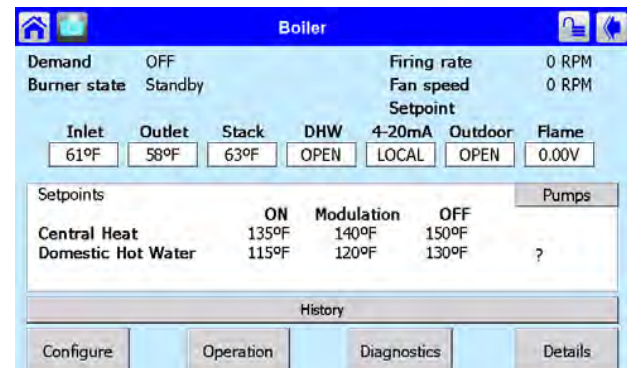

Menu 14. Status Summary Page


- Press the Configure button to start a configuration session for the selected controller. See Menu 15.

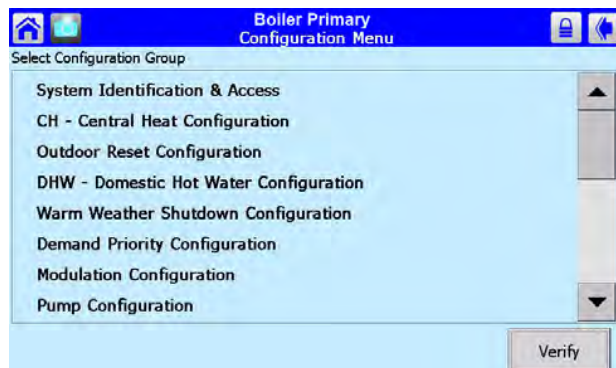

Menu 15. Configuration Screen

This screen lists all of the configuration groups. (The list is actually longer – scroll down using the bar on the right side of the screen) Many of the items will not be useful to an installer or end-user.


- Next, we will show you how to change one of these parameters. Let's turn on the Central Heat function. On the Configuration Screen, scroll down and press the line for CH – Central Heat Configuration. Menu 16 shows the screen which follows.

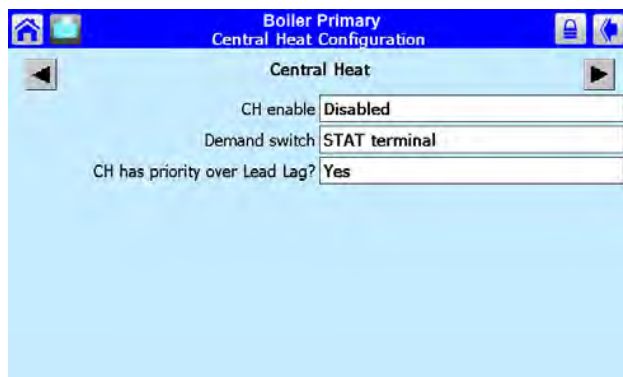

Menu 16. Central Heat Configuration

On the screen, you can see the Central Heat function is currently disabled. To turn on the Central Heat function, press the space beside CH Enable. The system will tell you that you must login and enter a password to change this entry.


- The process would be the same if you wanted to change a numerical value, except that system would present a numeric entry screen.

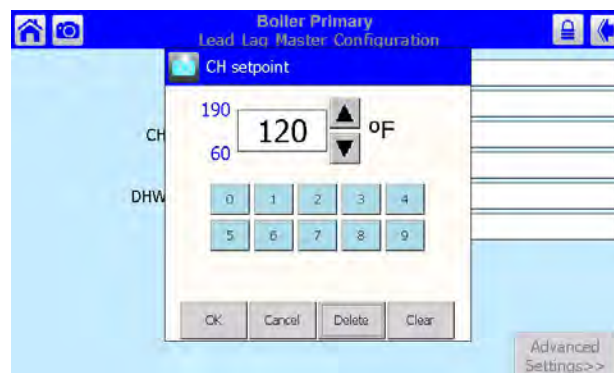

Menu 17. Numeric Entry Screen

8.H Verification Process for Safety-Related Parameters

- When you start to change a parameter that is related to safety, the system will present a warning which looks like this:

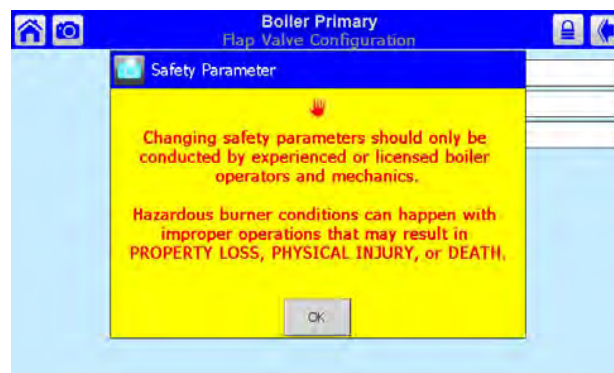

Menu 18. Parameter Safety Warning

Press OK to continue. The system will ask you to login before you make a change.

Note that any changes you make will apply only to one controller – the controller you have already selected. If you want the same change to apply to other controllers, you must change each of them separately.

- If you make a change in any group that could affect the safe operation of the unit, the control system will ask you to “verify” the change before it is accepted. As an example, let's say that we wanted to change the configuration for one of the flap valves. See Menu 19 A line printed in red at the bottom of the screen indicates that the system wants to do a safety verification. (All of the parameters in this group have safety-related functions. If you change any of them, you will have to do the verification for the whole group.)

Menu 19. Verification Needed

Notes –

- Once you change one of these safety-related parameters, you **must** finish the verification process for the group that includes the parameter, **or the control system will not let the boiler operate**. You can wait to do the verification until you have changed parameters in other groups, but before you return the boiler to service, you have to do the verification for all of the groups you changed.
- At the end of the verification process, you must press the Reset button on the front of the controller. See Figure 28. You have to do this within 30 seconds, or the verification will be cancelled. To make it easy to reach the Reset button, open the door on the front of the boiler and slide out the control panel **before** beginning the verification.



Figure 28. Reset Button on Controller

- Don't press the Reset button yet. We just want to show you where the Reset button is located. Change the parameter(s) you want to change.
- When you are done entering parameters, the next job is to do the verification. Login to the system and press Begin.

Menu 20. Edit Safety Data

- Once you are done changing safety parameters, press Confirm. The system will present a listing for each group of parameters which includes a changed safety parameter. See Menu 20.

Menu 21. Safety Parameter Confirmation

- For each group, check the list carefully. Press Yes if all of the parameters in the group have been entered correctly.

If you made changes in other safety-related groups, verify the entries in those groups in the same way. When the process is complete, the system will tell you to reset the control system.

Menu 22. Safety Parameter Reset

- The Reset button is located on the front of the controller. See Figure 28. You must press the Reset button within 30 seconds, or the verification will be cancelled.

SECTION 9 Setup and Configuration

9.A Review of Lead Lag Control System

9.A.1 About Lead Lag Operation

All units are set up for Lead Lag operation. Even in a single-unit installation, there are two controllers and two burners, as shown in Figure 29. The controller for the upper burner is set up as the Primary control. For control purposes, this is the Lead Lag Leader and also operates as Lead Lag Follower 1. The control for the lower burner is set up as the Secondary control and operates as Lead Lag Follower 2.

On a multiple-boiler installation, each individual boiler is still set up as shown in Figure 29. The boiler controls are arranged in a “daisy chain” using a Modbus connection, with the Secondary control of one boiler connected to the Primary control of the next boiler. Up to four boilers, with up to eight controllers, can be connected in this way. See Figure 30

See Figure 18 on page 36 for exact wiring connections.

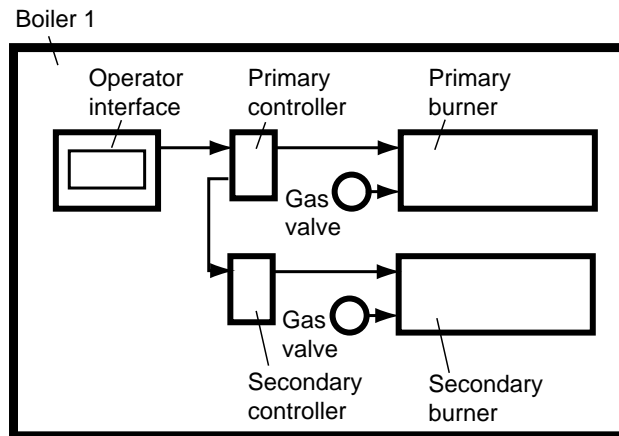


Figure 29. Lead Lag Arrangement in a Single-Boiler Installation

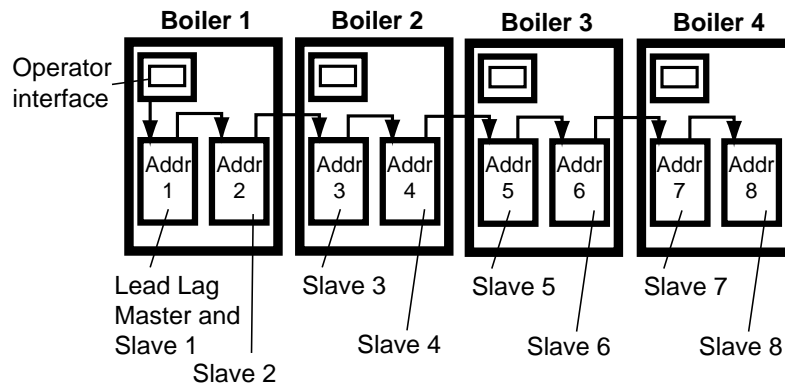


Figure 30. Lead Lag Arrangement in a Multiple-Boiler Installation

In either kind of installation, a system sensor is usually used to monitor the demand. The input from this sensor is used to control the modulation rates of the operating burners.

Let's consider the following example:

Four units are tied together via Modbus connections. Here are the Leader/Follower assignments and the Modbus control addresses:

Boiler	Burner Position	Control	Leader/Follower Assignment	Modbus Control Address
1	Upper	Primary	Lead Lag Leader, also Follower 1	1
1	Lower	Secondary	Follower 2	2
2	Upper	Primary	Follower 3	3
2	Lower	Secondary	Follower 4	4
3	Upper	Primary	Follower 5	5
3	Lower	Secondary	Follower 6	6
4	Upper	Primary	Follower 7	7
4	Lower	Secondary	Follower 8	8

Table 18. Leader/Follower Assignments and Modbus Control Addresses


9.A.2 Lead Lag Modulation Cycle

Note - We will explain the modulation cycle here, in case you need to understand how the Lead Lag system actually operates. If you are just installing the unit(s) and want to skip this section, just remember that, as the heating demand increases, the Lead Lag system puts more burners on-line. As the heating demand is reduced, the Lead Lag system shuts off some of the burners.

A Run sequence is initiated when the system temperature falls to the setpoint less the On Hysteresis value. The default setting for On Hysteresis is -5°F, but this is adjustable. The setpoint used to initiate the Run sequence is the Lead Lag Central Heat setpoint.)

The Lead Lag controller decides which burner is assigned to start first. This assignment is rotated across all of the available burners so that any one burner does not run significantly longer than the others. The Lead Lag controller tracks the run times for all of the available burners, and uses this to calculate the starting order for the burners. This means that each time the system starts up, a different burner may start first. It also means that the Primary burner on a particular boiler may start first one time, and the Secondary burner for that boiler may start first the next time.

When the Run sequence is initiated, the burner with the least amount of runtime will fire. If the heating demand increases so that the firing rate of that first burner rises to 65% fan speed (the Base Load value), the next burner in the sequence will start

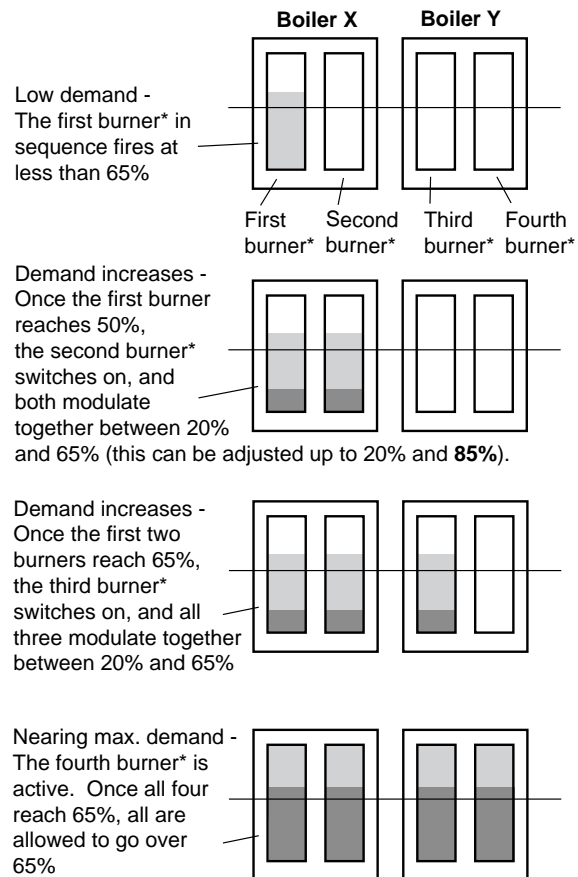

* - The Lead Lag controller will change the firing order of the burners, based on the run time of each burner.

Figure 31. Lead Lag Activity in a Multi-Boiler System

up and begin firing at 35% fan speed. After this, both of the active burners will modulate up or down together, in reaction to the changes in demand. See Figure 31.

If the system loop temperature rises above the LL CH setpoint, then the two burners will simultaneously drop their fan speeds. If both boilers drop to their minimum fan speeds (29%), then the second burner will drop out.

If the heating demand continues to increase, and the system loop temperature continues to drop, then the two burners will increase their fan speeds together. When they reach 65%, the next burner in the sequence will start up and be added to the group. All three boilers will continue to fire simultaneously at equal input rates.

If the modulation rate for all three burners drops to the minimum fan speed (29%), the last burner started will drop out. If the demand continues to drop, the second burner started will also drop out.

If the system temperature reaches the LL CH setpoint value plus the Off Hysteresis figure, all of the burners will shut off. (The default setting for Off Hysteresis is +5°F, but this is adjustable.)

If any of the boilers approaches its high limit temperature, that boiler will modulate back to stay below the high limit.

As the heating demand continues to change, the Lead Lag Leader will continue to add, remove, or modulate the additional boilers in the system.

9.A.3 Boiler Lead Lag with Indirect Domestic Hot Water

So far, we have been describing a system which handles the Central Heat function only. There are several ways the Domestic Hot Water can be set up on a Lead Lag system. For a detailed description, see Section 9.5.

9.B Connection Terminals

Figure 32 shows some of the connection terminals on the circuit board inside the cabinet.

WARNING

Before connecting or disconnecting any wiring inside a boiler, be absolutely sure to turn off all electrical power to the unit. Failure to do this could result in property damage, serious injury or death

9.C System Configurations

These units can be installed in many different arrangements. The steps in the installation will be different, depending on the number of boilers in the system, the venting arrangements, the control signals used, outdoor reset, etc. In this section, we will list the steps necessary to do the most common installations.

1. Table 19 on page 55 lists most of the possible systems configurations. There are a lot of them. Look through the table until you find a line that exactly describes your system. Make a note of the system number shown in the left column.

2. Following the table, look up the specific installation jobs for your system in Section 9.4. The jobs are identified using letters (Job A through Job P). Then go to the System # list starting on page 56 to find your System # and the required Jobs to configure your System.

If you are not familiar with this unit, or the Lead Lag control system, you may want to review the information in Section 9.1. This may be helpful as you read the installation instructions which follow.

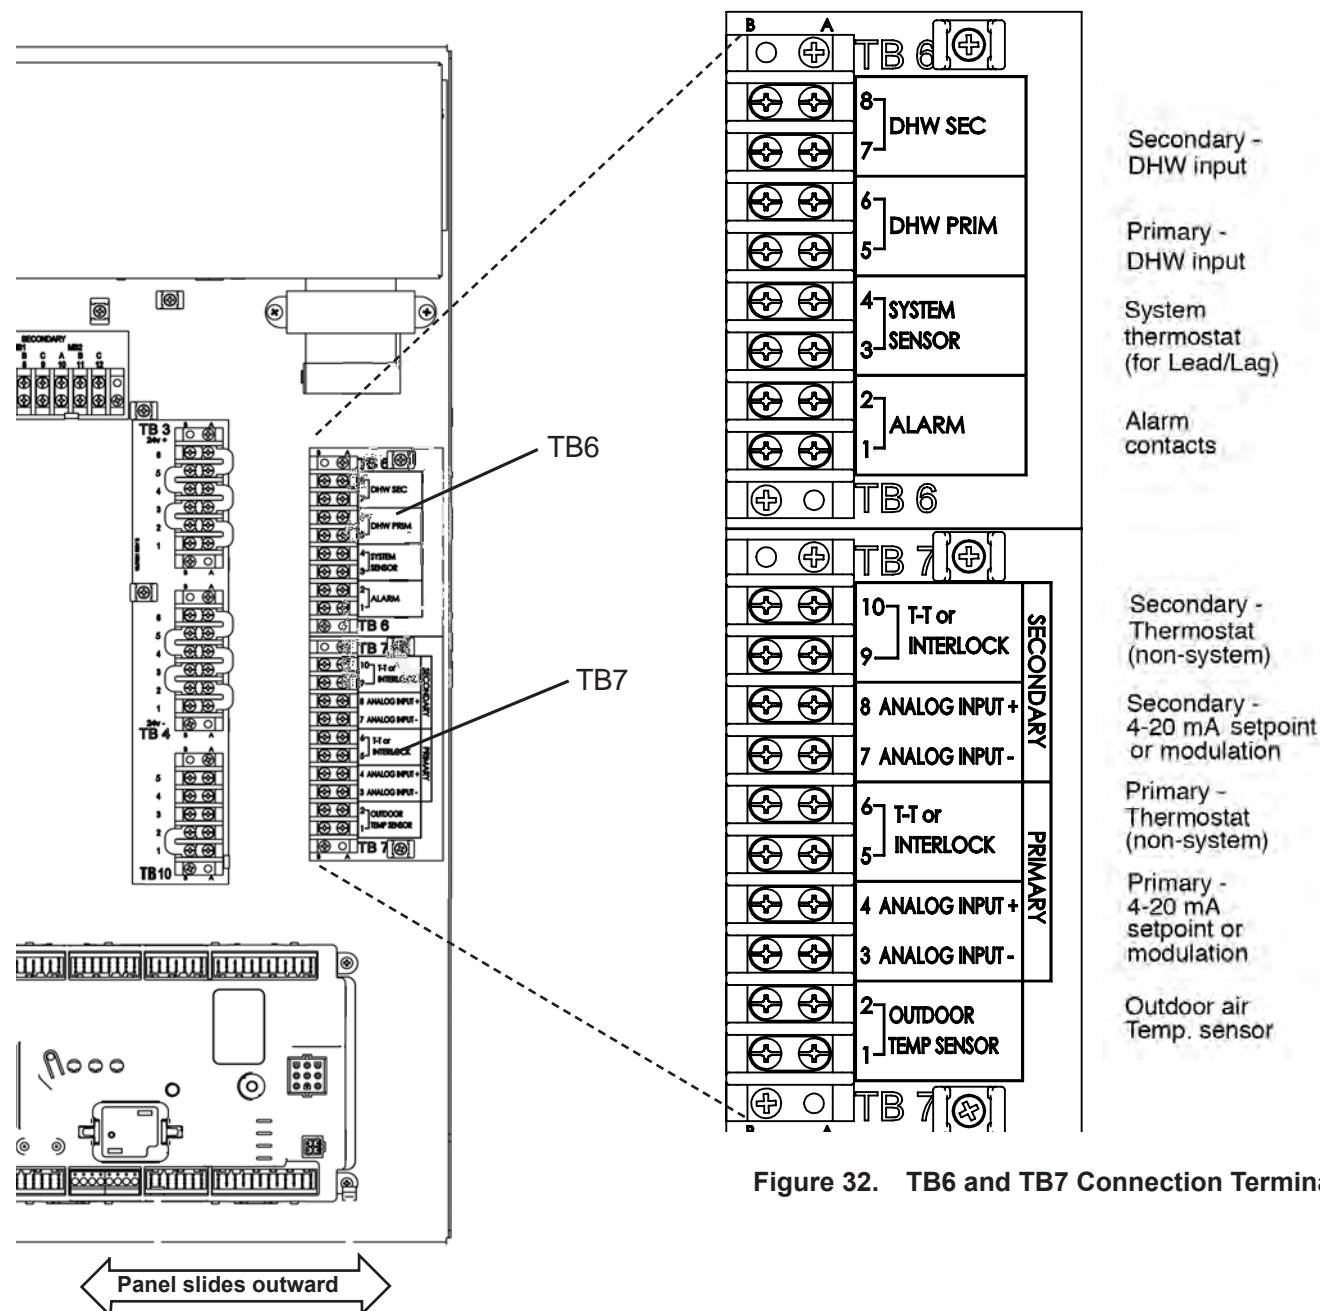


Figure 32. TB6 and TB7 Connection Terminals

Table 19. The Many System Configurations for Unit

System	Multiple or single boilers	System or local boiler control	Common vent	Setpoint control 4-20 ma	Modulation control, 4-20 ma	Outdoor reset
1	Single boiler	Local	No	No	No	No
2	Single boiler	Local	No	No	No	Yes
3	Multiple boiler	Local	No	No	No	No
4	Multiple boiler	Local	No	No	No	Yes
5	Multiple boiler	Local	Yes	No	No	No
6	Multiple boiler	Local	Yes	No	No	Yes
7	Single boiler	System	No	No	No	No
8	Single boiler	System	No	No	No	Yes, from system
9	Multiple boiler	System	No	No	No	No
10	Multiple boiler	System	No	No	No	Yes, from system
11	Single boiler	System	No	Yes	No	No
12	Single boiler	System	No	Yes	No	Yes, from system
13	Multiple boiler	System	No	Yes	No	No
14	Multiple boiler	System	No	Yes	No	Yes, from system
System	Multiple or single boilers	System or local boiler control	Common vent	Setpoint control 4-20 ma	Modulation control, 4-20 ma	Outdoor reset
15	Single boiler	System	No	No	Yes	No
16	Single boiler	System	No	No	Yes	Yes, from system
17	Multiple boiler	System	No	No	Yes	No
18	Multiple boiler	System	No	No	Yes	Yes, from system
19	Multiple boiler	System	Yes	Yes	No	No
20	Multiple boiler	System	Yes	Yes	No	Yes, from system
21	Multiple boiler	System	Yes	No	Yes	No
22	Multiple boiler	System	Yes	No	Yes	Yes, from system

9.C Unit System Configurations (continued)

Table 20. System # List

System 1 –

Single boiler, Local control

- Job I Set the parameters used by the Lead Lag system
- Job J Install the System sensor and adjust the setpoint
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 2 –

Single boiler, Local control, Outdoor reset

- Job I Set the parameters used by the Lead Lag system
- Job J Install the System sensor and adjust the setpoint
- Job K Lead Lag outdoor reset and warm weather shutdown
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 3 –

Multiple boilers, Local control

- Job B Set up the names for each of the controllers
- Job C Make one control the Lead Lag Leader
- Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader
- Job E Set up the Modbus control addressing to assign addresses for each of the controls
- Job F Set up the addresses for the flap valves
- Job G Disconnect the Touch Screens that will not be used
- Job H Connect the Modbus wiring
- Job I Set the parameters used by the Lead Lag system
- Job J Install the System sensor and adjust the setpoint
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 4 –

Multiple boilers, Local control, Outdoor reset

- Job B Set up the names for each of the controllers
- Job C Make one control the Lead Lag Leader
- Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader
- Job E Set up the Modbus control addressing to assign addresses for each of the controls
- Job F Set up the addresses for the flap valves
- Job G Disconnect the Touch Screens that will not be used
- Job H Connect the Modbus wiring
- Job I Set the parameters used by the Lead Lag system
- Job J Install the System sensor and adjust the setpoint
- Job K Lead Lag outdoor reset and warm weather shutdown
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 5 –

Multiple boilers, Local control, Common vent

- Job A Note on common venting
- Job B Set up the names for each of the controllers
- Job C Make one control the Lead Lag Leader
- Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader
- Job E Set up the Modbus control addressing to assign addresses for each of the controls
- Job F Set up the addresses for the flap valves
- Job G Disconnect the Touch Screens that will not be used
- Job H Connect the Modbus wiring
- Job I Set the parameters used by the Lead Lag system
- Job J Install the System sensor and adjust the setpoint
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 6 –

Multiple boilers, Local control, Common vent, Outdoor reset

- Job A Note on common venting
- Job B Set up the names for each of the controllers
- Job C Make one control the Lead Lag Leader
- Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader
- Job E Set up the Modbus control addressing to assign addresses for each of the controls
- Job F Set up the addresses for the flap valves
- Job G Disconnect the Touch Screens that will not be used
- Job H Connect the Modbus wiring
- Job I Set the parameters used by the Lead Lag system
- Job J Install the System sensor and adjust the setpoint
- Job K Lead Lag outdoor reset and warm weather shutdown
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 7 –

Single boiler, System control

- Job I Set the parameters used by the Lead Lag system
- Job L Building automation or multiple boiler control thermostat demand
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 8 –

Single boiler, System control, Outdoor reset

- Job I Set the parameters used by the Lead Lag system
- Job L Building automation or multiple boiler control thermostat demand
- Job K Lead Lag outdoor reset and warm weather shutdown
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

9.C Unit System Configurations (continued)

System 9 –

Multiple boiler, System control, Outdoor reset

- Job B Set up the names for each of the controllers
- Job C Make one control the Lead Lag Leader
- Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader
- Job E Set up the Modbus control addressing to assign addresses for each of the controls
- Job F Set up the addresses for the flap valves
- Job G Disconnect the Touch Screens that will not be used
- Job H Connect the Modbus wiring
- Job I Set the parameters used by the Lead Lag system
- Job L Building automation or multiple boiler control thermostat demand
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 10 –

Multiple boiler, System control, Outdoor reset

- Job B Set up the names for each of the controllers
- Job C Make one control the Lead Lag Leader
- Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader
- Job E Set up the Modbus control addressing to assign addresses for each of the controls
- Job F Set up the addresses for the flap valves
- Job G Disconnect the Touch Screens that will not be used
- Job H Connect the Modbus wiring
- Job I Set the parameters used by the Lead Lag system
- Job L Building automation or multiple boiler control thermostat demand
- Job K Lead Lag outdoor reset and warm weather shutdown
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 11 –

Single boiler, System control, 4-20 mA setpoint control

- Job I Set the parameters used by the Lead Lag system
- Job M Building automation or multiple boiler control 4-20 mA setpoint control
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 12 –

Single boiler, System control, 4-20 mA setpoint control, Outdoor reset

- Job I Set the parameters used by the Lead Lag system
- Job M Building automation or multiple boiler control 4-20 mA setpoint control
- Job K Lead Lag outdoor reset and warm weather shutdown
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 13 –

Multiple boiler, System control, 4-20 mA setpoint control

- Job B Set up the names for each of the controllers

- Job C Make one control the Lead Lag Leader
- Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader
- Job E Set up the Modbus control addressing to assign addresses for each of the controls
- Job F Set up the addresses for the flap valves
- Job G Disconnect the Touch Screens that will not be used
- Job H Connect the Modbus wiring
- Job I Set the parameters used by the Lead Lag system
- Job L Building automation or multiple boiler control thermostat demand
- Job M Building automation or multiple boiler control 4-20 mA setpoint control
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 14 –

Multiple boiler, System control, 4-20 mA setpoint control, Outdoor reset

- Job B Set up the names for each of the controllers
- Job C Make one control the Lead Lag Leader
- Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader
- Job E Set up the Modbus control addressing to assign addresses for each of the controls
- Job F Set up the addresses for the flap valves
- Job G Disconnect the Touch Screens that will not be used
- Job H Connect the Modbus wiring
- Job I Set the parameters used by the Lead Lag system
- Job M Building automation or multiple boiler control 4-20 mA setpoint control
- Job K Lead Lag outdoor reset and warm weather shutdown
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 15 –

Single boiler, System control, 4-20 mA modulation control

- Job N Building automation or multiple boiler control 4-20 mA modulation control
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 16 –

Single boiler, System control, 4-20 mA modulation control, Outdoor reset

- Job N Building automation or multiple boiler control 4-20 mA modulation control
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 17 –

Multiple boiler, System control, 4-20 mA modulation control

- Job N Building automation or multiple boiler control 4-20 mA modulation control
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

9.C Unit System Configurations (continued)

System 18 –

Multiple boiler, System control, 4-20 mA modulation control, Outdoor reset

Job N Building automation or multiple boiler control 4-20 mA modulation control

Job O Set up the combustion on each of the burners

Job P Set the date and time on the system

System 19 –

Multiple boiler, System control, Common vent, 4-20 mA setpoint control

Job A Note on common venting

Job B Set up the names for each of the controllers

Job C Make one control the Lead Lag Leader

Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader

Job E Set up the Modbus control addressing to assign addresses for each of the controls

Job F Set up the addresses for the flap valves

Job G Disconnect the Touch Screens that will not be used

Job H Connect the Modbus wiring

Job I Set the parameters used by the Lead Lag system

Job M Building automation or multiple boiler control 4-20 mA setpoint control

Job O Set up the combustion on each of the burners

Job P Set the date and time on the system

System 20 –

Multiple boiler, System control, Common vent, 4-20 mA setpoint control, Outdoor reset

Job A Note on common venting

Job B Set up the names for each of the controllers

Job C Make one control the Lead Lag Leader

Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader

Job E Set up the Modbus control addressing to assign addresses for each of the controls

Job F Set up the addresses for the flap valves

Job G Disconnect the Touch Screens that will not be used

Job H Connect the Modbus wiring

Job I Set the parameters used by the Lead Lag system

Job M Building automation or multiple boiler control 4-20 mA setpoint control

Job K Lead Lag outdoor reset and warm weather shutdown

Job O Set up the combustion on each of the burners

Job P Set the date and time on the system

System 21 –

Multiple boiler, System control, Common vent, 4-20 mA modulation control

- Job A Note on common venting
- Job B Set up the names for each of the controllers
- Job C Make one control the Lead Lag Leader
- Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader
- Job E Set up the Modbus control addressing to assign addresses for each of the controls
- Job F Set up the addresses for the flap valves
- Job G Disconnect the Touch Screens that will not be used
- Job H Connect the Modbus wiring
- Job I Set the parameters used by the Lead Lag system
- Job N Building automation or multiple boiler control 4-20 mA modulation control
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

System 22 –

Multiple boiler, System control, Common vent, 4-20 mA modulation control, Outdoor reset

- Job A Note on common venting
- Job B Set up the names for each of the controllers
- Job C Make one control the Lead Lag Leader
- Job D On each of the controllers that will act as a follower, disable the Lead Lag Leader
- Job E Set up the Modbus control addressing to assign addresses for each of the controls
- Job F Set up the addresses for the flap valves
- Job G Disconnect the Touch Screens that will not be used
- Job H Connect the Modbus wiring
- Job I Set the parameters used by the Lead Lag system
- Job N Building automation or multiple boiler control 4-20 mA modulation control
- Job K Lead Lag outdoor reset and warm weather shutdown
- Job O Set up the combustion on each of the burners
- Job P Set the date and time on the system

9.D Installation Jobs

Note – To install your system (your particular system configuration), you will not need to do all of the installation jobs listed here in Section 9.4. You only need to perform the jobs listed sequentially for your type of system previously. Please refer to Table 19 on page 55 and Table 20 on page 56 for a list of specific installation jobs necessary to install your system.

Job A – Note for Systems Using Common Venting


If multiple units share a single vent, the system must be engineered by a competent venting specialist. The design involves the selection of draft-inducing equipment, hardware and controls to properly balance flue gas pressures. Do not common vent units unless the vent system meets this requirement. These units are never permitted to share a vent with Category I appliances.

Job B - Naming the Controllers

(This is an individual function – do this for each of the controls. Use the separate Touch Screen on each boiler.)


Each unit includes two separate controls, as shown in Menu 23. In a system with four boilers, there will be eight separate controls. See Figure 28 on page 50. The first job is to name each of these controllers.

1. We will start by entering a name for the first controller in the line – the Primary controller on Boiler 1. Start at the “Home” screen. Press the icon for the Primary control.

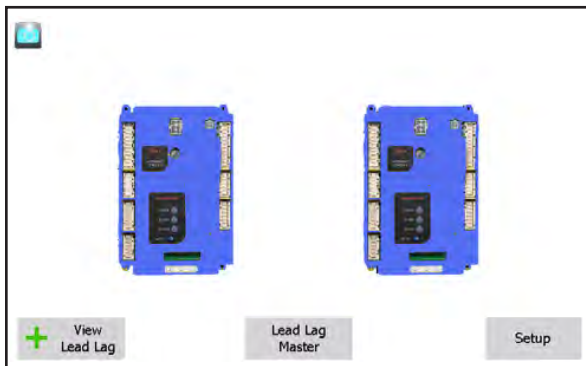


Menu 23. – ‘home’ screen

2. The system will present the Status Summary screen for that controller.

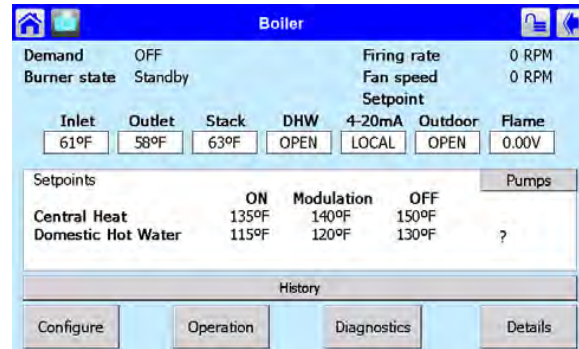


Menu 24. Status Summary Screen

3. Select the “Configure” button in the bottom left-hand corner of the display.

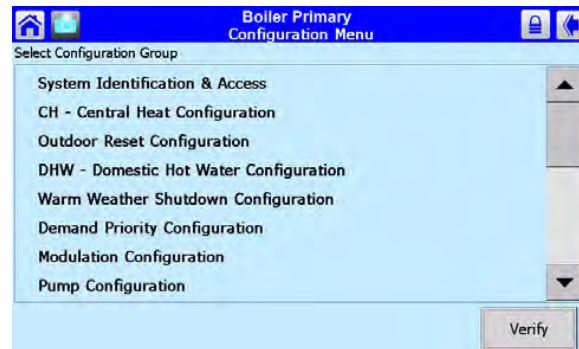

Menu 25. Configuration Menu

4. Select the line for System Identification and Access.

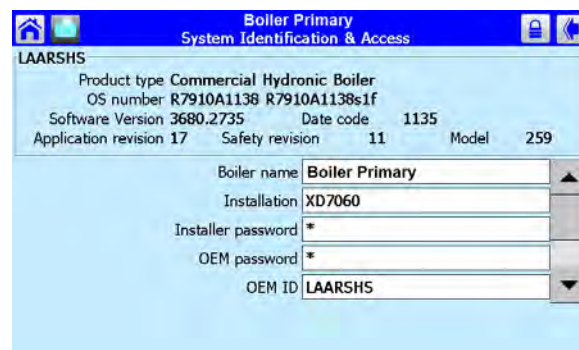

Menu 26. System Identification and Access

5. Go down to the line for Boiler Name to change the name of the control. In this example, we are working with the Primary control on Boiler 1, so the name here should be “Boiler 1 Primary.” To change the entry, press on the line for Boiler Name. The system will present the keyboard screen. Use the “BS” (BackSpace) key to erase the existing name. Enter the new name, then press OK.

- Now you can rename the other control on Boiler 1 – the Secondary control. Press the Home button in the top left-hand corner to go back to the 'home' screen which shows the different controls.
- This time, press the icon for the Secondary control. Repeat steps 1 through 5. Change the name to "Boiler 1 Secondary."
- Go to the Touch Screen for the next boiler in the system. Repeat steps 1 through 7 for each of the controllers on that boiler. Be sure the names you enter are correct – each name should indicate the Boiler number and whether the control will operate as the Primary or Secondary.
- Repeat the process for any other boilers in the system.


Job C – Make One Control the Lead Lag Leader

(This is an individual function – do this once for the control that will act as the Lead Lag Leader. Use the Touch Screen on Boiler 1.)

The Lead Lag control system uses one controller as the Lead Lag Leader. This controller supervises the operation of the other controllers, and they all operate together as part of the Lead Lag system. There is only one Lead Lag Leader in the system. Usually, the controller used for this is the Primary controller on Boiler 1. (Other controls in the system can be set as the Lead Lag Leader, but we do not recommend this because it may complicate troubleshooting and technical support questions.)


The controller used as the Lead Lag Leader will also do a second job, operating as Follower 1 in the Lead Lag system. A single controller performs both of these functions. When it arrives from the factory, the controller used for this should already be set up as a Follower – we will check that in a moment. For now, we will just concentrate on enabling the Leader function.

- Start at the 'home' screen.

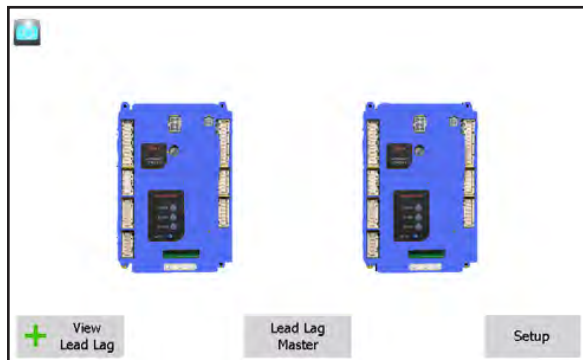


Menu 27. 'home' screen

- Press the button for Lead Lag Leader. Fig. 57 shows the screen that follows.

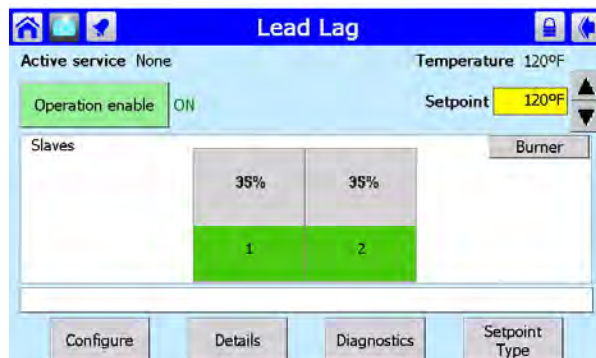

Menu 28. Lead Lag Leader Screen

- Press the Configure button. The display will present the Lead Lag Leader Configuration Screen (Fig. 58).

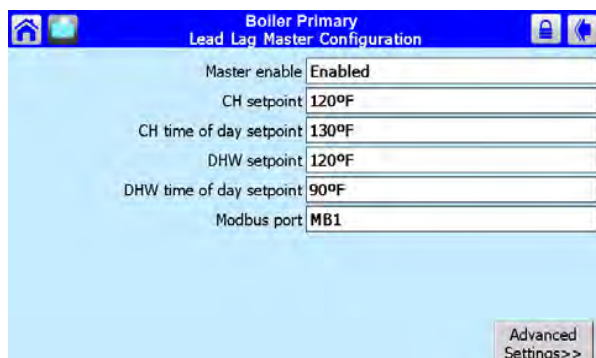

Menu 29. Lead Lag Leader Configuration

- This screen shows the most important settings for the Lead Lag system. The settings can be changed from this screen. Some of them will require passwords.

We will enter all of the Lead Lag control values in a moment. For now, just press on the line for Leader Enable. Change the setting to Enable.


Job D - Disable the Lead Lag Leader Function on the Lead Lag Followers

(This is an individual function – do this for each of the controls, except the one used as the Lead Lag Leader. Use the separate Touch Screen on each boiler.)

At the beginning of this section, we described the Leader and Follower arrangement used with the Lead Lag system. In the previous section, we explained how to set up one controller as the Lead Lag Leader. As we said, the controller used as the Leader (usually the Primary controller for Boiler 1) also serves as a Follower (usually Follower 1). A single controller performs both functions.


When the controllers arrive at the factory, they will all be configured as followers. Your job in this step is to disable the Lead Lag Leader function on each of the controls, except for the one control that will be used as the Lead Lag Leader – usually the Primary control on Boiler 1.

1. From the 'home' screen, press the icon for the controller you want to work with. In this example, we will start with the Secondary controller for Boiler 1, and make sure this is not set up as a Leader.

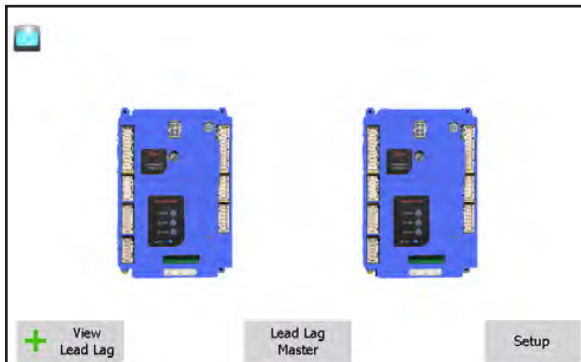


Menu 30. 'home' screen

2. The system will take you to the Status Summary screen.

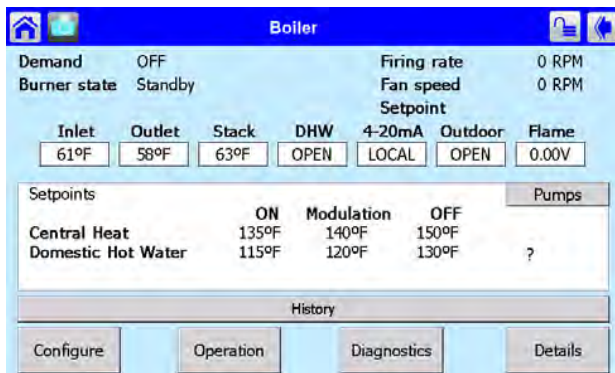


Menu 31. Status Summary Screen

3. To disable the Leader function on this controller, press the Configure button. Figure 61 shows the Configuration screen.

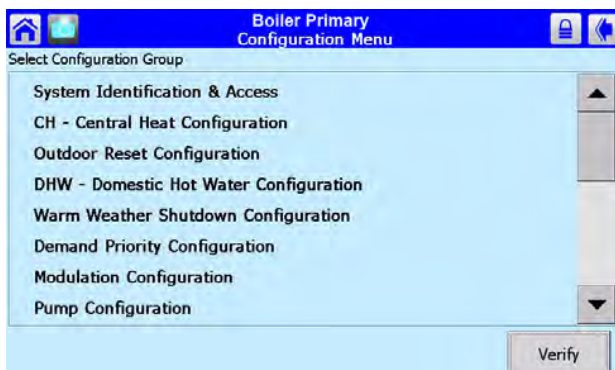

Menu 32. Configuration Screen

4. Scroll down through the list until you find the line for LL Leader Configuration. See Fig. 62.

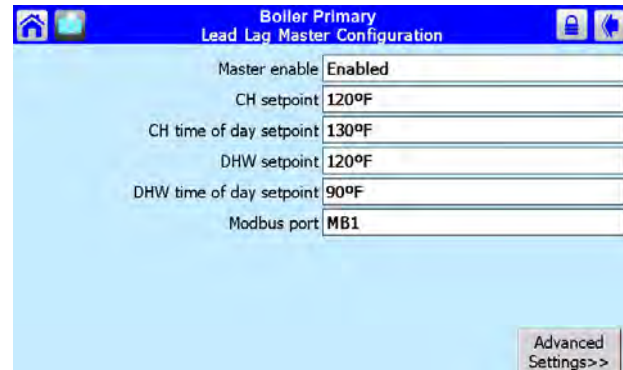

Menu 33. Lead Lag Leader Configuration

Press on the line for Leader Enable. The system will go to a separate screen and ask you to login using a password. Enter the password (see Section 8.2), return to the Leader Configuration screen, then press the line for Leader Enable again. Change the entry to Disabled.

Don't change any of the other entries on this screen.

5. At this point, you have disabled the Leader function on one of the controllers. You will need to repeat the process for each of the other controllers in the system (except the Primary Controller on Boiler 1).
Go to the Touch Screen on the next boiler. Repeat steps 1 through 4 for the first controller on that boiler.
6. Repeat the steps listed above for each of the other controllers on the system. Disable the Leader function on each of them.

Job E – Set Up the Modbus Control Addressing

(This is an individual function – do this for each of the controls. Use the separate Touch Screen on each boiler.)


Do this on any system with multiple boilers.

Note – Do not connect the Modbus wiring yet. The controls must be set up and addressed correctly before the wiring is complete. If the wiring is attached before the control Modbus addresses are changed, there will be multiple controls with the same address, and the system will not work.

1. When the system is operating under the control of the Lead Lag system, the Lead Lag Leader needs a way to identify each controller in each of the boilers. On a system with four


boilers there will be eight separate controllers. You will need to give each of these controllers a unique Modbus address. (Notice that this is different from the name of the controller. We set the controller names in a previous step.)

2. Power up all of the boilers in the system. It will take a minute for each Touch Screen to “synchronize” with its two controllers.
3. Start at the ‘home’ screen on the first boiler.

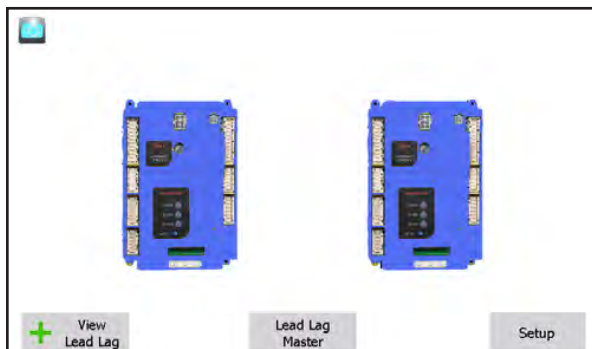

Menu 34. ‘home’ screen

4. Press the Setup button in the lower right-hand corner to go to the Setup screen.

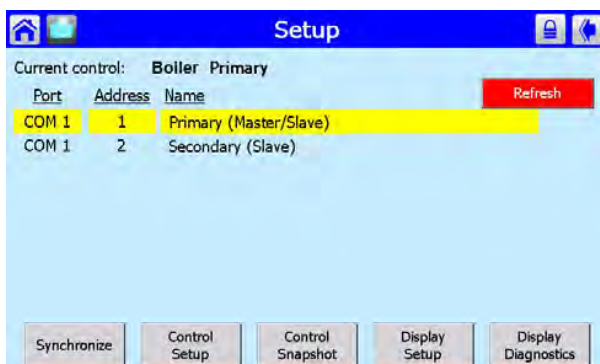

Menu 35. Setup Screen

5. Press the Control Setup button. Menu 36 shows the Control Setup screen.




Menu 36. Fig. 65 – Control Setup Screen

6. The first number on each line (01, 02, etc.) is

the Modbus control address. Let's set up the Modbus address for the first controller in the line - the Primary controller on Boiler 1. Press the top line – Unit Primary.

7. Press the Change Address button. You need to know the installer-level password to change the address, so the system will ask you to log in. (For more information on the passwords and logging in, see the section on “Using the Touchscreen.”) Press the padlock symbol in the upper right-hand corner of the screen, then type in the installer-level password and press the OK button.
8. Press the Change Address button again. The system will present a screen that lets you change the address.

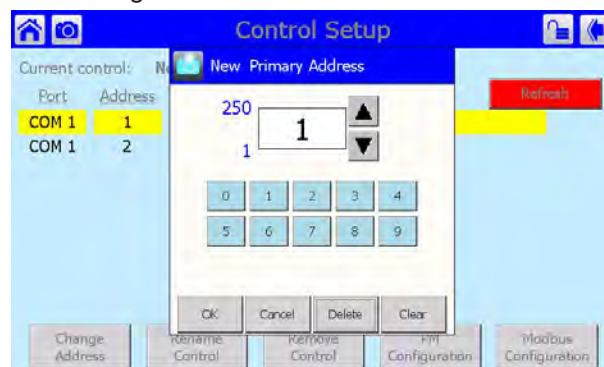

Menu 37. Changing Modbus Address

9. Table 13 shows how the Modbus control addressing should be set up. The system is simple, but it is important to only use the correct address listed in the table. Do not use any other address than the one listed in the table for the control you are addressing. In this example, the correct address for the Primary Control on Boiler 1 is “1.” If this is not already set to “1”, enter the correct number, then press OK.

⚠ WARNING

If the addresses are not assigned properly, the system could fail to operate correctly, or it might operate in an unsafe manner. This could lead to property damage, personal injury or death.

10. Now you can use the same process to set the address for the Secondary control for Boiler 1. On the Control Setup screen (Menu 36), press the second line – Unit Secondary. Change the address to the correct address taken from Table 18. In this case, the correct address would be “2.”
11. Go to the Touch Screen for Boiler 2. Repeat the process to change the addresses for

Boiler 2 Primary (address = 3) and Boiler 2 Secondary (address = 4).

12. Repeat steps 3 - 10 for each of the other controllers connected to the system.

Job F - Set the Flap Valve IDs

(These are individual functions. Make the flap valve assignment on each of the controllers. Use the Touch Screen on each of the boilers.)

Do this on any system with multiple boilers.

Each boiler includes two burners, and each burner has a flap valve. See Figure 37.

A flap valve acts like a one-way valve or check valve. If one burner in a boiler is operating, and the other is not, one of the flap valves will close to prevent exhaust air from moving backwards through the burner that is not operating.

Before the Lead Lag Leader controller will allow the system to operate, it must be able to determine whether each of these flap valves is open or closed. If the controller cannot find a signal from one of the flap valves, the control system will act to prevent backflow by energizing the blower of the control with the bad flap valve. (The positive pressure from the blower will prevent the exhaust air from moving back through the burner.) If this cannot be done, the Lead Lag Leader controller will not allow the whole system to run. For this reason, it is important that all of the

flap valves be identified correctly.


Each controller in the system needs to know how many controllers are included in the whole system. You will need to enter this information in each of the controllers separately.



WARNING

If the flap valve identifications are not configured correctly, this could cause the equipment to malfunction. This could lead to personal injury or death, and could damage the equipment. If the configuration is not correct, the control system will present an error – “HOLD 119 – Control Interaction Fault” on the display and will prevent the boiler(s) from operating.

1. Let's start by setting the Flap Valve ID for the Primary control for Boiler 1. To do this, start at the 'home' screen.

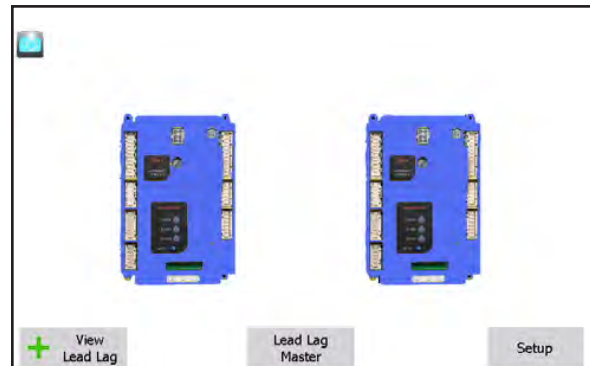

Menu 38. 'home' screen

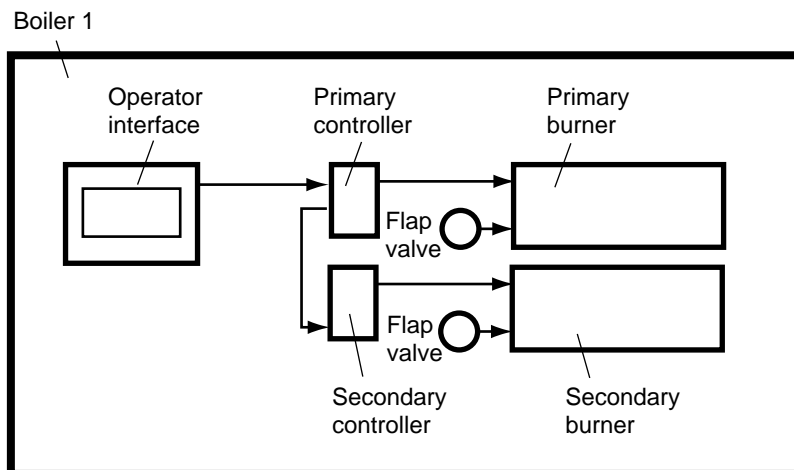


Figure 37. Flap Valve Arrangement

	Boiler 1	Boiler 2	Boiler 3	Boiler 4
Primary control	1	3	5	7
Secondary control	2	4	6	8

Table 22. Modbus Control Addressing

- Press the icon for the controller you want to work with. The system will take you to the Status Summary screen for that controller.

Menu 39. Status Summary Screen

- Press the Configure button.

Menu 40. Configuration Screen

- Scroll through the listing on the Configure menu to Flap Valve Configuration, and select that line.

Menu 41. Flap Valve Configuration Screen

Two of the items on this screen can be changed:

Controller ID -

This is the ID number of the flap valve associated with this controller. (We will set the ID number for the other controller in this boiler in a moment.)

Number of controllers -

This is the total number of controllers in the whole system. (For example, in a system with four boilers, there will be eight controllers.) See Table 21.

You need to set both of these values on the Flap Valve Configuration screen for **each** controller in the system.

Table 21. Number of Controls

Number of boilers	Number of controls
2	4
3	6
4	8

For example, if your system has three boilers, there would be a total of six controllers (two for each boiler), so you would enter "6" for Number of Controls.

- Press the line for Controller ID. Because you are changing a parameter that is related to safety, the system will present a warning that looks like this:

Menu 42. Parameter Safety Warning

Press OK to continue. The system will ask you to login before you make a change.

Note that any changes you make will apply only to one controller – the controller you have already selected. If you want the same change to apply to other controllers, you must change each of them separately.

Once you change one of these safety-related parameters, you must finish the verification process, or the control system **will not let the boiler operate**. Each control in a boiler must be verified separately.

- Press again on the line for Controller ID. Table 23 shows how the Primary and Secondary

controls should be numbered for each of the boilers.


In this example, we are still working with the Primary control for Boiler 1. From the table, you can see that this control should have a flap valve ID of "1." Enter the correct ID from Table 23 in this field.

WARNING

If the controller cannot find a signal from one of the flap valves, the control system will act to prevent backflow by energizing the blower of the control with the bad flap valve. If this cannot be done the control will not allow the whole system to run. For this reason, it is important that all of the flap valves be identified correctly.

7. Set the address for the other controller on this boiler in the same way.
8. At this point, you have set the flap valve ID's for both controllers on this boiler. Before you leave, you must finish the verification process, or the control system will not let the boiler operate.

Press the Back arrow to return to the Configuration screen.

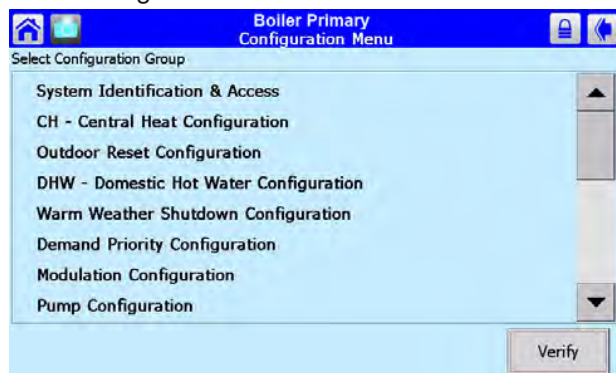

Menu 43. Configuration Screen

9. In a moment, you will need to reset the controller by pressing a button on the front of the unit. See Figure 33. The controllers for the two boilers are mounted behind the door on the front of the unit.



Figure 33. Reset Button on Controller

The control system allows 30 seconds to press the reset button. Do not press the Reset button yet! You will need to do this in a moment. At this point, we just want to alert you to something: In order to be able to reach the controller within 30 seconds, it will be helpful to open the door and slide out the control panel first.

When you are ready, press the Verify button on the Configuration screen.

10. To begin the verification, login to the system and press Begin.




Menu 44. Edit Safety Data

11. The system will present a listing of a group which includes the parameter you changed (the flap valve ID).

	Boiler 1	Boiler 2	Boiler 3	Boiler 4
Primary control	1	3	5	7
Secondary control	2	4	6	8


Table 23. Flap Valve Controller ID Addressing

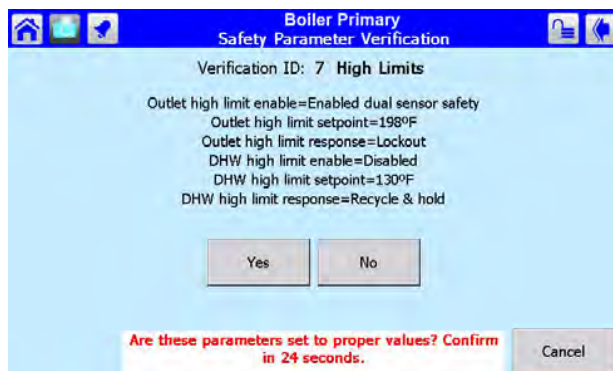

Menu 45. Safety Parameter Confirmation

Check the list carefully. Press Yes if all of the parameters in the group have been entered correctly.

12. The system will tell you to reset the control system.

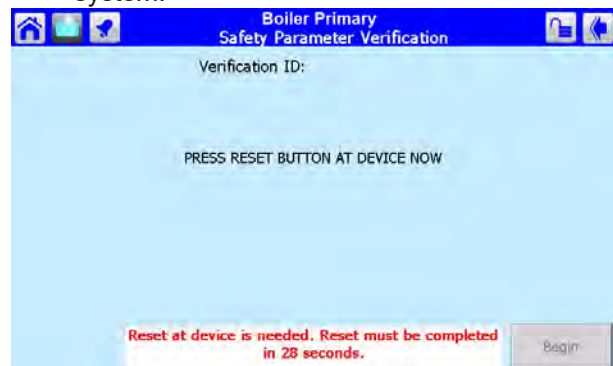

Menu 46. Safety Parameter Reset

You must press the Reset button within 30 seconds, or the verification will be cancelled.

13. At this point, you have set the flap valve address for one of the controllers in the boiler. The next job is to set the flap valve identification for the other control on this boiler. (In this example, this would be the Secondary control on Boiler 1). Press the Home button in the upper left-hand corner of the display.
14. Press the icon for the Secondary control. Repeat steps 3 through 12 for the Secondary control for Boiler 1. (From Table 23, you can see that the address for this control should be "2.")
15. At this point, you have set the flap valve ID's for both controllers on one of the boilers. Now you must repeat the process for all of the controllers on each of the other boilers.

Job G – Disconnect Unused Touch Screens

Once a Lead Lag system is set up and operating, the monitoring functions will all be handled from one Touch Screen – the one connected to the controller operating as the Lead Lag Leader. If the extra displays remain connected to the Lead Lag system, this will slow down the communications through the system. (Each display would be considered a leader on the Lead Lag system.) To eliminate this slowdown, disconnect the power from all of the displays on the network except the display that is connected to the controller operating as the Lead Lag Leader.

Here is the procedure for disconnecting power to one of the displays:

1. Turn off the power to the boiler which includes the display you want to disconnect.
2. Open the front door to get access to the electronics panel.
3. Locate terminal block 10 (TB10). See Figure 34. Remove the jumper connecting pins 1 and 2 on TB10. You can also reference Figure 18 on page 36 for connections.

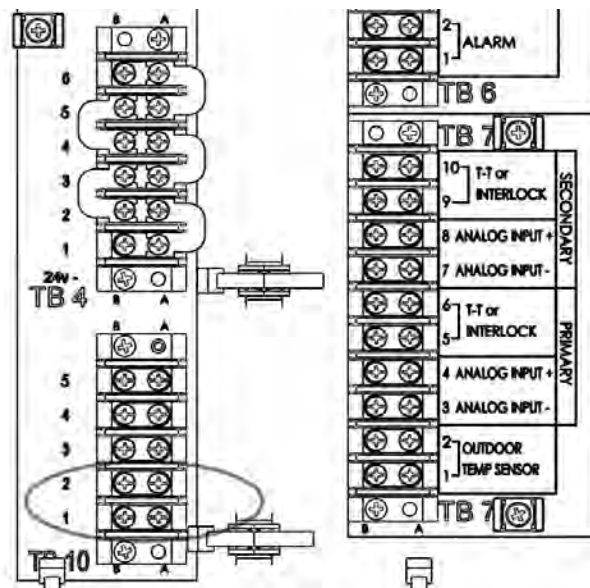


Figure 34. Disconnecting an Unused Touch Screen. Also see Figure 18 on page 36

4. Close the front door and turn on power to the boiler.

Job H - Connect the Modbus Wiring


(This is an individual function – do this on each of the controls.)

In an installation with multiple boilers, the controllers


are arranged in a “daisy chain.” The wiring from the Secondary controller on one boiler (TB9 - pins 7 through 12) to the Primary controller on the next boiler (TB9 - pins 1 through 6). See Figure 35. Use 22 AWG or thicker shielded twisted pair wire with drain. Two twisted pairs or three conductors are needed.

You can also reference Figure 18 on page 36 for connections.


Boiler
1

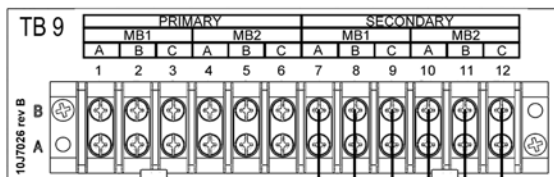

Boiler
2

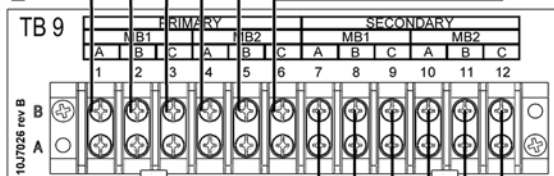

Boiler
3

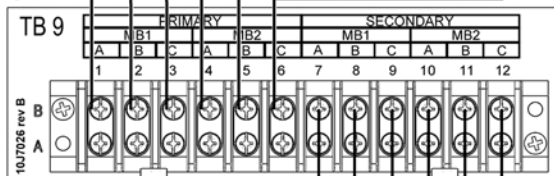

Boiler
4

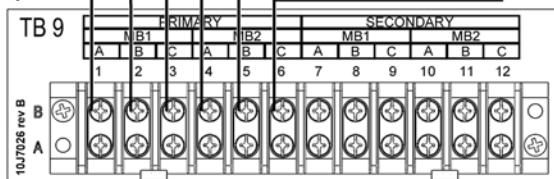


Figure 35. Modbus Connections (for Lead Lag)

Note – The Modbus wiring should be done last. The controllers must be set up and addressed correctly before the wiring is complete. If the wiring is attached before the Modbus addresses for the controllers are set up, there might be multiple controls with the same address, and the system will not work.

1. Turn off the power to all of the boilers to which you will be making connections. On each boiler, open the front door to gain access to the electronics panel. Locate terminal block 9

(TB9) on each panel.

2. Figure 35 shows how to make the connections. The following table lists the connections from Boiler 1 to Boiler 2.

Boiler 1

(Lead Lag Leader)

Secondary

Boiler 2

Primary


TB9, pin 7	connect to	TB9, pin 1
TB9, pin 8	connect to	TB9, pin 2
TB9, pin 9	connect to	TB9, pin 3
TB9, pin 10	connect to	TB9, pin 4
TB9, pin 11	connect to	TB9, pin 5
TB9, pin 12	connect to	TB9, pin 6

3. Repeat the process for Boiler 2 and 3, and Boiler 3 and 4. The connections to the other boilers follow the pattern we just described. Use Figure 35 as your reference.
4. Connect the drain wires from all of the wire assemblies together and ground the drain wire on one end of the assembly only.
5. Turn on the power to all of the boilers when you are finished.

Job I – Set the Parameters Used by the Lead Lag System


(This is a Lead Lag function – do this once for the whole Lead Lag system. Use the controller set up as the Lead Lag Leader – usually the Primary controller on Boiler 1.)

We have already explained how the Lead Lag Leader controls the operation of the Lead Lag system. Your job at this point is to enter the control values that the Lead Lag system will use.

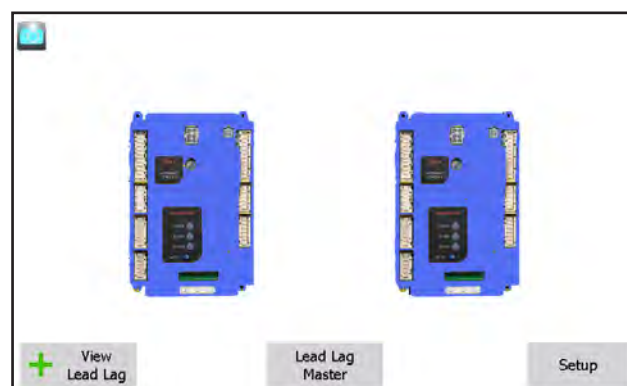


Menu 47. ‘home’ screen

1. From the ‘home’ screen, press the Lead Lag Leader button.

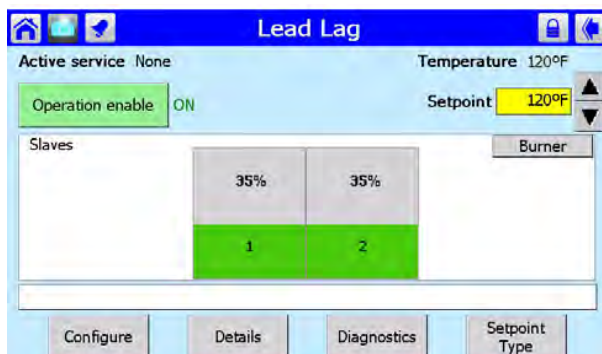**Menu 48. Lead Lag Leader Screen**

2. Press the Configure button. The display will present the Lead Lag Leader Configuration Screen.

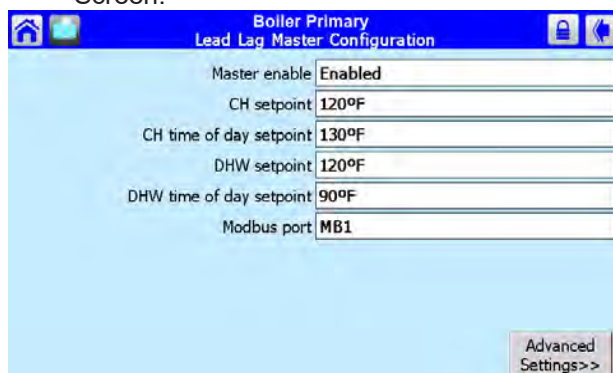**Menu 49. Lead Lag Leader Configuration**

3. This screen shows the most important settings for the Lead Lag system. The settings can be changed from this screen. Some of them will require passwords.

Here are the settings on this screen:

Leader enable -

Enabled = Lead Lag system enabled

CH setpoint -

Setpoint for LL Central Heating

CH time of day setpoint -

Separate Time-of-Day Setpoint for Central Heating (See the material on "About the 'Time of Day' Function at the end of this section)

DHW setpoint -

Setpoint for Domestic Hot Water

DHW time of day setpoint -

Separate Time-of-Day Setpoint for Domestic Hot Water (See the material on "About the 'Time of Day' Function at the end of this section)

Modbus port -

Always use MB1

4. To see the other settings related to the Lead Lag functions, press the button for Advanced Settings. This leads to a "ring" of related screens, and you can scroll through the list by pressing one of the left- or right-arrow symbols. The screens in this ring are:

Modulation

Central Heat

Domestic Hot Water

Frost Protection

Outdoor Reset

Warm Weather Shutdown

Algorithms


Rate Allocation

Add Stage

Drop Stage

Fig. 84 – Central Heat

5. Press the left-arrow or right-arrow until you see the Modulation screen (Menu 50).

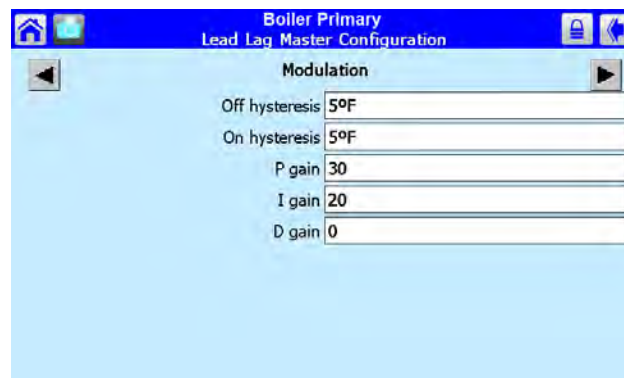**Menu 50. Modulation**

Three of the items on this screen can be changed:

Off hysteresis -

The system will not shut off the burners until the System sensor reaches the CH Setpoint plus an additional "hysteresis" value.

On hysteresis -

The system will not fire the burners until the System sensor reaches the LL CH Setpoint minus an additional "hysteresis" value.

P, I, D Gain -

These control the "damping" used by the temperature control. The three control values are P (proportional), I (integral) and D (derivative). If you understand how these variables affect the function of the unit, you can change them to adjust for unusual operating conditions. The default settings for the Lead Lag configuration are: P = 30, I = 20, and D = 0.

6. Press the left-arrow or right-arrow until you see the Central Heat screen.

Menu 51. Central Heat

Setpoint source -

This sets the source of the System sensor input used to control the system. The options here are Local and 4-20 mA. (For instructions on setting up for a 4-20 mA input, see Job #5 in the section on "Installation Options.")

Setpoint -

This is the same as the LL CH Setpoint on the Lead Lag Leader Configuration screen (Menu 49).

Time of day setpoint -

This is the same as the LL CH Time-Of-Day Setpoint on the Lead Lag Leader Configuration screen. (See the material on "About the 'Time of Day' Function at the end of this section")

4 mA water temperature -

If a 4 – 20 mA input is used to adjust the setpoint, this entry sets the low limit of the control range. (In the example shown here, an input of 4 mA would result in a setpoint of 90°F.)

20 mA water temperature -

If a 4 – 20 mA input is used to adjust the setpoint, this entry sets the high limit of the control range. (In the example shown here, an input of 20 mA would result in a setpoint of 120°F.)

7. Press the left-arrow or right-arrow until you see the Domestic Hot Water screen.

Menu 52. Domestic Hot Water

The arrangement for Domestic Hot Water can be set up in several ways. For details, see the section on "Lead Lag Domestic Hot Water."

DHW Setpoint -

This is the same as the DHW Setpoint on the Lead Lag Leader Configuration screen.

DHW Time of day setpoint -

This is the same as the DHW Time-Of-Day Setpoint on the Lead Lag Leader Configuration screen. (See the material on "About the 'Time of Day' Function at the end of this section.")

DHW Priority method -

This determines the way the system gives priority to the DHW demand (if DHW is given priority on the bottom line of the screen.)

DHW priority override time -

If Domestic Hot Water has priority (see the next line below), this sets how long the DHW loop will have priority before returning to control by the Lead Lag Central Heat setpoint.

DHW has priority over CH? -

Choose Central Heating priority or Domestic Hot Water priority.

8. Press the left-arrow or right-arrow until you see the Outdoor Reset screen.

Menu 53. Outdoor Reset

“Outdoor Reset” allows the system to adjust the Central Heat setpoint to compensate for changes in the outdoor temperature. This allows the whole system to run more efficiently. For details, see the section on “About Outdoor Reset.”

Enable -

Enable = Outdoor Reset feature turned on

Max. outdoor temp. -

If the outdoor temperature reaches this value or above, the system will use the Low Water Temp value as the setpoint. In the example shown in Menu 53, the Max. Outdoor Temp. is set to 70°F. If the outdoor temperature is 70°F or above, the system will use 100°F (the Low Water Temp.) as the setpoint.

Min. outdoor temp. -

If the outdoor temperature reaches this value or below, the system will not compensate for the outdoor temperature. In the example shown in Fig. 86, the Min. Outdoor Temp. is set to 32°F. If the outdoor temperature reaches 32°F or below, the system will use the normal Lead Lag System setpoint (120°F in this example).


Low water temp. -

If the outdoor temperature reaches the Max. Outdoor Temp. or higher, the system will use the Low Water Temp value as the new setpoint. In the example shown in Menu 53, the Max. Outdoor Temp. is set to 70°F. If the outdoor temperature reaches 70°F or above, the system will use the Low Water Temp. value (100°F) as the setpoint.

Min. boiler water temperature -

If a value is entered here, the temperature in the boiler will never be allowed to drop below this temperature. This will protect the boiler against possible damage due to expansion of ice inside the unit.

9. The Show Line button at the bottom of the screen displays a curve which shows how the system will behave at different outdoor temperatures. See Menu 54. (This screen is also explained in the section on “About Outdoor Reset.”)

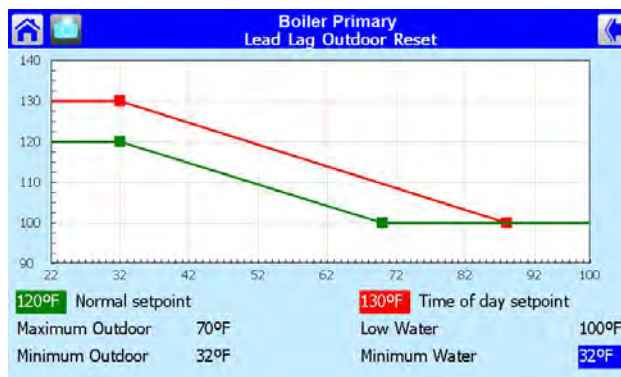

Menu 54. Outdoor Reset Display

10. From the Outdoor Reset screen, press the left-arrow or right-arrow until you see the Warm Weather Shutdown screen.

Menu 55. Warm Weather Shutdown

When enabled, the Warm Weather Shutdown feature will turn off the Central Heating functions when the outdoor temperature exceeds the setpoint. This prevents the system from running when there is no need for heat.

Enable -


These options determine how quickly

the system shuts down after the outdoor temperature rises above the setpoint. The options are Shutdown immediately/ After demand ends/ Disabled.

Setpoint -

If the outdoor temperature is higher than this, the system will shut off the Lead Lag Central Heating functions.

11. Press the left-arrow or right-arrow until you see the Rate Allocation screen.

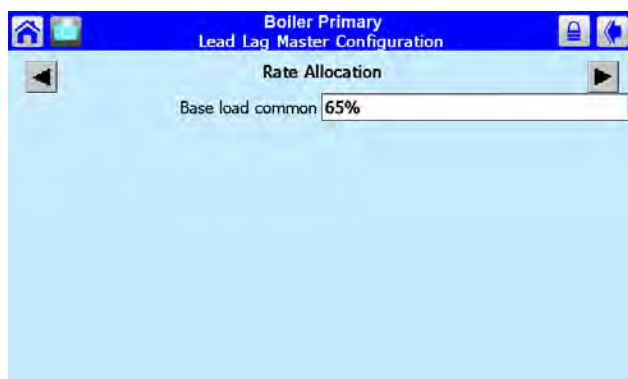

Menu 56. Rate Allocation

As the load on the system increases, the first boiler in the Lead Lag chain will increase the fan speed until it reaches a certain percentage of the total output (the “base load”). At that point, the controller will start the second boiler in the Lead Lag chain. See the explanation at the beginning of this section and page 52.

Base Load Common -

Number of boilers Installed	Base load min.
1	65%
2	50%
3	30%
4	30%

Table 24. Base Load Settings

As the demand increases, this sets the point at which the controller starts another burner in the Lead Lag chain.

To prevent short-cycling, the base load setting should be set at the values shown in Table 16, or set to higher values.

About the “Time of Day” Function

If the “time of day” function is enabled, the control system can be set to maintain different temperatures for central heat and domestic hot water (other than the normal setpoints) in the system at certain times of the day. Normally this function is used to switch to lower temperatures at night, when the central heating or domestic hot water demand is reduced. When the controller acting as the Lead Lag Leader receives a time of day input, the controller shifts to the special setpoints entered for central heat and domestic hot water.

The input for the Time of Day function must be wired to pins 2 and 3 on connector J10. See Figure 38

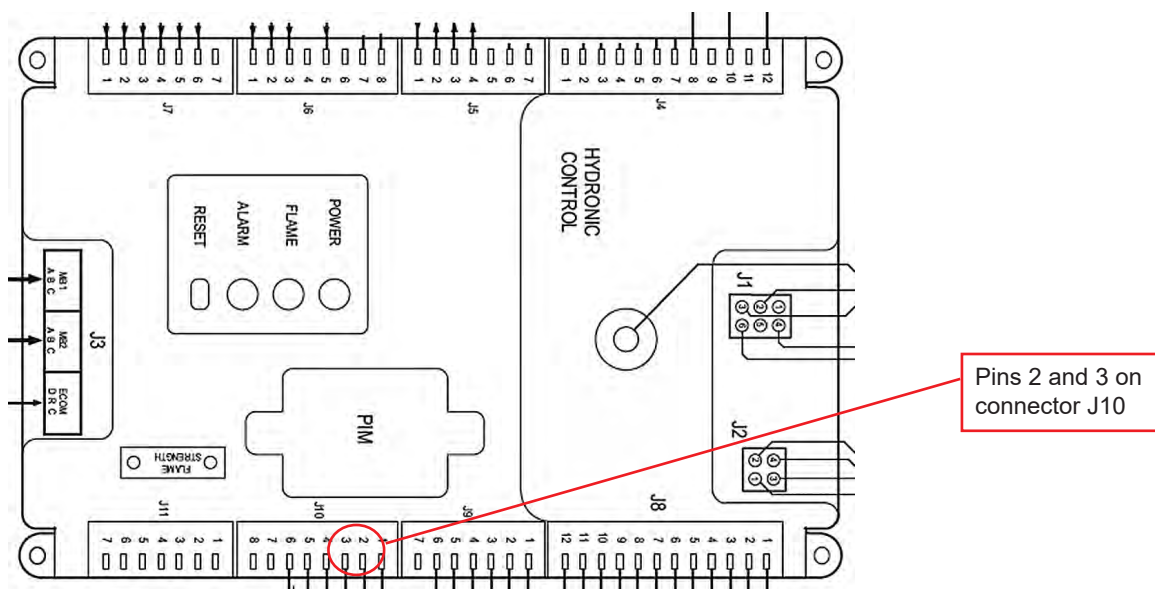


Figure 38. Connections for “Time of Day” Function

Job J - Install the System Sensor and Adjust the Setpoint

(This is a Lead Lag function – do this once for the whole Lead Lag system. Make the connections to the controller set up as the Lead Lag Leader – usually the Primary controller on Boiler 1.)

1. Install the System sensor at the location shown in Figure 36. Connect the System sensor to the System terminals on the controller acting as the Lead Lag Leader (usually the Primary controller on Boiler 1.) Use terminals 3 and 4 on TB6.
2. Adjust the Lead Lag Central Heat Setpoint to the desired temperature to be used by the system.

How to get there – Adjust CH Setpoint

Home Page <Press View Lead Lag button> Lead Lag Screen <Press Lead Lag Leader button> Lead Lag Screen <Press Configure button> Lead Lag Leader Configuration Screen

Line 2 = CH Setpoint

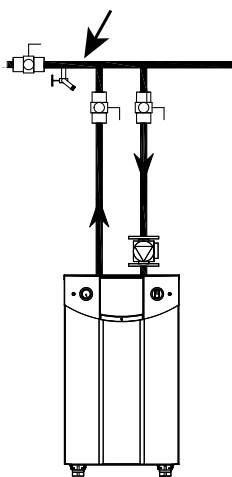


Figure 36. Mounting Location for System Sensor

Job K - Set the Lead Lag Outdoor Reset and Warm Weather Shutdown

(This is a Lead Lag function – do this once for the whole Lead Lag system. Use the controller set up as the Lead Lag Leader – usually the Primary controller on Boiler 1.)

For more information on the outdoor reset function, see the explanation which follows.

1. Install the outdoor air temperature sensor and make the connections to the outdoor air sensor terminals on the controller acting as the Lead Lag Leader (usually the Primary controller on Boiler 1.) Use terminals 1 and 2 on TB7.
2. Set the outdoor reset and warm weather shutdown parameters as desired.

How to get there – Outdoor Reset Screen and Warm Weather Shutdown Screen

Home Page <Press View Lead/ Lag button> Lead/ Lag Screen <Press Lead/ Lag Leader button> Lead/ Lag Screen <Press Configure button> Lead/ Lag Leader Configuration Screen <Press Advanced Settings button>

Select the Outdoor Reset Screen or the Warm Weather Shutdown Screen

Menu 57. Outdoor Reset

For a detailed explanation of the Outdoor Reset function, see the section titled “About Outdoor Reset” which follows.

Menu 58. Warm Weather Shutdown

When enabled, the Warm Weather Shutdown feature will turn off the Central Heating functions when the outdoor temperature exceeds the setpoint. This prevents the system from running when there is no need for heat.

Enable -

These options determine how quickly the system shuts down after the outdoor temperature rises above the setpoint. The options are Shutdown immediately/ After demand ends/ Disabled.


Setpoint -

If the outdoor temperature is higher than this, the system will shut off the Lead Lag Central Heating functions.

About Outdoor Reset

The Outdoor Reset feature calculates a correction for the Lead Lag setpoint depending on the outdoor temperature. This allows the system to adjust for changes in the outdoor temperature and run more efficiently.

The Show Line button at the bottom of the Outdoor Reset screen displays a curve which shows how the system will behave at different outdoor temperatures. See Fig. 94.

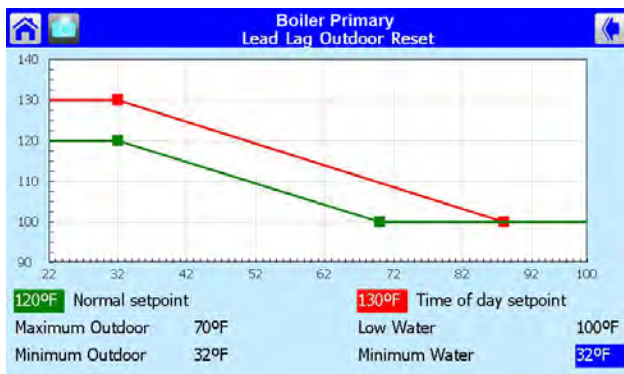

Menu 59. Show Line Screen

The display shown above shows the action of the system with one possible group of settings. The green line shows the setpoint used by the system.

- Without Outdoor Reset, this would be a constant 120°F (or whatever value you chose), regardless of the outdoor temperature. The green line in the graph would run straight across the display.
- However, with the Outdoor Reset feature turned on, the system will adjust for changes in the outdoor temperature. Let's take a detailed look at behavior of the setpoint, shown by the

green line in the display. For cold outdoor temperatures (below 32°F), the setpoint remains unchanged (120°F). As the temperature begins to rise above 32°F, the Outdoor Reset function causes the setpoint to be lowered. At these warmer temperatures, the heating load on the system is not as great, so the system does not have to reach as high a temperature to handle the load. As you can see from the display, at an outdoor temperature of about 70°F, the system stops adjusting the setpoint. Above 70°F, the setpoint is constant at 100°F.

When Outdoor Reset is enabled, and the outdoor temperature falls between the maximum and minimum outdoor temperatures (70° and 32° in the example above), the setpoint will be adjusted down by about 1° for every 2° increase in the outdoor temperature. For example, if the outdoor temperature rises by 10°, the Outdoor Reset function will adjust the setpoint down by about 5°. (This ratio between outdoor temperature and water temperature is adjustable.)

When you set up the Outdoor Reset feature, you can set the "turning points" on the adjusted setpoint curve. If you go back to Menu 54, the Outdoor Reset screen, you see that the system records these values:

Enable -

Enable = Outdoor Reset feature turned on

Max. outdoor temp. -

If the outdoor temperature reaches this value or above, the system will use the Low Water Temp value as the setpoint. In the example shown in Menu 54, the Max. Outdoor Temp. is set to 70°F. If the outdoor temperature is 70°F or above, the system will use 100°F (the Low Water Temp.) as the setpoint.

Min. outdoor temp. -

If the outdoor temperature reaches this value or below, the system will not compensate for the outdoor temperature. In the example shown in Menu 54 the Min. Outdoor Temp. is set to 32°F. If the outdoor temperature reaches 32°F or below, the system will use the normal Lead Lag System setpoint (120°F in this example).

Low water temp. -

If the outdoor temperature reaches the Max. Outdoor Temp. or higher, the system will use the Low Water Temp value as the new setpoint. In the example shown in Menu 54, the Max. Outdoor Temp. is set to 70°F. If the outdoor temperature reaches 70°F or above, the system will use the Low Water Temp. value (100°F) as the setpoint.

There is one other part of this system, and it is located on a different screen:

LL CH setpoint -

On a system set up for Outdoor Reset, this will be the maximum water temperature setting. This is located on the main Lead Lag Configuration screen.

How to get there – Lead Lag Leader Configuration Screen

Home Page <Press Lead/ Lag Leader button> Lead/ Lag Screen <Press Configure button> Lead/ Lag Leader Configuration Screen

Job L - Building Automation or Multiple Boiler Control Thermostat Demand

(This is a Lead Lag function – do this once for the whole Lead Lag system. Make the connections to the controller set up as the Lead Lag Leader – usually the Primary controller on Boiler 1.)

1. Supply the controller which is acting as the Lead Lag Leader (usually the Primary controller on Boiler 1) with a thermostat closure from the Building Automation System or multiple boiler control. Connect to terminals 5 and 6 on TB7.
2. Adjust the Lead Lag Central Heat setpoint.

How to get there – Lead/ Lag Central Heat Setpoint

Home Page <Press Lead/ Lag Leader button> Lead/ Lag Screen <Press Configure button> Lead/ Lag Leader Configuration Screen

Line 2 = CH Setpoint

Note - The manufacturer offers BMS Controllers to allow connections to BACnet, LON, and other communications protocols. See Section 9.6. For Wiring Connections See Figure 18 on page 36

Job M - Building Automation or Multiple Boiler 4-20 mA Setpoint Control

(This is a Lead Lag function – do this once for the whole Lead Lag system.)

In this type of installation, the CH Setpoint is changed or modulated by a source outside of the boiler. The low limit of the 4-20 mA signal (4 mA) sets the low limit of the setpoint, and the high limit of the 4-20 mA signal (20 mA) sets the high limit of the setpoint.

1. Supply the controller which is acting as the Lead Lag Leader (usually the Primary controller on Boiler 1) with the 4-20 mA input


from the Building Automation System or multiple boiler control. Connect to terminals 3 and 4 on TB7.

2. On the Lead Lag Leader settings, change the setpoint source to 4-20 mA.

How to get there – Lead/ Lag Setpoint Control

Home Page <Press Lead/ Lag Leader button> Lead/ Lag Screen <Press Configure button> Lead Lag Leader Configuration Screen <Press Advanced Settings button> <Press Left- or right-arrow button> Central Heat

Setpoint Source = 4-20 mA

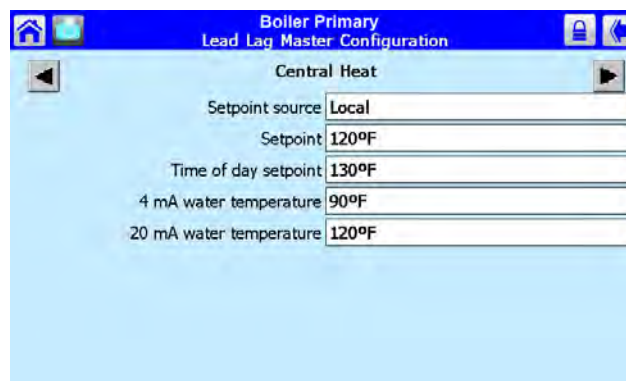

Menu 60. Lead Lag Central Heat Configuration

3. Change the 4 mA water temperature to match the lowest water temperature setting on the Building Automation System or multiple boiler control.
4. Change the 20mA water temperature to match the highest water temperature setting on the Building Automation System or Multiple boiler control.

Note - Manufacturer offers “gateways” to allow connections to BACnet, LON, and other communications protocols. See Section 9.6. For Wiring Connections See Figure 18 on page 36

Job N - Building Automation or Multiple Boiler 4-20 mA Modulation Control

(This is an individual function – do this on each of the controls.)

In this type of installation, the fan speed of each boiler is changed or modulated by a source outside of the boiler. All active burners must operate at the same modulation rate while operating. The system will not operate correctly if some of the burners are being asked to operate at full rate while other burners are operating at minimum rates.


Note - The system can also operate using 0 - 10V dc using a converter (Manufacturer part number CA006100.)

1. On each controller in the system, check terminals 3 and 4 on TB6 to ensure that the System sensor is not connected. (For this type of operation, the Lead Lag system is disabled.)
2. Connect the 4-20 mA input to each controller in the system.
 - On the Primary controller in each boiler, connect to terminals 3 and 4 on TB7.
 - On the Secondary controller in each boiler, connect to terminals 7 and 8 on TB7.
3. Enable a central heat call for each control on the system. This function must be set up for each controller separately. This function operates outside of the Lead Lag system.

How to get there – Central Heat Enable

Home Page <Press the icon for one of the controllers> Unit Primary Screen <Press Configure button> Primary Configuration Menu <Select line - CH Central Heat Configuration>

4. Menu 61 shows the setup screen.

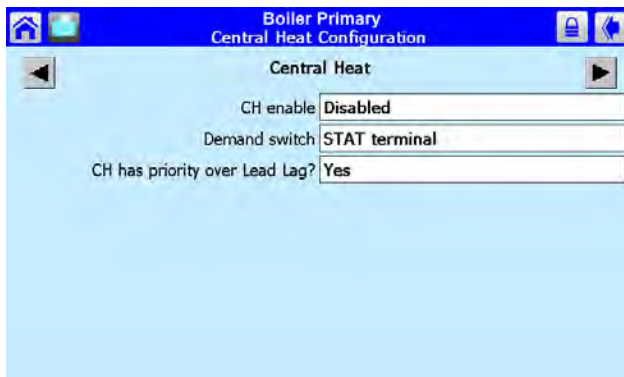

Menu 61. Central Heat Configuration

5. Enable the Central Heat function on the top line. Give the CH function the priority using the lower line.

Note - Manufacturer offers “gateways” to allow connections to BACnet, LON, and other communications protocols. See Section 9.6.

Job O – Combustion Setup Procedure

(These are individual functions. Do the combustion setup for each of the burners.)

In this section, we will explain how to set up the gas valve so both burners in each boiler run efficiently at both the High Fire and Low Fire conditions. As we said, a boiler includes two controllers (Primary and Secondary), which control two burners (Primary and Secondary). See Figure 40. Each burner has a separate gas valve, and each of these must be

set up separately. Here's a quick summary of the procedure:

- You shut off one controller/burner combination, and work with the other.
- You set the working burner to run at High Fire, and adjust the gas valve to get the correct CO₂ reading.
- Next you set the same burner to run at Low Fire, and make another adjustment on the gas valve to get the desired CO₂ reading.
- When you are through, you shut off the controller/burner you have been working with, turn on the other controller/burner, and make the same adjustments there.


WARNING

Improper adjustment may lead to poor combustion quality, increasing the amount of carbon monoxide produced. Excess carbon monoxide levels may lead to personal injury or death.

Required tools: Screwdrivers, Torx bits, combustion analyzer

In the rest of this section we will explain the setup procedure in more detail.

1. On the gas valve for the Primary burner on the boiler, locate the adjustments for the high fire CO₂ and low fire CO₂.
Table 25 lists the CO₂ readings you should see at high fire and low fire.
2. To start the setup, turn on the call for heat.
3. Before you can set up the Primary burner, you must shut off the Secondary burner. Go to the 'home' screen on the display. Press the icon for the control labeled Secondary.

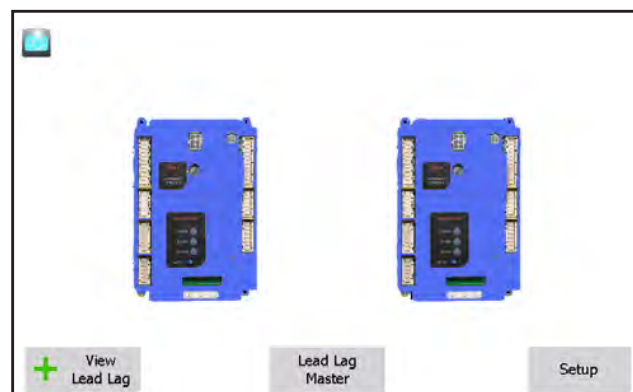

Menu 62. 'home' screen

4. The system will present the Status Summary screen.


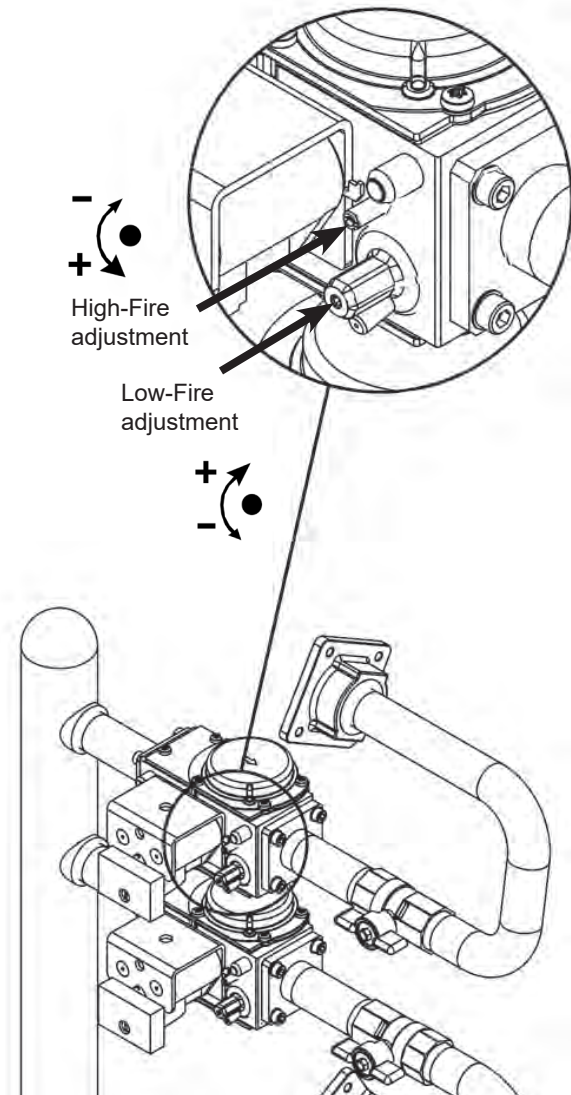


Figure 40. High and Low Fire Adjustments on Gas Valve - NT 1000 and NT 1200

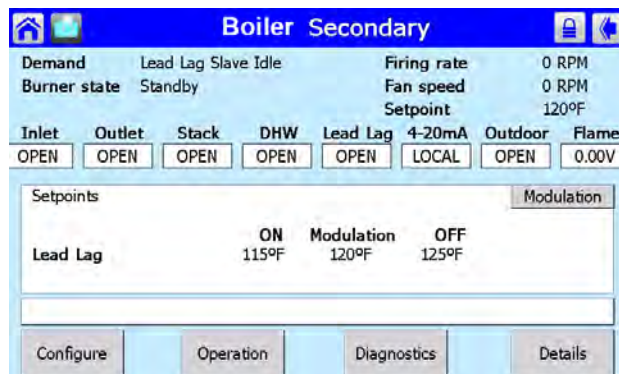

Menu 63. Status Summary Screen

- Press the Operation button. The system will present the Operation screen for the Secondary burner.


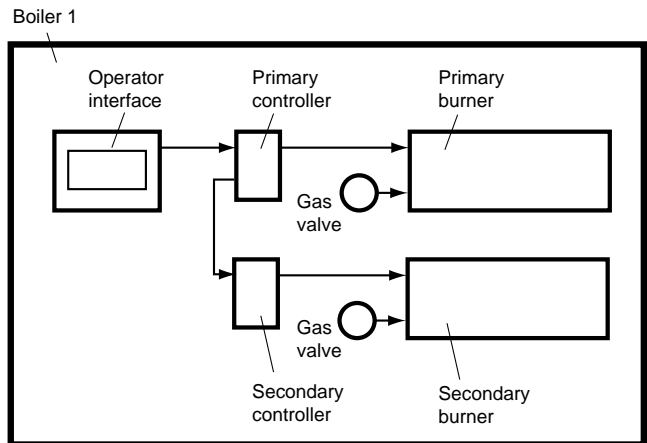



Figure 39. Primary and Secondary Burners in a Boiler

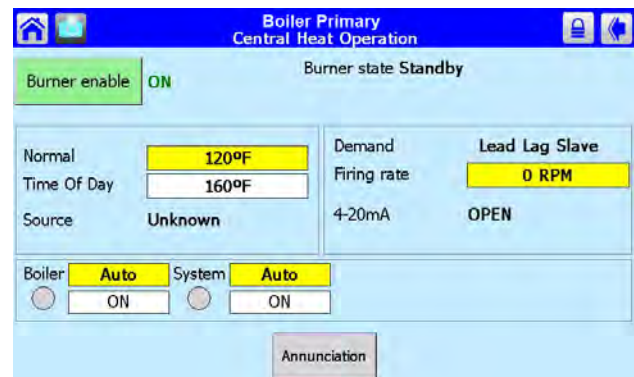

Menu 64. Operation Screen


Press the Burner Enable switch in the upper left-hand corner of the screen. Since you selected the Secondary control for this boiler, this will turn off the Secondary burner. The system will ask you to log in as you do this.

- Now you can work with the Primary burner for this boiler. Press the Home icon to go back to the 'home' screen on the display (Fig. 100). Press the icon for the control labeled Primary.
- The system will present the Status Summary screen for the Primary burner. Press the Operation button.
- The system will present the Operation screen for the Primary burner.

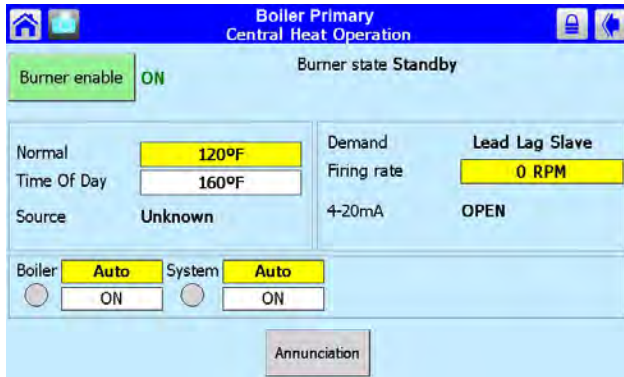

Menu 65. Operation Screen

9. You can change the fan speed of the burner by adjusting the value entered for Firing Rate on the right side of the display. (Remember, a moment ago you selected the Primary control for this boiler, so this change will only affect the Primary burner.) Press the yellow box beside the Firing Rate label.
10. The system will ask you to log in using a password. Enter the installer-level password, then press OK.
11. Press the box for Firing Rate again. The controller will present the Manual Firing Rate screen shown in Menu 66.

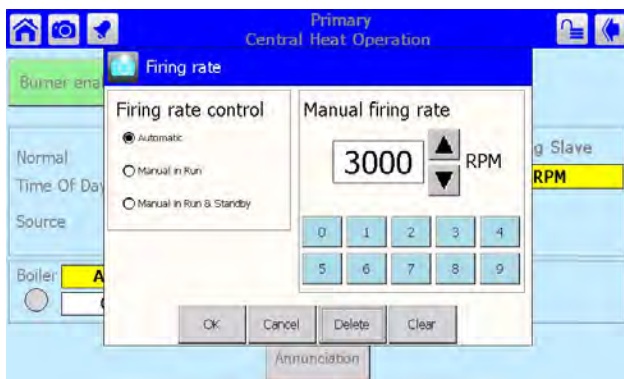

Menu 66. Manual Firing Rate

12. Notice the three options on the left side of the screen:

Auto -

The firing rate will be set automatically by the controller, based on the heat load. Set this item to Auto at the end of the test.

Manual in Run -

The Manual in Run control will only set the fan speed when the control has proven flame and the unit has entered the Run mode.

Manual in Run and Standby -

Using this setting, the manual control will set the fan speed whether the boiler is operating or not.

For this test, select Manual in Run.

13. Type in a value for high fire RPM. Enter 8000 RPM. (The actual RPM will not go this high – the control will limit the fan speed to the maximum set at the factory.)

By using the manual control, and entering a high RPM value, this forces the burner to run at full combustion so you can adjust the gas valve for the correct CO₂ output.

Figure 41 shows the adjusting points on the gas valve. Adjust the High Fire screw to get the proper CO₂ level for high fire. See Table 25. To raise the high fire CO₂ level, turn the High Fire adjustment screw counter-clockwise. To lower the high fire CO₂ level, turn the screw clockwise.

(Make the adjustment in small steps of 1/8 turn to avoid “overshooting” the correct setting. The valve is built with a bit of “backlash.” This makes it appear that changing the adjustment does not change the CO₂ level when you first stop turning the control in one direction, and start turning it the other way. Once the backlash has been taken up, the control will be quite sensitive.)

14. Repeat step 13, except this time set the fan speed RPM to 1200rpm. (Again, the actual RPM will not go this low – the control will limit the fan speed to the minimum set at the factory.) This will force the boiler to operate in low fire. Adjust the Low Fire screw so the CO₂

Model	Gas Type	High Fire CO ₂	Low Fire CO ₂	Pressure Differential
1,000	Natural	8.5% ± 0.2	0.5% lower than high fire CO ₂	0.5" to 1.2" wc*
	Propane	9.5% ± 0.2	0.5% lower than high fire CO ₂	0.5" to 1.2" wc*
1,200	Natural	9.0% ± 0.2	0.5% lower than high fire CO ₂	0.5" to 3.6" wc*
	Propane	9.5% ± 0.2	0.5% lower than high fire CO ₂	0.5" to 3.6" wc*

* - Only check the pressures if there are problems getting the CO₂ and CO values in range.

Table 25. CO₂ Range and Pressure Differential

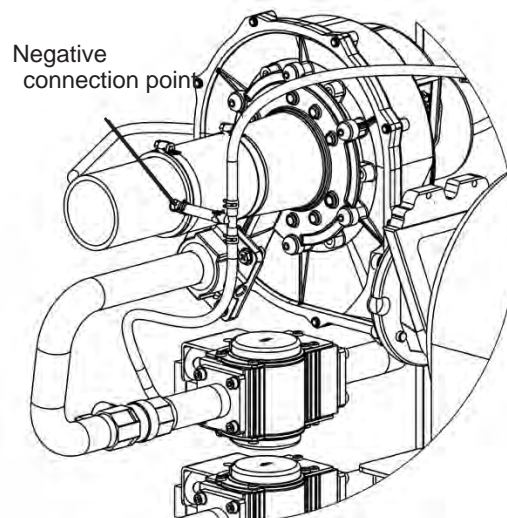
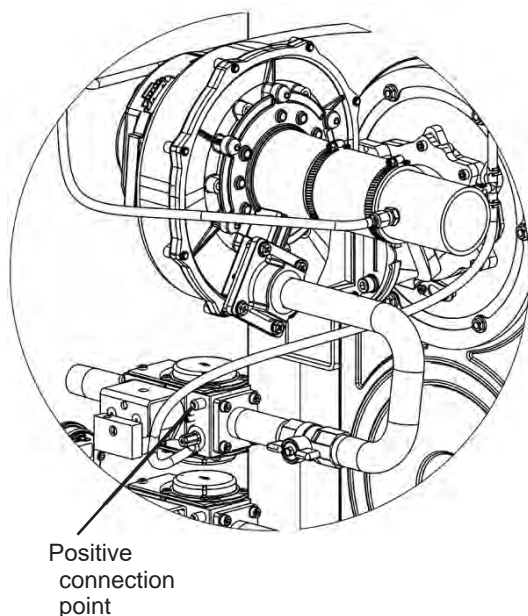


Figure 41. Connections for Pressure Gauge, NT 1000 and NT 1200

is 0.5% lower than the high fire CO_2 . To raise the low fire CO_2 , turn the Low Fire adjustment screw clockwise. To lower the low fire CO_2 , turn the screw counter-clockwise.

15. The adjustment you made for the Low Fire setting could affect the High Fire setting, so you need to re-check the High Fire setting. Go back to the Operations screen and set the Firing Rate back to 8000 RPM. The CO_2 should still be about at the level listed in Table 26 on page 101. If the CO_2 is not correct, repeat the steps listed above.
16. Set the Firing Rate back to 1200 RPM, and re-check the CO_2 during Low Fire.
17. Once the CO_2 values are correct for both High Fire and Low Fire, go back to the Operation screen and select Automatic operation. At this point, you have set up the Primary burner for this boiler.
 - On the 'home' screen, press the icon for the Primary controller.
 - On the Status Summary screen, press the Operation button.
 - On the Operation screen, turn off the

Primary burner by pressing the Operation Enable button.

- On the 'home' screen, press the icon for the Secondary controller.
- On the Status Summary screen, press the Operation button.
- On the Operation screen for the Secondary burner, press the yellow box for the Firing Rate. Login using the installer-level password, then press OK.
- Now you can change the Firing Rate entry for the Secondary burner. Enter 8000 RPM for the High Fire value. Adjust the High Fire screw to get the CO_2 level listed in Table 26.
- Set the Firing Rate to 1200rpm. Adjust the Low Fire screw so the CO_2 level reaches the CO_2 level listed in Table 26.
- Re-check the High Fire setting at 8000 RPM. The CO_2 should still be about 8.5% or 9.0%, depending on the model size.
- Re-check the CO_2 during Low Fire at 1200 RPM.
- Once the CO_2 values are correct for both High Fire and Low Fire, go back to the Operation screen for the Secondary burner and select Automatic operation. At this point, you have set up the Secondary burner for this boiler.
- Go back to the 'home' screen and press the icon for the Primary control. On the Status Summary screen, press the Operation button. On the Operation screen, press the Burner button to turn on the Primary burner.

19. Once both burners are set up properly, operate both burners together as described below, and check the CO₂ levels with the unit operating at high fire and at low fire. The final CO₂ values at high fire should be as listed in Table 25 $\pm 0.2\%$. At low fire, the CO₂ should be about 0.5% lower than the high fire CO₂ reading. (The offset is more important than the actual CO₂ value)

Monitor the CO₂ and CO levels for one complete operating cycle. The CO should never be more than 150 ppm. The CO₂ level should also track between the high and low limits listed in the table.

Setting the fan speed RPMs for both burners operating together -

- It is important that both burners operate at the same fan speed. Before changing the fan speeds, turn off the call for heat.
- Set the fan speed for each burner separately, using the procedure we described earlier - steps 6 through 11 for the Primary burner, and step 18 for the Secondary burner. On each burner, enter a value of 8000 RPM for the high fire test.
- Once you have set both burners to run at 8000 RPM, turn on the call for heat, and check the results as described above.
- Turn off the call for heat, and set both burners to run at 1200 RPM for low fire. Turn on the call for heat, and check the performance again.

20. If the CO₂ doesn't track between the correct limits, there is a possibility that one of the burners has not been set up correctly. If this occurs, repeat the setup procedure to confirm that each burner is set up correctly. If this condition persists, call the factory for assistance. Before calling, be prepared to supply the factory with the conditions at the site where the boiler is installed - for example, vent lengths, gas supply pressures with all boilers operating, CO₂ and CO for each burner individually and together, etc. Be able to describe the ignition characteristics and the color of the flame seen through the sight glass of each burner.
21. When troubleshooting a burner setup, it is sometimes helpful to watch the pressure differential between the gas inlet and outlet. To measure this, install a differential pressure gauge capable of reading negative 0.01 inches W.C. (0.002kPa). Attach the gauge to the positive and negative ports shown in Fig. 104. When the testing is complete, remove the

pressure gauge, and plug the ports. Repeat the test setup on each burner.

Job P - Setting the Date and Time on the System Display

(This is a Lead Lag function – do this once for the whole Lead Lag system. Use the controller set up as the Lead Lag Leader – usually the Primary controller on Boiler 1.)

The display acting as the Lead Lag Leader includes an internal clock, which keeps track of the date and time. This setting is important, because all of the log entries for any Lockouts and Alerts include time listings. If the Date and Time setting for the Lead Lag Leader is not correct, the listings in the Lockout and Alert logs will be incorrect.


The current version of the display does not include a battery backup. This means that, if the boiler which includes the display loses power, the Date and Time setting for the system will be lost. (Any Faults or Alerts recorded before the boiler lost power will have the correct date and time listed.)

For this reason, it is important that you set the Date and Time in two situations:

- When you first set up the Lead Lag system.
- After each occasion when the power to the boiler is interrupted.

Here is the procedure:

1. Start at the 'home' screen.

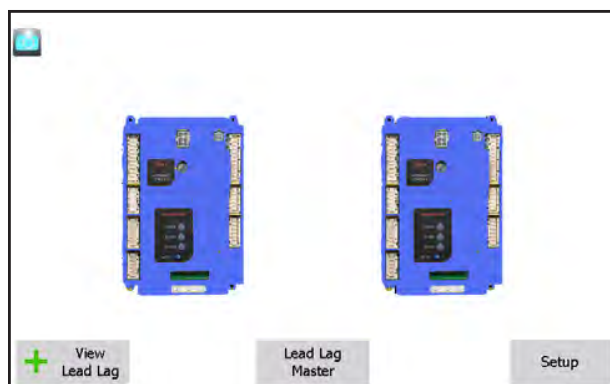


Menu 67. 'home' screen

- Press the Setup button. The system will present the Setup screen.




Menu 68. Setup Screen

- Press the Display Setup button. The Display Setup screen is shown in Fig. 106.

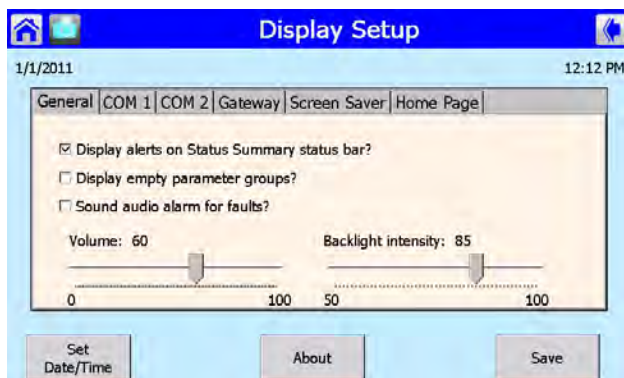

Menu 69. Display Setup Screen

- Select Date and Time. Figure 107 shows the setup screen.

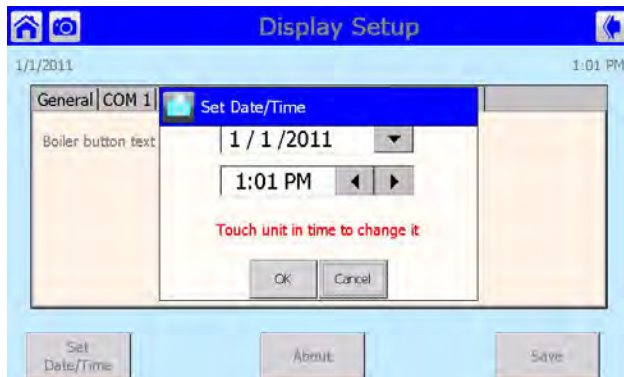

Menu 70. Date and Time

9.E Setup for Domestic Hot Water on a Lead Lag System

There are three ways that a Unit system can be set up to provide domestic hot water. Two of them involve the use of an indirect water heater. In a system including an indirect water heater, hot water is circulated through a piping loop which runs through an insulated water tank. Heat from the water in the loop is transferred to the water in the tank, and the heated water in the tank is used as domestic hot water.

Setup Type 1 –

All of the boilers in the system can be set up to react together if there is a call for domestic hot water. This arrangement can be used for Boiler or Heater units. When Boiler units are used in this kind of setup, the demand for domestic hot water (DHW) is given priority over the demand for central heat (CH). If the system is producing heat for a CH demand, and a call for DHW arrives, all of the boilers will stop producing heat for CH, and the whole system will respond to the DHW demand. The DHW pump will start circulating water through the loop in the indirect water heater. The System sensor is used to control modulation in this configuration, so sensor placement is critical.

This arrangement can be cumbersome if the demand for domestic hot water is a lot less than the demand for central heating. This can result in multiple boilers “idling” as they wait for the DHW demand to be satisfied.


Caution

For Boiler units - This arrangement can only be used in applications where all of the components in the system are rated for both the maximum hydronic temperature and the maximum DHW outlet temperature.

The setup for this is all done from within the Lead/Lag system. You will need to set up an LL CH setpoint and a separate LL DHW setpoint, and assign the priority to the DHW demand.


The input from the aquastat is brought to terminals 5 and 6 on TB6 on the controller which is acting as the Lead Lag Leader. (Usually, this is the Primary controller on Boiler 1.)

1. From the 'home' screen, press the View Lead Lag button.

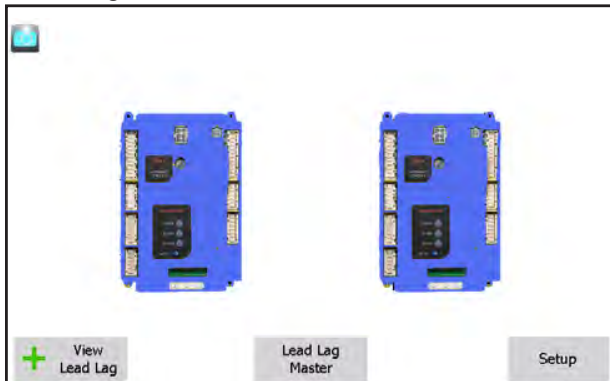


Menu 71. 'home' screen

2. Press the button for Lead Lag Leader.

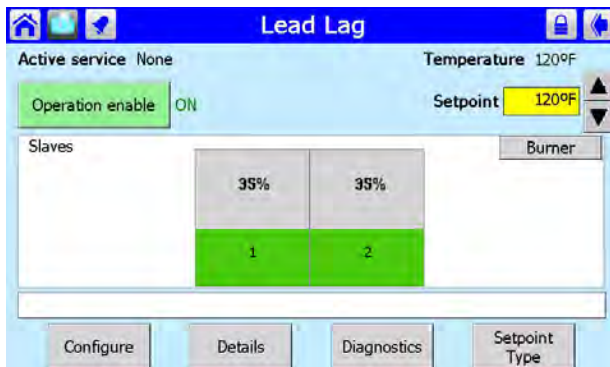

Menu 72. Lead Lag Leader Screen

3. Press the Configure button. The display will present the Lead Lag Leader Configuration Screen.

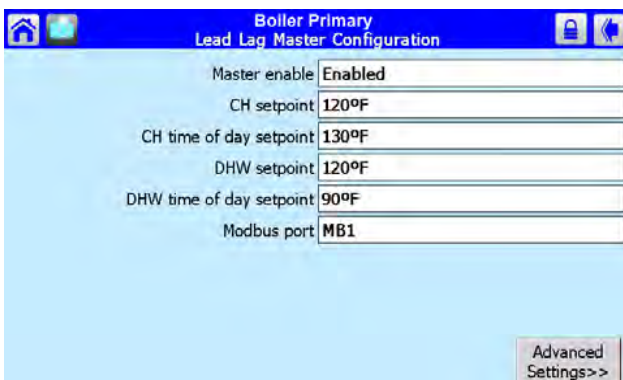


Menu 73. Lead Lag Leader Configuration

Entries on this screen allow you to set the CH setpoint and DHW setpoint.

4. Press the button for Advanced Settings. This leads to a "ring" of related screens, and you can scroll through the list by pressing one of

the left- or right-arrow symbols. Press the left-arrow or right-arrow until you see the Domestic Hot Water screen.

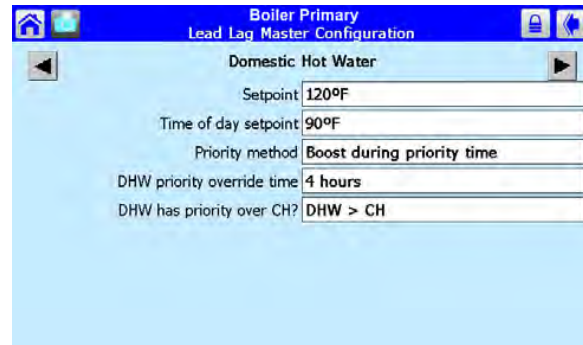

Menu 74. Domestic Hot Water

An entry on this screen allows you to give priority to the DHW function.

Setup Type 2 –

As a second option, a system can be set up so that only one or two boilers respond to a demand for domestic hot water. This allows the other boilers in the system to continue to service the demand for central heating. This system is more flexible, but the setup is a bit more complicated:


- All of the boilers are tied together in the normal way, using the Modbus connections.
- The DHW demand must switch over a whole boiler (including both burners), not just a single burner. Both burners in a boiler should always use the same setpoint.
- The plumbing must be set up so that, during DHW demand, each boiler used for DHW is pumped by the DHW pump, and the boiler pump is turned off. This will keep the temperature zones separate.
- Each of the boilers that will handle DHW is wired with an input from the aquastat used to indicate DHW demand. The aquastat demand should be jumpered from the Primary control in each boiler (terminals 5 and 6 on TB6 to terminals 7 and 8 on TB6).
- The LL CH setpoint used by all of the boilers is set in the normal way, working from the Lead Lag section of the software.
- On each of the boilers used for DHW, priority is given to the DHW function. Because this affects individual boilers, rather than the whole system, this part of the setup is done from outside the Lead Lag system.
- On each of the boilers used for DHW, the two

burners in that boiler will operate in Lead Lag mode. You can think of each of these boilers as a separate two-burner Lead Lag system.

Once a system is set up this way, if there is no DHW demand, the system will operate like any other Lead Lag system. If a demand for DHW arrives, the boilers used for DHW will stop providing heat for central heat. On the DHW boilers, the pump(s) for the DHW loops will start, and those boilers will provide heat to just the indirect water heaters.

Because this affects an individual boiler, and not the whole Lead Lag system, the configuration is done from outside the Lead Lag section of the software. Remember that the boiler includes two controller/burner combinations. You have to set the DHW priority on both of the controller/burners.

1. Start at the 'home' screen. Press the icon for the controller you want to configure.
2. The Status Summary page for that controller will appear. Press the Configure button.
3. The system will present the Configuration Menu screen. Scroll down until you see the line labeled "DHW Priority vs CH."

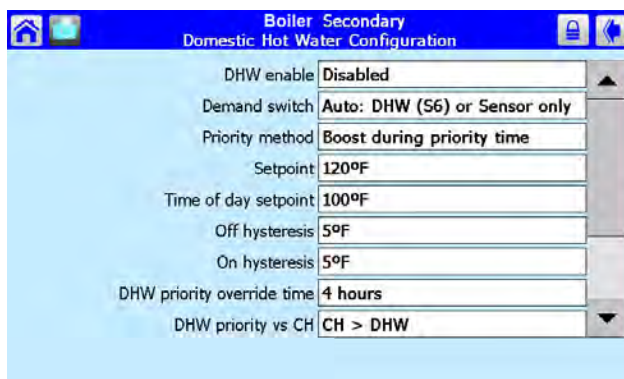

Menu 75. DHW Configuration Screen

4. Select that line by pressing it. If you want to change the DHW priority, the system will ask you to log in using the installer-level password. For this kind of installation, the entry should be "DHW> CH."
5. Go to the line for "DHW Priority vs Lead Lag." For this kind of installation, the entry should be "DHW> LL."
6. Remember to change the settings on the other controller/burner for this boiler.


Setup Type 3 –

The third possibility is to set up a single boiler that just provides domestic hot water. The model Heater unit is designed for this kind of "volume water" service. The water is heated as it moves through the boiler, and that same water is supplied directly for domestic

use. This is really like a conventional Lead Lag setup, except priority is given to domestic hot water, and there is no input for the central heating function.


- On each boiler which will operate this way, connect a DHW sensor or the input from the aquastat to terminals 5 and 6 on TB6. Be sure there is no thermostat connected (check terminals 5 and 6 on TB7).
- The two burners in each boiler will operate in the Lead Lag mode. You can think of each boiler as a separate two-burner Lead Lag system.
- The setpoint used is the LL DHW setpoint, set as part of the Lead Lag system.
- In the Lead Lag setup, DHW is given priority.

1. Start at the 'home' screen

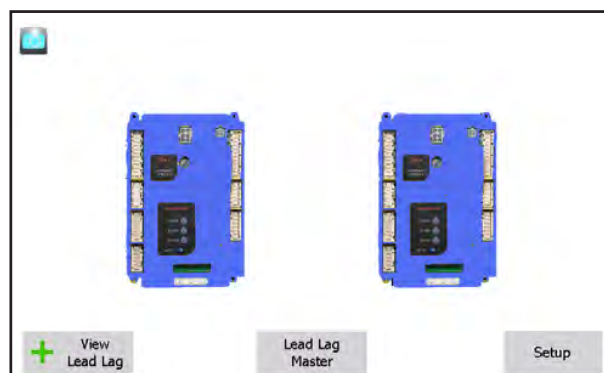

Menu 76. 'home' screen

2. Press the Lead Lag Leader button.

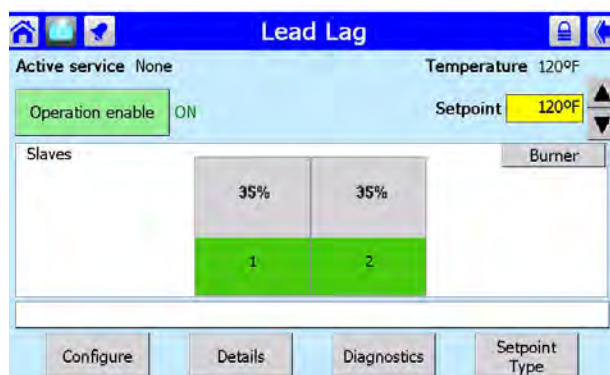

Menu 77. Lead Lag Leader Screen

- Press the Configure button. The display will present the Lead Lag Leader Configuration Screen (Menu 78). Set the DHW setpoint on this screen.

Master enable	Enabled
CH setpoint	120°F
CH time of day setpoint	130°F
DHW setpoint	120°F
DHW time of day setpoint	90°F
Modbus port	MB1

Advanced Settings>>

Menu 78. Lead Lag Leader Configuration

- Press the button for Advanced Settings. This leads to a “ring” of related screens, and you can scroll through the list by pressing one of the left- or right-arrow symbols. Press the left-arrow or right-arrow until you see the Domestic Hot Water screen.

Setpoint	120°F
Time of day setpoint	90°F
Priority method	Boost during priority time
DHW priority override time	4 hours
DHW has priority over CH?	DHW > CH

Menu 79. Domestic Hot Water

Set the last line to give priority to the DHW function.


9.F Gateway Connections to a Building Automation System

These units can be controlled and monitored through the included Modbus ports. The manufacturer offers the “Gateway Controller” to allow BACnet, LON, and other communications protocols. The Modbus wiring should be completed according to the instructions in this manual. See Figure 18 on page 36

For Configuring Building Automation on Multiple Boilers, See Jobs M and N on page 77


For additional information on setting up Modbus and other communication protocols, contact the factory.

To configure for a Gateway, follow these setups in your lead boiler.

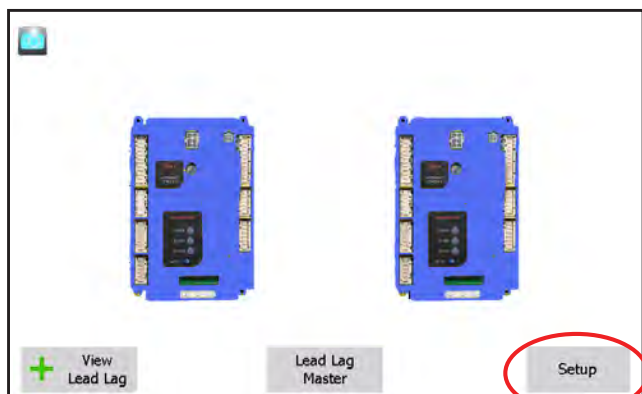


Menu 80. Home Screen

Starting at the Home Screen, tap onto the Display Setup button on the bottom right of the lead boilers screen.

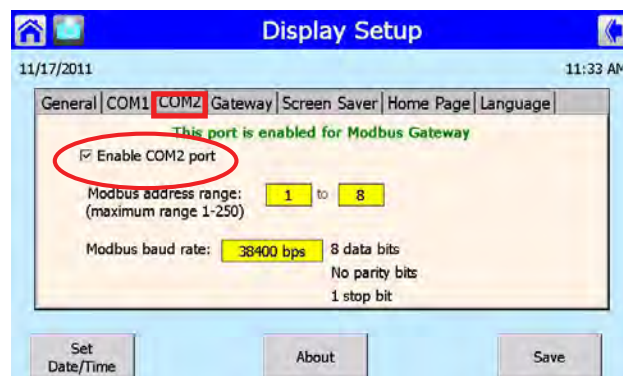


Menu 82. Display Setup -COM2

Select the COM2 tab and make sure that the COM2 port is enabled.

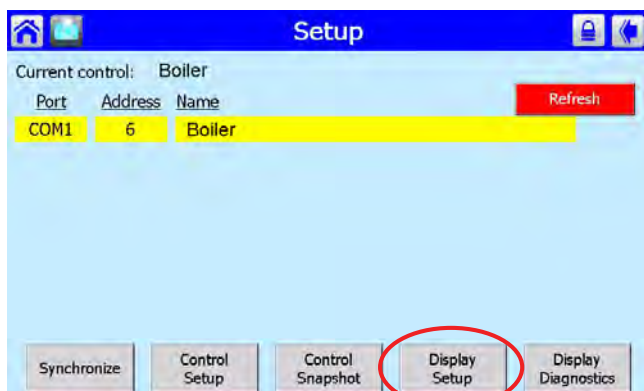

Menu 81. Setup Menu

From the Setup menu, tap the Display Setup button.

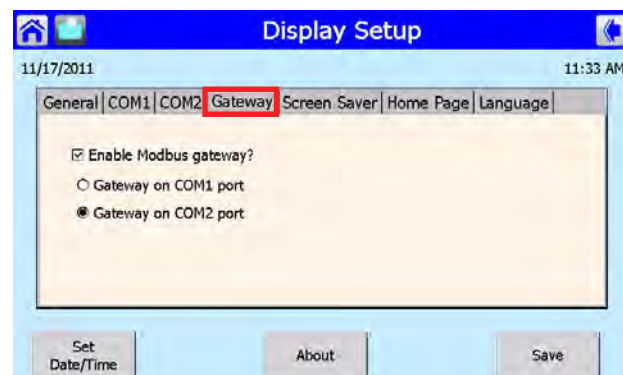

Menu 83. Display Setup -Gateway

Select the Gateway tab and make sure that the Gateway on COM2 port is enabled. Then return to the Homescreen.

9.G Installer Parameters

This is a list of all of the parameters which can be accessed using the Installer password.

Label	Description	How to Reach
4 mA water temperature	If a 4 – 20 mA input is used to adjust the setpoint, this entry sets the low limit of the control range. (In the example shown here, an input of 4 mA would result in a setpoint of 90°F.)	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button <Central Heat screen>
20 mA water temperature	If a 4 – 20 mA input is used to adjust the setpoint, this entry sets the high limit of the control range. (In the example shown here, an input of 20 mA would result in a setpoint of 120°F.)	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button <Central Heat screen>
Anti Short Cycle Time	This can be set to prevent the system from cycling on and off quickly if the heat demand is near the setpoint and changes quickly.	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select System Configuration <System Configuration screen>
Boiler pump control	The Boiler pump (Pump A) can be turned on manually, or it can be set to operate automatically. If it is turned on, then it remains on until the control is changed back to Auto. In Auto mode it operates according to the demand and overrun time."	<'home' screen> Select a controller <Status Summary screen> Configuration button <Pump Configuration> Left- or Right- arrow buttons <Boiler Pump screen> Control Settings button
Boiler Pump Cycle Count	Boiler pump cycle count. Can be written to a new value (e.g. if the pump or controller is replaced).	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select Statistics Configuration line
Boiler Name	This parameter allows the installer to give each controller a unique name.	<'home' screen> Select a controller <Status Summary screen> Configuration button <Configuration Menu> System ID and Access
Burner Cycle Count	This is incremented on each entry to Run. It can be written to a with a new value if the burner or controller is replaced.	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select Statistics Configuration line
Burner Enable Switch	This parameter enables or disables the burner control. When it is off, the burner will not fire.	<'home' screen> Select a controller <Status Summary screen> Operation button <Operation screen>
Burner Run Time	This measures the time spent in the Run state. It can be written to with a new value if the burner or controller is replaced.	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select Statistics Configuration line
CH (Central Heat) D gain	This gain is applied to the Differential term of the PID equation for the CH loop.	<'home' screen> Select a controller <Status Summary screen> Configuration button <Central Heat Configuration> Arrow keys <Modulation screen>
CH (Central Heat) Enable	This parameter determines whether the Central Heat loop is enabled or disabled. When it is disabled, heat demand caused by the input assigned to the CH loop is ignored. It may be disabled to turn it off temporarily, or because the application does not use this feature.	'home' screen/ Select controller/ Status Summary screen/ Configuration button/ Central Heat Configuration/ Arrow keys/ Central Heat screen
CH (Central Heat) Frost Protection Enable	The CH frost protection feature can be enabled to run a pump (or pumps) and possibly fire the burner whenever the CH input sensor is too cold.	'home' screen/ Select controller/ Status Summary screen/ Configuration button/ Anti-Condensation Configuration/

Label	Description	How to Reach
CH (Central Heat) has priority over LL (Lead Lag)	This controls whether a local Central Heat demand has priority over the control asserted by the LL Leader, when this controller is enabled as a follower.	If Lead Lag enabled – <'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button Left- and Right-arrow buttons <Domestic Hot Water screen>
CH (Central Heat) I gain	This gain is applied to the Integral term of the PID equation for the CH loop.	<'home' screen> Select a controller <Status Summary screen> Configuration button <Central Heat Configuration screen> Left- and Right arrow buttons <Modulation screen>
CH (Central Heat) Modulation Sensor	This selects the sensor used for modulation and burner demand for the CH loop.	<'home' screen> Select a controller <Status Summary screen> Configuration button <Central Heat Configuration> Left- and Right-arrow buttons <Modulation screen>
CH (Central Heat) Outdoor Reset Low Water Temperature	This parameter provides the CH Outdoor Reset setpoint when the outdoor temperature is at or above the maximum specified by the Max. Outdoor Temperature.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Outdoor Reset screen>
CH (Central Heat) ODR (Outdoor Reset) Max. Outdoor Temperature	This parameter determines the maximum outdoor temperature for the CH outdoor reset graph. At or above the maximum outdoor temperature, the water temperature setpoint will be at the low water temperature.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Outdoor Reset screen>
CH (Central Heat) Off Hysteresis	The off hysteresis is added to the CH setpoint to determine the temperature at which the burner demand turns off.	<'home' screen> Select controller <Status Summary screen> Configuration button <Central Heat Configuration> Arrow keys <Modulation screen>
CH (Central Heat) On Hysteresis	The on hysteresis is subtracted from the CH Setpoint to determine the temperature at which the burner demand turns on.	<'home' screen> Select a controller <Status Summary screen> Configuration button <Central Heat Configuration screen> Arrow keys <Modulation screen>
CH (Central Heat) Outdoor Reset Enable	If outdoor reset is enabled, then the current outdoor temperature is used to determine the setpoint by interpolation using the CH Setpoint (or the CH Time-Of-Day Setpoint if the Time-Of-Day feature is on), the low water temperature, and the min. and max. outdoor temperatures.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Outdoor Reset screen>
CH (Central Heat) P gain	This gain is applied to the proportional term of the PID equation for the CH loop.	<'home' screen> Select a controller <Status Summary screen> Configuration button <Central Heat Configuration screen> Arrow keys <Modulation screen>
CH (Central Heat) Pump Control	The CH pump (System pump – Pump C) can be turned on manually, or it can be set to operate automatically. If it is turned on then it remains on until changed back to Auto. In Auto mode it operates according to the demand sources listed above and the overrun time.	<'home' screen> Select a controller <Status Summary screen> Configuration screen <Pump Configuration screen> Left- or Right- arrow buttons <System Pump screen> Control Settings button

Label	Description	How to Reach
CH (Central Heat) Setpoint	This setpoint is used when the time-of-day input is off. If the outdoor reset function is active, this setpoint provides one coordinate for the outdoor reset curve. See the section for the CH Outdoor Reset parameter.	If Lead Lag enabled – <'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen>
CH (Central Heat) "Time of Day" Setpoint	This setpoint is used when the time-of-day input is on. If the outdoor reset function is active, this Setpoint provides one coordinate for the shifted outdoor reset curve, because the time-of-day switch is on. See the section for the CH Outdoor Reset parameter."	If Lead Lag enabled – <'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen>
DHW (Domestic Hot Water) D Gain	This gain applied to the Differential term of the PID equation for the DHW loop.	<'home' screen> Select a controller <Status Summary screen> Configure button <Domestic Hot Water Configuration screen>
DHW (Domestic Hot Water) Enable	This parameter determines whether the Domestic Hot Water loop is enabled or disabled. When it is disabled, the demand caused by the DHW sensor is ignored. It may be disabled to turn it off temporarily or because the application does not use this feature.	<'home' screen> Select a controller <Status Summary screen> Configure button <Domestic Hot Water Configuration screen>
DHW (Domestic Hot Water) has priority over CH (Central Heat)	This parameter determines the priority of Domestic Hot Water vs. Central Heat call-for-heat, when both of these are enabled and active. (The DHW priority also may shift for a period of time, as specified by DHW Priority time and method parameters.)"	<'home' screen> Lead Lag Leader <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- and Right- arrow buttons <Domestic Hot Water screen>
DHW (Domestic Hot Water) I gain	This gain applied to the Integral term of the PID equation for the DHW loop.	<'home' screen> Select a controller <Status Summary screen> Configure button <Domestic Hot Water Configuration>
DHW (Domestic Hot Water) off hysteresis	The off hysteresis is added to the Domestic Hot Water Setpoint to determine the temperature at which the DHW burner demand turns off.	<'home' screen> Select a controller <Status Summary screen> Configure button <Domestic Hot Water Configuration screen>
DHW (Domestic Hot Water) on hysteresis	The on hysteresis is subtracted from the Domestic Hot Water Setpoint to determine the temperature at which the DHW burner demand turns on.	<'home' screen> Select a controller <Status Summary screen> Configure button <Domestic Hot Water Configuration>
DHW (Domestic Hot Water) P gain	This gain applied to the Proportional term of the PID equation for the DHW loop.	<'home' screen> Select a controller <Status Summary screen> Configure button <Domestic Hot Water Configuration screen>
DHW (Domestic Hot Water) priority override time	If this parameter is non-zero then a Domestic Hot Water demand will shift its priority vs. other demand sources according to the specified time. The priority override timing is reset when demand from the DHW source turns off.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button <Domestic Hot Water screen>

Label	Description	How to Reach
DHW (Domestic Hot Water) pump control	The DHW pump (Pump C) can be turned on manually, or it can be set to operate automatically. If it is turned on then it remains on until changed back to Auto. In Auto mode it operates according to the DHW demand, the start delay timer and the overrun time.	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Pump Configuration/ Left- or Right- arrow buttons <DHW Pump screen> Control Settings button
DHW (Domestic Hot Water) pump cycle count	This can be written to a new value if the pump or controller is replaced.	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select Statistics Configuration line
DHW (Domestic Hot Water) Setpoint	This setpoint is used for Domestic Hot Water whenever the Time-Of-Day switch is off or not connected (unused).	If Lead Lag enabled – <'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen>
DHW (Domestic Hot Water) TOD (Time of Day) Setpoint	This setpoint is used for Domestic Hot Water when the Time-Of-Day switch is on.	If Lead Lag enabled – <'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen>
Flap valve controller ID	Each flap valve has a unique ID number. On a system with 4 boilers, there would be 8 flap valves, numbered 1 through 8.	<'home' screen> Select a controller <Status Summary screen> Configure button <Flap Valve Configuration screen>
Lead lag CH outdoor reset enable	This line is used to turn on the Outdoor Reset function when the Lead Lag system is enabled.	If Lead Lag enabled – <'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Outdoor Reset screen>
Lead lag CH setpoint	This is the setpoint used for Central Heat when the Lead Lag system is enabled.	If Lead Lag enabled – <'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen>
Lead lag CH setpoint source	When Lead Lag is enabled, this sets the source of the System sensor input used to control the system. The options here are Local and 4-20 mA.	'home' screen/ View Lead Lag button/ Lead Lag screen/ Lead Lag Leader button/ Lead Lag Leader screen/ Configure button/ Lead Lag Leader Configuration screen/ Advanced Settings button/ Left- or Right- arrow buttons/ Central Heat screen
Lead lag CH TOD setpoint	This is a different setpoint used for Central Heat when the Lead Lag system is enabled and the input from the Time Of Day switch is "true."	If Lead Lag enabled – <'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen>

Label	Description	How to Reach
Lead lag D gain	This is part of the damping function ("Derivative") used when the controller interprets the input from the System sensor.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Modulation screen>
Lead lag DHW demand switch	This indicates source of the aquastat signal used to control the Domestic Hot Water loop.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Domestic Hot Water screen>
Lead lag DHW has priority over CH	Choose Central Heating priority or Domestic Hot Water priority.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Domestic Hot Water screen>
Lead Lag DHW priority override time	If Domestic Hot Water has priority, this sets how long the DHW loop will continue to have control after the DHW demand stops.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Domestic Hot Water screen>
Lead lag DHW setpoint	This is the setpoint used for Domestic Hot Water when the Lead Lag system is enabled.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen>
Lead lag DHW TOD setpoint	This is a different setpoint used for Domestic Hot Water when the Lead Lag system is enabled and the input from the Time Of Day switch is "true."	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen>
Lead lag I gain	This is part of the damping function ("Integral") used when the controller interprets the input from the System sensor.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Modulation screen>
Lead lag Leader enable/disable	One of the controllers must be set up as the Lead Lag Leader to supervise the Lead Lag system. Usually this is the Primary controller on Boiler 1. The Leader function must be disabled on all of the other controllers. See the section on "About Lead Lag."	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen>
Lead lag off hysteresis	When the Lead Lag function is enabled, the control system will not shut off the boilers until the temperature at the System sensor rises to the Lead Lag CH setpoint plus a hysteresis value (normally about 10°F).	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Modulation screen>

Label	Description	How to Reach
Lead lag on hysteresis	When the Lead Lag function is enabled, the control system will not fire the boilers until the temperature at the System sensor drops to the Lead Lag CH setpoint minus a hysteresis value (normally about 10°F).	If Lead Lag enabled – <'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen>
Lead lag P gain	This is part of the damping function ("Proportional") used when the controller interprets the input from the System sensor.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Modulation screen>
Lead Lag Follower Enable	Select Enable Follower for Built-in Lead Lag Leader. Be sure this is turned on for each controller in the system.	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select line for LL Follower Configuration <Lead Lag Follower Configuration screen>
Lead Lag Follower Sequence Order	Enter the position of this Follower in the sequence. Be sure to enter this for each Follower in the system.	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select line for LL Follower Configuration <Lead Lag Follower Configuration screen>
Lead Lag Follower Modbus Address	Each Follower must have a unique Modbus address. Be sure to enter this for each controller in the system.	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select line for LL Follower Configuration <Lead Lag Follower Configuration screen>
Lead Lag Outdoor Reset Enable	Enable = Outdoor Reset feature turned on	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Outdoor Reset screen>
Lead Lag Outdoor Reset low water temperature	This parameter is used as the normal setpoint above the point where Outdoor Reset stops adjusting for a higher outdoor temperature (the Max. Outdoor Temperature value)	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Outdoor Reset screen>
Lead Lag Outdoor Reset max outdoor temperature	If Lead Lag is enabled, this is the maximum outdoor temperature at which the Outdoor Reset feature will be active.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Outdoor Reset screen>
Lead Lag Outdoor Reset min outdoor temperature	If Lead Lag is enabled, this is the minimum outdoor temperature at which the Outdoor Reset feature will be active.	<'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons <Outdoor Reset screen>

Label	Description	How to Reach
Modbus address	Each controller must have a unique Modbus address.	<'home' screen> Setup button <Setup screen> Control setup button/ Change address button
Number of controllers in Flap Valve system	Each controller needs to know how many flap valves are included in the whole system. On a system with 4 boilers, there would be a total of 8 flap valves.	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select Flap Valve Configuration
Outdoor temperature source	This configures which source is used to provide outdoor temperature data: S5 sensor, S10 sensor, Enviracom sensor, or Modbus communication"	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select Sensor Configuration
System pump cycle count	System pump cycle count. Can be written to a new value (e.g. if the pump or controller is replaced).	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select Statistics Configuration
Temperature units	This parameter determines whether temperature is represented in units of Fahrenheit or Celsius degrees.	<'home' screen> Select a controller <Status Summary screen> Configure button <Configuration Menu> Select System Configuration
Lead Lag Warm Weather Shutdown Enable	When the Lead Lag system is enabled, and this feature is enabled, this feature will turn off the whole system (for Central Heating functions) when the outdoor temperature is warm enough. This prevents the system from running when there is no need for heat.	If Lead Lag enabled – <'home' screen> Lead Lag Leader button <Lead Lag Leader screen> Configure button <Lead Lag Leader Configuration screen> Advanced Settings button/ Left- or Right- arrow buttons
Warm weather shutdown setpoint	If the outdoor temperature is higher than this, the system will be shut off for Central Heating functions.	If Lead Lag enabled – 'home' screen/ View Lead Lag button/ Lead Lag screen/ Lead Lag Leader button/ Lead Lag Leader screen/ Configure button/ Lead Lag Leader

9.H Variable Speed Pump Control

V.S.P.C. is optional equipment on hydronic boilers only. It is not available for the water heater models. Pump speed is controlled to maintain a user-chosen temperature rise between the inlet and outlet of the unit.

For the entire kit and the complete 6 page instruction sheet, Reference Kit # CA009900

Variable Speed Pump Control Installation Kit

Document 7025C-10



Kit for
Modulating Boilers
with Touch Screen, Sizes

FOR YOUR SAFETY: This procedure must be performed by a professional service technician, qualified in hot water boiler installation. Improper connections could create an electrical hazard, which could cause serious injury, property damage, or death.

Variable Speed Pump Control: A variable pump control that, when used with a variable speed pump, maintains a user-chosen temperature rise between the inlet and outlet of the boiler.


GENERAL PCB OPERATION:

- The desired Delta T can be set to any of the following values by moving or adding jumpers to the **(JP2)** terminal on the control:
See Figure 2.

15 deg F/8 deg C	20 deg F/10 deg C	25 deg F/13 deg C	30 deg F/ 16 deg C
------------------	-------------------	-------------------	--------------------

By adding a second jumper, one on "15 deg F" and one on "20 deg F", it is possible to achieve 35 deg F /19 deg C.
By adding a second jumper, one on "15 deg F" and one on "25 deg F", it is possible to achieve 40 deg F/22 deg C.
- As shipped, the Variable Speed Pump Control has a jumper on the **(JP4)** terminal, to operate a 0-10 VDC output. If a 4-20 mA output is needed, move the jumper to the **(JP5)** terminal.
- Variable Speed Pump Control can operate in °F or °C. A jumper on the **(JP1)** terminal has set the default to °F. Remove that jumper for °C.
- If Main Gas valve is "OFF" AND a call for heat is "TRUE" then the PCB overrides the PID control and runs the pump output at 100% (10 VDC, or 20 mA).
- Once the Main Gas valve is energized the PCB will maintain pump output at 100% for 60 seconds to allow the system to stabilize. Once the 60 second timer has expired, the PCB will then run the pump output speed based on the jumper setpoint.
- When "T-T" is satisfied, the PCB will run pump at 100% output for the duration of the pump overrun time.
- The Variable Speed Pump Control PCB has a low end cap to prevent nuisance low flow trips. The cap is factory programmed to 2 VDC.
- Factory settings are: **Degrees - Fahrenheit** **Output Signal - 0 -10VDC**

- Tap two ¼" NPT threaded holes into water pipes for the sensors. One in the supply pipe and the other in the return. Both sensors need to be inserted into the pipe no more than 12" away from the outside of the boiler jacket. These two sensors will be the Delta T. (Note: Delta T is the difference between supply and return water temperatures) The amount of Delta T is

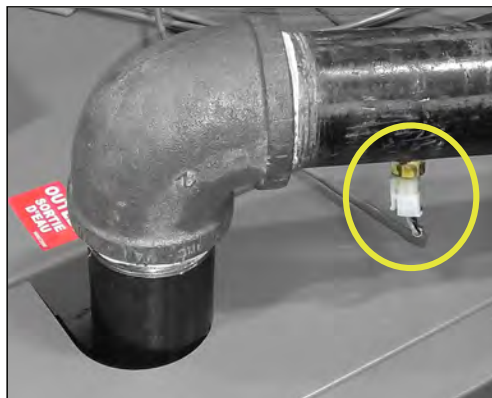

SECTION 10 Initial startup Instructions

10.A Filling the Boiler System

1. Ensure the system is fully connected. Close all bleeding devices and open the make-up water valve. Allow the system to fill slowly.
2. If a make-up water pump is employed, adjust the pressure switch on pumping system to provide a minimum of 12 psi (81.8 kPa) at the highest point in the heating loop.
3. If a water pressure regulator is provided on the make-up water line, adjust the pressure regulator to provide at least 12 psi (81.8 kPa) at the highest point in the heating loop.
4. Open any bleeding devices on all radiation units at the high points in the piping throughout the system, unless automatic air bleeders are provided at those points.

Note - There is an air bleed (air vent with slotted top) located on the left side of heat exchanger, on top of the water manifold.

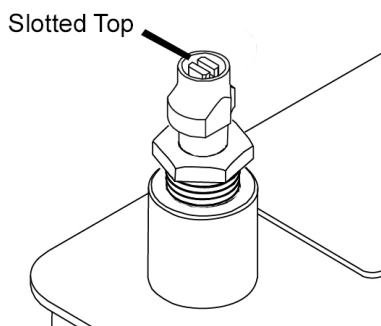


Figure 42. Air Vent

5. To remove all air from the heat exchanger, cycle the boiler pump on and off 10 times, 10 seconds on and 10 seconds off. Then run the System and Boiler pumps for a minimum of 30 minutes with the gas shut off.

WARNING

Failure to remove all air from the heat exchanger could lead to property damage, severe injury or death.

6. Open all strainers in the circulating system, check the operation of the flow switch (if equipped), and check for debris. If debris is present, clean out the strainers to ensure proper circulation.
7. Recheck all air bleeders as described in Step 4.

8. Start up the boiler following the procedure in this manual. Operate the entire system, including the pump, boiler, and radiation units for one hour.
9. Shut down the entire system and vent all radiation units and high points in the system piping, as described in Step 4.
10. Close the make-up water valve. Check the strainer in the pressure reducing valve for sediment or debris from the make-up water line. Reopen the make-up water valve.
11. Check the gauge for correct water pressure, and also check the water level in the system. If the height indicated above the boiler ensures that water is at the highest point in the circulating loop, then the system is ready for operation.
12. Refer to local codes and the make-up water valve manufacturers instructions as to whether the make-up water valve should be left open or closed.
13. After placing the unit in operation, the ignition system safety shutoff device must be tested.

First, shut off the manual gas valve, and call the unit for heat. The main gas terminals will be energized, attempting to light, for four seconds, and then will de-energize. The unit will go into lockout after the required number of trial for ignition periods.

Second, turn the power off, press the manual reset button on the boiler control, or the user display, open the manual gas valve and allow the unit to light. While the unit is operating, close the manual gas valve and ensure that power to the main gas valve has been cut.

14. Within three days of start-up, recheck all air bleeders and the expansion tank as described in Steps 4 and 8 above.

Note - The installer is responsible for identifying to the owner/operator the location of all emergency shutoff devices.

WARNING

Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that may have been under water.

10.B Initial Burner Operation

The initial setup must be checked before the unit is put into operation. Problems such as failure to start, rough ignition, strong exhaust odors, etc. can be due to improper setup. Damage to the boiler resulting from improper setup is not covered by the limited warranty.

For Combustion Setup Procedure, See Section 9.4 -O (Job O)

For CO2 Values, See "Table 25. CO2 Range and Pressure Differential" on page 80

WARNING

Improper adjustment may lead to poor combustion quality, increasing the amount of carbon monoxide produced. Excessive carbon monoxide levels may lead to personal injury or death.

1. Using this manual, make sure the installation is complete and in full compliance with the instructions and all local codes.
2. Determine that the unit and system are filled with water and all air has been bled from both. Open all valves.
3. Observe all warnings on the Operating Instructions label and turn on the gas and main electrical power (circuit breaker) to the unit.
4. Turn the unit on at the On/Off switch.
5. The Unit will enter the start sequence. The blower and pump will energize for pre-purge, then the ignition sequence will start. After all safety devices are verified, the gas valve will open. If ignition doesn't occur, turn off the Unit. Check that there is proper supply of gas. Wait five minutes and start the unit again.
6. After placing the unit in operation, the Burner Safety Shutoff Device must be tested:
 - (a) Close the gas shutoff valve with the burner operating.
 - (b) The flame will go out, and the blower will continue to run for the post purge cycle. A few additional attempts to light will follow including pre-purge, ignitor on, valve/flame on and post purge. Ignition will not occur because the gas is turned off. The ignition control will lockout after a single try or a third try depending on the controller model.
 - (c) Open the gas shutoff valve. Reset the boiler control by pressing the Reset button on the control. If the unit has the

optional pressure gas switches, you will need to reset the low pressure switch. Find the low pressure switch and press the reset button. Restart the appliance. The ignition sequence will start again and the burner will start. The appliance will return to its previous mode of operation.

Caution

If any odor of gas is detected, or if the gas burner does not appear to be functioning in a normal manner, **close the main gas shutoff valve**. Do not shut off the power switch. Contact your heating contractor, gas company, or factory representative.

10.C Shutting Down the Unit

This step must be performed by a qualified service person.

1. Turn off the main electrical disconnect switch.
2. Close all manual gas valves.
3. If freezing is anticipated, drain the Unit and be sure to also protect the building piping from freezing. All water must be removed from the heat exchanger or damage from freezing may occur.

10.D Restarting the Unit

If the system has been drained, see Section 10.1 for instructions on proper filling and purging.

1. Turn off the main electrical disconnect switch.
2. Close all manual gas valves.
3. **Wait five minutes.**
4. Set the aquastat or thermostat to its lowest setting.
5. Open all manual gas valves.
6. Reset all safety switches (pressure switch, manual reset high limit, etc.).
7. Set the temperature controller to the desired temperature setting and switch on the electrical power.
8. Each burner will go through a prepurge period and ignitor warm-up period, followed by ignition.

SECTION 11 Maintenance

11.A System Maintenance

Do the following once a year:

1. Lubricate the System pump, if required, per the instructions on the pump.
2. Inspect the venting system for obstruction or leakage. Periodically clean the screens in the vent terminal and combustion air terminal (when used).
3. Keep the area around the unit clear and free of combustible materials, gasoline, or other flammable vapors or liquids.
4. If the unit is not going to be used for extended periods in locations where freezing normally occurs, it should be isolated from the system and completely drained of all water.
5. Low water cutoffs, if installed, should be checked every year. Float type low water cutoffs should be flushed periodically.
6. Inspect and clean the condensate collection, float switch and disposal system yearly.
7. When a means is provided to neutralize condensate, ensure that the condensate is being neutralized properly.
8. Inspect the flue passages, and clean them using brushes or vacuums, if necessary. Sooting in flue passages indicates improper combustion. Determine the cause of the problem and correct it.
9. Inspect the vent system and air intake system, and ensure that all joints are sealed properly. If any joints need to be resealed, completely remove the existing sealing material, and clean with alcohol. Apply new sealing material, and reassemble.
10. Once a year, the items listed below should be inspected/tested by a qualified service technician:

a. Appliance control	f. Flow switch
b. Automatic gas valve	g. Low water cutoff
c. Pressure switches	h. Burner
d. Blower	i. Heat exchanger
e. Pump	j. Pressure Relief valve

Do the following once every six months:

1. If a strainer is employed in a pressure reducing valve or the piping, clean it every six months.



WARNING

Disconnect all power to the unit before attempting any service procedures. Contact with electricity can result in severe injury or death.

11.B Maintenance Notes

Use only genuine Manufacturer replacement parts.



Caution

When servicing the controls, label all wires before disconnecting them. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

The gas and electric controls in the unit are engineered for long life and dependable operation, but the safety of the equipment depends on their proper functioning.

11.B.1 Burner

Check the burner for debris. Remove the blower arm assembly to access the burner. Remove the 4 bolts connecting the blower to the arm. (See "Figure 52. Burner Detail" on page 127). Remove the 5 bolts which hold the burner arm in place. Pull the burner up and out. Clean the burner, if necessary, by blowing compressed air from the outside of the burner into the center of the burner, and wipe the inside of the burner clean with glass cleaner. A dirty burner may be an indication of improper combustion or dirty combustion air. Determine the cause of the problem, and correct it. If the burner gasket is damaged, replace it when replacing the burner.

Note - When installing the burner, make sure the flange is aligned with the mating surface, as each is keyed to control fit.

11.B.2 Modulating Gas Valve/ Venturi

The modulating gas valve consists of a valve body that incorporates the On/Off gas flow control and a negative pressure regulator. It provides the air/gas ratio control in combination with the Venturi to the unit. It is designed to operate with gas supply pressure between 4 and 13 inches w.c.. To remove the gas valve and or Venturi, shut off the 120 Volt power supply to the boiler. Turn off all manual gas valves connecting the boiler to the main gas supply line. Remove the front door of the boiler to gain access to the gas valve and Venturi. Disconnect the four flange bolts connecting the gas manifold pipe

to the gas valve. Remove the electrical connections to the gas valve. Remove the bolts connecting the Venturi flange to the blower. This allows the entire gas valve/Venturi assembly to be removed as an assembly to facilitate inspection and cleaning.

After the valve has been removed, reassemble in reverse order making sure to include all gaskets and O-rings. Turn on the manual gas valves and check for gas leaks. Turn on the 120 Volt power. Place the unit in operation following the instructions in Section 10. Once the boiler is operating, check for leaks again and confirm all fasteners are tight.

Check the setup for the unit according to the instructions in Section 9.

11.B.3 Controllers

Each unit has two integrated controllers that incorporate manual reset high limit control, operating temperature control, modulating control, ignition control, outdoor reset control, pump control and many other features. If any of these features are thought to be defective, please consult the factory for proper troubleshooting practices before replacing a control.

If it is necessary to replace a controller, turn off all power to the unit and shut off all manual gas valves to the unit. Remove the front door to the unit and the control panel plastic bezel. Remove all wire connections from the control board. The control board connections are keyed to only allow connection in the proper location, but proper handling techniques should be used to avoid damage to the wiring or connectors. To remove the control, undo the mounting screws. To replace the control repeat the steps listed above in the reverse order making sure to connect all wires in the proper locations. Place the unit in operation following the steps outlined in Section 10.

11.B.4 Ignitor Assembly

The ignitor assembly is a two rod system that consists of a ground rod and a sense rod. To remove the ignitor assembly, shut off the 120 Volt power supply to the unit. Turn off all manual gas valves connecting the unit to the main gas supply line. Remove the front door of the boiler to gain access to the ignitor assembly. Remove the two wires connected to the assembly. Then remove the two bolts connecting the ignitor assembly to the burner door. Remove and replace the old ignitor assembly gasket. If the old assembly is determined to be defective, install a new ignitor assembly in the reverse order. Replace the gasket if necessary.

11.B.5 Flame Sensor

The flame sensor is a single rod system. To replace the flame sensor electrode, shut off the 120 Volt power supply to the boiler. Turn off all manual gas valves connecting the boiler to the main gas supply line. Remove the front door of the boiler to gain access to the flame sensor electrode. Remove the flame sensor wire from the electrode. Remove the two bolts fastening the electrode to the burner doors. Remove and replace the old flame sensor gasket. If the old electrode is determined to be defective, reinstall a new flame sensor electrode in the reverse order.

Caution

The igniters and sensors can become very hot. If you touch these parts accidentally, this can cause burns or injury.

11.B.6 Transformer with Integral Circuit Breaker

The appliance has a 24 VAC transformer with integral 4 amp circuit breaker installed for supplying the control voltage required for the unit only. The transformer is sized for the load produced by the unit only and should not be used to supply power to additional field devices. If additional loads are added or a short occurs during installation, the integral circuit breaker may trip. If this happens, be sure to reset the circuit breaker before replacing the transformer.

If the transformer must be replaced, turn off the 120 VAC power to the unit. Remove the transformer wires from the terminal blocks. Remove the fasteners holding the transformer, and remove the transformer. Replace with a new transformer in reverse order.

If the transformer is replaced with a part other than the OEM transformer, be sure to add circuit protection if it is not integral to the new transformer.

WARNING

Failure to include proper circuit protection may lead to premature component failure, fire, injury or death.

11.B.7 Blower

The combustion air blower is a high-pressure centrifugal blower with a variable speed motor. The speed of the motor is determined by the control logic. 120 Volts are supplied to the blower at all times.

If it is necessary to replace the blower, turn off the 120 Volt power and the gas supply to the unit. Take the front panel off. Disconnect the 120 Volt and control signal connections to the blower. Disconnect the bolts connecting the Venturi to the blower housing. Disconnect the fan outlet bolts from the burner door blower arm. If the fan is determined to be defective replace the existing fan with a new one reversing the steps listed above. Be sure to install all of the required O-rings and gaskets between the blower arm and the blower and blower face and Venturi flange.

11.B.8 Heat Exchanger Coils

Black carbon soot buildup on the external surfaces of the heat exchanger is caused by one or more of the following; incomplete combustion, combustion air problems, venting problems or heater short cycling. Soot buildup or other debris on the heat exchanger may restrict the flue passages.

If black carbon soot buildup on the heat exchanger is suspected, disconnect the electrical supply to the unit, and turn off the gas supply by closing the manual gas valve on the unit. Access the heat exchanger through the burner door at the front of the boiler, and inspect the tubing using a flashlight. If there is a buildup of black carbon soot or other debris on the heat exchanger, clean per the following:

Caution

Black carbon soot buildup on a dirty heat exchanger can be ignited by a random spark or flame. To prevent this from happening, dampen the soot deposits with a wet brush or fine water spray before servicing the heat exchanger.

1. Shut off the 120 Volt power supply to the boiler.
2. Turn off all manual gas valves connecting the boiler to the main gas supply line.
3. Remove the nuts located on the outside diameter of the burner door to the heat exchanger.
4. Remove the burner door/burner assembly from the heat exchanger.
5. Disconnect the condensate drain line.
6. Attach a longer hose to the drain and run it to a bucket.
7. Clean the heat exchanger by brushing away any light accumulations of soot and debris. Use a non metallic brush with soft bristles to avoid damaging the surfaces of the heat exchanger tubes.

8. Once the tubes have been brushed clean, rinse the tubes and combustion chamber with a small amount of water to rinse all of the debris out of the bottom of the flue collector and into the longer condensate trap line, which is being diverted into a separate container.

Note - The Warranty does not cover damage caused by lack of required maintenance, lack of water flow, or improper operating practices.

WARNING


Failure to rinse the debris from the heat exchanger and temporary drain line may lead to clogged condensate lines, traps and neutralizers. Condensate pumps (if used) may also be damaged from the debris left behind, possibly causing property damage.

9. To place the unit back in operation, install all removed components in the reverse order. Be sure all gaskets are in place as the components are installed. Replace any damaged gaskets. Do **not** reuse damaged gaskets.
10. Place the appliance in operation according to Section 9, checking all gas connections for leaks. Confirm all fasteners are tight.

11.B.9 Gas Pressure Switches (optional)

The high and low pressure gas switches are 24V manual reset switches that act to cut power to the gas valves if the gas pressure is too low or too high for proper operation.

If your boiler is equipped with the optional pressure gas switches, then the Low Pressure Switch will need to be reset.

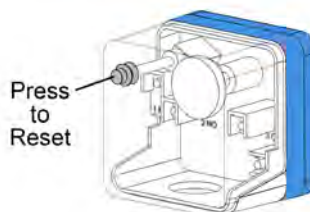

The pressure gas switches used are integrally vent limited, and do not require venting to atmosphere. To remove a switch, remove the screw on the plastic housing and pull the clear cover off. Disconnect the two wires from the screw terminals. Twist the switch off the pipe nipple. Reassemble in reverse order. For natural gas, set the low pressure gas switch to

3" w.c. For propane, set the low pressure gas switch to 5" w.c. For natural and propane, set the high pressure gas switch to 14."

11.B.10 Natural/Propane Gas

Conversion

These units can easily be converted from natural to propane gas or from propane to natural gas. If a gas conversion is performed, the unit must be identified with the appropriate gas labels and a conversion sticker to allow technicians performing maintenance in the future to properly identify the gas type of the appliance.

NT size (mbtu)	Kit Number
1000	CA006207
1200	CA006207

Table 26. NT to LP Gas Conversion Kit

11.B.11 Condensate Trap

A condensate drain trap is included with the Unit and is designed to drain the boiler of condensate. The vent condensate should be drained through a drain tee located in the vent line. This will help prevent excessive condensate from entering the boiler condensate trap and preventing the boiler from operating.

Connect a 3/4" PVC pipe between the drain connection and a floor drain (or condensate pump if a floor drain is not accessible).

The condensate drain must be installed to prevent the accumulation of condensate. When a condensate pump is not used, the tubing must continuously slope downward toward the drain with no spiraling.

Consult local codes for the disposal method.



Caution

Condensate is mildly acidic (pH=5), and may harm some floor drains and/or pipes, particularly those that are metal. Ensure that the drain, drainpipe, and anything that will come in contact with the condensate can withstand the acidity, or neutralize the condensate before disposal. **Damage caused by failure to install a neutralizer kit or to adequately treat condensate will not be the manufacturers responsibility.**

11.B.12 Battery for Date and Time Back-Up

The touchscreen does have an internal battery for back-up of the date and time settings.

The battery is a CR2032 'coin type' battery and has an expected service life of 6 years. If the battery needs to be replaced, you do not have to unbolt the touchscreen from the pan. Instead, reach your fingers underneath and behind the touchscreen and you will find the small battery access panel. Press the panel release and the small door will hinge upward. Remove the old battery, keeping track of the + / - orientation of the old battery. Then insert the new battery in the same orientation and close the small door.

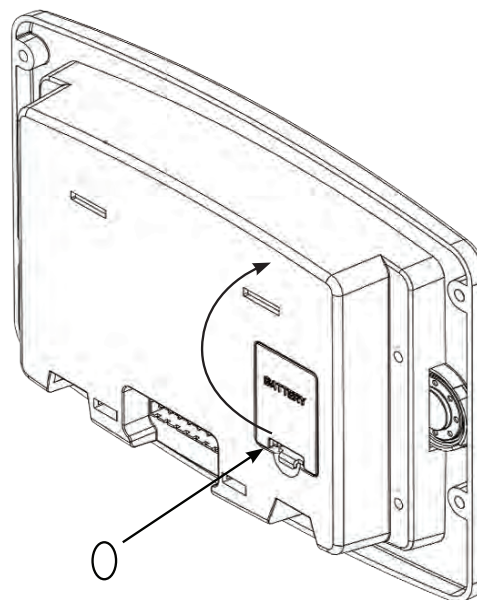


Figure 43. Battery CR2032

SECTION 12 Troubleshooting

12.A Potential Setup and Synchronization Problems

Because the unit uses a sophisticated control system, it can constantly perform a series of self-checks. For example, as a burner is lighted, the controller checks each stage of the purge and ignition process. If part of the process does not happen on time, or takes too long to occur, the controller stops the process. We have detailed these self-checks in the section on “Operating Sequence.”

Two of these self-checks are particularly important:

- Controller synchronization
- Flap valve status

If the control system is not satisfied with the results of both of these checks, it will not allow the system to run. Sometimes the reason for this may not be obvious at first – that’s why we are describing them at the start of this section on Troubleshooting.

12.A.1 Controller Synchronization

On a multiple-boiler installation, the individual boiler controllers are arranged in a “daisy chain” using a Modbus connection, with the Secondary control of one boiler connected to the Primary control of the next boiler. Up to four boilers, with up to eight controllers, can be connected in this way. See Figure 44.

As part of the setup process, each of these controllers must be given a unique address. (For details, see Section 9 - Setup and Configuration.” The controls must be set up and addressed correctly before the Modbus wiring is completed. If the wiring is attached before the Modbus control addresses are changed, there will be multiple controls with the same address, and **the system will not work.**

When a Lead Lag system is first powered up, the controller acting as the Lead Lag Leader goes through a “synchronization” process. During synchronization, the controller establishes communications with each of the Follower controllers via the Modbus link. The Follower controllers download some setup parameters and operating history information. (On a system with several boilers, this phase can take several minutes.) If the Leader cannot establish communications with one of the Followers, it triggers a Hold or Lockout.

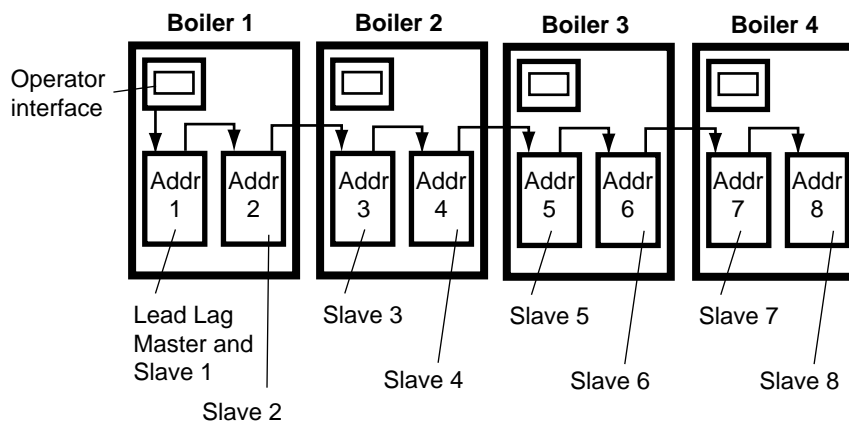


Figure 44. Lead Lag Arrangement in a Multiple-Boiler Installation

12.A.2 Flap Valve Status Check

Each boiler includes two burners, and each burner has a flap valve. See Figure 45.

If one burner in a boiler is operating, and the other is not, the flap valve for the burner that is off will remain closed to prevent air from moving backwards through the burner that is not operating. Before the Lead Lag Leader controller will allow the system to operate, it must be able to determine whether each of these flap valves is open or closed. If the controller cannot find a signal from one of the flap valves, the control system will act to prevent backflow by energizing the blower of the control with the bad flap valve. If this cannot be done **the control will not allow the whole system to run**. If the flap valve identifications are not set correctly, the control system will present a “HOLD 119 – Control Interaction Fault” on the display. For this reason, it is important that all of the flap valves be identified correctly.

12.B About Lockouts, Holds, and Alerts

The control system on the Unit responds to three kinds of trouble indications:

- A “lockout” is caused by a serious problem that might involve a safety issue. Once the controller enters a lockout, the burners will shut down, and will not be allowed to run again until the cause of the problem is corrected, and you reset the control system. The controller will also trigger a lockout if you change a safety-related parameter, but do not finish the “verification” process. (For more information on verification, see Section 8.8)

During a lockout condition, the image of the affected controller on the ‘home’ screen will appear in red. A bell symbol will appear in the upper left-hand corner of the control screen. The system maintains a “history” of the 15 most recent lockouts.

- The system may enter a “hold” for a period of time before locking out. This allows the controller to see if the error becomes resolved prior to the hard lockout. Holds can occur while the boiler is operating.
- An “alert” indicates that some feature of the control system’s operation was not correct, delayed or waiting for a response. This indicates a change in state of the control system and doesn’t necessarily mean there is a problem. For example, Alerts occur as the fan speed transitions from the pre-purge RPM to the startup RPM. This indicates that the control system is waiting for a condition to be satisfied. No Reset is required to recover from an alert. The system maintains a “history” of the 15 most recent alerts. Sometimes it can be helpful to check this list as a troubleshooting aid.

12.B.1 Responding to a Lockout, Hold, or Alert

1. If a problem occurs while the system is starting up, the system will declare a Hold. A brief explanation of the cause of the Hold will appear in an orange bar across the bottom of the screen. If you tap the orange bar, the system will present more information about the Hold.

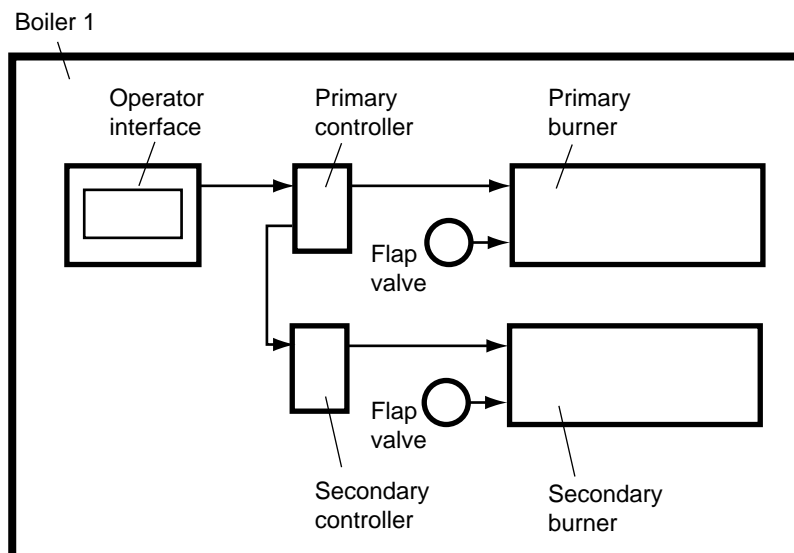


Figure 45. Flap Valve Arrangement

Correct the cause of the problem, and press the button on the screen to clear the Hold.

2. If a serious problem continues, the system will declare a Lockout. A brief explanation of the cause of the Lockout will appear in an orange bar across the bottom of the screen. If you tap the orange bar, the system will present more information about the Lockout.

Correct the cause of the problem, and press the Reset button.


3. If an Alert occurs while the system is running, the system will present a note across the bottom of the screen. If you tap the orange bar, the system will present more information about the Alert.

Press the OK button to indicate that you have seen the Alert.

4. If an audible alarm on the display is active, you can use the Silence button to stop it.


12.B.2 Viewing the Lockout and Alert Histories

1. To view the Lockout history, start at the 'home' screen.

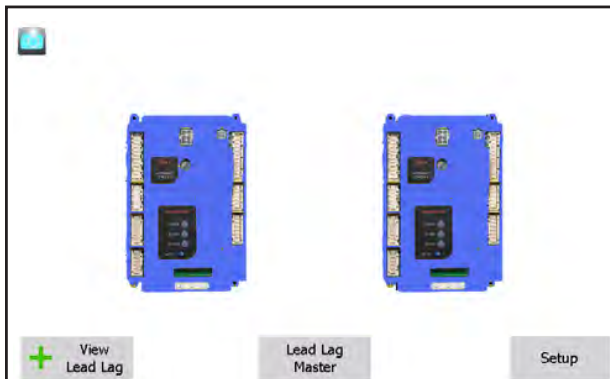


Menu 84. 'home' screen

2. Press the Lead/ Lag Leader button. Menu 85 on page 104 shows the Lead/ Lag Leader screen.

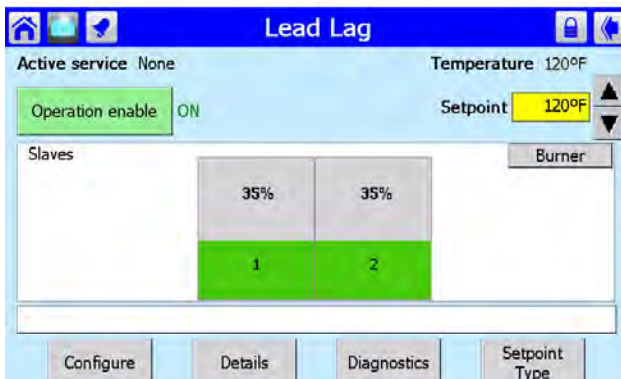

Menu 85. Lead Lag Leader Screen

3. If you press the Details button, the control software will present a screen similar to this.

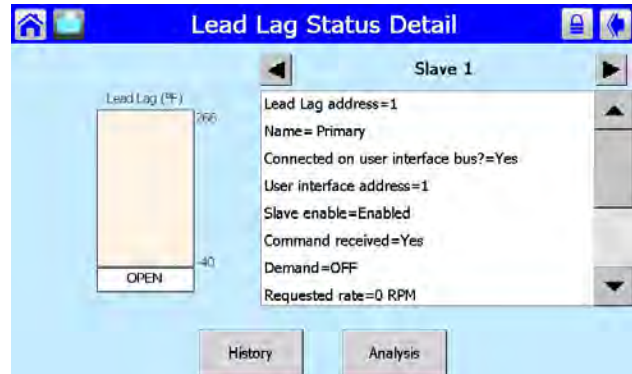

Menu 86. Typical Details Screen

4. To see a record of the recent lockouts and alerts, press the History button. The system will present the Lockout History screen.



Menu 87. Lockout History Screen

The most recent lockouts appear at the top of the list. Any lockout that has not been cleared will appear in red.

5. You can see more detailed information on any lockout by touching the entry on the screen. Correct the cause of the problem, then press Clear Lockout to clear the lockout.
6. You can also press the Alerts button to see a list of recent alerts. See Menu 88.

Note – The Alert Log only lists the *most recent* occurrence for each type of alert.



Menu 88. Alert Log Screen

To get more information on a particular alert, touch the entry for that alert on the screen.

12.C Troubleshooting Table

This table includes a listing of the faults that might be generated by the controllers, and displayed on the Touch Screen. Some of these can be corrected by an installer changing a parameter, while other conditions are more complicated, and will require a service technician.

The first column lists the code number that will appear at the beginning of the Lockout or Hold message in the orange bar at the bottom of the screen. The second column lists the text as it will appear on the Touch Screen. The third column shows whether the condition will cause a Hold, or Lockout, or both. The fourth column lists some suggestions for corrective action.

Code	Description	L or H	Procedure
1	Unconfigured safety data	L	1. New device, complete device configuration and safety verification. 2. If fault repeats, replace module
2	Waiting for safety data verification	L	1. Device in Configuration mode and safety parameters need verification and a device needs reset to complete verification. 2. Configuration ended without verification, re enter configuration, verify safety parameters and reset device to complete verification. 3. If fault repeats, replace module.
3	Internal fault: Hardware fault	H	Internal fault 1. Reset module 2. If fault repeats, replace module.
4	Internal fault: Safety Relay key feedback error	H	
5	Internal fault: Unstable power (DC DC) output	H	
6	Internal fault: Invalid processor clock	H	
7	Internal fault: Safety relay drive error	H	
8	Internal fault: Zero crossing not detected	H	
9	Internal fault: Flame bias out of range	H	
10	Internal fault: Invalid burner control state	L	
11	Internal fault: Invalid burner control state flag	L	
12	Internal fault: Safety relay drive cap short	H	
13	Internal fault: PII (Pre-Ignition Interlock) shorted to ILK (Interlock)	H or L	

15	Internal fault: Safety relay test failed due to feedback ON	L	Internal fault 1. Reset module 2. If fault repeats, replace module.
16	Internal fault: Safety relay test failed due to safety relay OFF	L	
17	Internal fault: Safety relay test failed due to safety relay not OFF	L	
18	Internal fault: Safety relay test failed due to feedback not ON	L	
19	Internal fault: Safety RAM write	L	
20	Internal fault: Internal fault: Flame ripple and overflow	H	
21	Internal fault: Flame number of sample mismatch	H	
22	Internal fault: Flame bias out of range	H	
23	Internal fault: Bias changed since heating cycle starts	H	
24	Internal fault: Spark voltage stuck low or high	H	
25	Internal fault: Spark voltage changed too much during flame sensing time	H	
26	Internal fault: Static flame ripple	H	
27	Internal fault: Flame rod shorted to ground detected	H	
28	Internal fault: A/D linearity test fails	H	
29	Internal fault: Flame bias cannot be set in range	H	
30	Internal fault: Flame bias shorted to adjacent pin	H	
31	Internal fault: SLO electronics unknown error	H	
32-46	Internal fault: Safety Key 0 through 14	L	
47	Flame Rod to ground leakage	H	
48	Static flame (not flickering)	H	

49	24 VAC voltage low/high	H	<ol style="list-style-type: none"> 1. Check the module and display connections. 2. Check the module power supply and make sure that frequency, voltage and VA meet the specifications.
50	Modulation fault	H	<p>Internal sub-system fault.</p> <ol style="list-style-type: none"> 1. Review alert messages for possible trends. 2. Correct possible problems.
51	Pump fault	H	<p>Internal sub-system fault.</p> <ol style="list-style-type: none"> 1. Review alert messages for possible trends. 2. Correct possible problems.
52	Motor tachometer fault	H	<p>Internal sub-system fault.</p> <ol style="list-style-type: none"> 1. Review alert messages for possible trends. 2. Correct possible problems.
53	AC input phases reversed	L	<ol style="list-style-type: none"> 1. Check the module and display connections. 2. Check the module power supply and make sure that both frequency and voltage meet the specifications. 3. On 24 VAC applications, assure that J4 terminal 10 and J8 terminal 2 are connected together.
59	Internal Fault: Mux pin shorted	L	<p>Internal Fault.</p> <ol style="list-style-type: none"> 1. Reset module. 2. If fault repeats, replace module.
61	Anti short cycle	H	Will not be a lockout fault. Hold Only.
62	Fan speed not proved	H	
63	<p>Rollout Switch: SAFETY CHAIN (OFF)</p> <p>To diagnose, check all of the following:</p> <p>Flow Switch (Standard Equipment)</p> <p>Additional High Limit (Field Supplied)</p> <p>Optional Pressure Switch</p> <p>Low Water Cutoff (Standard Equipment)</p> <p>Burner Door Thermal Switch</p> <p>Low pressure gas switch – Inlet Side of Gas Valve</p> <p>High Pressure gas switch – Outlet Side of Gas Valve</p> <p>Condensate Level Switch – All Models</p> <p>Heat Exchanger Fusible Link</p>	H	<ol style="list-style-type: none"> 1. Reset the low gas pressure valve and the high gas pressure valve. 2. Check for power at all Safety Components. 3. Check wiring and correct any faults. 4. Check all safety interlocks connected to the safety circuit to assure proper function. 5. If code persists, contact Tech Support.
64	PII (Pre-Ignition Interlock) OFF	H or L	<ol style="list-style-type: none"> 1. Check wiring and correct any faults. 2. Check Preignition Interlock switches to assure proper functioning. 3. Check the valve operation. 4. Reset and sequence the module; monitor the PII status. 5. If code persists, replace the module.

67	ILK (Interlock) OFF	H or L	1. Check wiring and correct any possible shorts. 2. Check Interlock (ILK) switches to assure proper function.
68	ILK (Interlock) ON	H or L	3. Verify voltage through the interlock string to the interlock input with a voltmeter. 4. If steps 1-3 are correct and the fault persists, replace the module.
70	Wait for leakage test completion	H	1. Internal Fault. Reset module. 2. If fault repeats, replace module.
78	Demand Lost in Run	H	1. Check wiring and correct any possible errors. 2. If previous steps are correct and fault persists, replace the module.
79	Outlet high limit	H or L	1. Check wiring and correct any possible errors. 2. Replace the outlet high limit. 3. If previous steps are correct and fault persists, replace the module.
80	DHW (Domestic Hot Water) high limit	H or L	1. Check wiring and correct any possible errors. 2. Replace the DHW high limit. 3. If previous steps are correct and fault persists, replace the module.
81	Delta T limit	H or L	1. Check inlet and outlet sensors and pump circuits for proper operation. 2. Recheck the Delta T Limit to confirm proper setting. 3. If previous steps are correct and fault persists, replace the module.
82	Stack limit	H or L	1. Check wiring and correct any possible errors. 2. Replace the Stack high limit. 3. If previous steps are correct and fault persists, replace the module.
91	Inlet sensor fault	H	1. Check wiring and correct any possible errors. 2. Replace the Inlet sensor. 3. If previous steps are correct and fault persists, replace the module.
92	Outlet sensor fault	H	1. Check wiring and correct any possible errors. 2. Replace the Outlet sensor. 3. If previous steps are correct and fault persists, replace the module.
93	DHW (Domestic Hot Water) sensor fault	H	1. Check wiring and correct any possible errors. 2. Replace the DHW sensor. 3. If previous steps are correct and fault persists, replace the module.
94	Header sensor fault	H	1. Check wiring and correct any possible errors. 2. Replace the header sensor. 3. If previous steps are correct and fault persists, replace the module.

95	Stack sensor fault	H	<ol style="list-style-type: none"> 1. Check wiring and correct any possible errors. 2. Replace the stack sensor. 3. If previous steps are correct and fault persists, replace the module.
96	Outdoor sensor fault	H	<ol style="list-style-type: none"> 1. Check wiring and correct any possible errors. 2. Replace the outdoor sensor. 3. If previous steps are correct and fault persists, replace the module.
97	Internal Fault: A2D mismatch.	L	Internal Fault. <ol style="list-style-type: none"> 1. Reset module. 2. If fault repeats, replace module.
98	Internal Fault: Exceeded VSNSR voltage tolerance	L	
99	Internal Fault: Exceeded 28V voltage tolerance	L	
100	Pressure Sensor Fault	H	<ol style="list-style-type: none"> 1. Verify the Pressure Sensor is a 4-20 ma source. 2. Check wiring and correct any possible errors. 3. Test Pressure Sensor for correct operation. 4. Replace the Pressure sensor. 5. If previous steps are correct and fault persists, replace the module.
105	Flame detected out of sequence	H or L	<ol style="list-style-type: none"> 1. Check that flame is not present in the combustion chamber. Correct any errors. 2. Make sure that the flame detector is wired to the correct terminal. 3. Make sure the F & G wires are protected from stray noise pickup. 4. Reset and sequence the module, if code reappears, replace the flame detector. 5. Reset and sequence the module, if code reappears, replace the module.
106	Flame lost in MFEP	L	<ol style="list-style-type: none"> 1. Check main valve wiring and operation - correct any errors. 2. Check the fuel supply. 3. Check fuel pressure and repeat turndown tests. 4. Check ignition transformer electrode, flame detector, flame detector siting or flame rod position. 5. If steps 1 through 4 are correct and the fault persists, replace the module.
107	Flame lost early in run	L	
Code	Description	L or H	
108	Flame lost in run	L	
109	Ignition failed	L	
110	Ignition failure occurred	H	Hold time of recycle and hold option. Will not be a lockout fault. Hold Only. Internal hardware test. Not a lockout.

111	Flame current lower than weak threshold (min flame current 0.8mA)	H	Hold time of recycle and hold option. Will not be a lockout fault. Hold Only. Internal hardware test. Not a lockout.
113	Flame circuit timeout	L	Flame sensed during Initiate or off cycle, hold 240 seconds, if present after 240 seconds, system will lockout.
119	Control Interaction Fault	H	Flap valve identifications configured incorrectly.
122	Lightoff rate proving failed	L	<ol style="list-style-type: none"> 1. Check wiring and correct any potential wiring errors. 2. Check VFD's (Variable-speed Fan Drive) ability to change speeds. 3. Change the VFD 4. If the fault persists, replace the module.
123	Purge rate proving failed	L	
128	Fan speed failed during prepurge	H or L	
Code	Description	L or H	
129	Fan speed failed during preignition	H or L	
130	Fan speed failed during ignition	H or L	
131	Fan movement detected during standby	H	
132	Fan speed failed during run	H	<ol style="list-style-type: none"> 1. Check wiring and correct any possible shorts. 2. Check Interlock (ILK) switches to assure proper function. 3. Verify voltage through the interlock string to the interlock input with a voltmeter. 4. If steps 1-3 are correct and the fault persists, replace the module.
137	ILK (Interlock) failed to close	H	
149	Flame detected	H or L	Holds if flame detected during Safe Start check up to Flame Establishing period.
150	Flame not detected	H	Sequence returns to standby and restarts sequence at the beginning of Purge after the HF switch opens if flame detected during Safe Start check up to Flame Establishing period.
154	Purge Fan switch On	H or L	<ol style="list-style-type: none"> 1. Purge fan switch is on when it should be off. 2. Check wiring and correct any errors. 3. Inspect the Purge Fan switch J6 terminal 3 and its connections. Make sure the switch is working correctly and is not jumpered or welded. 4. Reset and sequence the relay module. 5. If the fault persists, replace the relay module.
155	Purge fan switch OFF	H or L	
156	Combustion pressure and flame ON	H or L	<ol style="list-style-type: none"> 1. Check that flame is not present in the combustion chamber. Correct any errors. 2. Make sure that the flame detector is wired to the correct terminal. 3. Make sure the F & G wires are protected from stray noise pickup. 4. Reset and sequence the module, if code reappears, replace the flame detector. 5. Reset and sequence the module, if code reappears, replace the module.
157	Combustion pressure and flame OFF	L	

158	Main valve ON	L	1. Check Main Valve terminal wiring and correct any errors.
159	Main valve OFF	L	2. Reset and sequence the module. If fault persists, replace the module.
160	Ignition ON	L	1. Check Ignition terminal wiring and correct any errors.
161	Ignition OFF	L	2. Reset and sequence the module. If fault persists, replace the module.
164	Block intake ON	L	1. Check wiring and correct any errors. 2. Inspect the Block Intake Switch to make sure it is working correctly. 3. Reset and sequence the module.
165	Block intake OFF	L	4. During Standby and Purge, measure the voltage across the switch. Supply voltage should be present. If not, the Block Intake Switch is defective and needs replacing. 5. If the fault persists, replace the relay module.
172	Main relay feedback incorrect	L	Internal Fault. 1. Reset module. 2. If fault repeats, replace module.
174	Safety relay feedback incorrect	L	
175	Safety relay open	L	
176	Main relay ON at safe start check	L	
178	Safety relay ON at safe start check	L	

184	Invalid BLOWER/ SPARK output setting	L	<ol style="list-style-type: none"> 1. Return to Configuration mode and recheck selected parameters, reverify and reset module. 2. If fault repeats, verify electrical grounding. 3. If fault repeats, replace module.\
185	Invalid Delta T limit enable setting	L	
186	Invalid Delta T limit response setting	L	
Code	Description	L or H	
187	Invalid DHW (Domestic Hot Water) high limit enable setting	L	
188	Invalid DHW (Domestic Hot Water) high limit response setting	L	
189	Invalid flame sensor type setting	L	
192	Invalid igniter on during setting	L	
193	Invalid ignite failure delay setting	L	
194	Invalid ignite failure response setting	L	
195	Invalid ignite failure retries setting	L	
196	Invalid ignition source setting	L	
197	Invalid interlock open response setting	L	
198	Invalid interlock start check setting	L	
199	Invalid LCI (Limit Control Input) enable setting	L	
Code	Description	L or H	
200	Invalid lightoff rate setting	L	
201	Invalid lightoff rate proving setting	L	
202	Invalid MFEP (Main Flame Establishing Period) time setting	L	
203	Invalid MFEP (Main Flame Establishing Period) flame failure response setting	L	
204	Invalid NTC sensor type setting	L	
205	Invalid Outlet high limit response setting	L	
207	Invalid PII (Pre-Ignition Interlock) enable setting	L	
210	Invalid Postpurge time setting	L	
211	Invalid Power up with lockout setting	L	
212	Invalid Preignition time setting	L	
213	Invalid Prepurge rate setting	L	
Code	Description	L or H	

214	Invalid Prepurge time setting	L	1. Return to Configuration mode and recheck selected parameters, reverify and reset module. 2. If fault repeats, verify electrical grounding. 3. If fault repeats, replace module.\
215	Invalid Purge rate proving setting	L	
216	Invalid Run flame failure response setting	L	
217	Invalid Run stabilization time setting	L	
218	Invalid Stack limit enable setting	L	
219	Invalid Stack limit response setting	L	
220	Unconfigured Delta T limit setpoint setting	L	
221	Unconfigured DHW (Domestic Hot Water) high limit setpoint setting	L	
222	Unconfigured Outlet high limit setpoint setting	L	
223	Unconfigured Stack limit setpoint setting	L	
224	Invalid DHW (Domestic Hot Water) demand source setting	L	
Code	Description	L or H	
225	Invalid Flame threshold setting	L	
226	Invalid Outlet high limit setpoint setting	L	
227	Invalid DHW (Domestic Hot Water) high limit setpoint setting	L	
228	Invalid Stack limit setpoint setting	L	
229	Invalid Modulation output setting	L	
230	Invalid CH (Central Heat) demand source setting	L	
231	Invalid Delta T limit delay setting	L	
232	Invalid Pressure sensor type setting	L	
234	Invalid Outlet high limit enable setting	L	
235	Invalid Outlet connector type setting	L	
236	Invalid Inlet connector type setting	L	
Code	Description	L or H	
237	Invalid DHW (Domestic Hot Water) connector type setting	L	
238	Invalid Stack connector type setting	L	
239	Invalid Header connector type setting	L	
240	Invalid Outdoor connector type setting	L	
565	Control looking for outdoor sensor	H	Ensure Outdoor Sensor is properly connected.
981	Display not communicating with control		Refer to wire diagram (7G) to ensure display and control are wired properly.

12.D Diagnostic Tests and Input/Output Indicators

Two kinds of screens are grouped together in this section:


- Detailed indications of the input and output signals
- Diagnostic tests of the pumps and burner modulation

Note that these functions apply to just one selected controller.

How to get there –

Home Page <Select icon> Status Summary Screen
<Diagnostics button>


1. The buttons at the bottom of the screen select the types of inputs and outputs displayed. The Burner Control I/O button leads to Menu 89.

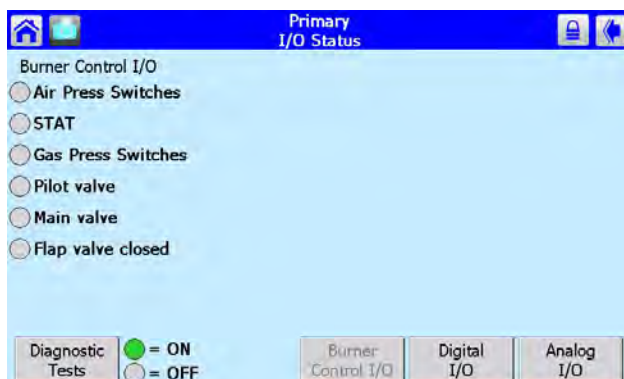

Menu 89. Burner Control I/O Screen


A green dot indicates a function that is “on.”

2. Press the Digital I/O button to look at functions where the functions are either “on” of “off.” See Menu 90.

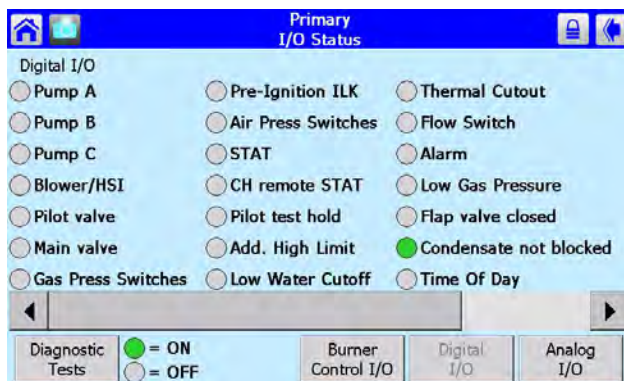


Menu 90. Digital I/O Screen

3. The button for Analog I/O displays items that change continuously between two limits.

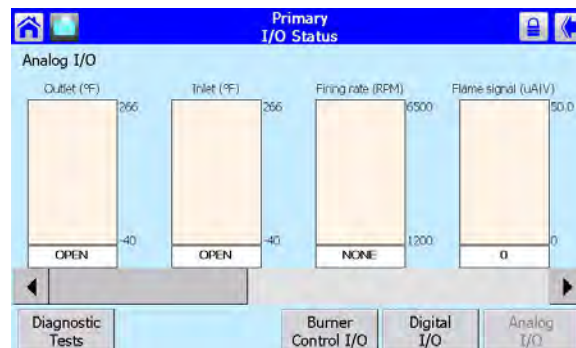


Menu 91. Analog I/O Screen

4. Press the button for Diagnostic Tests. The Modulation test allows you to change the rate at which the burner fires, and watch the results. See Menu 92.

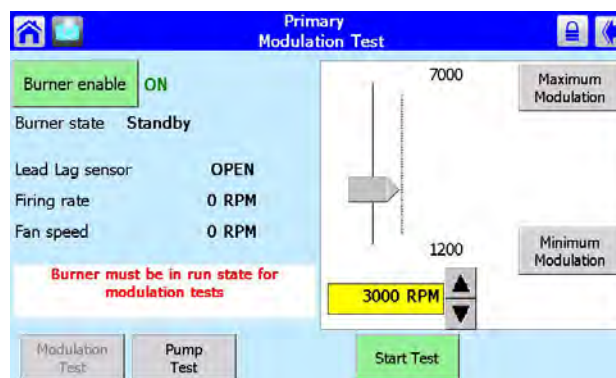

Menu 92. Modulation Test

5. Press the Pump Test button. The Pump test shows detailed information on the activity of the three pumps that may be used by the system.

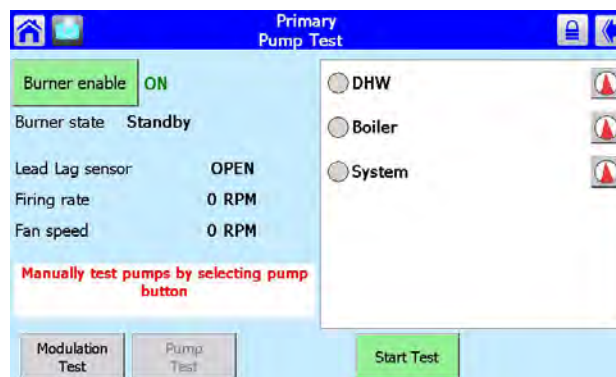


Menu 93. Pump Test

12.E Lead Lag Follower Diagnostics

The control system includes a diagnostic screen that lists some information on the Lead Lag followers in the system. See Menu 94.

How to get there –

Home Page <View Lead Lag button> Lead Lag Screen <Lead Lag Leader button> Lead Lag Screen <Diagnostics button> Lead Lag Follower Status Screen

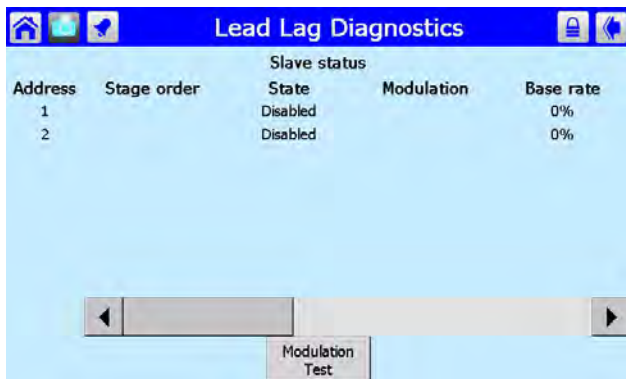

Menu 94. Lead Lag Diagnostics


Use the left- and right-arrows to see all of the columns in the display.

12.F Statistics

The controller can present some summary information about the operation of the system – number of pump cycles, number of burner cycles, etc.

How to get there –

Home Page <Select icon> Status Summary Screen <Configure button> Configuration Menu <Select Statistics Configuration line> Statistics Configuration Screen

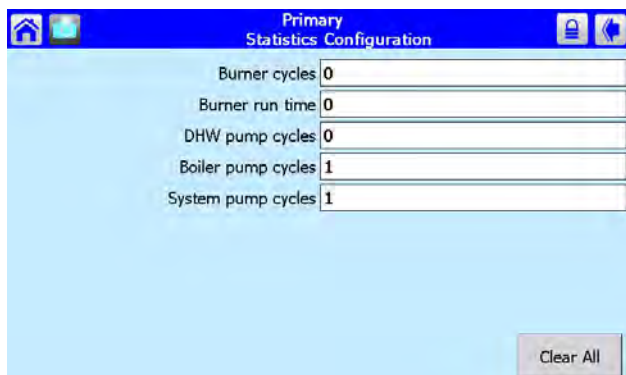


Menu 95. Statistics Configuration Screen

12.G Analysis

The control system includes an Analysis branch that can display the behavior over a period of time for several different parameters: fan speed, outlet temperature, inlet temperature, etc.

How to get there –


Home Page <Select icon> Status Summary Screen <Details button> Any Configuration Screen <Analysis button> Analysis Setup Screen

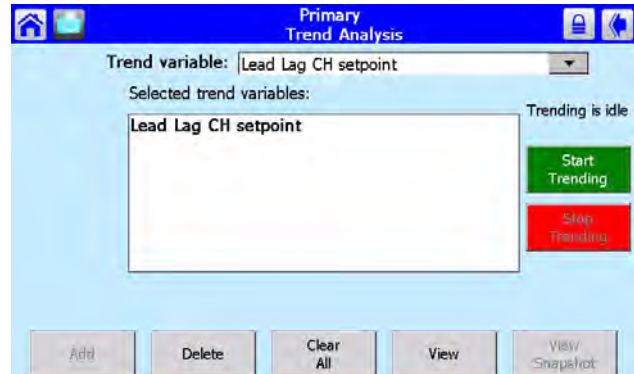

Menu 96. Analysis Setup Screen

To use this function, select the parameter you want to track from the pull-down list. The system will present a graph that tracks that variable.

To see the graph for the currently-selected function, press the View button.

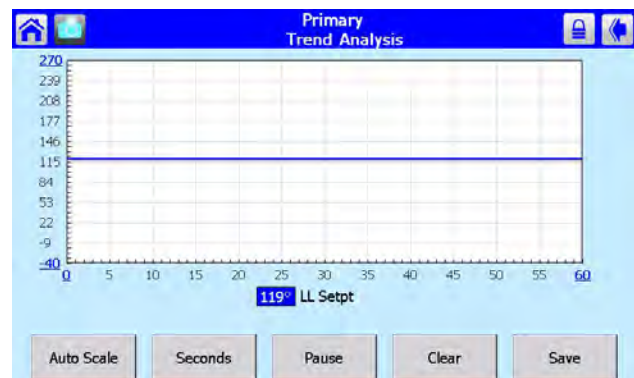

Menu 97. Trend Analysis Graph

The time scale can be adjusted by pressing the Seconds button in the lower left-hand corner.


12.H Control Snapshot

The software allows you to take a “snapshot” of

the current state of the controller, including setup information and operating information. This information can be helpful during troubleshooting.


How to get there –

Home Page <Setup button> Setup Screen <Control Snapshot button> Control Snapshot Screen

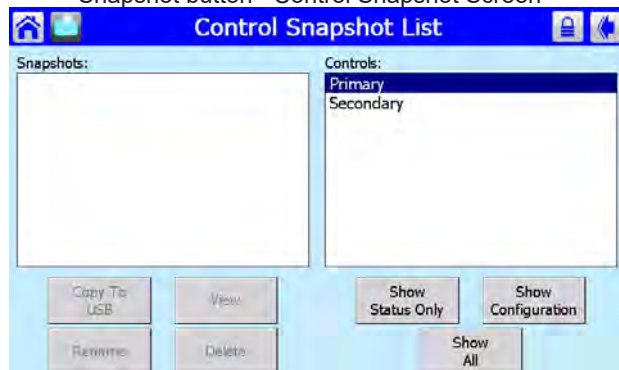

Menu 98. Control Snapshot List Screen

Select one of the controllers listed on the right side of the screen. Press one of the buttons below the right column to see the snapshot. See Menu 99.

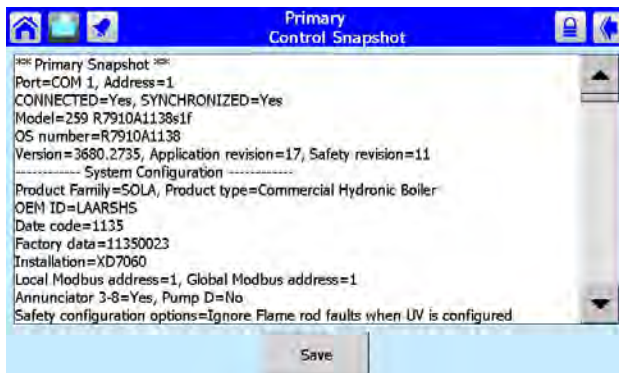

Menu 99. Typical Control Snapshot

The Show Status button captures the current status of the I/O of the control only. Show Configuration captures the current parameter settings and the control setup. You can save the snapshot, give it a name, or send a copy to the USB port.

12.1 Operating Sequence

Initiation

Each controller enters the Initiation sequence after one of these conditions:

- Initial power up
- Voltage fluctuations vary +10% or -15%
- Frequency fluctuations vary $\pm 10\%$
- The demand, limit control input, or TT signals are interrupted during the prepurge period.
- After the Reset button is pressed.
- After a Fault is cleared using the displays.

The Initiation sequence also delays the boiler demand from being energized and re-energized from an intermittent AC line input or control input. If an AC problem exists for more than 240 seconds, a lockout will occur.

Start-Up Checks in a Lead Lag System

For an explanation of Lead Lag operation, see the first part of Section 9. In this section, we will focus on the aspects of Lead Lag that might be helpful in troubleshooting.

When a Lead Lag system is first powered up, the controller acting as the Lead Lag Leader goes through a “synchronization” process. During synchronization, the controller establishes communications with each of the Follower controllers via the Modbus link. The Follower controllers download some setup parameters and operating history information. (On a system with several boilers, this phase can take several minutes.) If the Leader cannot establish communications with one of the Followers, it triggers a Hold or Lockout.

The Leader also checks the status of each of the flap valves. If the Leader cannot determine whether a flap valve is open or closed, or if it cannot locate the correct number of flap valves, it triggers a lockout or hold.

If the system passes the checks described above, each of the individual controller and burner combinations is free to operate in the normal way. The self-check and firing sequence for each individual controller and burner combination is described in the following section.

Burner Ignition Sequence

Here is the start-up sequence following a Lead Lag (LL) Central Heating request:

1. The thermostat used for the LL Central Heat function calls for heat. On a system set up for Lead Lag operation, this will be the System

sensor. (The setpoint or modulation can also be controlled by an external 4 – 20 mA control.)

2. The Boiler pump and System pump are energized. The water temperature in the System loop drops until it reaches the LL Central Heat Setpoint minus the LL Central Heat On Hysteresis value.
3. The controller prepares to start the burner. The controller does a system check, flap valve check, and safety chain test. The blower fan is switched on.
4. The air pressure switch is closed, and the purge rate proving fan rpm is reached. The Pre-Purge time starts.
5. When the Purge time is complete, the purge fan rpm is changed to the Lightoff Rate.
6. When the fan rpm reaches the light-off rpm, the Pre-Ignition time begins.
7. During the Pre-ignition time, the controller energizes the igniter and checks for flame.
8. After Pre-ignition, the control enters the ignition sequence and the gas valve is energized. The flame signal is compared with a preset flame threshold value. If the flame signal is higher than the flame threshold, the gas valve remains on and the burner is allowed to continue to the Run phase. If the flame signal is below the threshold, the controller returns to the Pre-Purge phase and starts the ignition process again.
9. The igniter is turned off at the end of the ignition period.
10. During the Run period, the speed of the burner fan and the firing rate of the burner(s) is modulated in response to changes in demand. (See Section 9)
11. The demand ends when System sensor temperature equals the Lead Lag Central Heat Setpoint plus the Lead Lag Central Heat Off Hysteresis value (approx. +10°F).
12. At the end of the Lead Lag Central Heat request, the burner is switched off. The fan stays on until Post Purge is complete.
13. Any new Lead Lag Central Heat request is blocked for the Anti Short Cycle time.
14. The Boiler pump and System pump remain on during their pump overrun times.
15. At the end of the pump overrun times, the Boiler and System pumps are turned off.

Lead Lag Modulation Sequence

For a detailed explanation, see Section 9.

Domestic Hot Water Priority

The start-up sequence for a Domestic Hot Water request, on a system with Domestic Hot Water priority, is essentially the same as the process we have just described. The Domestic Hot Water loop can be considered as just another heating loop on the system, except the controller can be set to give this loop priority. The input is supplied by an aquastat, rather than a thermostat. Circulation in the Domestic Hot Water loop is provided by a separate pump.

When a Domestic Hot Water demand appears at the same time as a call for heat by Central Heating, the priority feature forces the system to switch to the Domestic Hot Water demand for the priority time. The Domestic Hot Water priority demand forces the controller to operate using the DHW setpoint.

For a detailed explanation, see the material on Domestic Hot Water in Section 9.

Safety Shutdown Functions

Each controller has extensive self-checking and safety features. The controller will shut down the burner and lock it out under any of the following conditions:

During the Synchronization Period:

- Locks out if the Lead Lag Leader cannot locate any of the boilers, or cannot download information from any of the controllers.
- Locks out if the Lead Lag Leader cannot locate any of the flap valves, or cannot determine the status of a valve (Open or Closed).
- Locks out if a safety-related parameter has been changed, but the change has not been verified and the controller has not been reset using the button on the front of the control.

During the Initiate Period:

- All of the checks made under Synchronization, plus:
- Locks out if A/C line power errors occur.
- Locks out if four-minute Initiate period has been exceeded.

During the Standby Period:

- All of the checks made under Synchronization, plus:
- Locks out if the Flame signal is present after 240 seconds.
- Locks out if the Preignition Interlock is open for more than 30 seconds.
- Locks out if the Interlock Start check feature is enabled and the Interlock String (including the Airflow Switch) is closed for 120 seconds with the controller closed, perhaps indicating a jumpered or welded Interlock.
- Locks out if the Main Valve terminal is energized.
- Locks out if an internal system fault occurs.

During the Prepurge Period:

- All of the checks made under Synchronization, plus:
- Locks out if the Preignition Interlock opens anytime during the Prepurge period.
- Locks out if the Flame signal is detected for more than 10 seconds during Prepurge.
- Locks out if the Light Off Rate Fan RPM or Low Fire Switch is not reached within four minutes and fifteen seconds after the blower is commanded to drive to the light off rate fan RPM at the end of Prepurge.
- Locks out if the Main Valve terminal is energized.
- Locks out if an internal system fault occurs.

During the Pre-Ignition Time:

- All of the checks made under Synchronization, plus:
- Locks out if the Main Valve terminal is energized.

During the Main Flame Establishing Period (MFEP):

- All of the checks made under Synchronization, plus:
- Locks out if no flame is present at the end of the appropriate number of ignition retries.
- Locks out if an internal system fault occurs.

During the Run Period:

- All of the checks made under Synchronization, plus:
- Locks out if an internal system fault occurs.
- Locks out if a safety-related parameter has been changed, but the change has not been verified and the controller has not been reset using the button on the front of the control.

During the Postpurge Period.

- All of the checks made under Synchronization, plus:
- Locks out if the Preignition Interlock does not close in five seconds.
- Locks out if the Main Valve terminal is energized.
- Locks out if an internal system fault occurs.
- Locks out if flame is sensed 240 seconds after the Run period.

SECTION 13 Replacement Parts

Use only genuine Manufacturer replacement parts.

13.A General Information

To order or purchase parts for this unit, contact your nearest Manufacturer dealer or distributor. . (See the back cover for addresses, and for telephone and fax numbers.)


13.B Parts List

Key No.	Part No. - Model 1000	Part # Model 1200	Description
1	10J1213	10J1213	RAIL, FRONT LEG, JACKET
2	E2334702	E2344904	SWITCH, PRESSURE, AIR/GAS, 0.18" SET POINT
3	E2334900	E2334703	SWITCH, PRESSURE, AIR/GAS, 0.15" SET POINT
4	10J7212	10J7212	SPARK GENERATOR
5	10J7014	10J7014	PANEL, MOUNTING, SPARK GENERATOR
6	10J1212	10J1212	RAIL, SIDE TOP, JACKET
7	10J1214	10J1214	RAIL, TOP, FRONT
8	10J7007	10J7007	BRACKET, SLIDE, TOP
9	RS2073903	RS2073903	GASKET, STRIP, FOAM, ADHESIVE, 3/8 X 1/8 X 27.00 LG
10	10J3038	10J3038	BRACKET, PIPE
11	10J7006	10J7006	BRACKET, MOUNTING, SLIDE, TOP
12	10J1270	10J1270	BRACKET, ANGLE, STIFFENING, CONTROL MOUNT
13	10J7013	10J7013	BRACKET, MOUNTING, SIDE, BOTTOM
14	10J1204	10J1204	CROSS BRACE, HX, BASE
15	10J1205	10J1205	SUPPORT
16	10J1207	10J1207	BRACKET, LIFT, NT 1.0
17	10J1203	10J1203	CHANNEL, BASE
18	10J1206	10J1206	RAIL, HX
19	10J1238	10J1238	BRACKET, LEVELING, HEX.
20	F2031500	F2031500	MOUNT, LEVELING, HEX. 1/2-13 THD X 2-11/16 LG
21	10J1210	10J1210	WELDMENT, BASE
22	12J1247	12J1247	BRACE, JACKET, NT
24	E2341200	E2341200	BOX, ELECTRICAL, SQUARE, 4 X 1.5 IN
25	R2074402	R2074402	GASKET, CLOSED CELL, .75" X .06" X 4.5" CUT LG.(QTY 2).
26	10J3025	10J3025	COVER, ACCESS, FIELD CONNECTIONS
27	10J2520	10J2520	PLATE, VENT ADAPTER ASS'Y
28	RS2073903	RS2073903	GASKET, STRIP, FOAM, 3/8 X 1/8, ADH X 36"
29	10J3018	10J3018	COVER
31	S2116500	S2116500	GROMMET, 2" PIPE, FLEX
33	R10J1218	R10J1218	REAR PANEL, ASSY WITH GASKET
	RS2073903	RS2073903	GASKET, STRIP, FOAM, ADHESIVE, 3/8 X 1/8 X 27.00 LG
	10J1216	10J1216	REAR PANEL
34	S2014100	S2014100	GROMMET, SEALING, PIPE, 3/4" DIA.
35	10J3019	10J3019	COVER
36	S2116600	S2116600	GROMMET, 1 1/2" PIPE, FLEX
37	10J3031	10J3031	PLATE, RETAINER, GASKET, HX

Key No.	Part No. - Model 1000	Part # Model 1200	Description
38	10J3030	10J3030	GASKET, HX OUTLET
68	10J1265	10J1265	PANEL ASSY, DOOR
69	10J1268	10J1268	CLAMP, ATTACHING, BEZEL
70	10J1262	10J1262	BEZEL, CONTROL
71	F2032400	F2047200	PLUG, PUSH IN, PLASTIC 2"
72	A2117600	A2117600	2" GAUGE, PRESS/TEMP, REMOTE
73	R10J1251	R10J1251	PANEL, FRONT, TOP WITH GASKETS & SCREWS
74	R2073804	R2073804	GASKET, D-SHAPE, RUBBER, .75 X 46.5" LG
76	10J1240	10J1240	BRACKET, T & P GAUGE MOUNTING
77	E2339800	E2339800	DISPLAY, TOUCH CONTROL, HONEYWELL, LARGE
78	10J1243	10J1243	BRACKET, MOUNTING, LARGE DISPLAY
79	E2349900	E2349900	ROCKER SWITCH, 30 AMP, DOUBLE POLE SINGLE THROW
80	17J1241	17J1241	BRACKET, SWITCH MOUNTING
81	R10J3057	R10J3057	FRONT PANEL, GASKET ASSY WITH GASKET & SCREWS
82	R2073812	R2073812	GASKET, D-SHAPE, RUBBER,
	R2073903	R2073903	GASKET, STRIP, FOAM, ADHESIVE, 3/8 X 1/8
83	10J1231	10J1231	Cross brace, Front HX, BASE
84	R10J1221	R10J1221	PANEL, SIDE, ASSY WITH GASKE TS
85	R2074405	R2074405	GASKET, CLOSED CELL, .75" X .06" X 47"
	R2073909	R2073909	GASKET, STRIP, FOAM, ADHESIVE, 3/8 X 1/8 X 53" LG
86	R10J1234	R10J1234	TOP CENTER SUPPORT
	R2073903	R2073903	GASKET STRIP, FOAM 3/8"X1/8"X5.75"L
87	R10J1245	R10J1245	BRACKET, SEALING, BEZEL
	R2074503	R2074503	EDGE GRIP RUBBER SEAL 3/64 -9/64 X 26.625 LG
	F2022100	F2022100	SCREW, SELF TAPPING, #8 X 3/8" LG. TYPE A, HEX HEAD
88	R10J1219	R10J1219	TOP, CASE ASSY
89	R2073812	R2073812	GASKET, D-SHAPE, RUBBER, 14'
	R2074405	R2074405	GASKET, CLOSED CELL, .75" X .06" X 26.75"
90	RA2138801	RA2138801	PRESSURE RELIEF VALVE (75PSI)
	RA2138900	RA2138900	PRESSURE RELIEF VALVE (125PSI)
91	S2117900	S2117900	O-RING, 1 7/16" OD X 1/16, BUNA-N
92	A2116700	A2116700	VENTURI. GAS/AIR MIXING
93	RS2105200	RS2105200	O-RING, 4MM THICK X 110MM ID
94	RA2113100	RA2120400	BLOWER, COMBUSTION AIR
100	S2116800	S2113100	GASKET, FAN FLANGE
		S2107500	GASKET, FAN FLANGE
101	P0026800	P0026800	PLUG, PIPE, BRASS, 1/4" NPT
	P2080300	P2080300	PLUG, PIPE, STAINLESS STEEL, 1/4" NPT
102	P0071500	P0071500	PLUG, 3/4" STEEL
	P2080200	P2080200	PLUG, 3/4" STAINLESS STEEL
103	RE2319900	RE2319900	SENSOR, TEMPERATURE, WATER, DUPLEX
104	R1-592	R1-592	COIN VENT VALVE
105	F2029100	F2029100	TIE, CABLE, 14-3/4 LONG X 0.31" WIDE, HEAT STABILIZED
106	S2117801	S2117801	HEAT EXCHANGER, GIANNONI TRIO
107	10J4047	10J4047	CLIP, QUICK DISCONNECT
108	S2116900	S2116900	O-RING, 61mm x 53mm x 4mm

Key No.	Part No. - Model 1000	Part # Model 1200	Description
109	E2339400	E2339400	THERMISTOR, NTC, 1/8" NPT, STAINLESS STEEL WELL
110	E2359200	E2359200	SENSOR, TEMPERATURE, STACK, 1/4" NPT
111	P2079200	P2079200	PLUG, PIPE, 1" NPT, CI (Boiler)
	P0001100	P0001100	BUSHING 1" NPT X 3/4" NPT BLK (Boiler CSD-1)
	P2080400	P2080400	PLUG, PIPE, 1" NPT, STAINLESS STEEL (Heater)
	P2081700	P2081700	BUSHING 1" NPT X 3/4" NPT STAINLESS STEEL (Heater CSD-1)
112	P2079000	P2079000	VALVE, CHECK, 1/2" X 1/4 BSPP
113	RP2078900	RP2078900	WELL, IMMERSION, 1/2" NPT, 2" LONG W/ CLIP
114	P2079100	P2079100	CLIP, LOCKING, IMMERSION WELL
115	P2016000	P2016000	PLUG, 1/2" STEEL (Boiler)
	P2080500	P2080500	PLUG, 1/2", STAINLESS STEEL (Heater)
116	10J4040	10J4040	PIPE, WATER OUTLET ASSY (Boiler)
	10J4060	10J4060	PIPE, WATER OUTLET STAINLESS STEEL, ASSY (Heater)
118	10J4050	10J4050	PIPE, WATER INLET ASSY(Boiler)
	10J4080	10J4080	PIPE, WATER INLET, STAINLESS STEEL, ASSY (Heater)
119	70-236	70-236	PIPE PLUG, MALLEABLE IRON, BLACK, 1/8 NPT (Boiler)
	P2042300	P2042300	PIPE PLUG, STAINLESS STEEL, 1/8 NPT (Heater)
120	V2000200	V2000200	VALVE, GAS, MANUAL, BALL TYPE, 3/4" NPT
121	10J6005	10J6005	NIPPLE, 1 1/2 NPT, SCHED 40, W/ 3/4 NPT PORT
122	10J6001	10J6001	NIPPLE, FLANGED, 3/4 NPT, NT 1000 and NT 1200
123	S2117900	S2117900	O-RING, 1 7/16" OD X 1/16, BUNA-N
124	V2019600	V2019600	VALVE, GAS, DUNGS, GB-ND 057 XP
125	P2068500	P2068500	FLANGE, GAS VALVE, 3/4" NPT
126	10J6001	10J6001	NIPPLE, FLANGED, 3/4 NPT
127	F2023300	F2023300	SCREW, M5-.8 X 12MM, ALLEN SOC HD
128	F2023700	F2023700	WASHER, M5, LOCK, INTERNAL TOOTH
129	10J6006	10J6006	PIPE, GAS, U SHAPE, 3/4 NPT
130	P2076500	P2076501	NIPPLE, 1-1/2" NPT X 30" LG. BLK
131	P0030700	P0030700	1.5 INCH UNION NPT THREADS
132	P2036800	P2036800	CAP, PIPE, BLK IRON, 1-1/2" NPT
133	10J6002	10J6002	TEE, 1-1/2 NPT, MALE, W 1/4 PORT
134	R0384800	R0384800	VALVE, GAS, MANUAL, BALL TYPE, 1-1/2" NPT
135	F2026400	F2026400	SCREW, M4 X 30MM, CHEESE HD
136	P2014200	P2014200	PLUG, HD. 1/4" NPT, SQ SOCKET, BLK
137	R10J5150	R10J5150	TRANSITION ASSEMBLY, VENTURI W/ PARTS
	V2018600	V2018600	ADAPTER, 4MM HOSE BARB X M5-.8 W/WASHER
	Q0068441	Q0068441	1/4" TUBE, PRESSURE SENSING, NT 6.26" LONG
	P2081000	P2081000	COUPLING, NO-HUB, SHIELDED, 2"
	P0004101	P0004101	FITTING, 1/4 COMP X 1/4 NPT, DRILLED OUT
	10J5153	10J5153	ELBOW ASSY, VENTURI TRANSITION
184	RS2116200	RS2114300	TRANSITION, "FLAPPER"
185	RF2029200	RF2029200	SCREW, M5-0.8 X 16 MM, SOC HD
186	S2117100	S2117100	GASKET, BURNER
187	R2071700	R2071701	BURNER W/ GASKET
188	R2071500	R2071500	IGNITOR, SPARK, W/ GASKET

Key No.	Part No. - Model 1000	Part # Model 1200	Description
189	RW2013300	RW2013300	GASKET, IGNITOR
190	S2112600	S2112600	FLANGE NUT, M6 SERRATED
191	RS2114200	RS2114200	ASSEMBLY, DOOR, HEAT EXCHANGER
192	T2110600	T2110600	TILE, REFRACTORY, FRONT, COMBUSTION CHAMBER
193	T2110700	T2110700	TILE, REFRACTORY, REAR
194	S2114501	S2114501	HEAT EXCHANGER
195	S2112700	S2112700	SCREW, M4 X 8
196	R2071400	R2071400	FLAME SENSOR, W/ GASKET
197	RW2013400	RW2013400	GASKET, FLAME SENSOR, NT
198	10-596	10-596	TEE, 1/4" BARB, PLASTIC
199	Q0078806	Q0078806	TUBE, SILICONE, .188 ID X .32 OD X 3 FT
200	F2013000	F2013000	CLAMP, BAND, SPRING, 5/16" (8mm) INTERNAL DIAMETER
201	R2074601	R2074601	CONTROL MODULE PRIMARY
	R2074602	R2074602	CONTROL MODULE SECONDARY
	R2074603	R2074603	CONTROL MODULE PRIMARY (CSD-1)
	R2074604	R2074604	CONTROL MODULE SECONDARY (CSD-1)
202	10J7024	10J7024	BRACKET, SLIDE STOP, CONTROL PANEL
203	A0014300	A0014300	ALARM BELL OPTIONAL
204	RE2217700	RE2217700	HIGH LIMIT
205	E2327800	E2327800	RELAY
206	10J720700	10J720700	TRANSFORMER
207	R10J7008	R10J7008	PANEL ASSY, CONTROL, SLIDING (WITH DECALS)
	10J7019	10J7019	LABEL, HIGH VOLTAGE CONNECTIONS, TB1, TB2 & TB5
	10J7021	10J7021	LABEL, LOW VOLTAGE CONNECTIONS, TB3, TB4
	10J7025	10J7025	LABEL, LOW VOLTAGE CONNECTIONS, TB6 & TB7
	F2028400	F2028400	TIE, CABLE, HEAT STABILIZED, 5"
208	RE2076500	RE2076500	LWCO KIT, NT
209	F2024900	F2024900	HOSE CLAMP, #12, 1.25-.68
210	A0114400	A0114400	HOSE, 90, .875 ID, RUBBER
211	A2119200	A2119200	SWITCH, SUBMINIATURE, LIQUID LEVEL CONTROL
212	A2119000	A2119000	CAP, CONDENSATE TRAP
213	A2119700	A2119700	TRAP, CONDENSATE
214	10J126900	10J126900	BRACKET, MOUNTING, TRAP
215	P2073200	P2073200	COUPLING, 3/4" TO 1/2", REDUCING, PVC
216	P2067701	P2067701	PIPE, PVC, 1/2" X 1.49 LONG, SCH 40
217	10J1237	10J1237	BRACKET, HOSE, TRAP
N.S.	A2119400	A2119400	SPHERE, 1.00 DIA
N.S.	F2031800	F2031800	SCREW, #10 X 1/2, PHILLIPS PAN HEAD, STEEL, BLACK OXIDE, TYPE 25
N.S.	F2032000	F2032000	RETAINER, SPLIT RING, #8
N.S.	F2031900	F2031900	SCREW, CAPTIVE, #8-32 X 15/16"
N.S.	10J126300	10J126300	COVER, CONTROL, SLIDING
N.S.	10J4052	10J4052	FLOW SWITCH
N.S.	CR2032	CR2032	BACK UP BATTERY FOR TOUCHSCREEN DISPLAY
N.S.	RE2353601 (2)	RE2353601 (2)	THERMO SWITCH (front)
N.S.	RE2354000 (2)	RE2354000 (2)	THERMO SWITCH (rear)
N.S.	A2133622	A2133622	PUMP, (BOILER, OPTIONAL)
	A2133619	A2133619	PUMP, (HEATER, OPTIONAL)
N.S.	E2311100	E2311100	CONTACTOR, (PUMP RELAY)

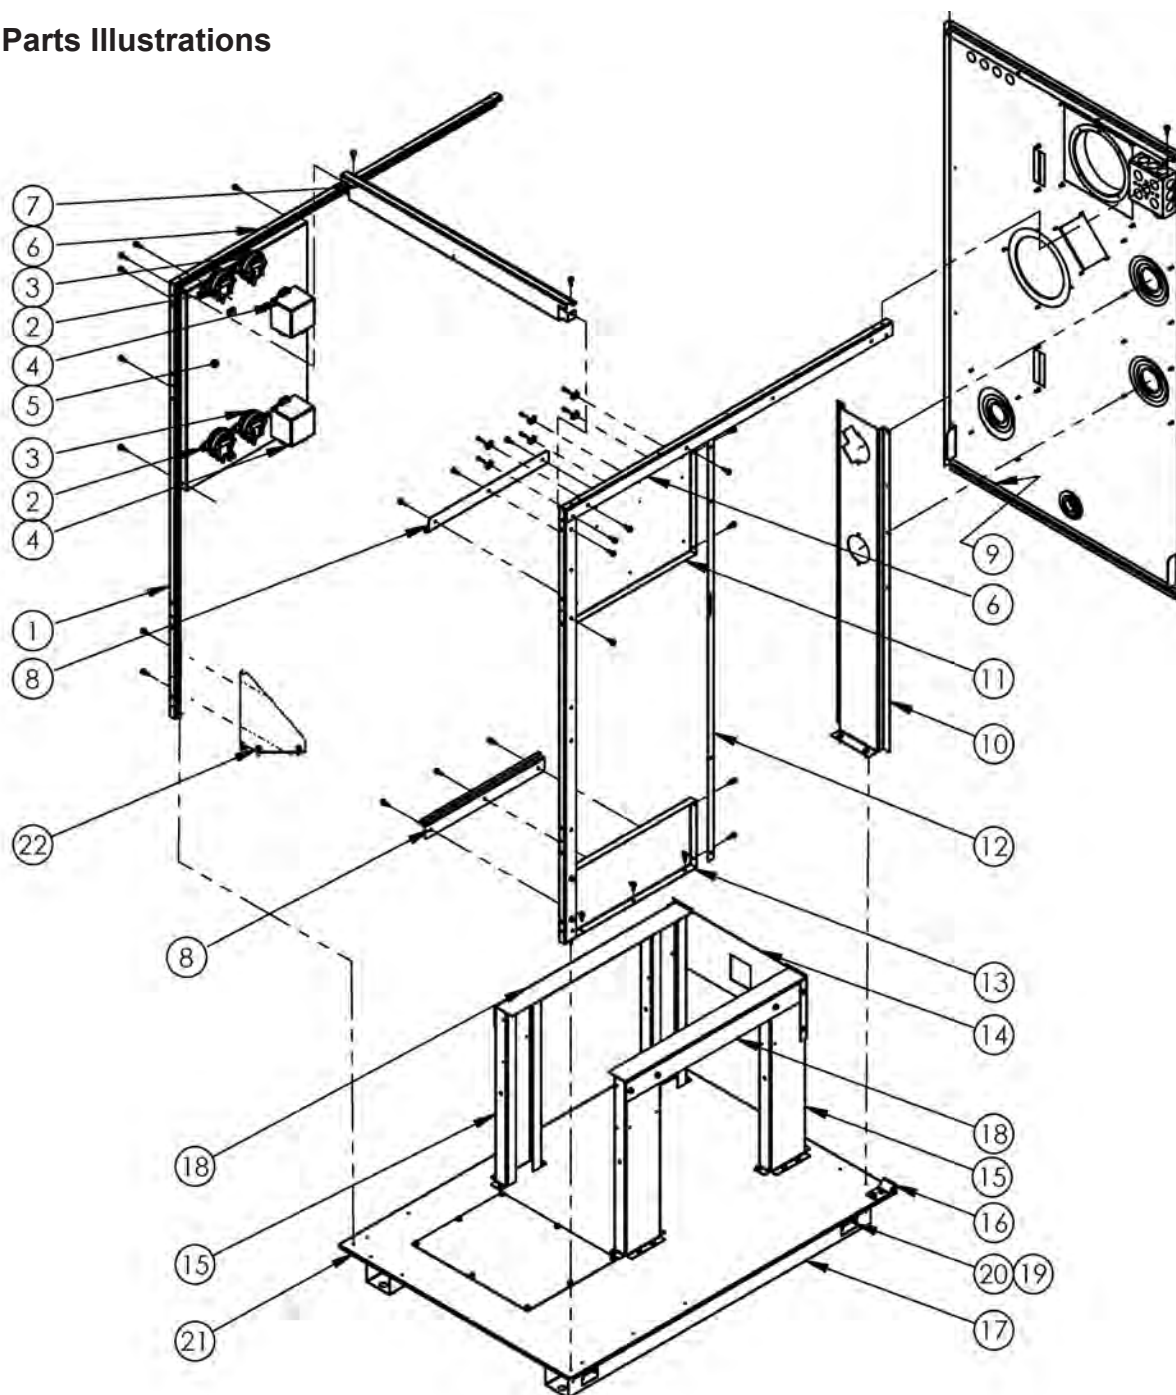13.C Parts Illustrations**Figure 46. Machine Frame - NT1000 and NT1200**

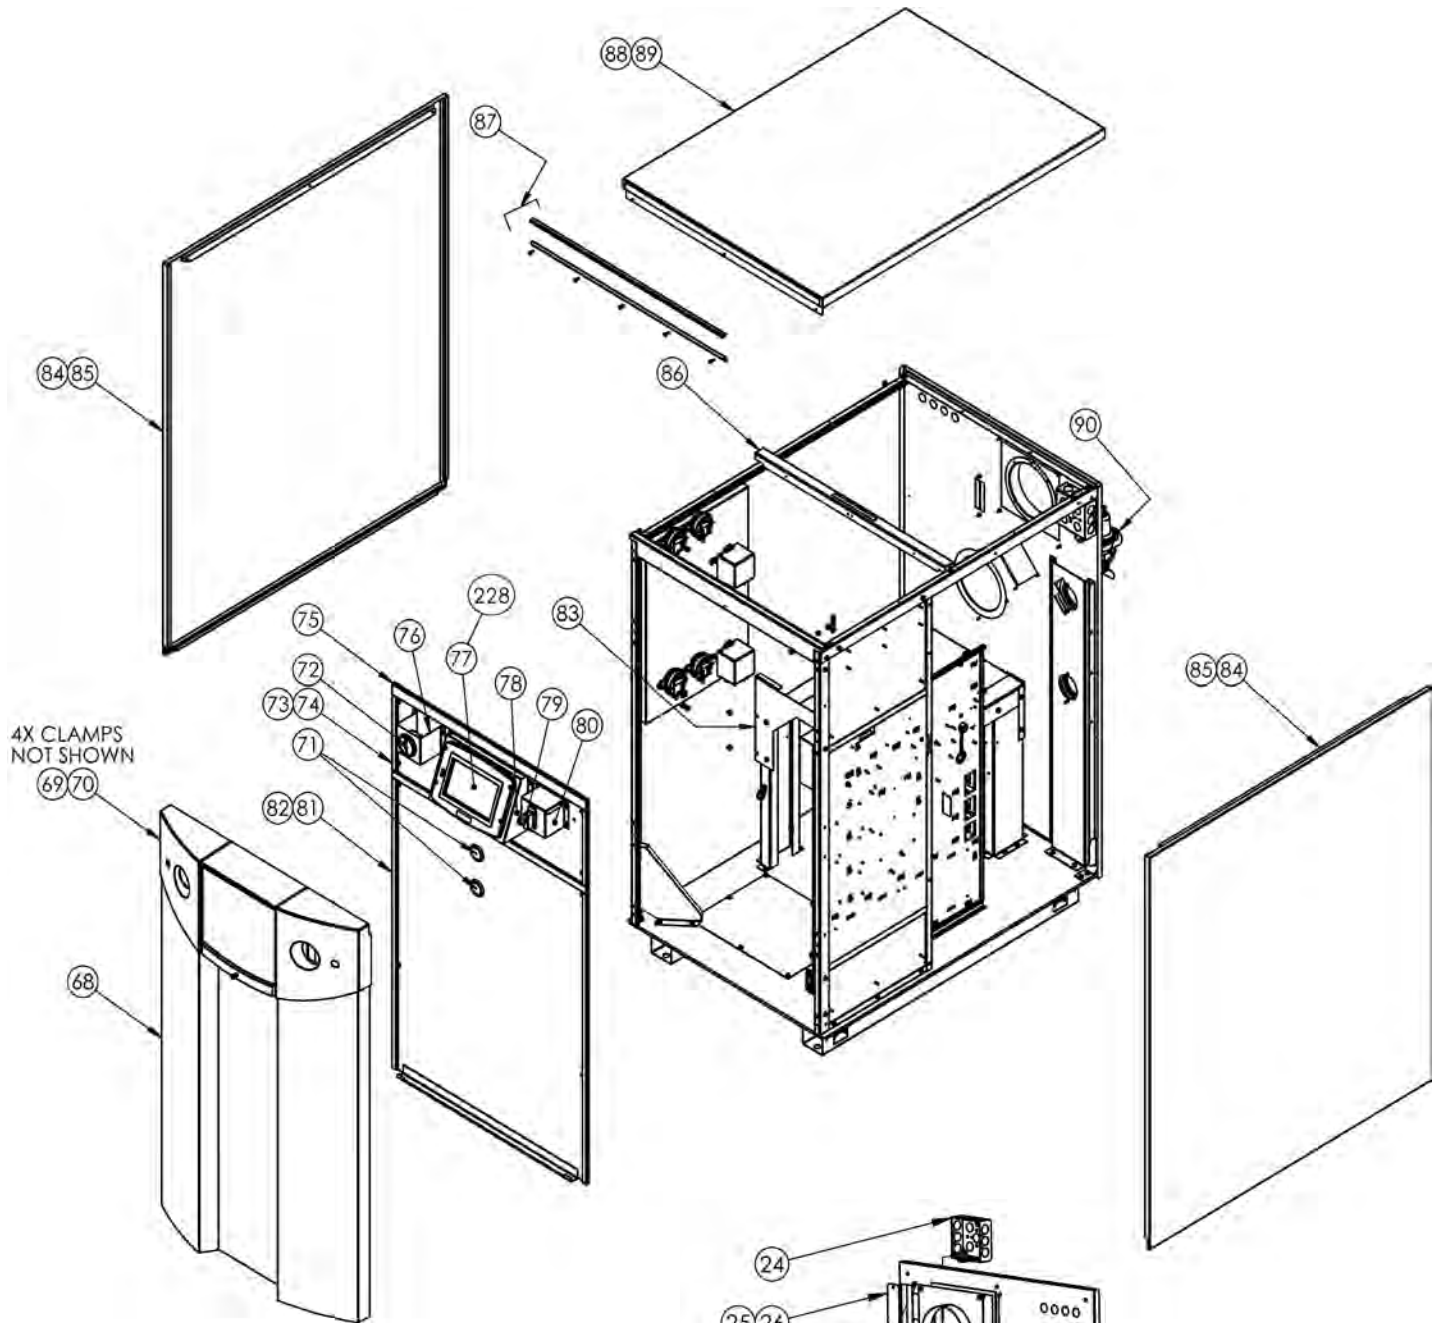


Figure 47. Front Panels and Covers

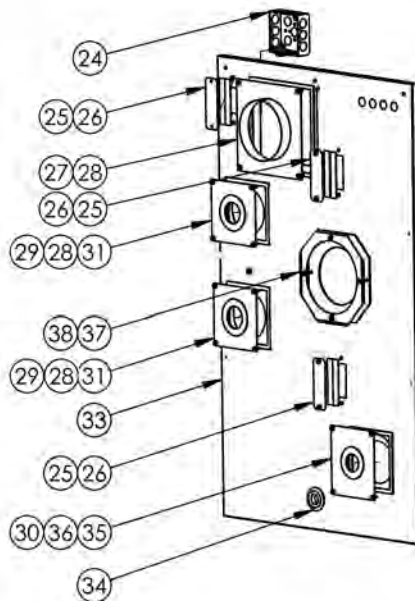


Figure 48. Rear Panel

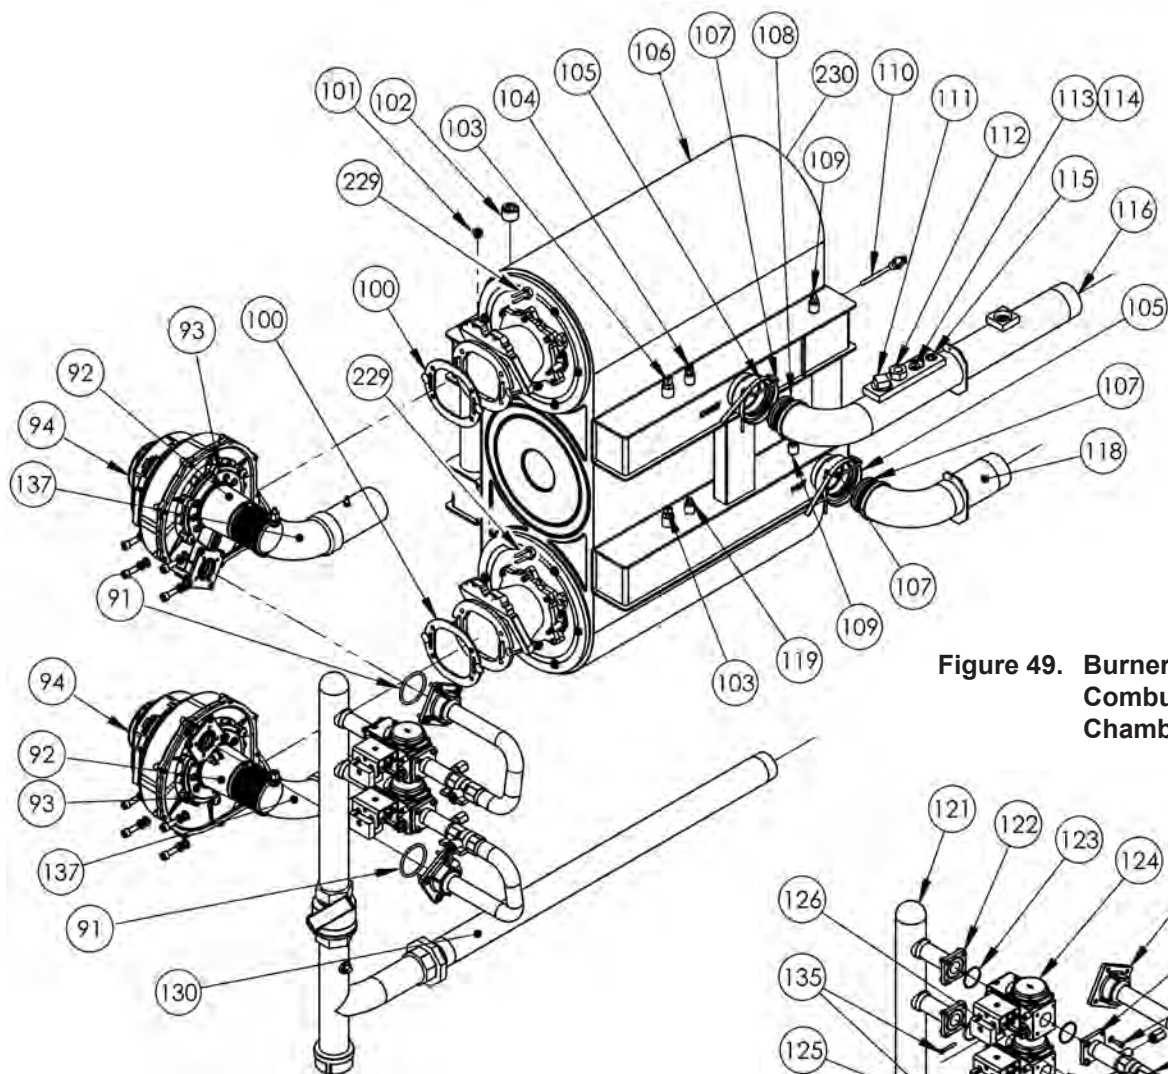


Figure 49. Burners and Combustion Chamber

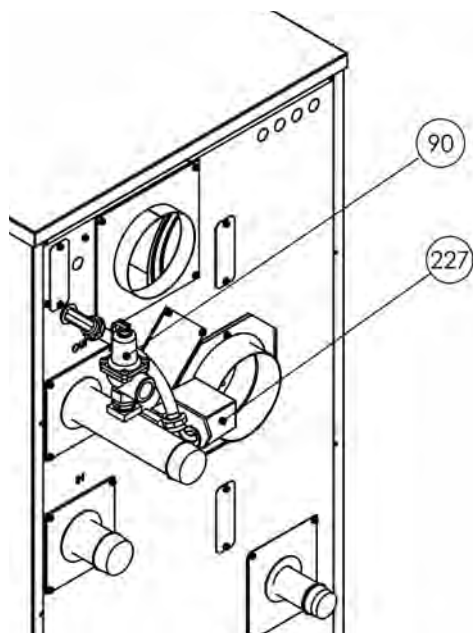


Figure 50. Flow Switch

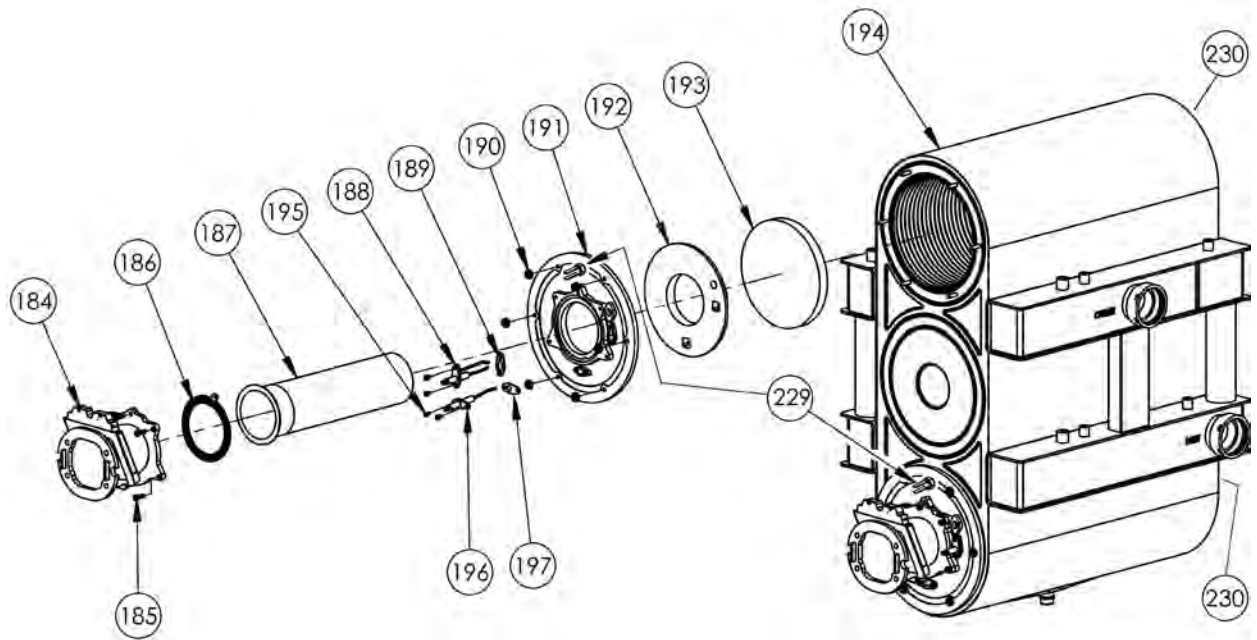


Figure 51. Heat Exchanger Components

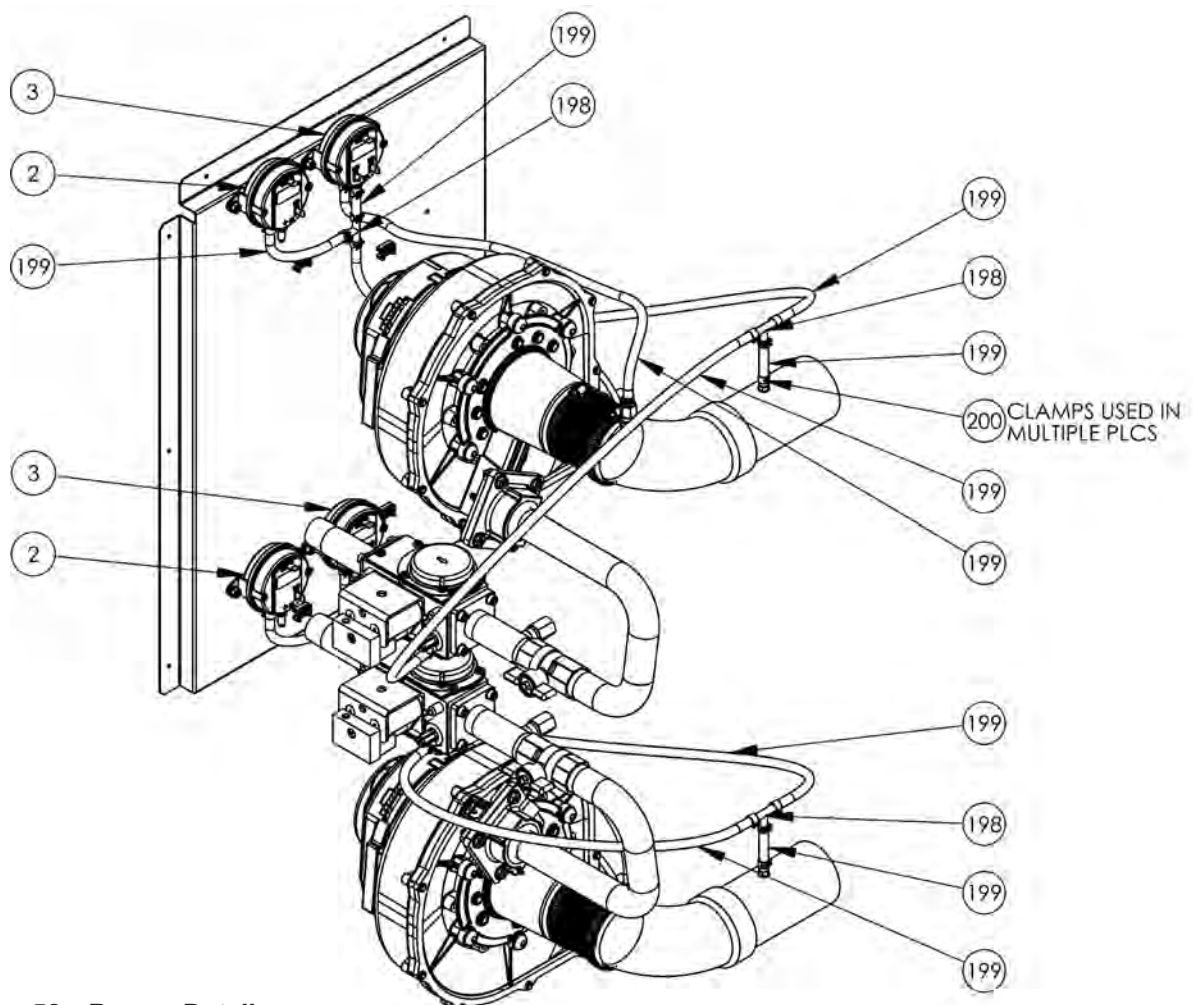


Figure 52. Burner Detail

NeoTherm LC Boilers and Water Heaters

NOT SHOWN: ITEM 227, COVER, HIGH VOLTAGE

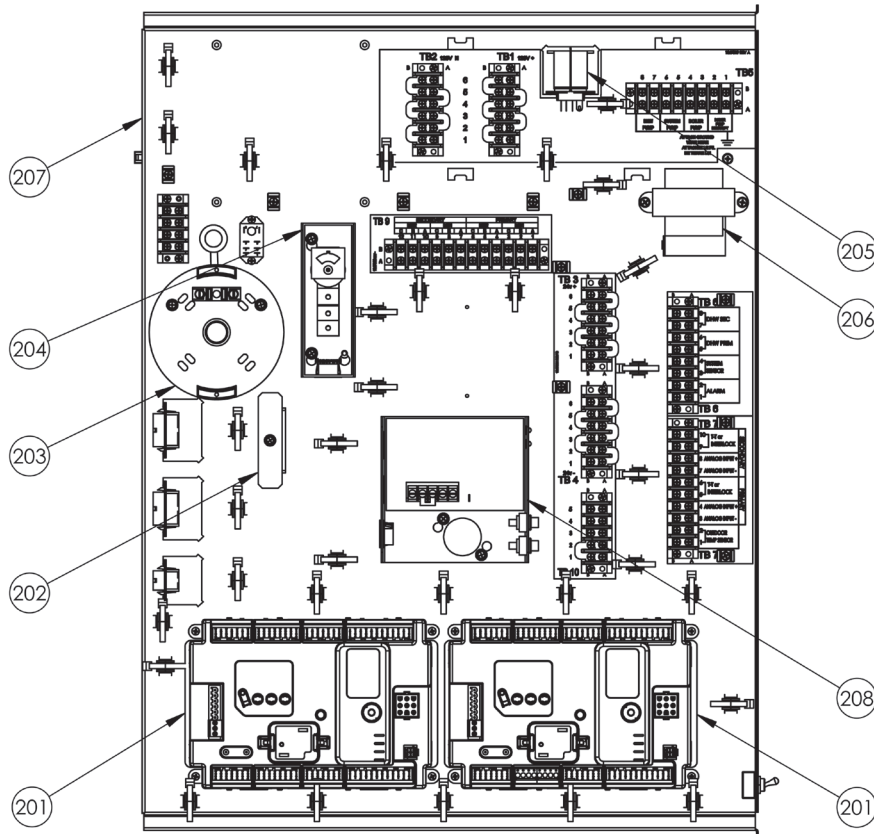


Figure 53. Electronic Components


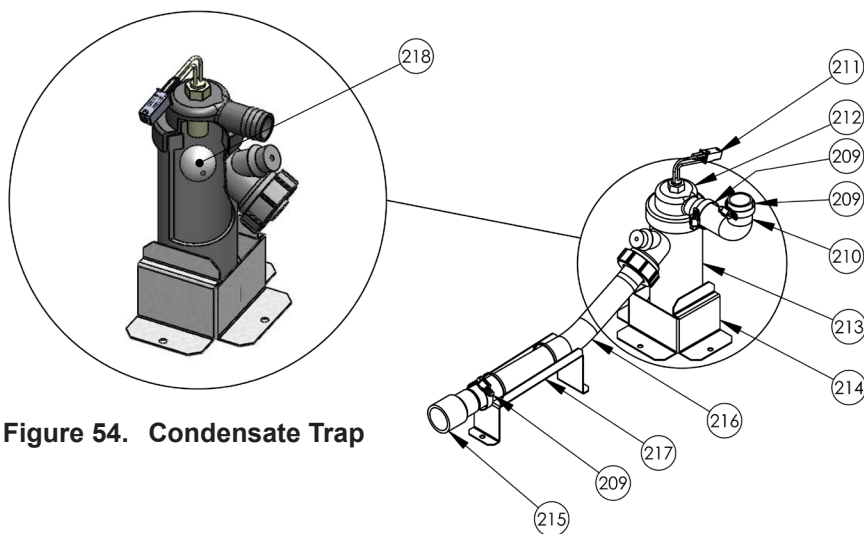


Figure 54. Condensate Trap

All Manuals (Install & Operate, Start Up, and Service Manuals) can be downloaded at

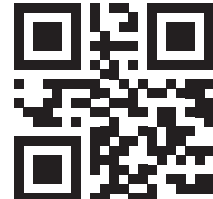

www.laars.com

For LAARS Product and Service VIDEOS



Dimensions and specifications subject to change without notice in accordance with our policy of continuous product improvement.



H2352900H



Customer Service and Product Support: 800.900.9276 • Fax 800.559.1583
Headquarters: 20 Industrial Way, Rochester, NH, USA 03867 • 603.335.6300 • Fax 603.335.3355
9 Brigen Gate, Halton Hills, Ontario, Canada L7G 0A3 • 905.203.0600 • Fax 905.636.0666
www.Laars.com

Printed in U.S.A. © Manufacturer 23-06 Document 1255H