

Installation and Operation
Instructions for

THE LAARS E-THERM™

**COMMERCIAL
AIR-TO-WATER
NATURAL REFRIGERANT
HEAT PUMP WATER HEATER**



FOR YOUR SAFETY: This product must be installed and serviced by a professional service technician, qualified in hot water heater installation and maintenance. Improper installation and/or operation could cause serious injury, property damage, or death. Improper installation and/or operation will void the warranty.

⚠ WARNING

Installer must comply with startup and installation instructions to avoid a dangerous situation.

⚠ AVERTISSEMENT

D'installation doit se conformer aux instructions d'installation et de démarrage pour éviter une situation dangereuse.

H2422300B

LAARS®
Heating Systems Company

TABLE OF CONTENTS**SECTION 1 SAFETY**

1.A	Safety Notes	4
-----	--------------------	---

SECTION 2 GENERAL INFORMATION

2.A	Introduction	5
2.B	Warranty.....	5
2.C	Model Identification (Nomenclature) ..	5
2.D	Configurations and Options	6
2.D.1	Indoor Unit Configuration Includes:.....	6
2.D.2	Factory Build Configurations Without Pump	6
2.D.3	Factory Mounted Options: Evaporator Coil Corrosion Protection ...	6
2.D.4	Field Installed Accessories Snow Shields / Weather Hoods	6
2.E	Unit Overview.....	7
2.F	Components.....	8
2.G	Dimensions	10
2.H	Unpacking and Handling.....	12
2.I	Locating the Unit	14
2.I.1	Altitude	14
2.I.2	Clearances and Mounting Instructs	14
2.I.3	Outdoor Installations	14
2.I.4	Indoor Installations.....	14
2.I.5	Multiple Unit Installations	14

SECTION 3 WATER PIPING 16

3.A	General Water Flow Information	16
3.B	Water Flow & Headloss Data	16
3.C	Water Connections.....	16
3.C.1	General Recommendations For Piping Connections	16
3.C.1.a	Recommended Piping Components.....	17
3.C.2	Water Quality	18
3.D	Suggested Piping Systems	18
3.D.1	Primary Domestic Hot Water Storage .	18
3.D.2	Temperature Maintenance Heating	19
3.D.3	Swing Tanks	19
3.D.4	Series Piping.....	20
3.D.5	Typical Laars Stratified Tank	23
3.E	Freeze Protection.....	24
3.E.1	Factory Installed Freeze Protection	24
3.E.2	Field Installed Freeze Protection	24
3.E.3	Heat Trace Emergency Power Connection	24

SECTION 4 EVAPORATOR DRIP TRAY 25**SECTION 5 ELECTRICAL CONNECTIONS**

5.A	Electrical Warnings	25
5.B	Main Power Connections	25
5.B.1	Grounding Instructions	25
5.B.2	Electrical Requirements	26
5.B.3	High Voltage.....	26
5.C	Field Connections	27
5.C.1	Heat Demand Source	27
5.C.2	External Fan connections	27
5.C.3	Alarm Dry Contacts.....	27
5.C.4	External Water Pump Option	28

SECTION 6 CONTROL OPERATION

6.A	CO2 Process and Instrumentation Diagram (P & ID) Menu	30
6.B	Water Process and Instrumentation Diagram (P & ID) Menu.....	30
6.B.1	Auto Mode: Start Up	31
6.B.2	Auto Mode: Heating	31
6.B.3	Auto Mode: Defrost.....	32
6.C	Security	33
6.D	Service Menu (User Security Level) ...	36
6.D.1	Alarm History	36
6.D.2	Analog Inputs	37
6.D.3	Analog Output Channels.....	38
6.D.4	Digital I/O's.....	38
6.D.4.a	Inputs	38
6.D.4.b	Outputs	39
6.D.5	Data Logging.....	39
6.D.6	IP Address.....	40
6.D.7	Diagnostics	40
6.E	Service Menu (Installer Security Level)	41
6.E.1	Alarm History	42
6.E.2	Analog Inputs	42
6.E.2.a	Analog Inputs, Calibrate.....	43
6.E.2.b	Analog Inputs, Info	43
6.E.3	Analog Outputs	44
6.E.4	Digital I/O's.....	45
6.E.4.a	Inputs	45
6.E.4.b	Outputs	45
6.E.5	Data Logging.....	46
6.E.5.a	Outputs	46
6.E.6	IP Address.....	47
6.E.7	Diagnostics	48
6.E.7.a	Diagnostics Menu A	48
6.E.7.b	Diagnostics (More Menu A).....	48
6.E.8	Alarm Status Viewer.....	49

6.E.8.a	Alarm Status Action.....	49
6.E.9	Compressor	50
6.E.10	Defrost	50
6.E.11	Evaporator Fans	51
6.E.12	Evap Diff Press	51
6.E.13	Gas Cooler Valve	52
6.E.14	Heat Demand Source	52
6.E.15	Manual Mode	53
6.E.15.a	Manual Mode, Menu 2	53
6.E.16	Water Pump	54
6.E.17	PID Help.....	54
6.E.18	Other Settings.....	55
6.E.19	Power Meter Option for Commercial Heat Pump Water Heater.	56

SECTION 7 STARTUP AND SHUTDOWN

7.A	Initial Startup	58
7.A.1	Refrigerant Charge	58
7.A.2	Power Phase Rotation	58
7.A.3	Water Side Fill.....	58
7.A.4	Preliminary Electrical and Control Verification.....	59
7.A.5	Initial Startup Sequence.....	60
7.B	Normal Shut Down.....	60
7.C	Loss of Electrical Power Shut Down ...	60

SECTION 8 SYSTEM MAINTENANCE 61

SECTION 9 ALARMS AND FAULTS 62

SECTION 10 REPLACEMENT PARTS



10.A	Outer Components.....	66
10.B	Refrigerant and Water Components .	68
10.C	Control Panel (25Y7100)	70
10.D	High Voltage Panel (25Y200).....	70



SECTION 1 Safety

1.A Safety Notes

Safety Notes are used throughout this manual to bring attention to the presence of hazards with various risk levels and to offer important information concerning the life of this product. There are 3 basic types.

1	 WARNING	Indicates an imminently hazardous situation which, if not avoided, can or will result in death or serious injury and can or will result in catastrophic property damage.
2	 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in moderate injury and/or property damage.
3	NOTE:	Indicates instructions that are important to that topic but not related to personal injury or property damage.

WARNING

This unit must be installed in accordance with the procedures detailed in this manual, or the manufacturers warranty will be voided. The installation must conform to the requirements of the local jurisdiction having authority. Any modifications to this water heater, its controls, or wiring may void the warranty. If field conditions require modifications, consult the factory representative before initiating such modifications.

WARNING

System contains refrigerant under very high pressure. Do not tamper with the system. It must be serviced by qualified persons only.

WARNING

This equipment contains **Refrigerant R744** which, when released in confined spaces, can cause asphyxiation. Care must be taken to prevent buildup in confined spaces as R744 displaces oxygen and thus exposure in saturated areas will lead to light headedness, unconsciousness, and possibly death from asphyxiation.

Additionally the R744 is under pressure and care must be taken when working near the compressor and the various supply lines. Ruptures to the pressurized gas system of this unit can cause serious injury and possibly death.

When servicing, only R744 may be used as a replacement refrigerant.

AVERTISSEMENT

Le système contient un frigorigène sous très haute pression. Ne pas modifier le système. L'entretien doit être confié à une personne qualifiée.

WARNING

Electrical Shock Hazard

Electrical shock can cause severe injury, death or property damage. Disconnect the power supply before beginning installation or changing the wiring to prevent electrical shock or damage to the equipment. It may be necessary to turn off more than one power supply to disconnect.

All electrical wiring is to be done in accordance with local codes, or in the absence of local codes, with: 1) The National Electrical Code ANSI/NFPA No. 70 - latest Edition, or 2) CSA STD. C22.1 "Canadian Electrical Code - Part 1." This appliance must be electrically grounded in accordance with these codes.

WARNING

CANCER AND REPRODUCTIVE HARM.
WWW.P65WARNINGS.CA.GOV.

AS REQUIRED BY THE STATE OF CALIFORNIA PROPOSITION 65.

WARNING

A means for main unit disconnection must be incorporated in the fixed supply power wiring in accordance with national and local codes. External main disconnect or main circuit breaker is provided by the installing contractor.

SECTION 2 General Information

2.A Introduction

Air source heat pump water heaters offer the commercial hot water user a highly energy efficient means of generating potable hot water.

The E-Therm heat pump uses the same common operating principle as an air-conditioner or a refrigerator to move heat from one environment to another. The difference is that it's moving the heat and storing it in very well insulated tanks.

This installation and operating manual includes information which will help you to install, operate, and maintain the Laars Heating Systems Commercial Heat Pump Water Heater.

Please read this manual completely before proceeding with the installation. If you have any questions regarding this equipment, please contact Laars Heating Systems, or your local Laars representative. Experience has shown that most operating problems are caused by improper installation.

2.B Warranty

LAARS Heating Systems Heat Pump Water Heaters are covered by a limited warranty. The owner should complete the warranty registration at

<http://www.LAARS.com>

ALL WARRANTY CLAIMS must be made by an authorized LAARS Heating Systems representative. Claims must include the serial number and model (this information can be found on the rating plate). All claims must also include the installation date and name of the installer. Shipping costs are not included in the warranty coverage.

2.C Model Identification (Nomenclature)

Primary information regarding your E-Therm Water Heater can be found on the rating plate located on the outside jacket.

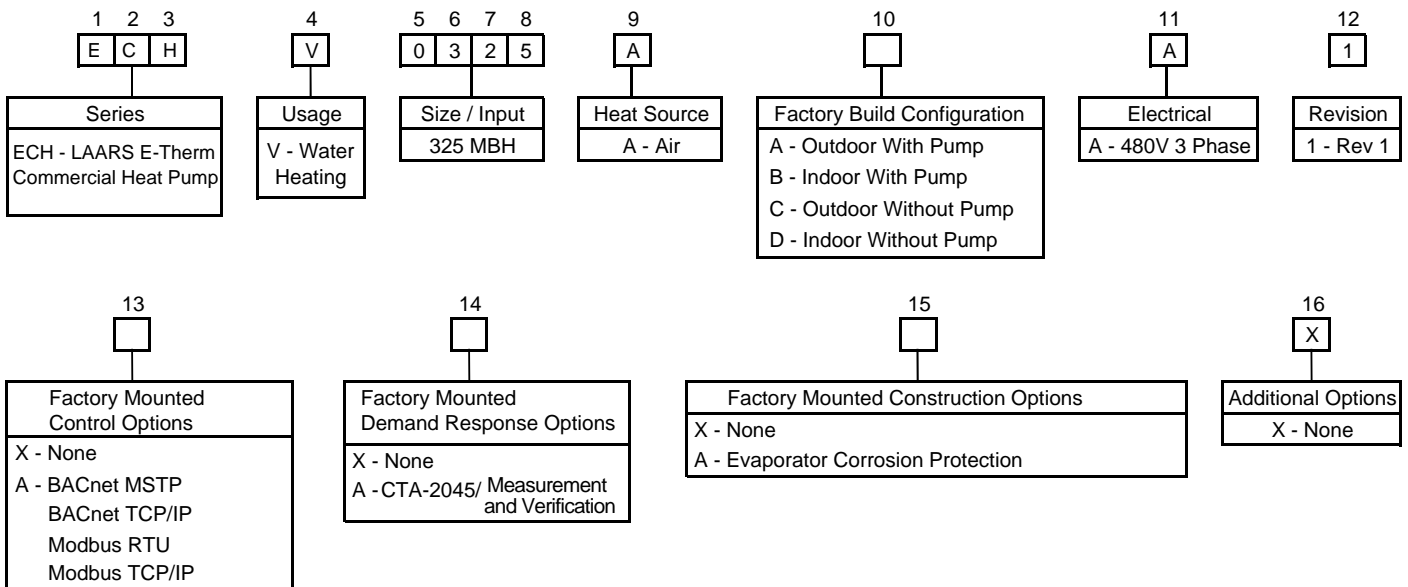


Figure 1. Model Nomenclature

NOTE: Throughout the content of this manual, the E-Therm will be referred to as the 'HPWH' (Heat Pump Water Heater). HPWH = E-Therm

2.D Configurations and Options

2.D.1 Indoor Unit Configuration Includes:

- PRV (pressure relief valve) vent manifold for venting CO₂. Contractor connection is on the top of the unit. Piping exterior to the unit to a safe discharge point is supplied and installed by the contractor.
- Contractor is responsible for providing a mechanical system that provides ambient air to the evaporator coils and exhaust evaporator fan discharge air to ambient, and to all monitoring and control of these customer-supplied mechanical systems.

2.D.2 Factory Build Configurations Without Pump

- No waterside integral water pump.
- 0 - 10VDC Pump speed or water flow control signal is provided by the HPWH controls. This option is selected when the HPWH and tank storage system are more than 40 ft apart.

2.D.3 Factory Mounted Options: Evaporator Coil Corrosion Protection

- For coastal applications and in corrosive environments.
- Consists of coated evaporator coils.
- No special installation required.

2.D.4 Field Installed Accessories Snow Shields / Weather Hoods

- Provides protection for the evaporator coils and fans from rain, snow, sleet and ice.

Snow Shields / Weather Hood kits are separate from the HPWH.

The HPWH and Kits are packaged and shipped separately. Assembly and instructions are included.

Outlet Snow Shield/ Weather Hoods can be mounted in any of the 4 possible directions to direct the discharge away from prevailing winds, and/or away from other HPWH units, other equipment or walls. Outlet hoods must NOT discharge into another hood (intake or discharge).

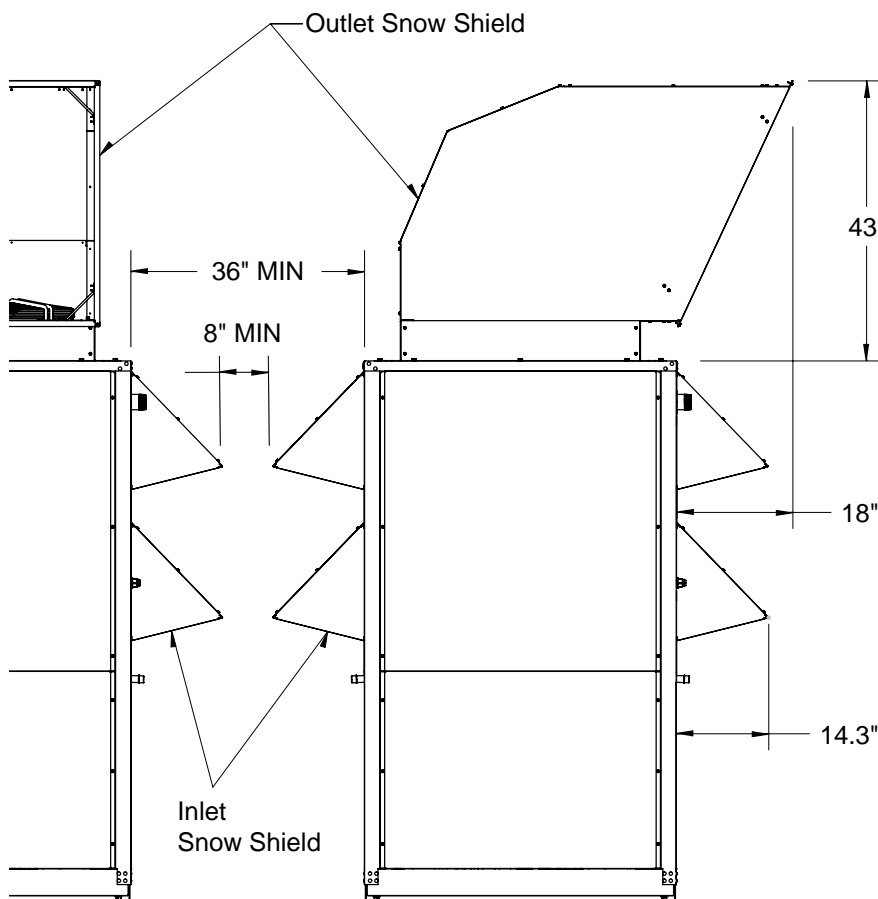


Figure 2. Optional Snow Shields Overall Dimensions

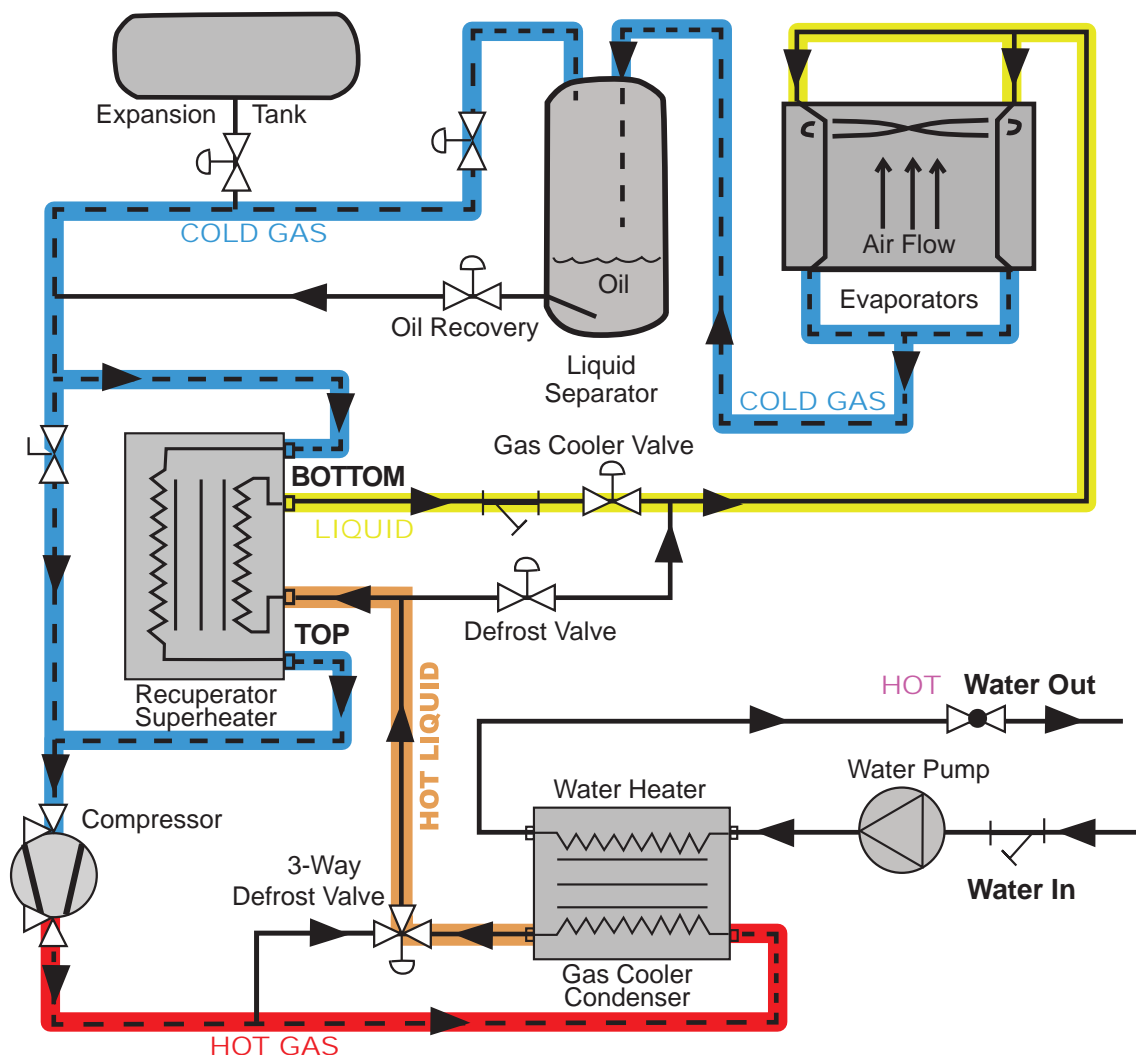


Figure 3. Simplified Process Schematic (Water Heating)

2.E Unit Overview

The HPWH is a closed loop R744 refrigerant (CO₂) system. This system is meant to provide years of service without need to monitor or otherwise access the refrigerant. In the event that access is needed, only technicians trained in R744, are authorized to proceed in the service of the refrigerant circuit.

The HPWH utilizes CO₂, a natural refrigerant, and electricity, to efficiently produce up to 180°F domestic hot water. The HPWH utilizes a unique and highly efficient heat pump cycle to produce multiple times the energy in heat than would be produced from only electricity.

The HPWH is ideal for high volume, domestic water applications such as multi-family homes, hotels, dormitories, healthcare facilities, industrial processes, and many more. CO₂ as a refrigerant is non-toxic, non-flammable and has a low Global Warming Potential of 1. It also allows for ultra high coefficients of performance

to be achieved.

Figure 3 on page 7 provides a simplified process schematic. The compressor pressurizes the refrigerant creating a high temperature gas which is used to heat incoming water in a gas cooler. The gas cooler is a highly efficient refrigerant to water heat exchanger. At the conditions within the heat exchanger, the CO₂ has properties of both a liquid and a gas which enhances the heat transfer to the water. The gas cooler is fabricated with double wall construction, eliminating the potential of refrigerant entering the water. This also ensures that potable water can be heated directly, without the need for an additional heat exchanger.

Upon leaving the gas cooler the pressure of the refrigerant creates a two phase mixture of liquid and gas with a corresponding reduction in temperature. This mixture then enters an evaporator where it is heated using ambient air, transitioning to a vapor. The air is

drawn through the evaporator using highly efficient axial fans and exits the evaporator at a 15°F to 25°F lower temperature.

Before returning to the compressor to complete the cycle, a portion of the refrigerant passes through another heat exchanger (recuperator) to ensure that the refrigerant returning to the compressor is all gas. The process is controlled with a proprietary control system and logic. The controller maintains system flow rates, pressures and temperatures at their optimum conditions taking into account ambient air temperature, incoming water temperature and desired water supply temperature.

When outdoor conditions are cool and humid, frosting of the evaporator coils will occur. This restricts air flow and heat transfer and interferes with normal operation and hot water production. The HPWH will automatically switch to the required defrost mode of operation and automatically return to normal operation when the defrost cycle is complete.

2.F Components

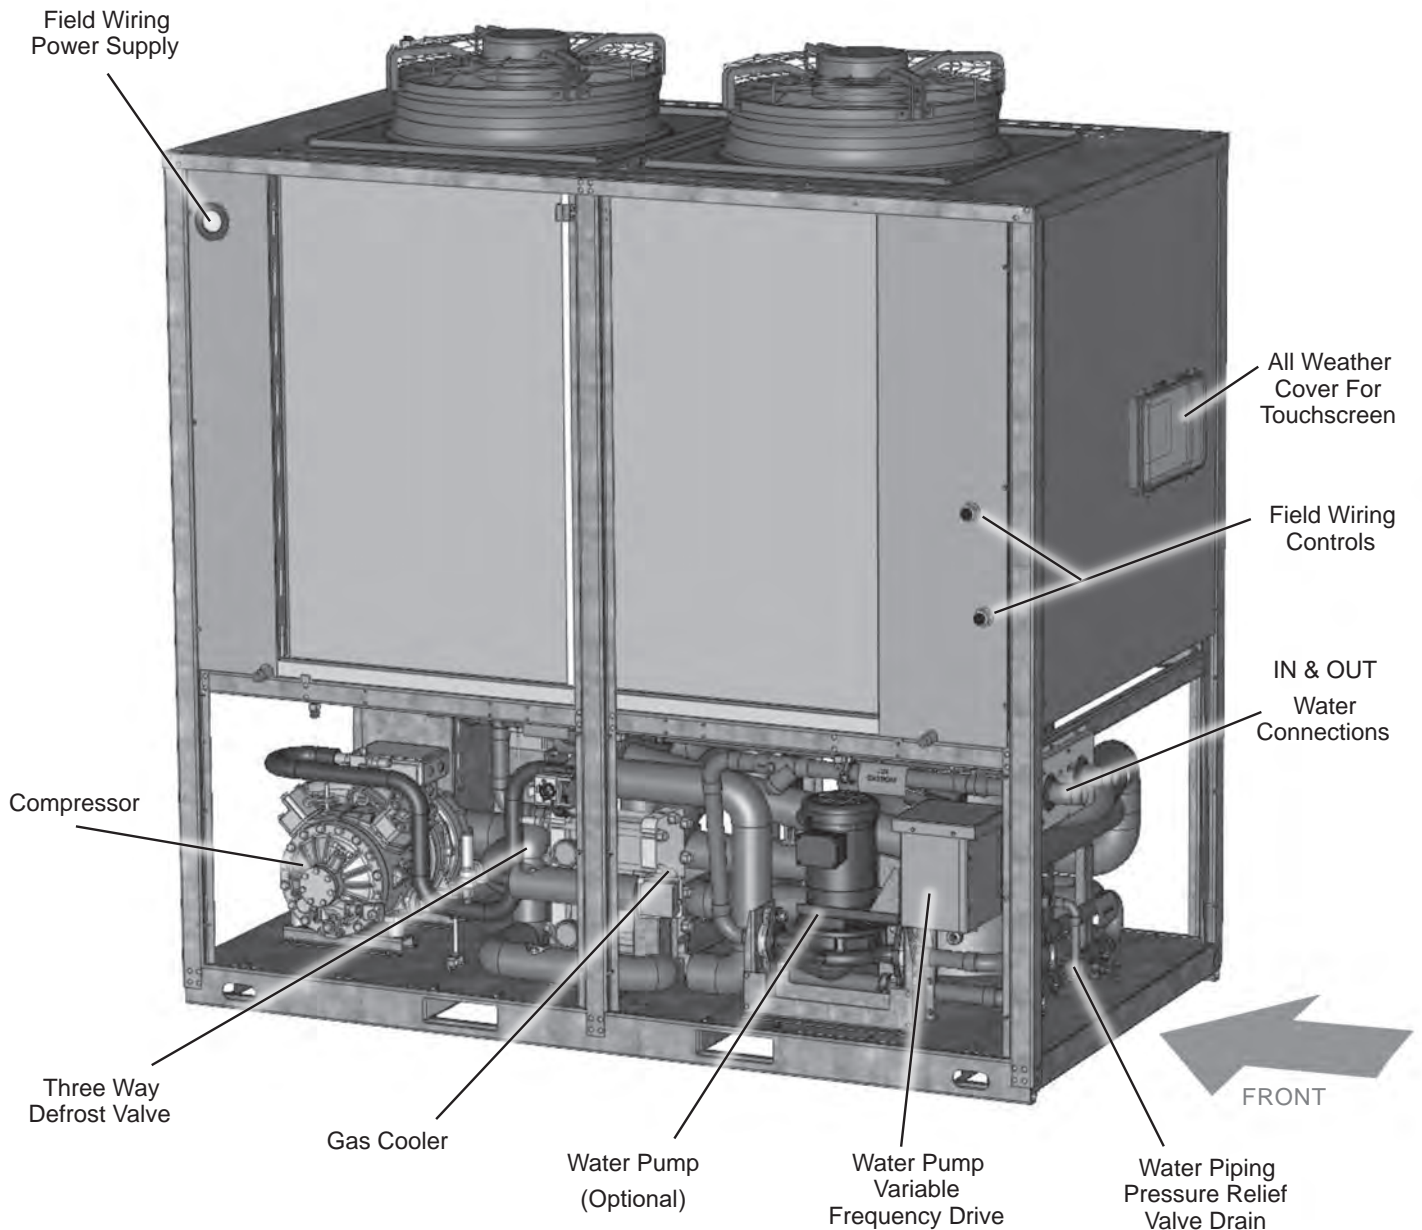


Figure 4. Left Side (lower panels removed for visual purposes)

Indoor models only: common venting connection for CO2 relief valves. Must be vented outdoors.

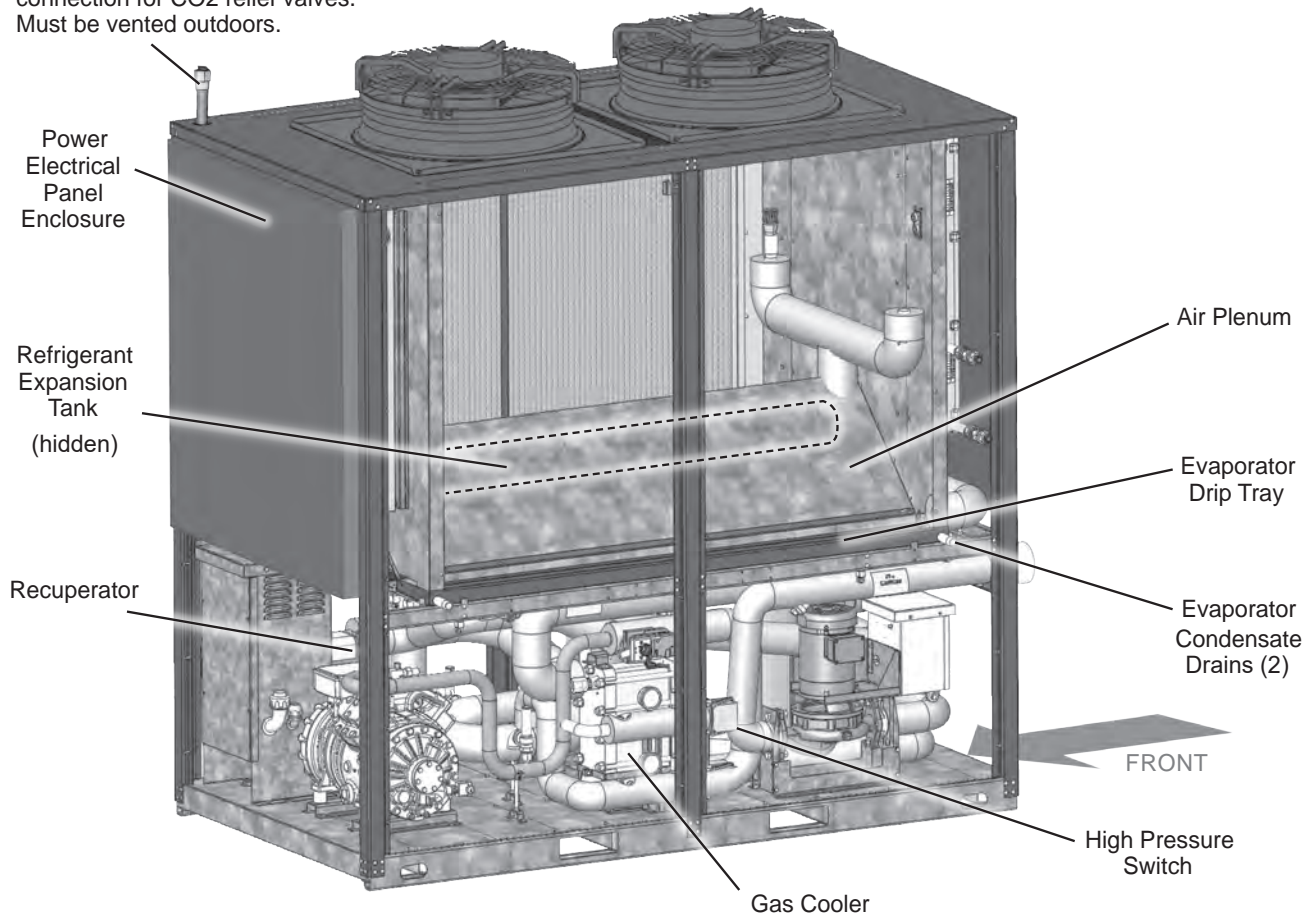


Figure 5. Left Side with evaporator hidden (and several panels removed for visual purposes)



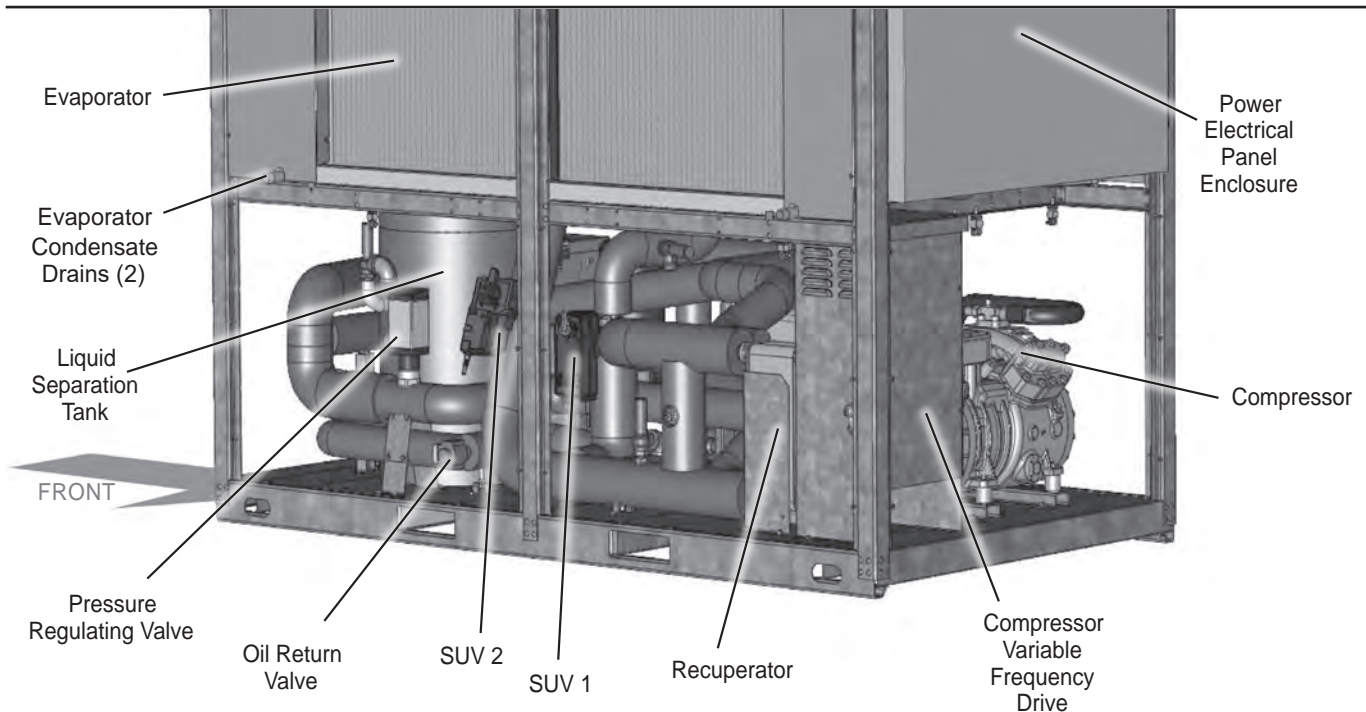


Figure 6. Right Side View (lower panels removed for visual purposes)

2.G Dimensions

Product Weight	Operating Weight	3080 lbs	1397 kg
	Shipping (crated & charged)	3820 lbs	1733 kg
	Product - Dry	3061 lbs	1388 kg
Operating Weight Corner Point Loading	Front Left Side	689 lbs	313 kg
	Front Right Side	716 lbs	325 kg
	Rear Right Side	930 lbs	422 kg
	Rear Left Side	726 lbs	329 kg
Installation Clearances (Minimum)	Both Sides	3 ft	91 cm
	Front and Rear	4 ft	122 cm
	Above the Heat Pump	10 ft	305 cm
Outside Dimensions	Height	93-3/4 in	238 cm
	Width	52-1/4 in	133 cm
	Length	93-1/4 in	237 cm
Water Connections	Water Inlet	1-1/2 in MNPT	
	Hot Water Outlet	1-1/2 in MNPT	
	Condensate Drains (4)	3/4 in MNPT	

Table 1. Weights and Sizing**Figure 7. Dimensions**

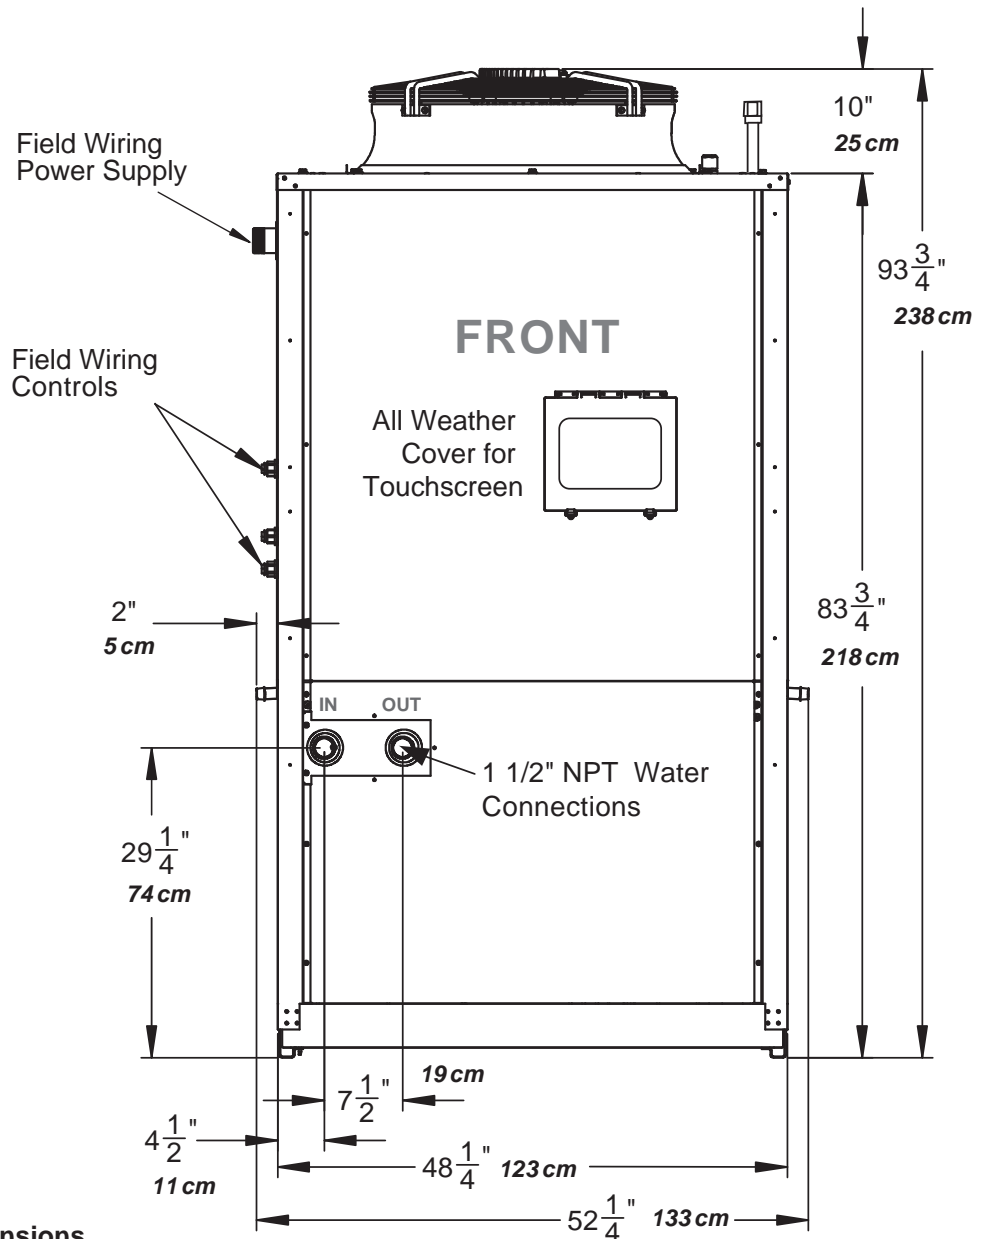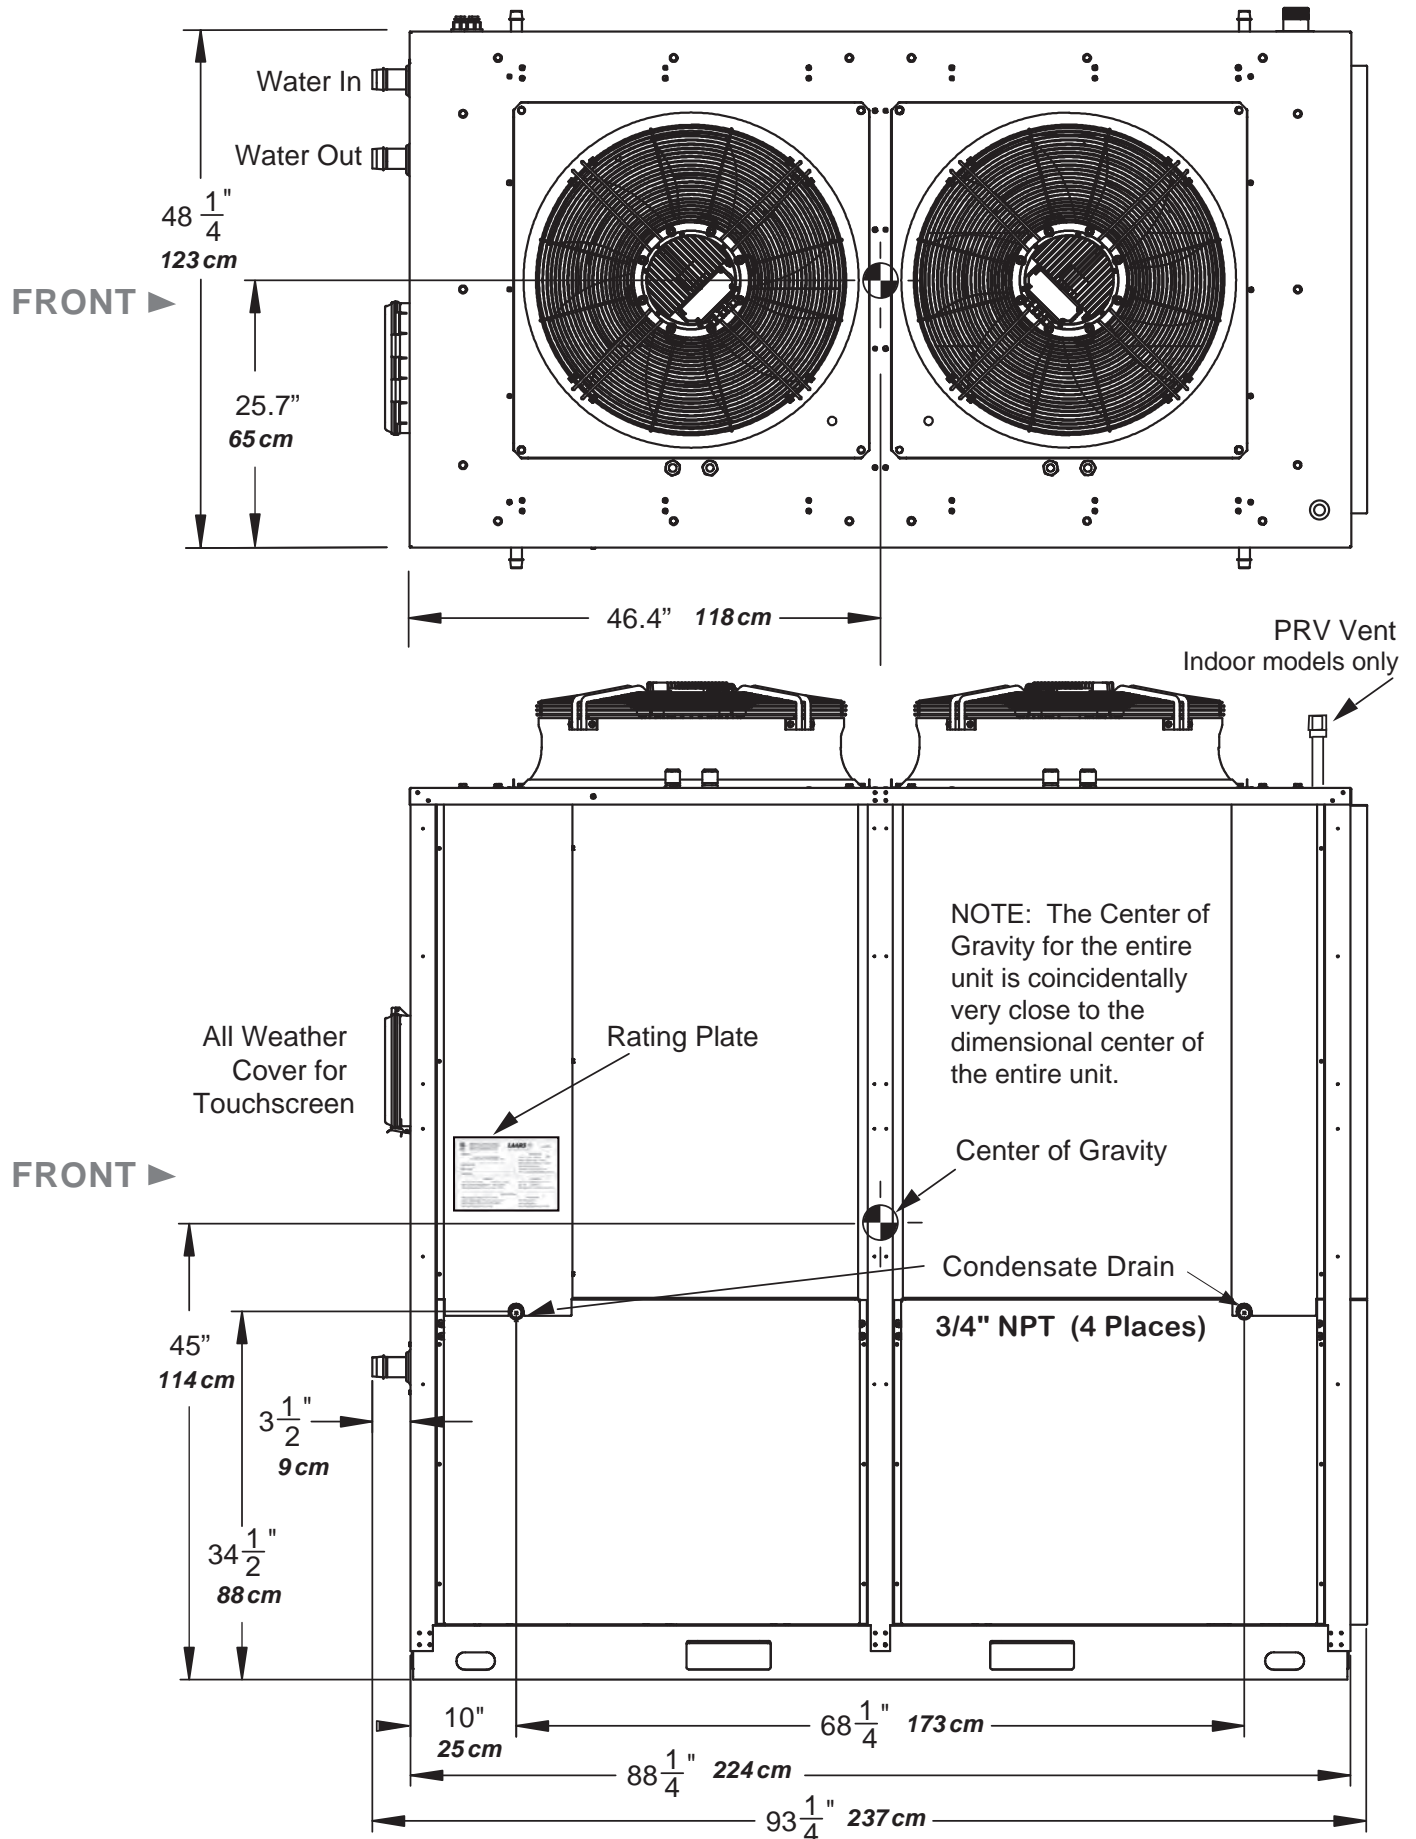

2.H Unpacking and Handling

The HPWH is shipped in a single crate. The shipping crate must be picked from the short side using 6 ft or longer forks. Carefully disassemble the crate and inspect the unit for any shipping damage. If there are any signs of damage or mishandling, contact the manufacturer for guidance on how to proceed. Once the heat pump is removed from the base of the shipping crate, the heat pump must be picked from the long side with a fork lift or a crane.

The HPWH shipping weight is 3820 pounds (crated and charged). It is designed to be moved using a fork truck or crane. Equipment and lifting gear with rated capacities exceeding this amount, taking into account the size of the unit, must be used.

Fork truck handling should only be from the side of the unit using the fork cutout in the base frame. These cutouts are 7-1/2" by 2-1/2" and 28-1/2" on center as shown in Figure 9 on page 13. The forks must extend all the way through the unit. If the HPWH needs to be moved through narrow passages suitable equipment dollies should be used. The dolly width should be at least 48" to support the system on the bottom side rails.

Lifting cutouts have been provided at each bottom corner of the unit for using a crane to move and/or lift the HPWH. The cutouts are oval in shape and approximately 3-5/8" by 1-5/8". Suitable lifting straps or spreader bars should be run through these locations, using the base frame structure.

Spreader bars should also be used above the unit to prevent putting pressure on the top structure and panels. The top and side panels are not capable of handling significant force from the sides or ends and are not to be used for lifting.

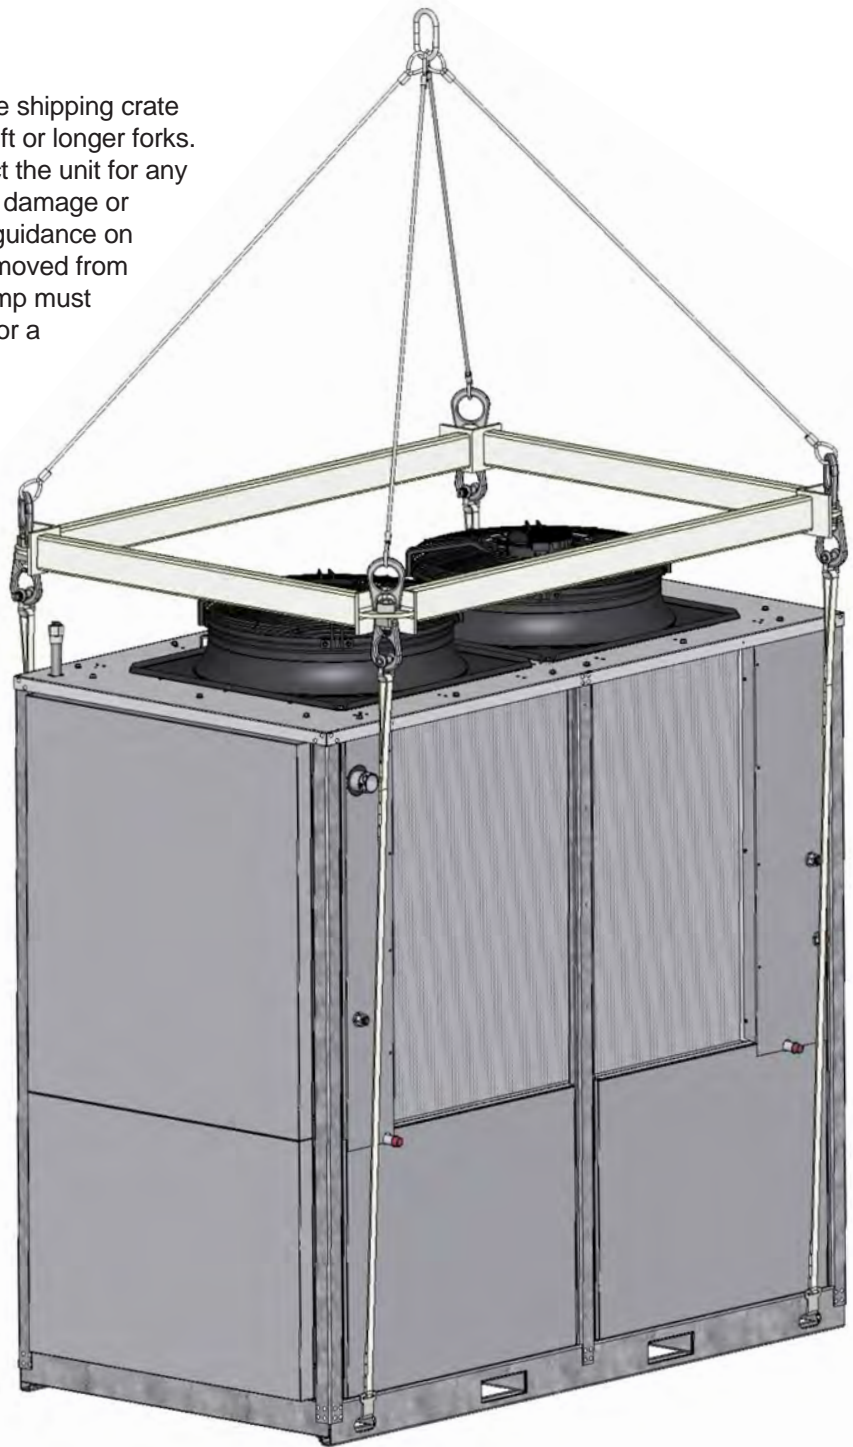


Figure 8. Spreader Bars

The HPWH must not be tilted more than 10 degrees while handling, or damage to the unit will result.

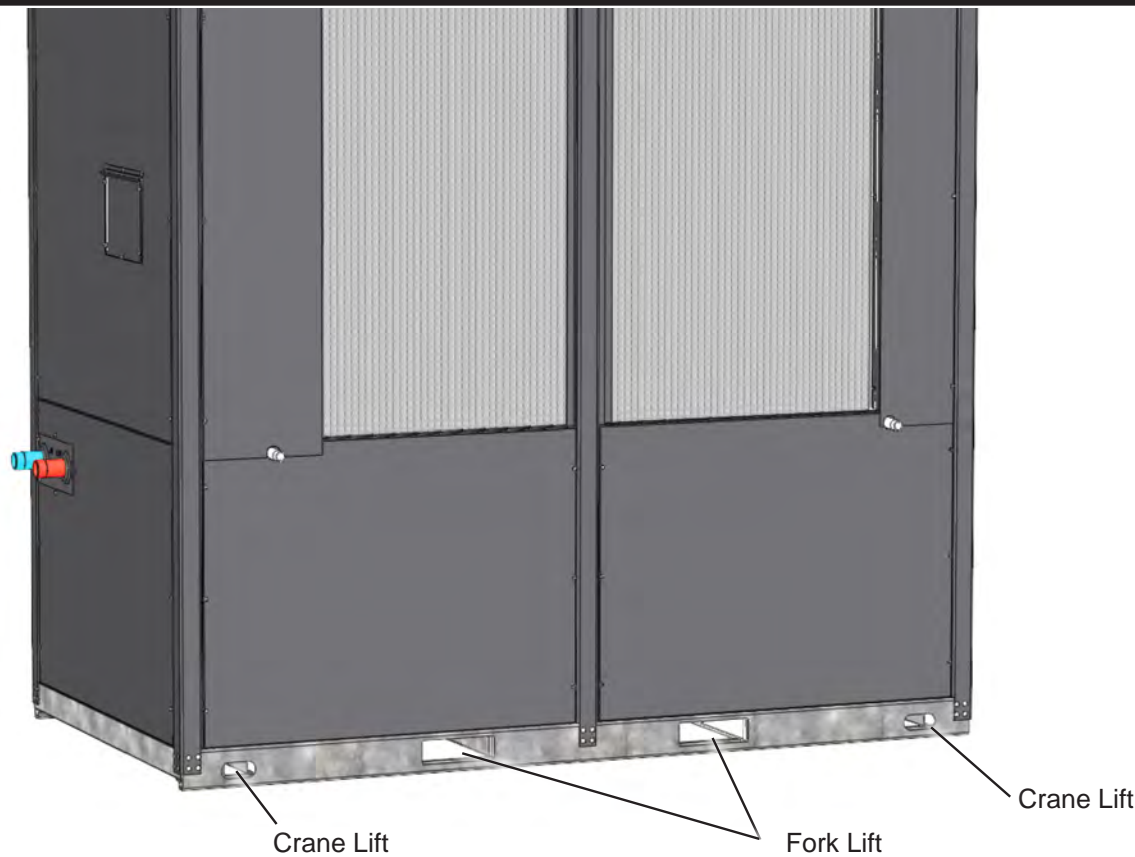


Figure 9. Fork Lift and Crane Lift Points

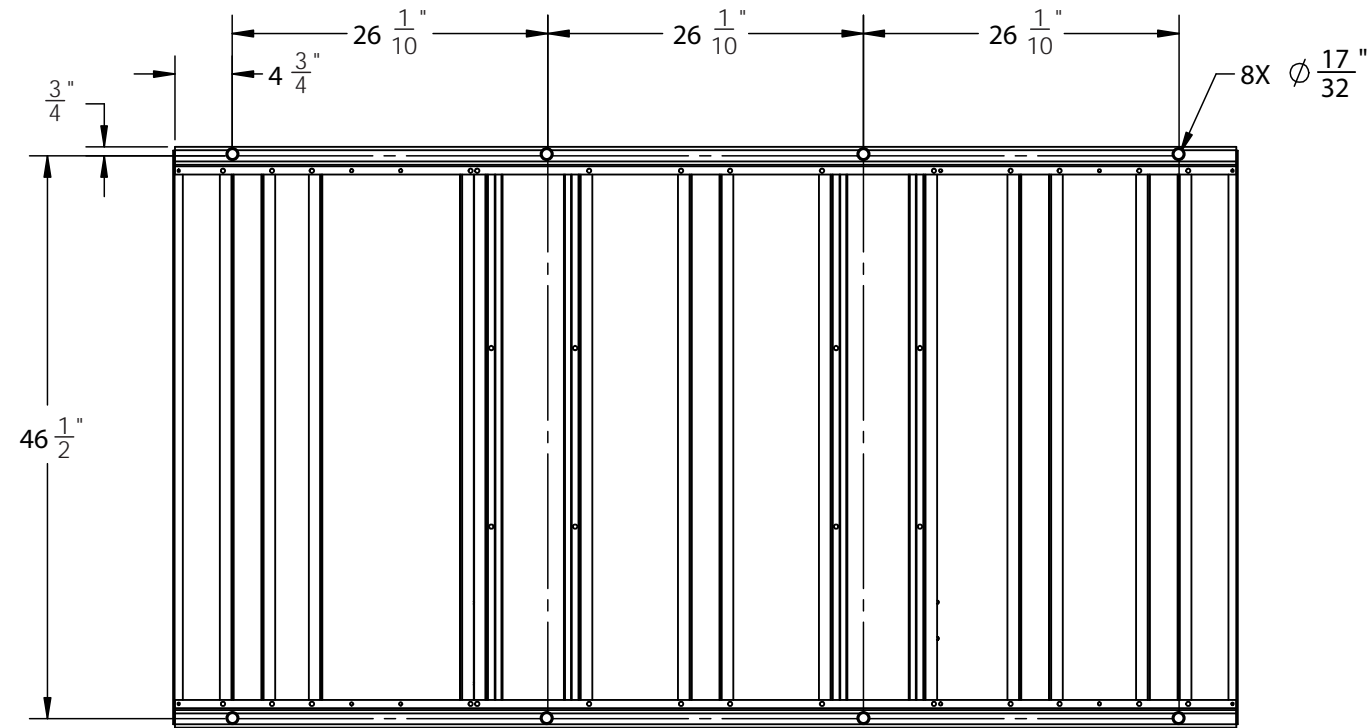


Figure 10. Mounting Hole Dimensions (Bottom View)

2.1 Locating the Unit

Elevation (ft)	Sea Level	2000	4000	6000	8000
Rated output	100%	93%	86 %	80%	74%
Fan adjusted Output	100%	100%	100%	98%	92%

2.1.1 Altitude

The HPWH is intended for both outdoor and indoor installation at any altitude up to 6,500 ft (2000 meters). The thermal output derate is indicated in Table 2, due to air density decreases.

In order to partially compensate for this altitude derate, an altitude parameter has been set up in the heat pump to mitigate this derate by increasing the fan speed. Simply enter the elevation of the heat pump, the system will adjust fan speed accordingly during the commissioning of the heat pump. (See Chapter 6).

Table 2. Elevation Derate Correction

Vibration isolators are recommended to minimize transmission of mechanical vibration to the building structure.

Mounting holes 0.53" in diameter are provided on the outside support rails as shown in Figure 10 on page 13.

Condensate from the evaporator coils can be led to a drain or piped to a collection system.

2.1.2 Clearances and Mounting Instructions

Service access to a single heat pump requires 36" clearance along the long sides of the unit, whereas the National Electric Code (NEC) requires 48" clearance at the front and the rear of the heat pump. Consult local codes for additional requirements.

Vibration isolators are recommended to minimize transmission of mechanical vibration to the building structure. See Table 1 on page 10 for corner point loading.

Mounting holes 0.53" in diameter are provided on the outside support rails to bolt the unit onto the concrete platform. (See Fig 11, page 13).

WARNING

Condensate from the evaporator coils must be routed to a nearby drain or piped to a collection system. For units in cold weather conditions, it might be necessary to heat trace the drain piping to a suitable length to prevent freezing of this condensate.

WARNING

For seismic conditions, it will be required to secure the base of the heat pump to the concrete pad, using a bolt pattern that is shown in Figure 10 on page 13.

2.1.3 Outdoor Installations

An outdoor unit should be installed as close to the hot water storage tanks as possible to reduce piping heat loss and pumping head loss.

Units not on a roof should be mounted on a suitable equipment pad (54" by 96") and the base of the HPWH should be elevated to the expected snow level.

Roof mounted units should be mounted on a mounting frame capable of distributing the load to the building structure. A qualified engineer should design the frame and ensure that the additional load can be supported.

2.1.4 Indoor Installations

An indoor unit shall be placed as close as possible to the hot water storage tanks to reduce heat loss and pumping head loss. Mechanical room units shall be placed on a concrete 6" pad (54" x 96").

Vibration isolators are recommended to minimize transmission of mechanical vibration to the building structure.

Mounting holes 0.53" in diameter are provided on the outside support rails as shown in Figure 10 on page 13.

Condensate from the evaporator coils must be led to a drain or piped to a collection system.

When installed with field-provided ducting, it is recommended that additional external booster fans be sized and provided to overcome the pressure loss of the ductwork. External fans and ductwork should be sized for both the inlet and outlet of the heat pump.

Alternatively, the fans in the heat pump have the capacity to be operated at higher speeds. The heat pump fans can be configured to run at full speed, allowing an additional 0.1" w.c. at 26,000 cfm. This additional static pressure can be used to overcome any losses from the inlet and exhaust ductwork. If the static loss exceeds 0.1" w.c., external booster fans are recommended.

Ductwork and booster fans are to be sized by a qualified engineer. The discharge from the fans must be ducted away from the unit. The HPWH can provide a start/stop signal for the operation of the field-supplied booster fans.

2.1.5 Multiple Unit Installations

- Clearances:

Service access and the National Electric Code (NEC), NFPA 70, require a 36" clearance must be maintained along the long sides of the unit and 48" clearance at the front and rear.

For multiple units placed together, see Figure 11

to determine clearances required for optimum performance.

In addition, a 10-foot clearance must be maintained above the unit. If the 10-foot clearance is not practical, the discharge from the fans must be ducted away from

the unit using 28" diameter ducting to each fan or turned 90 degrees with ducting similar to the evaporator fan discharge Snow Shield/Weather Hood. See Figure 2 on page 6.

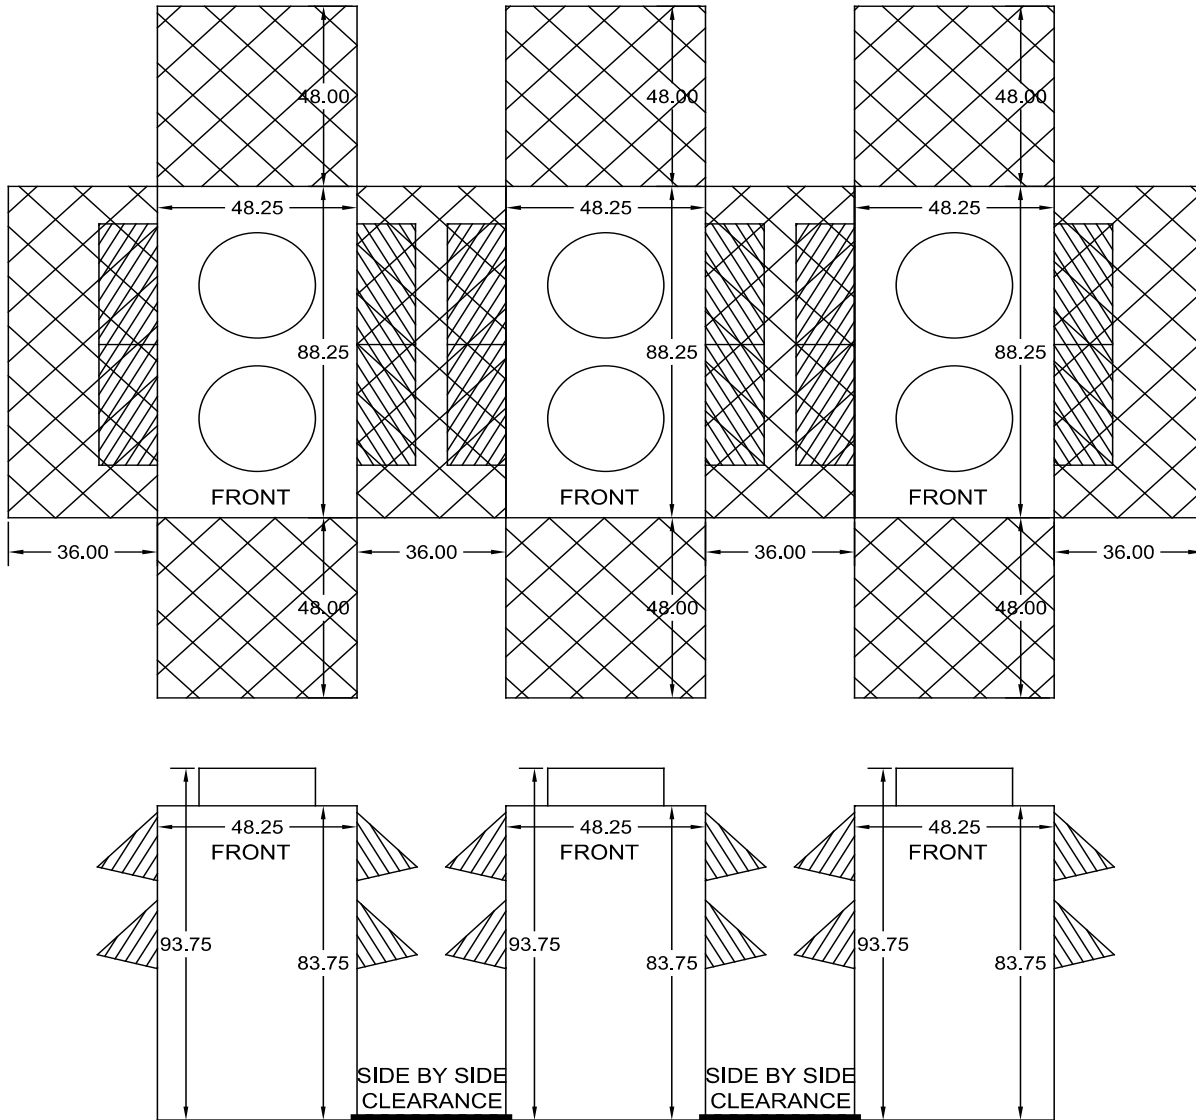


Figure 11. Clearances

SECTION 3 Water Piping

3.A General Water Flow Information

The HPWH is capable of heating potable water directly without the need for an intermediate heat exchanger or fluid. The HPWH uses either a built-in pump or a field-supplied external pump approved for use with potable water. The pump delivers water to the plate heat exchanger gas cooler where it is heated by the hot refrigerant and then sent to the load or the hot side of the stratified tank storage system.

The internal water circuit is equipped with a flow switch to ensure there is water flow prior to the compressor operating.

The HPWH is connected to a stratified storage tank(s) and the tank(s) must be outfitted with a properly rated and sized temperature and pressure (T&P) relief valve.

The external water circuit and storage system must be outfitted with a properly rated and sized expansion tank. Storage tanks must be equipped with dip tube in critical locations. These are provided when ordering the tank system.

3.B Water Flow & Headloss Data

For a heater that is built with an onboard pump, the pump is adequate to handle 25 equivalent feet of 1-1/2" piping TO and FROM the stratified tank system.

When an external pump is used, it is required to provide one pump per heat pump. The external pump must be able to provide flow from 2.8 to 15 gpm. Table 3 can be used to size the external pump(s). This table includes the headloss through the heat pump at different flow rates, with the internal balance valve in fully open position. The heat pump can provide an enable and variable speed 0-10 VDC control signal for the external pump.

Water Flow (gpm)	Pressure Drop (psi)	Pressure Drop (feet of head)
2.8	1	2.3
4.0	2	4.6
6.0	4	9.2
8.0	6.5	15.0
12.0	14	32.3
15.0	15	34.7

Note: Includes internal headloss through the heat pump only, with internal balance valve in fully open position.

Table 3. Heat Pump Flow and Headloss

3.C Water Connections

The water connections on the HPWH are 1-1/2" male NPT. The location is shown in Figure 3 on page 7. The supply and return piping connected to the HPWH should be the same size or larger. Use flexible connections to reduce sound attenuation into the piping system.

The water piping should be supported by suitable hangers or floor stands. Do not support the piping with unit frame. Rigid hangers may transmit noise through the system resulting from the pipe sliding in the hangers. We recommend that padding be used when rigid hangers are installed. Piping should be well insulated to minimize heat loss.

If any of the potable piping is running outdoors and may be subject to freezing conditions, it is required to install heat trace prior to insulating the outdoor potable water piping. The power supply for the external heat trace must be connected to the emergency power supply of the building, to avoid a freeze up during inclement weather.

3.C.1 General Recommendations For Piping Connections

WARNING

This unit may produce hot water at temperatures as high as 180°F (82°C). All water piping components must be selected for this temperature.

When installing the water piping to and from the heat pump, it is good practice to follow national and local regulations. It is recommended to connect the piping to/from the heat pump using flexible joints to minimize transmission of vibrations and compensate for thermal expansion of the piping.

Refer to Figure 12 and install the following components in the indicated order:





- Install 1-1/2" NPT unions on cold inlet and hot water connections for easy disconnecting of the water piping to/from the heat pump.
- Install drain valves and shut-off valves on both inlet and outlet piping. The drain valves allow for occasional flushing of the gas cooler in case of hard water conditions. Drain valves can also be used for manual air purging. Freeze protection measures can also be done through these valves by blowing air or pumping anti-freeze through the unit while it is isolated.
- An air purge valve should be installed on the highest





- point of the hot water outlet piping to allow air purging.
- Install a metal mesh filter on the inlet pipe with openings not wider than 1/16" (1 mm) in the cold inlet piping to avoid slag and impurities from entering the heat exchanger.
 - In addition to the HPWH internal mesh filter we recommend an eternal mesh filter be installed.
 - Install a check valve on the water inlet side of the heat pump. This will prevent reverse flow through the gas cooler in case of a multiple heat pump installation.

CAUTION

A pressure relief valve is factory installed on the heat pump itself. This relief valve is located directly underneath the inlet and outlet water piping. The contractor must install a discharge pipe to the outlet of the pressure relief valve and the diameter of the discharge piping must be equal or greater than the pressure valve discharge opening. This discharge pipe must be directed towards an area where the discharge can not harm anyone.

3.C.1.a Recommended Piping Components

1		Union
2		Check Valve
3		Air Purge Valve
4		Ball Valve

5		Flex Coupling
6		System Drain Valve
7		Water Piping
8		Strainer

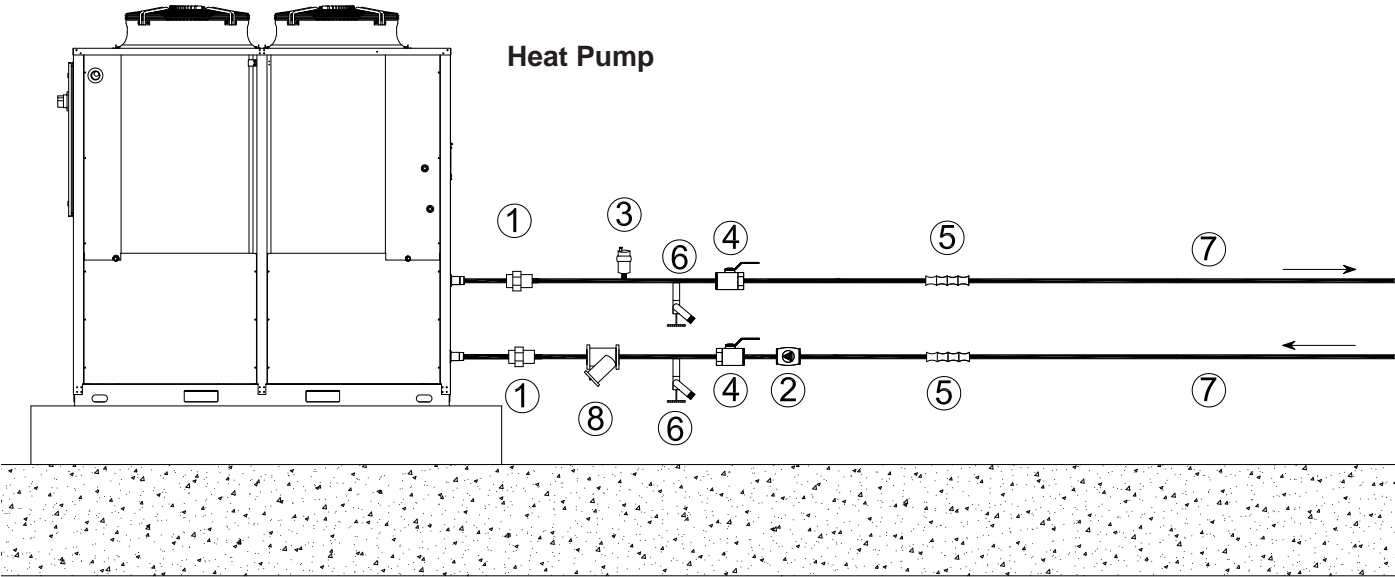


Figure 12. Components

3.C.2 Water Quality

Water quality standards must be maintained or damage to the heat exchanger will occur. The water quality parameters of this table must be verified and maintained in order to ensure a long life of this unit.

If these water quality requirements are not maintained, the warranty will not be valid. All possible organic substances in the water must be filtered out and controlled as such impurities will lead to malfunction and damage over time and the warranty will not be valid.

Total hardness	2.0 to 6.0 gpg
Langelier index	- 0.4 to + 0.4
pH	7.5 to 8.5
Electrical conductivity	10 to 500 QS/cm
Organic element	-
Hydrogen carbonate (HCO ₃ ⁻)	70 to 300 ppm
Sulphates (SO ₄ ²⁻)	< 50 ppm
Hydrogen carbonate / Sulphates (HCO ₃ ⁻ /SO ₄ ²⁻)	> 1
Chlorides (Cl ⁻)	< 50 ppm
Nitrates (NO ₃ ⁻)	<50 ppm
Sulphuric acid (H ₂ S)	< 0.05 ppm
Ammonia (NH ₃)	< 0.05 ppm
Sulphites (SO ₃), free chlorine (Cl ₂)	< 1 ppm
Carbon dioxide (CO ₂)	< 5 ppm
Metal cations	< 02 ppm
Manganese ions (Mn ⁺⁺)	< 0.1 ppm
Iron ions (Fe ²⁺ , Fe ³⁺)	< 0.2 ppm
Iron + Manganese	< 0.5 ppm
Phosphates (PO ₄ ³⁻)	< 2 ppm
Oxygen	< 0.1 ppm

Figure 13. Water Quality Requirements

3.D Suggested Piping Systems

The HPWH is designed for single-pass operation to optimize the overall performance of the CO₂ system. Single pass systems are designed to allow the heat pump to operate with high temperature lift (meaning the difference between inlet and outlet water temperatures is large). CO₂ heat pumps operate most efficiently when heating incoming city water (40°F to 80°F) to a hot storage water temperature (140°F to 180°F).

A proven system design strategy for single pass systems is to separate the following:

1. Primary Domestic Hot Water Storage
2. Temperature Maintenance.

3.D.1 Primary Domestic Hot Water Storage

Typical commercial HPWH systems use multiple stratified storage tanks that ensure the hottest water is delivered to the domestic water loop and the coldest water is delivered to the heat pump, helping to ensure highest possible operational efficiency.

HPWH stratified tanks can be piped in 3 distinct ways:

- 1 Series piping is the recommended way of connecting multiple stratified tanks. This approach eliminates the multiple horizontal diffusers except for 1 which must be installed in the CWMU (Cold water Make-up) tank. We strongly recommend this piping approach as it eliminates the need for balanced parallel which simplifies the piping arrangement of the tanks. Several examples are shown in 3.D.4.
- 2 Parallel piping: In this method, total water flow from the heat pump(s) is split evenly between multiple tanks. It is important that all stratified tanks are connected in a balanced parallel arrangement to ensure even flow over all tanks. Each stratified tank requires a top and bottom diffuser. Each CWMU tank requires that an additional horizontal diffuser must be installed in the lower tank connection with the diffuser opening pointing downward near the bottom.
- 3 For a large scale DHW system with multiple heat pumps (> 6), it may be advantageous to use a hybrid piping system (2 banks of tanks in a balanced parallel arrangement with each bank having several tanks in series). The benefits with a multiple heat pump and hybrid system is that the high water flow from the heat pumps (and system draws) is split up between the 2 series tank systems.

Suggest Piping (continued)

For HPWH Tank Piping Systems:

Note: Contact Laars Applications or your local Laars rep for guidance in cases of complex, multi-tank arrangements.

- Cold make-up water is piped directly to the stratified storage tank(s), also called CWMU Tank(s).
- Each CWMU tank requires the additional field installed horizontal diffuser.
- Based on temperature sensors placed in the storage tank system, the heat pump turns on and heats cold water in a single pass.
- A variable DHW pump, either built-in or remotely placed, and controlled by its heat pump, runs the water through the built-in plate and frame heat exchanger, and water is heated to its desired set point.
- Once the entire stratified tank system is charged to its setpoint, the heat pump and its variable speed pump shut off.
- Refer to Figure 14 on page 20 thru to Figure 16 on page 22 for typical heat pump based DHW stratified tank systems.
- All stratified storage tanks supplied with this HPWH are standard with 3" connections to allow high water flow with minimal pressure drop.

NOTE: Building recirculation water must NEVER be piped back to the storage tanks. Building recirculation loop MUST be piped to the Temperature Maintenance (or Swing) Tank instead.


3.D.2 Temperature Maintenance Heating

Temperature maintenance heating is the process of maintaining the temperature of hot water that is circulating throughout the building, which allows instant access to hot water whenever an occupant needs it. If the hot water is not circulated, the pipes will cool during times of low usage and an occupant will have to wait until all the cold water is flushed out of the pipes before they have access to hot water. In large buildings, this would lead to significant and unacceptable wait times and waste water. The equipment that performs temperature maintenance heating will reheat slightly cooled circulation water back to the desired setpoint.

The temperature swing tank (sometimes called maintenance tank) is an additional tank with an independent heat source. The temperature maintenance tank is plumbed in series with the primary storage system. The tank's temperature fluctuates between the hot storage water temperature (140°F to 180°F) and the hot water supply set-point (~120°F), as achieved by a down stream located 3-way potable water mixing valve.

3.D.3 Swing Tanks

Below find details of electric elements and temperature sensing points for different configurations inside Laars ET model swing tanks.

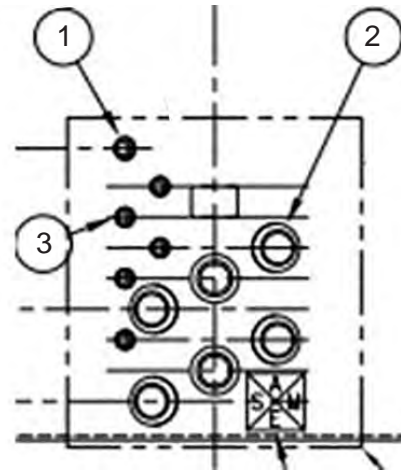

No.	Qty	Description
1	1	½" NPT (thermal well)
2	6	1-1/2" NPT electric elements (15 or 18 kW)
3	3	3/8" NPT probe


Control scenario 1: Single heat pump with 2 sensors or aquastats installed in the stratified tank(s)

- An electric step controller can be ordered with the swing tank to stage individual elements
- (This step controller can not be used with CTA-2045 grid-enabled protocol)
- Unused ports will be factory capped.

Control scenario 2: Single or multiple heat pumps and Laars Tank System Controller (TSC) with 6 tank sensors

- Use the TSC in order to operate with CTA-2045 grid-enabled protocol.
- A CTA-2045 module must be ordered pre-installed in the TSC.
- Item 1 (1/2" NPT thermal well) is used when operating with CTA-2045 grid-enabled protocol.
- A temperature sensor connected to TSC is installed in item 1 for advanced load-up operation of the maintenance tank temperature.
- Unused ports will be factory capped.

3.D.4 Series Piping

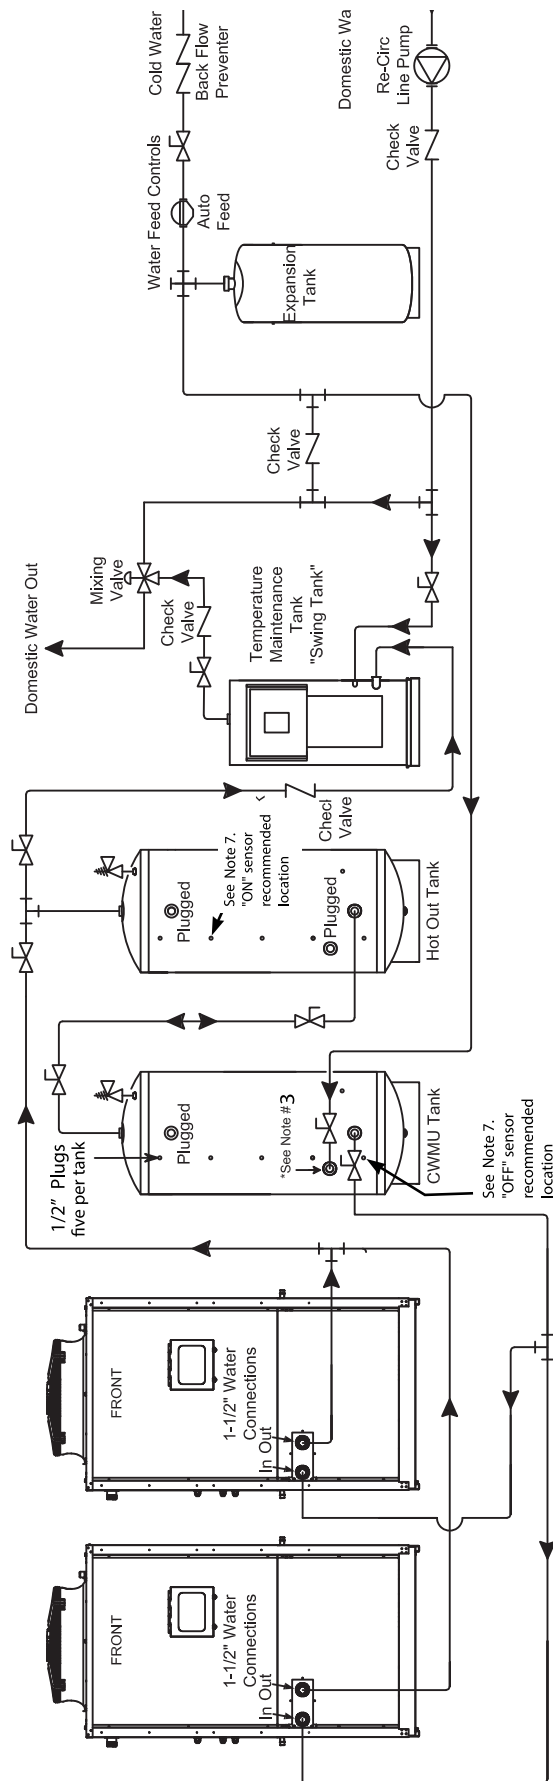

Refer to the Heat Pump
Near Piping Diagram for
the required Valves.

See Figure 12 on page 17


NOTES:

1. Reference section 'temperature sensor locations' in the TSC panel Manual for correct placement of temperature control sensors in thermowells based on the application.
2. For demand response installations, up to six (6) tank temperature monitoring sensors shall be placed in all thermal well tapings. Reference controls documentation for details.
3. Additional diffuser must be installed in the cold water makeup tank. Diffuser openings must be directed downward. Refer to the instructions that are shipped with the diffuser.
4. Back Flow Preventer may be required. Check local codes.
5. Thermal expansion tank may be required. Check local codes
6. This drawing is a schematic representation of a piping style, and is not intended to be used as a working installation drawing. Local code requirements must be met.
7. When controlling with 2 aquastats or 2 RTD temperature sensors wired directly to the heat pump , placement of the sensors can be adjusted to suite the needs of the installation.
The recommended locations are to place the "OFF" sensor in the lowest 1/2" NPT port in the CWMU tank. The "ON" sensor is recommended to be placed in the second 1/2" NPT port down from the top of the Hot Out Tank.
For systems with just one tank, it is recommended to place the "OFF" sensor in lowest 1/2" NPT port and the "ON" in the second 1/2" NPT port down from the top of the tank.

SYMBOL LEGEND	
	MANUAL VALVE
	3-WAY CONTROL VALVE
	CHECK VALVE
	PRESS RELIEF VALVE
	AUTO FEED
	PUMP

Figure 14. Series Piping two HPWH and two tanks

Series Piping (continued)

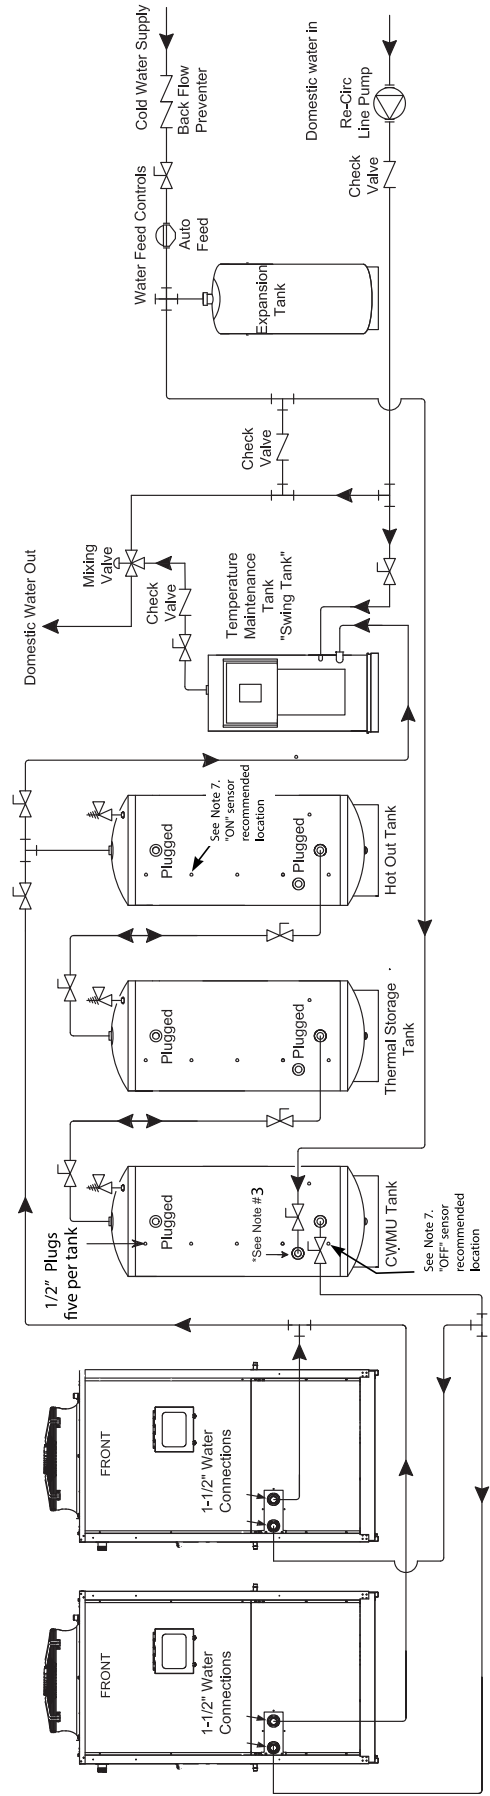

Refer to the Heat Pump
Near Piping Diagram for
the required Valves.
See Figure 12 on page 17

NOTES:

1. Reference section 'temperature sensor locations' in the TSC panel Manual for correct placement of temperature control sensors in thermowells based on the application.
2. For demand response installations, up to six (6) tank temperature monitoring sensors shall be placed in all thermal well tappings. Reference controls documentation for details.
3. Additional diffuser must be installed in the cold water makeup tank. Diffuser openings must be directed downward. Refer to the instructions that are shipped with the diffuser.
4. Back Flow Preventer may be required. Check local codes.
5. Thermal expansion tank may be required. Check local codes
6. This drawing is a schematic representation of a piping style, and is not intended to be used as a working installation drawing. Local code requirements must be met.
7. When controlling with 2 aquastats or 2 RTD temperature sensors wired directly to the heat pump , placement of the sensors can be adjusted to suite the needs of the installation.
The recommended locations are to place the "OFF" sensor in the lowest 1/2" NPT port in the CWMU tank. The "ON" sensor is recommended to be placed in the second 1/2" NPT port down from the top of the Hot Out Tank.
For systems with just one tank, it is recommended to place the "OFF" sensor in lowest 1/2" NPT port and the "ON" in the second 1/2" NPT port down from the top of the tank.

SYMBOL LEGEND	
	MANUAL VALVE
	3-WAY CONTROL VALVE
	CHECK VALVE
	PRESS RELIEF VALVE
	AUTO FEED
	PUMP

Figure 15. Series piping two HPWH and three tanks


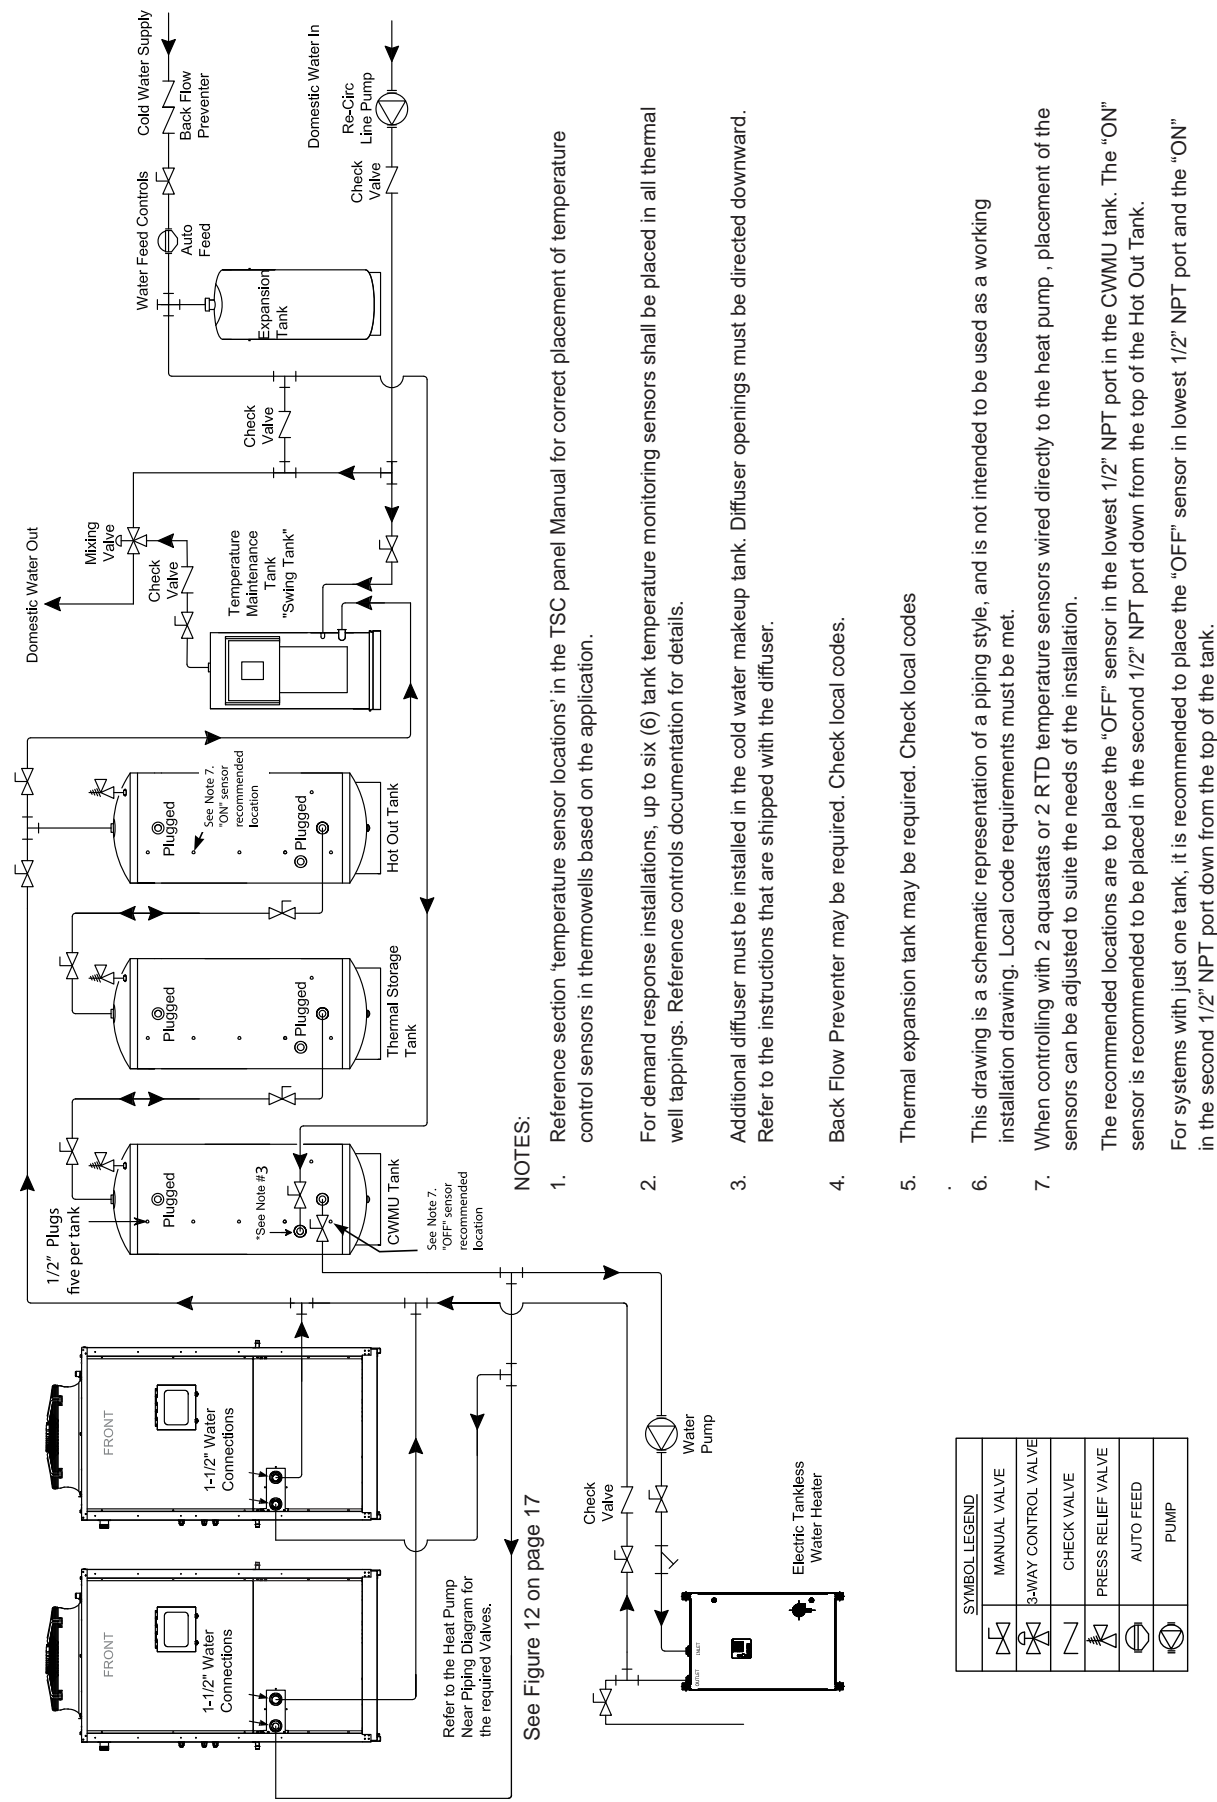


Figure 16. Series piping two HPWH, three tanks, and a tankless electric water heater

3.D.5 Typical Laars Stratified Tank

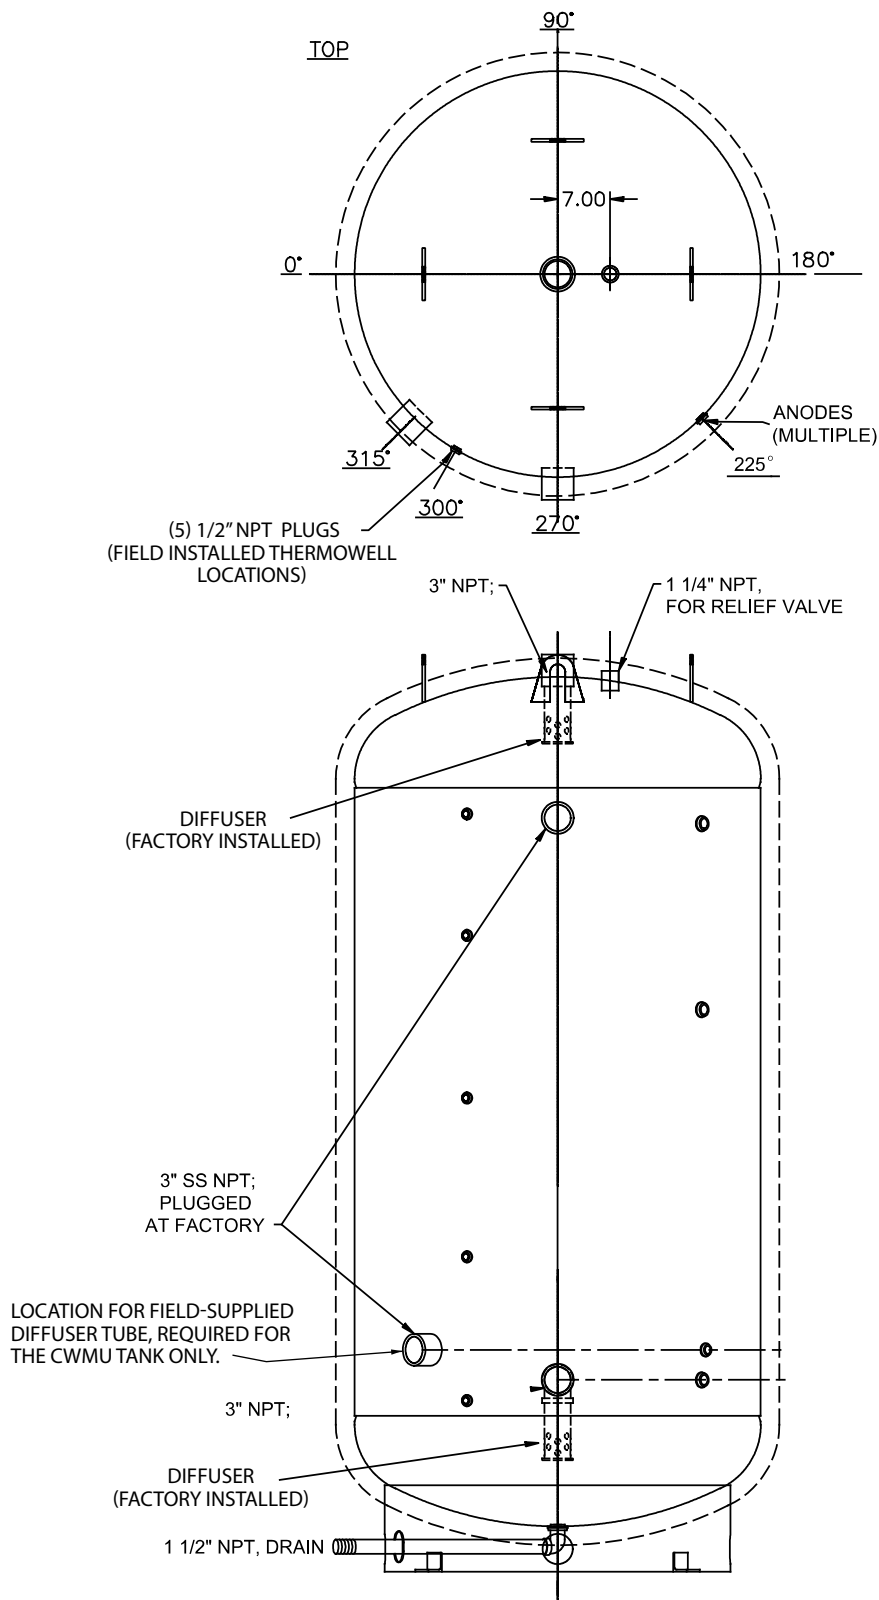

NOTE: Horizontal 3" diffuser tubes are available for the cold water makeup tank and for parallel tank systems, for their CWMA tanks only.

Figure 17. Stratified Tank

3.E Freeze Protection

The HPWH may be installed indoors or outdoors. If installing outdoors in a location that may experience freezing temperatures, precautions must be taken to prevent water in the heat exchanger, pump and water lines from freezing. Damage due to freezing water is not covered by the warranty.

3.E.1 Factory Installed Freeze Protection

Each HPWH includes heat trace and insulating blanket on the internal heat exchanger, pump, water lines, and condensate drain pan. The heat trace will automatically activate when the temperature within the enclosure falls below 35°F.

3.E.2 Field Installed Freeze Protection


Provisions must be made to ensure that none of the external piping can freeze. This is commonly done with insulated electric heat trace which should be connected to an emergency power back-up system that is activated during a power outage.

3.E.3 Heat Trace Emergency Power Connection

Connect power from the building's emergency back-up power system to the designated 120V input terminals on the heat pump. In case of a power outage in the building, the emergency back-up power supply will now power up the factory installed heat trace within the heat pump to avoid accidental freeze-up during inclement weather. Refer to Section 5.B on page 25 for connecting the emergency power system. Only the heat trace system is now powered up, thus the heat pump itself will not operate. Total Amp draw of all heat tracing, insulating blanket and the compressor oil heater is less than 5 Amp at 120 V. This information can be used to size up a battery back-up system. The heat trace will protect the water lines from freezing down to -15°F.

CAUTION

If the ambient temperature could go below -20°F for an extended period during a power outage, then the water must be drained from the unit and the lines blown out with compressed air to prevent freezing water. A drain valve with garden hose connection is included on the internal water piping.

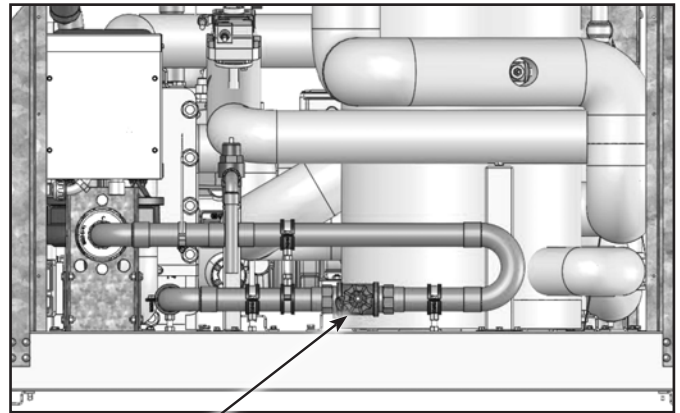

Drain Valve is at the bottom front of unit.

Figure 18. Location of Water Drain Valve

Even with the emergency power input, the contractor is responsible for ensuring that external water and evaporator drain lines are freeze protected.

The field installed heat trace for the external piping must be connected to the building's emergency power system separately in a manner such that the external piping and heat pump will be protected from accidental freeze-up.

If power is not available to the unit during cold weather, water should be drained from the unit and the lines blown out with compressed air.

The #6 Valves in Figure 12 on page 17 can be used in conjunction with the #4 Valves to isolate the HPWH and flush compressed air or anti-freeze through the unit. If using anti-freeze ensure it is non-toxic and that it is completely flushed from the unit before returning the unit to service.

SECTION 4 Evaporator Drip Tray

Each evaporator is equipped with a drip tray to collect water removed from the ambient air under certain ambient and system operating conditions. The drip trays will also collect rain water entering through the top mounted fans.

Heat trace lines within the drip trays are installed at the time of manufacture. See Section 3.E on page 24. The heat trace will be automatically activated when the temperature within the enclosure falls below 35°F.

CAUTION

In locations that can experience freezing temperatures the drain lines must be suitably insulated and heat traced.

Each drip tray has two 3/4" Male NPT drain fittings as show in the Figure 19 on page 25. The condensate rate may be as high as 60GPH depending on local conditions. Proper drain sizing should be a function of a local engineer working with job specific requirements. Drain piping must be added, sized and sloped properly to lead the condensate away from the unit, whenever the unit is installed indoors.

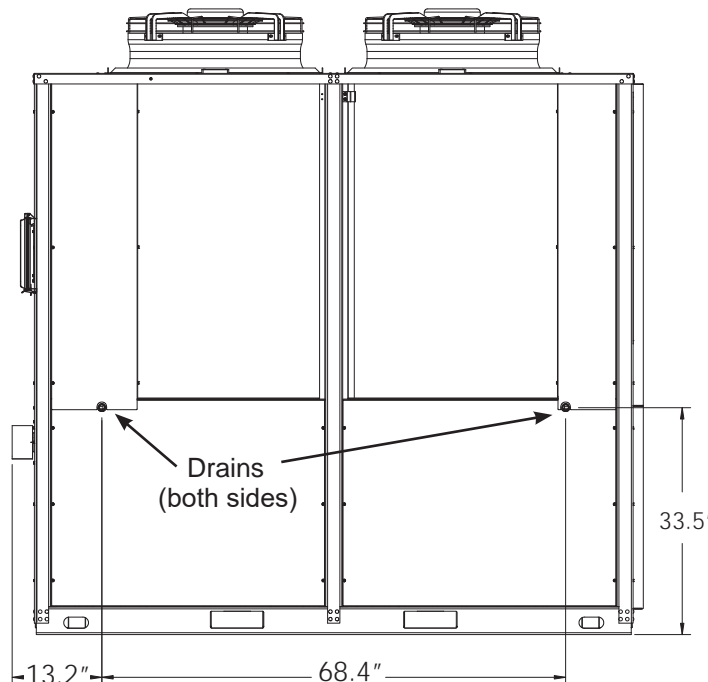


Figure 19. Drains

SECTION 5 Electrical Connections

5.A Electrical Warnings

WARNING

Electrical Shock Hazard

Electrical shock can cause severe injury, death or property damage. Disconnect the power supply before beginning installation or changing the wiring to prevent electrical shock or damage to the equipment. It may be necessary to turn off more than one power supply to disconnect.

All electrical wiring is to be done in accordance with local codes, or in the absence of local codes, with: 1) The National Electrical Code ANSI/NFPA No. 70 - latest Edition, or 2) CSA STD. C22.1 "Canadian Electrical Code - Part 1." This appliance must be electrically grounded in accordance with these codes.

WARNING

A means for main unit disconnection must be incorporated in the fixed supply power wiring in accordance with national and local codes. External main disconnect or main circuit breaker is provided by the installing contractor.

CAUTION

The supply voltage to this unit must not be disconnected, except for service, or unless otherwise instructed by procedures outlined in this manual.

5.B Main Power Connections

5.B.1 Grounding Instructions

WARNING

Failure to ground this water heater properly may cause erratic control system operation, and/or personal injury or death.

This heat pump water heater must be grounded in accordance with the National Electric Code and/or local codes having jurisdiction. The grounding lug is located in the main power panel. See Figure 20 on page 26.

5.B.2 Electrical Requirements

Voltage	Frequency	Phase	FLA	MCA	MOP	SCCR
480VAC	60Hz	3	58	70	110	10kA

Table 4. Main Power Ratings

Main power wiring is terminated in the high voltage enclosure, which is located in the back of the unit. To access the high voltage enclosure, remove the upper jacket panel from the back of the unit (shown as in Figure 20) that is secured by six #10 hex screws.

5.B.3 High Voltage

Route the main power wiring through the 2" conduit hub. Connect the main power L1, L2, L3, to the distribution blocks and ground lug located at the top of the enclosure. See grounding instructions in section 5.B.1. Proper phase connection can be verified by referring to Section 7.

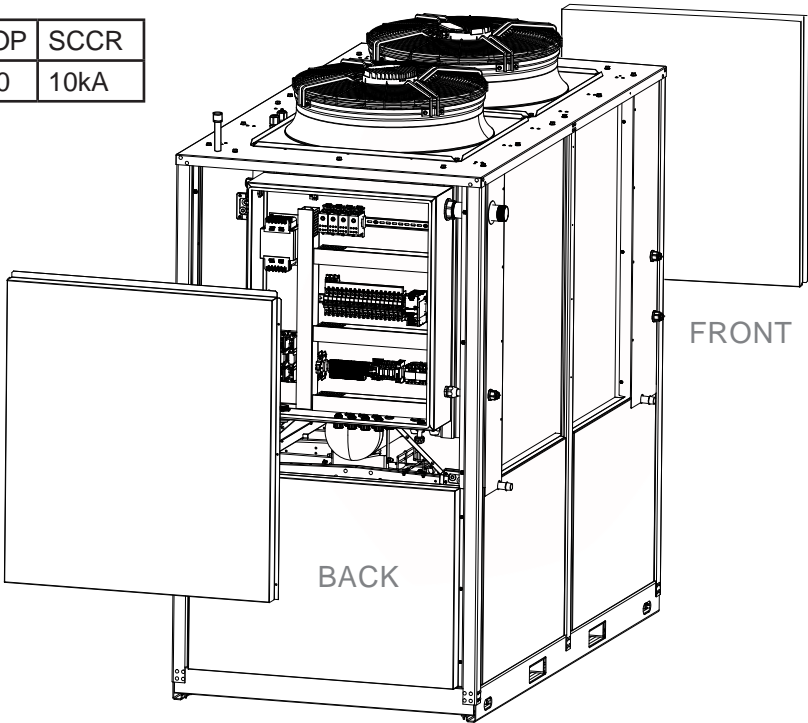


Figure 20. High Voltage and Field Connections

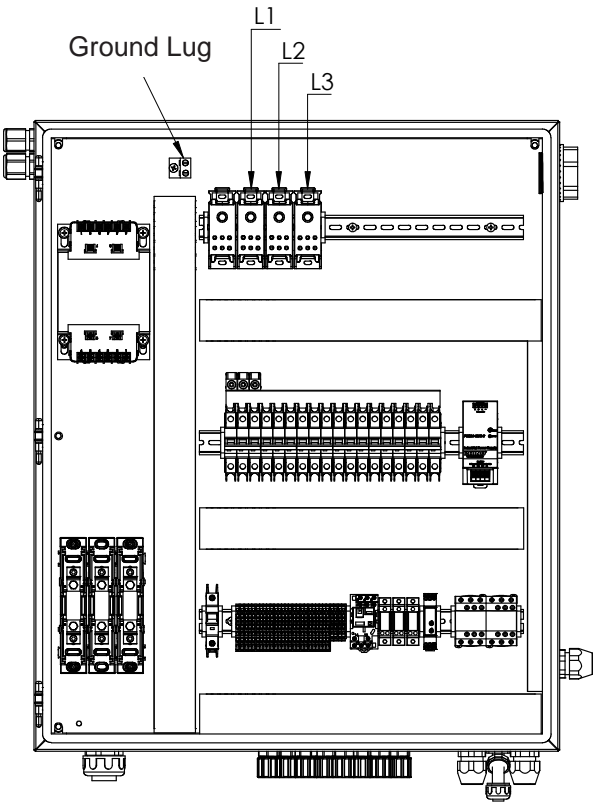


Figure 21. The High Voltage Enclosure

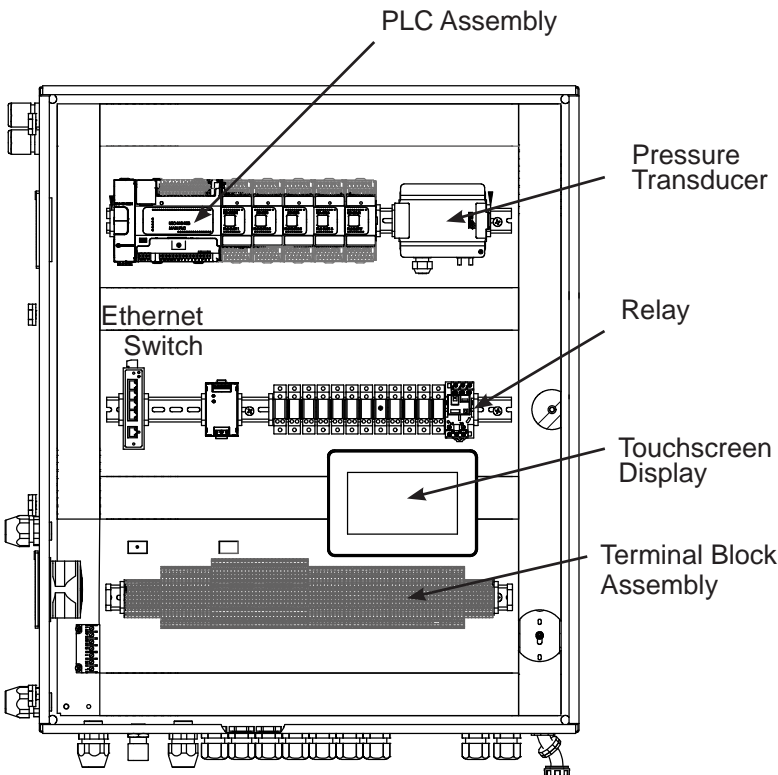


Figure 22. Field Connections Enclosure

5.C Field Connections

Field Connections are located at the FRONT of the unit, behind the touchscreen display.

5.C.1 Heat Demand Source

Dry Contacts (aquastat)

The HPWH can receive its ON and OFF heat demand from a set of “break on rise” dry contacts, i.e. aquastats. These are to be wired in the field and they “break on rise” a 24VDC signal. The temperature that they open at is field adjustable.

Connect the ON aquastat between TB1-8 and any free terminal between TB1 (93 to 100).

Connect the OFF aquastat between TB1-9 and any free terminal between TB1 (93 to 100).

Adjust the aquastat by removing the cover and adjusting the dial to the desired temperatures. See below for recommended settings.

RTD

Alternatively, a heat demand may be based on a temperature input. The temperature sensors must be a 3 wire PT1000 type RTD (supplied by Laars). All wires will be landed on terminal block TB3. The ON heat demand sensor (RTD1) will have its two common (Red) wires, landed on positions 1 and 2 of TB3, while the third (White) wire will land on position 3 of TB3. The OFF heat demand sensor (RTD2) will have its two common (Red) wires, landed on positions 4 and 5 of TB3, while the third (White) wire will land on position 6 of TB3.

See Figure 23

When using either aquastats or RTD's it is recommended to set the ON setting to be at least 5 degrees less than the set point of the heat pump. It is also recommended to set the OFF setting to 125°F in order to prevent high inlet temperature faults at the HPWH. See figures Figure 14 to Figure 16 for recommended aquastat/ RTD sensor placement in the tanks.

5.C.2 External Fan connections

Dry Contacts (Inlet and Outlet Fans)

The HPWH is provided with Dry contacts to enable Inlet and/or Exhaust fans. All wires will be landed on terminal Block TB1. The dry contacts are rated up to 30VAC/VDC and 2A maximum. The Inlet fan connections will land across positions labeled 121 and 122 of terminal block TB1, while the Exhaust fan connections will land across positions labeled 123 and 124 of TB1. **See Figure 23**

RTD Temp Sensors to TB3

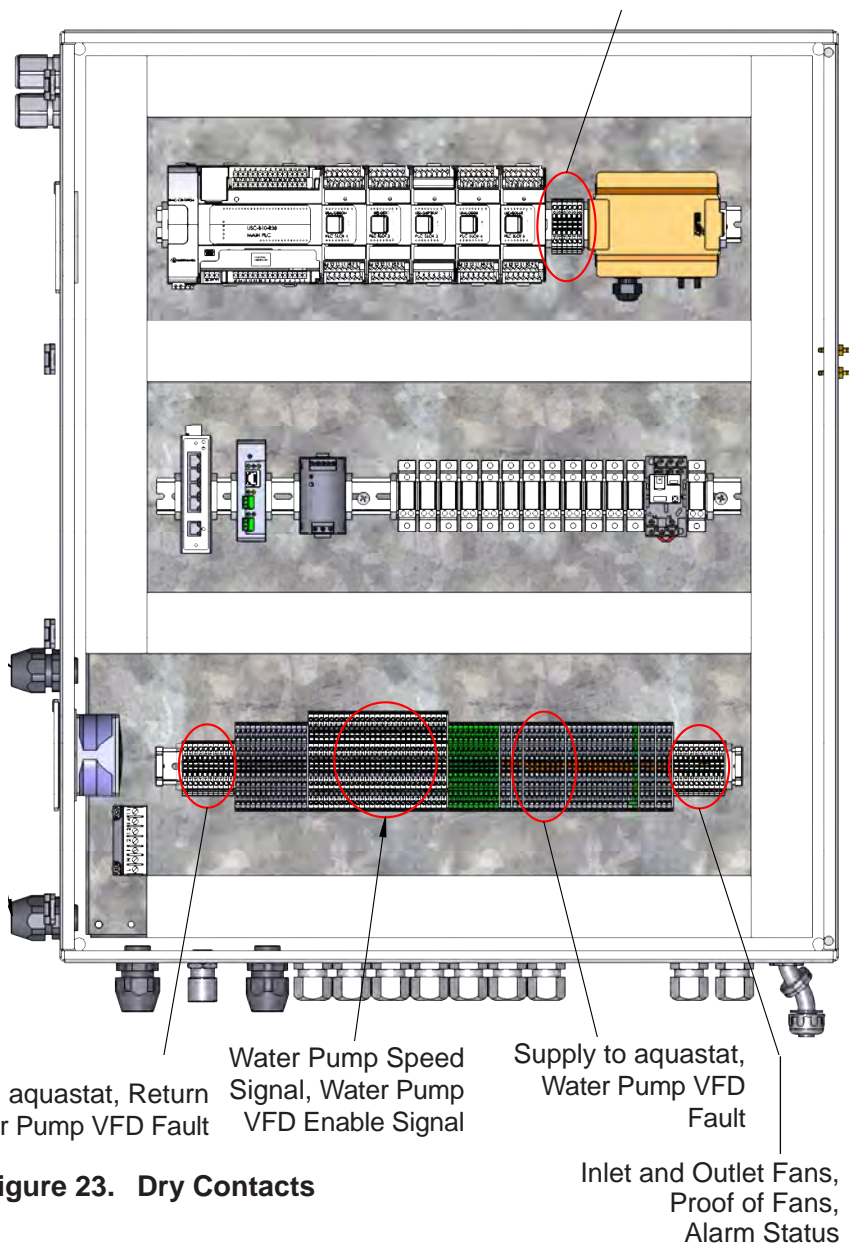


Figure 23. Dry Contacts

Proof of Fans

A proof of fans input is optionally available, supplying 24VDC through a set (or sets) of dry contacts. **See Figure 23** The terminal block (TB1). If both Inlet and Exhaust dry contacts are used, remove and discard the factory installed jumper wire across TB1 positions 125 and 128. The dry contacts of the Inlet fan will land across positions labeled 125 and 126 of terminal block TB1. The dry contacts of the Exhaust fan will land across positions labeled 127 and 128 of TB1. Note: if only one dry contact is used/available, the jumper wire will need to be landed across the unused proof of fan terminal blocks (i.e., if the Exhaust fan input terminals are not used, place the jumper wire across positions 127 and 128 of TB1).

Field Connections (continued)

5.C.3 Alarm Dry Contacts

A set of dry contacts is available for **Alarm Status**.

The dry contacts are rated up to 30VAC/VDC and 2A maximum. **See Figure 23** The contacts will open on any alarm (or when power is not applied to the HPWH), with the terminal block (TB1). Wires will need to be landed across positions labeled 129 and 130 of TB1.

5.C.4 External Water Pump Option

Water Pump Speed Signal (0 to 10VDC)

When an external water pump is used, a 0 to 10VDC speed signal is provided. The speed signal is modulated by the HPWH's internal PLC logic, to control the outlet water temperature to the setpoint. The common (0V) reference wire must be connected to position 58 of terminal block TB1, while the voltage speed input wire (0 to 10V) must be connected to position 59 of TB1. **See Figure 23**

Water Pump VFD Enable Signal (Dry Contact)

A set of dry contacts is provided for the external pump VFD's enable input. The contacts will land across positions 74 and 75 of terminal block TB1. **See Figure 23**

Water Pump VFD Fault (Dry Contact)

An input is available to connect the external pump VFD's fault contacts. 24VDC will be fed from the HPWH and through the dry contacts. When the contacts open, the HPWH's PLC will interpret this as a VFD fault condition. 24VDC should be delivered to the contacts from any available terminal block position labeled between 93 and 100 located on TB1. The return from the contacts should be landed on position 7 of TB1. **See Figure 23**

SECTION 6 Control Operation

The HPWH is equipped with a proprietary control system that allows for automatic operation including evaporator defrost. A touch screen display is included to allow for monitoring of key process variables, adjustment of set-points and trouble shooting. The following sections will describe system operation and the menus available for user interface.

Prior to starting the unit for the first time, please refer to SECTION 7 on page 58 for initial startup procedures. It is recommended that initial startup and commissioning be performed by a Factory Trained technician to ensure that the system will operate at peak efficiencies for the given configuration. Once these procedures are completed, normal operation and shutdown of the unit will be initiated based on a call for heat. This call for heat can be from the closing of dry contacts of a tank mounted aquastat or a temperature sensor input, or TSC. See SECTION 5 for wiring details.

The default water temperature setting is 130°F, see Section 6.C to adjust the outlet water temperature. The HPWH will vary compressor discharge pressure and water flow rate to achieve the desired temperature.

Advanced trouble shooting is only to be done by Factory trained and authorized personnel with permissions to access the proprietary control system.


The Home Menu



The Home Menu shows the state of the HPWH including the compressor pressures, gas cooler water inlet and outlet temperatures.

From the Home Menu, you can navigate to the following four (4) primary menus:


- A. CO₂ - P & ID menu
- B. H₂O - P & ID menu
- C. Security
- D. Service menu

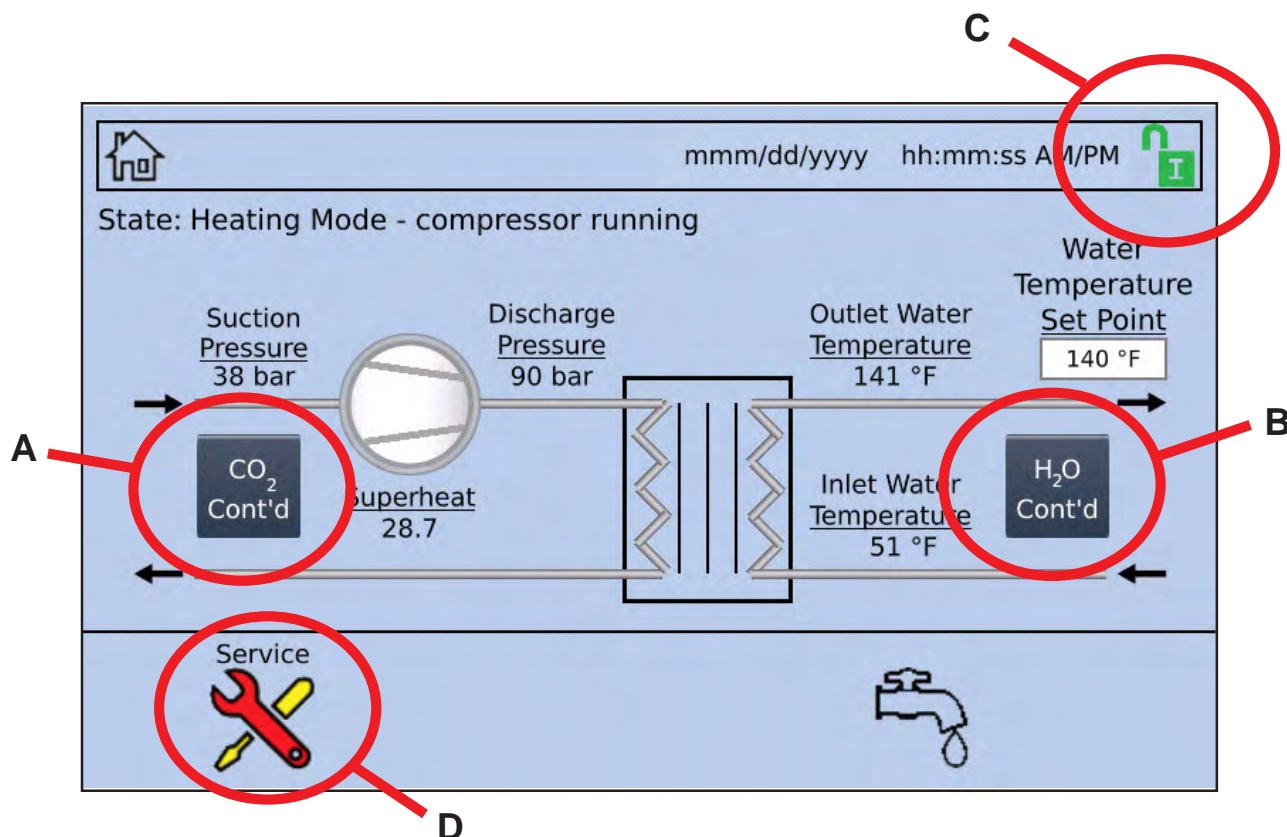




CO2
P & ID
CONT'D

6.A CO2 Process and Instrumentation Diagram (P & ID) Menu

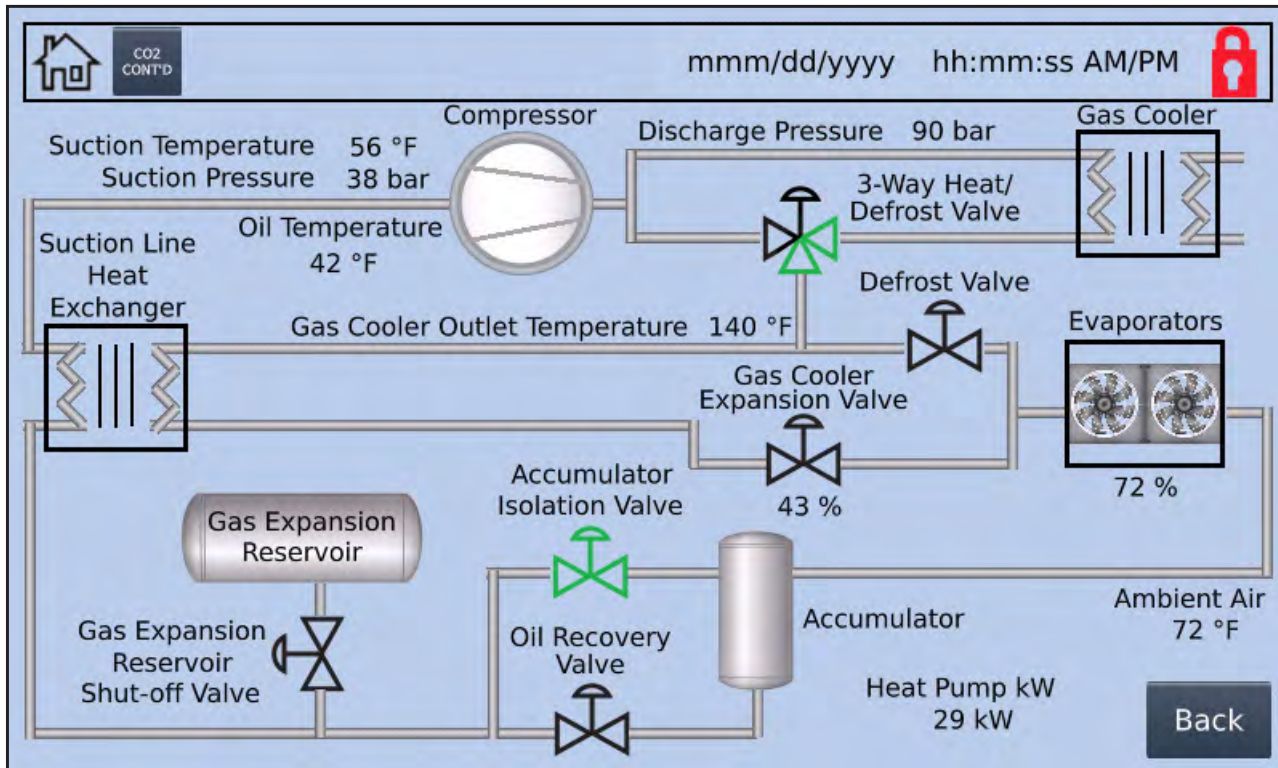


WATER
P & ID
CONT'D

6.B Water Process and Instrumentation Diagram (P & ID) Menu

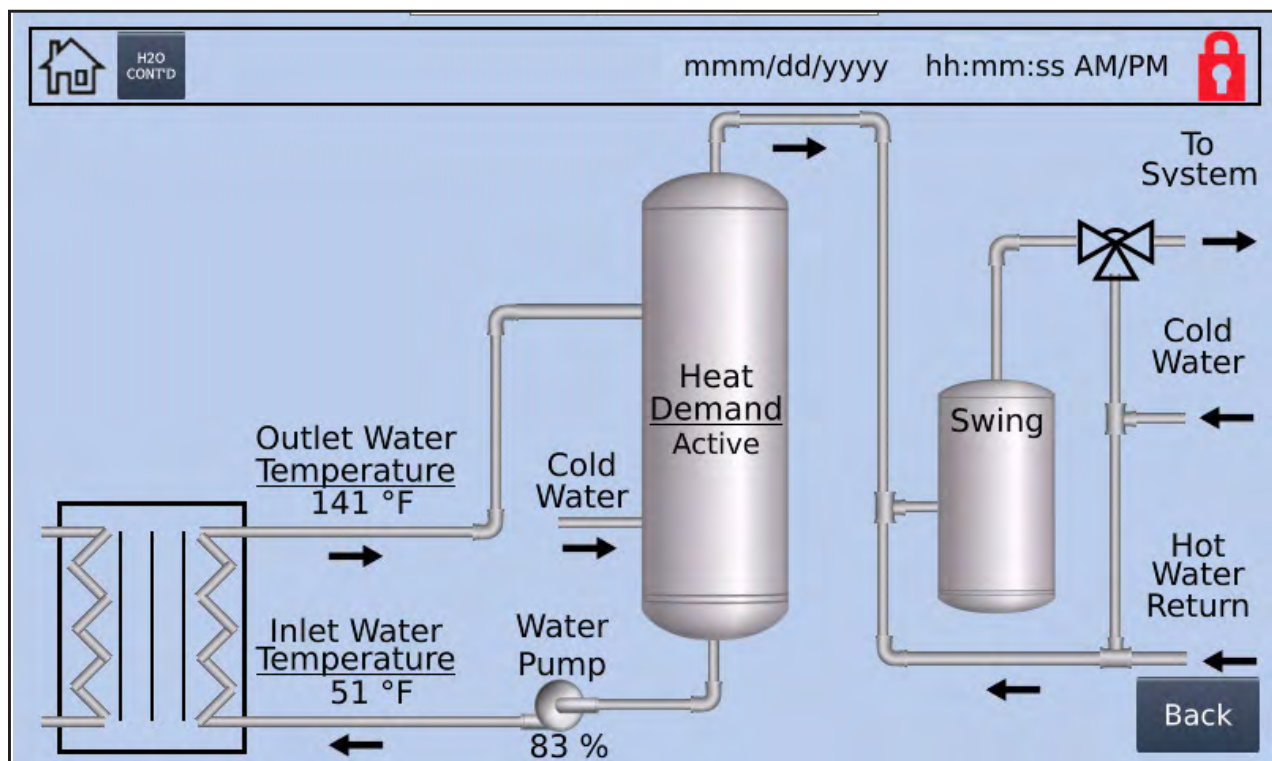


6.B.1 Auto Mode: Start Up

The Startup Mode states are identified in the figure below.

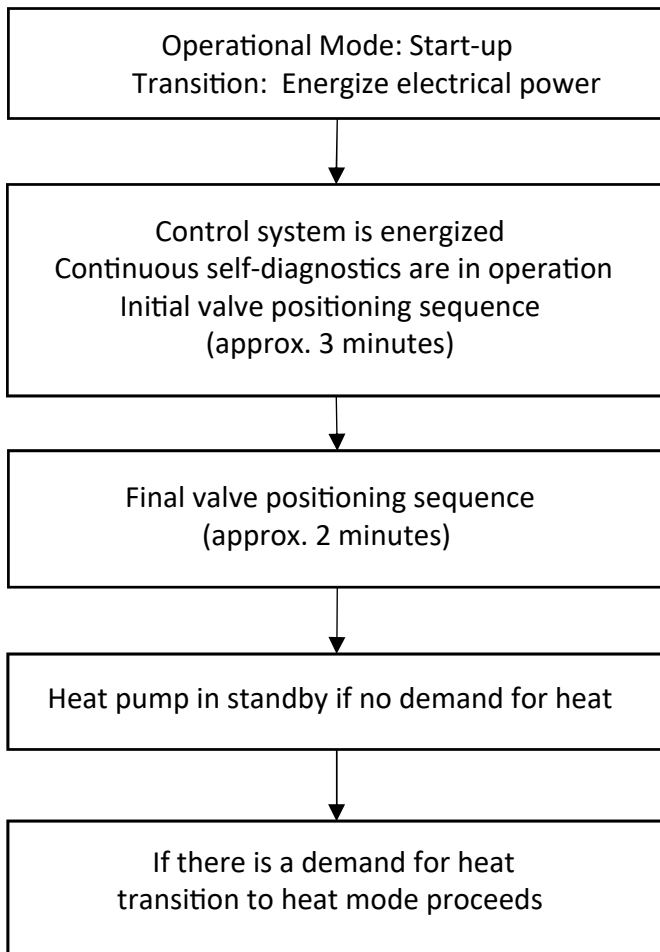


6.B.2 Auto Mode: Heating

The heating cycle states are identified in the figure below.

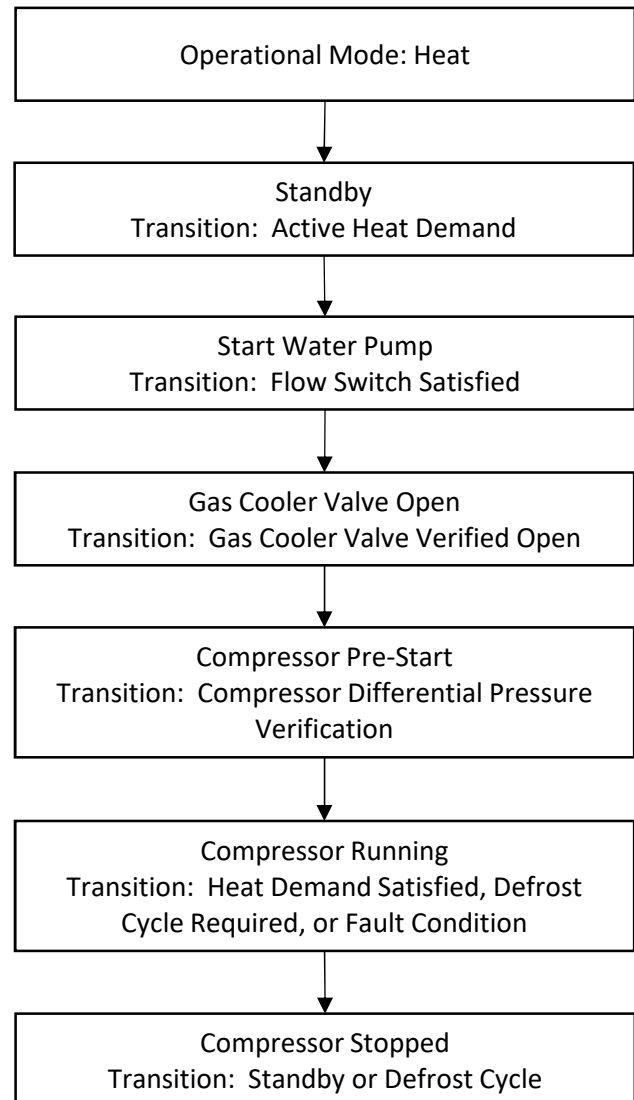

6.B.3 Auto Mode: Defrost

Under certain atmospheric and the HPWH's run conditions, ice may form on the evaporator coils which if uncontrolled will lead to sub-par performance or system shutdown. The control system is designed to enter a defrost cycle when these conditions exist. The defrost cycle allows hot refrigerant to enter the evaporators thereby melting ice formed on the coils. The defrost cycle states are identified in the figure below:

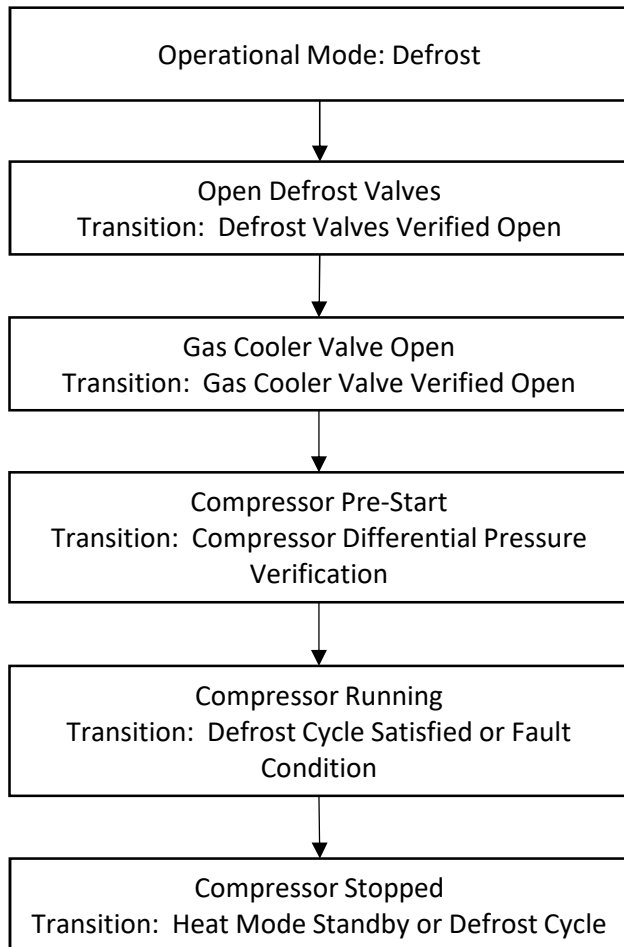


6.C Security




The Security Icon is on all screens. It displays the current security level of the control system.

- A closed red padlock indicates a logged-out state and full protection.
- An open green padlock (noted with a U) indicates a user level of protection, granting minimal modifications.
- An open green padlock (noted with an I) indicates that the Installer Level password has been entered.

To change the security level, press and hold the padlock symbol for approximately 3 seconds. Then press the Login button, when it appears.

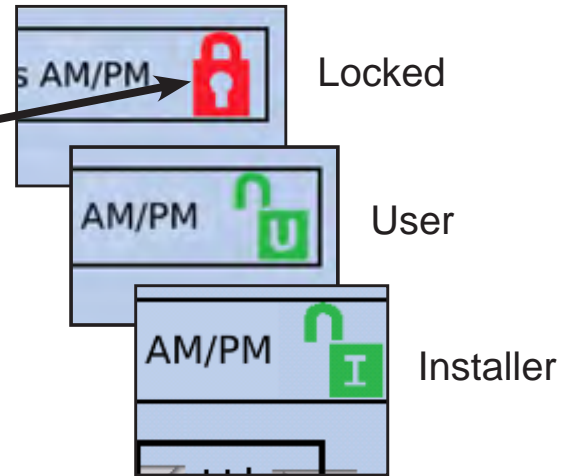


NOTE: Installer Level access is for factory authorized and trained personnel, and allows for configuration and parameter changes to be made at initial setup and commissioning.

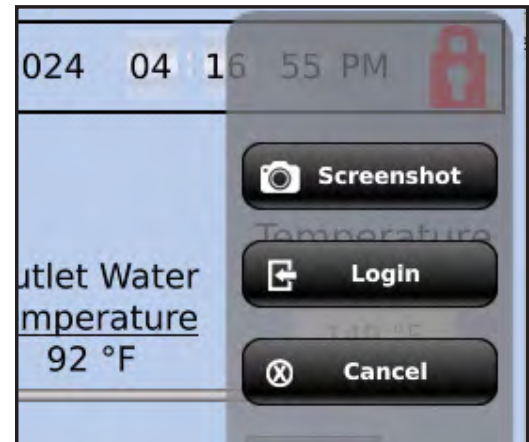

Press the drop-down symbol to show the User name (security level) options.




Several options are given, but only access to the User and Installer levels are detailed in the following.

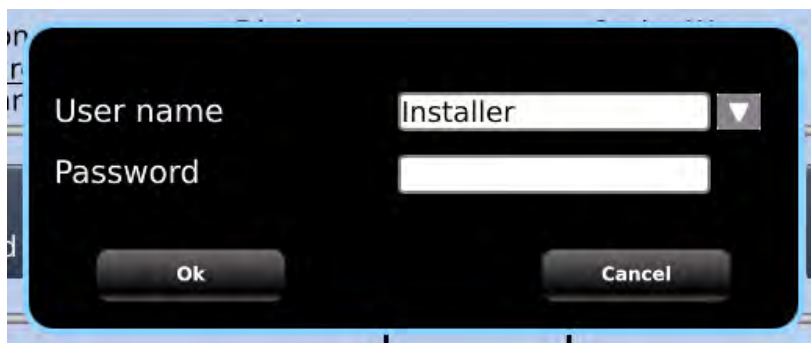


For authorized personnel only, the Installer level can be selected.


Enter the password "inst" and select Ok.

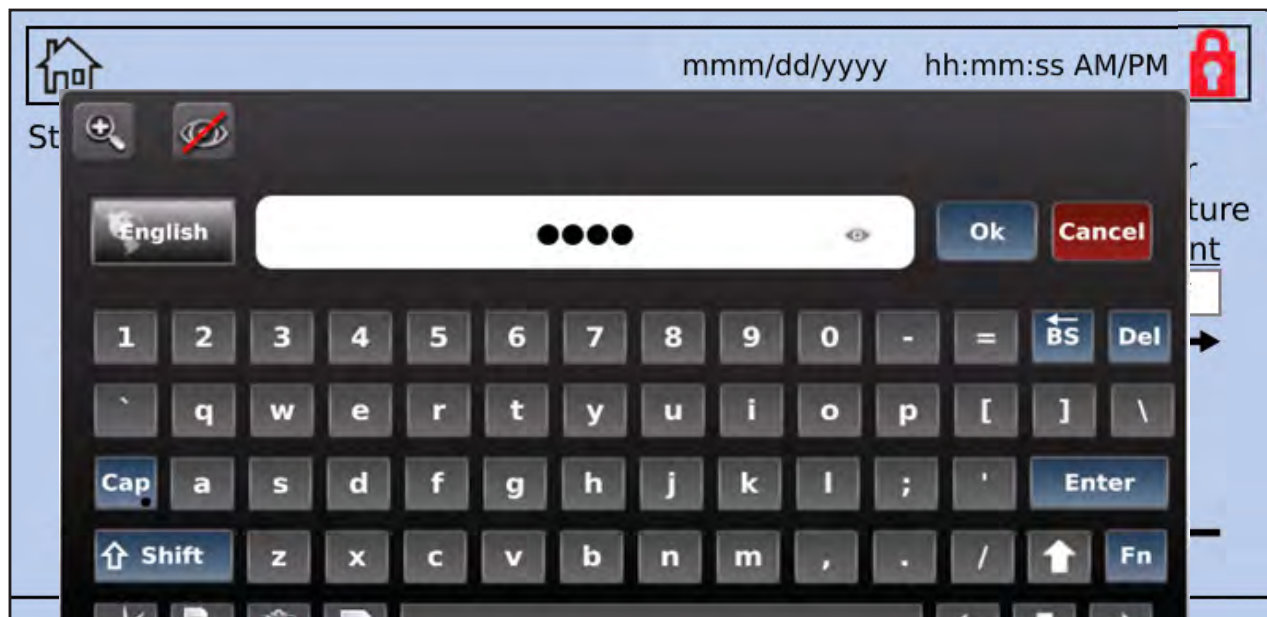

The green unlocked icon should now show with the letter I in the upper right portion of the screen.

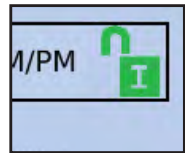


The User security level can be accessed in the same way, by selecting User in the drop-down.

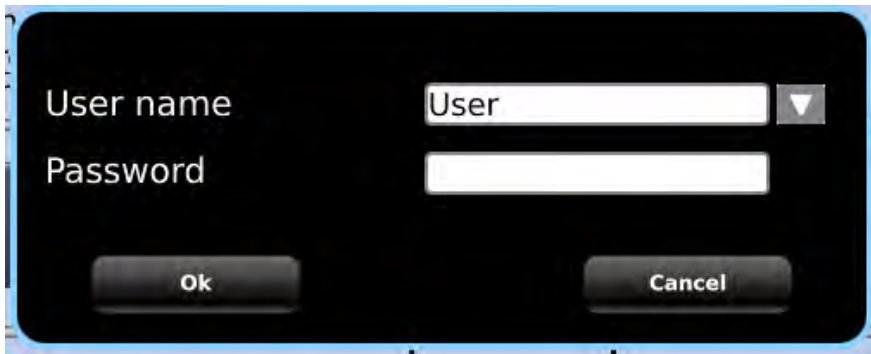


Enter the password "user" and select Ok.

The green unlocked icon should now show with the letter U in the upper right portion of the screen.

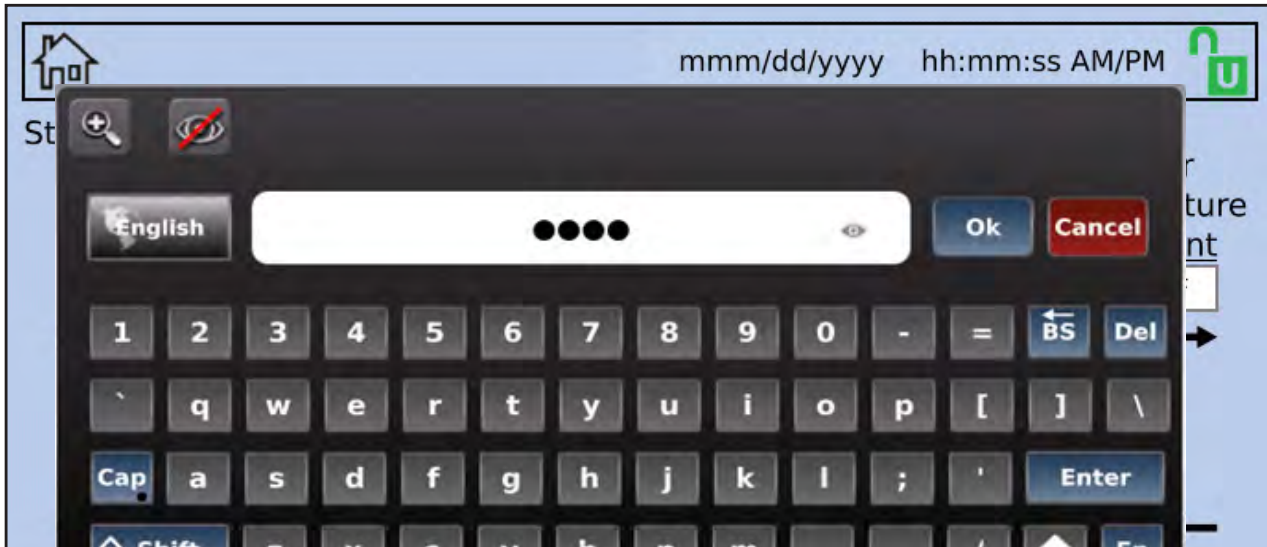


To 'Logout', press and hold the padlock for approximately three seconds and then select 'Logout' from the menu. Note that the display will lock itself automatically after one hour.

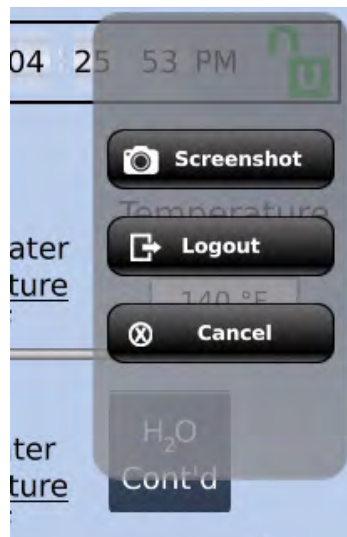



6.D Service Menu (User Security Level)


The Service Menu, while in the user security level, shows these service functionalities.

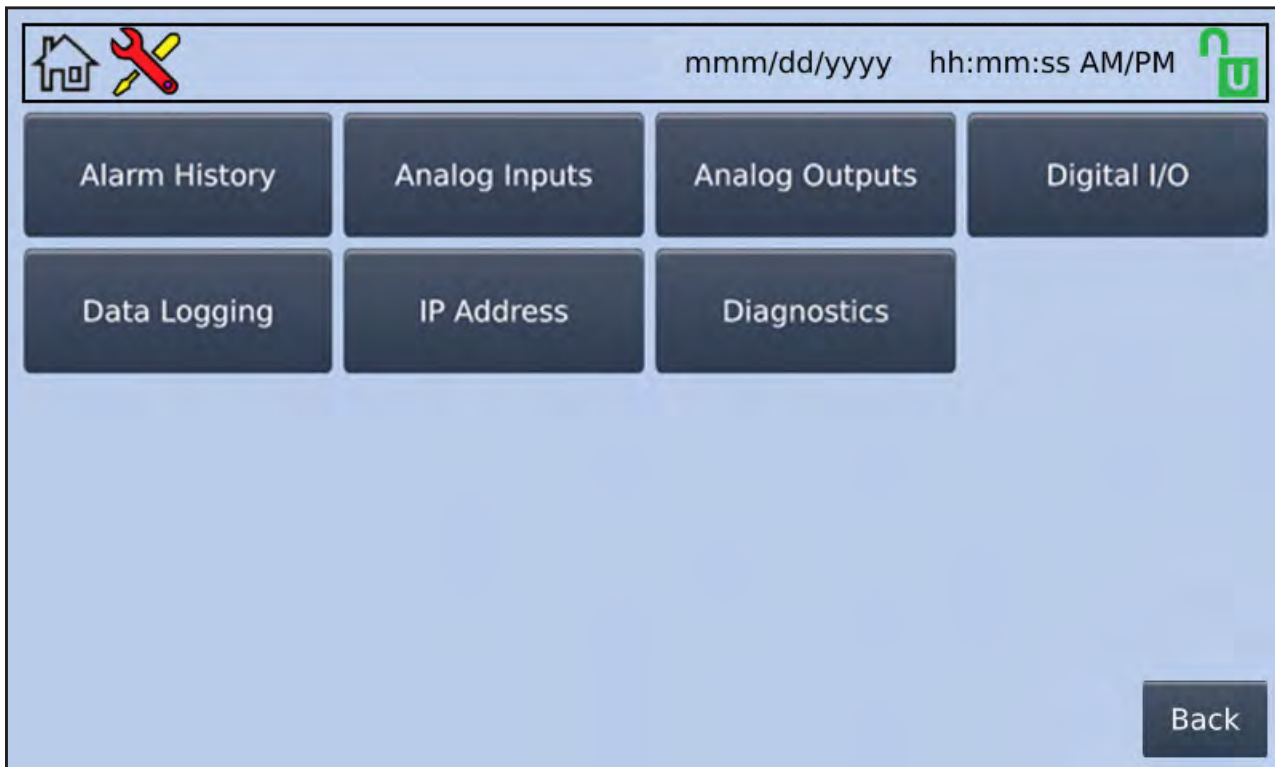

6.D.1 Alarm History

The Alarm Screen displays the Alarm History. Pressing the info (i) button will give a more detailed description of the alarm or fault condition.





6.D.2 Analog Inputs

The Analog Input Menu shows the status of the various analog inputs to the heat pump, the temperature inputs, and the heat pump instantaneous power draw (when installed with the power meter option).

The screenshot displays the 'Analog Inputs' menu. At the top, there is a navigation bar with a home icon, a service icon, and the text 'Analog Inputs'. The date and time are shown as 'mmm/dd/yyyy hh:mm:ss AM/PM'. The main content area is divided into three sections: 'Analog Inputs', 'Temperature Inputs', and 'Power Meter'. The 'Analog Inputs' section contains a table with parameters like Compressor Suction Pressure, Redundant Comp Suction Pressure, Compressor Discharge Pressure, Gas Cooler Valve Position, and Evaporator Diff Pressure. The 'Temperature Inputs' section contains a table with parameters like Inlet Water, Outlet Water, Compressor Inlet, Compressor Outlet, Compressor Oil, Gas Cooler Outlet, Control Panel, Ambient Air, Water Tank HD On, and Water Tank HD Off. The 'Power Meter' section shows 'Heat Pump kW' as 25.6 kW. A callout box for 'Water Tank HD On' shows a value of '*** °F' and an 'Input Status: 17'. At the bottom right, there are 'Info' and 'Back' buttons.

Analog Inputs		Temperature Inputs		Power Meter
Compressor Suction Pressure 49 bar	Redundant Comp Suction Pressure 49 bar	Inlet Water 83 °F	Outlet Water 175 °F	Heat Pump kW 25.6 kW
Compressor Discharge Pressure 91 bar	Gas Cooler Valve Position 65 %	Compressor Inlet 89 °F	Compressor Outlet 177 °F	
Evaporator Diff Pressure 0.0010 "WC		Compressor Oil 134 °F	Gas Cooler Outlet 109 °F	
		Control Panel 80.4 °F	Ambient Air 67 °F	
		Water Tank HD On 80 °F	Water Tank HD Off 80 °F	

Water Tank HD On
*** °F
Input Status: 17

Info Back

If an Input Status shows on any parameter on the Analog Input screen, press the Info button to display error descriptions.

The screenshot displays the 'Input Status' menu. At the top, there is a navigation bar with a home icon, a service icon, and the text 'Analog Inputs'. The date and time are shown as 'mmm/dd/yyyy hh:mm:ss AM/PM'. The main content area is divided into two sections: 'Input Status' and 'Info'. The 'Input Status' section contains a list of input status codes and their descriptions. The 'Info' section contains a detailed description of the input status codes. A callout box for 'Input Status' shows a value of '*** °F' and an 'Input Status: 17'. At the bottom right, there is a 'Back' button.

Input Status

- 0 = No Errors
- 1 = Contact Laars Technical Support
- 2 = Input Overflow
- 4 = Input Over-range
- 6 = Input Overflow & Over-range
- 8 = Input Under-range
- 16 = Input Underflow
- 24 = Input Underflow & Under-range
- 32 = Connection Fault (Temperature Inputs Only)

Overflow or Underflow is when an input value exceeds the Over-range or Under-range boundaries respectively.

Input Overflow - The module measures values that are up to 1.5% higher than the nominal input range (i.e. Input Over-range). When an input overflow occurs, the input status will be "2", while the input value itself will show the maximum permissible value.


For example, if the specified input range is 0-10V, the Over-range values can reach up to 10.15V. If the input level exceeds 10.15V, the Input Status will be 6, while the input value itself will show the maximum permissible value.

Back



6.D.3 Analog Outputs


The values for GCV1 correspond to the percentage that the Gas Cooler Valve is open. All other outputs relate to the relative speed of the compressor, fans, and water pump.

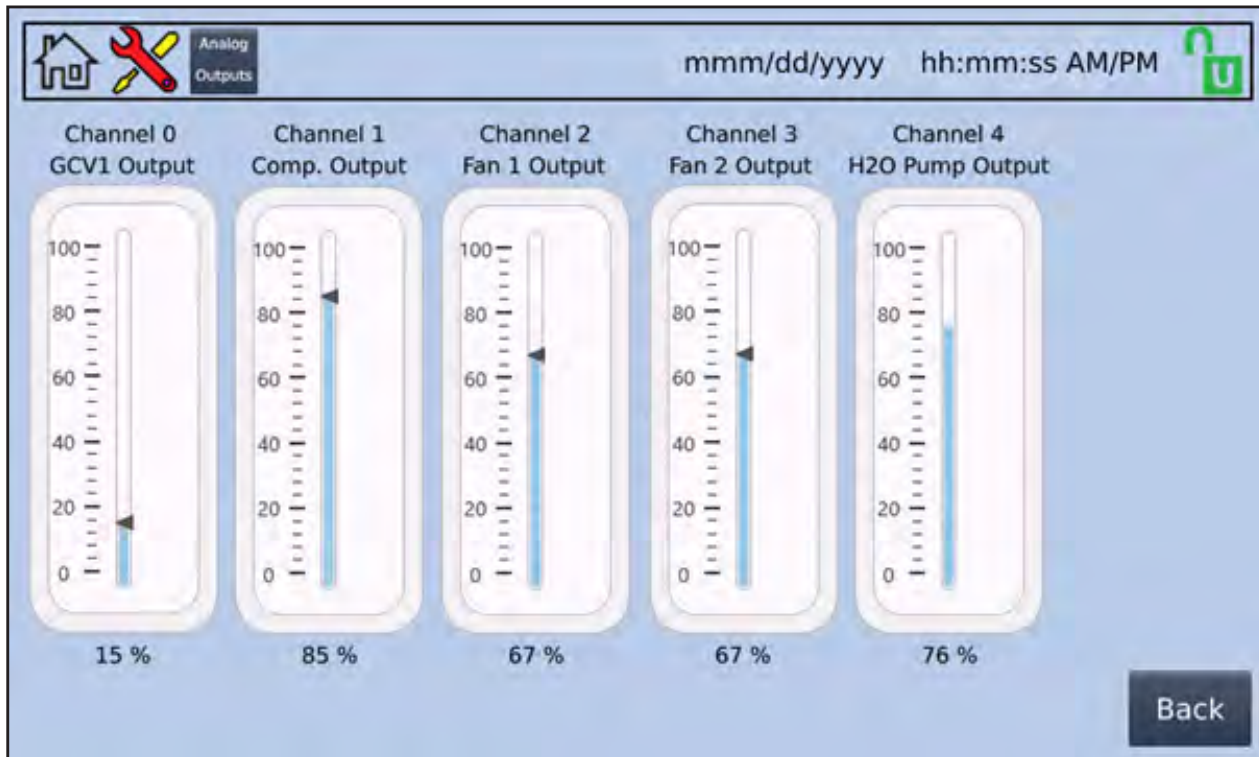

6.D.4 Digital I/O's

6.D.4.a Inputs

Displays the state of the digital inputs (grey indicates no connection or input present)

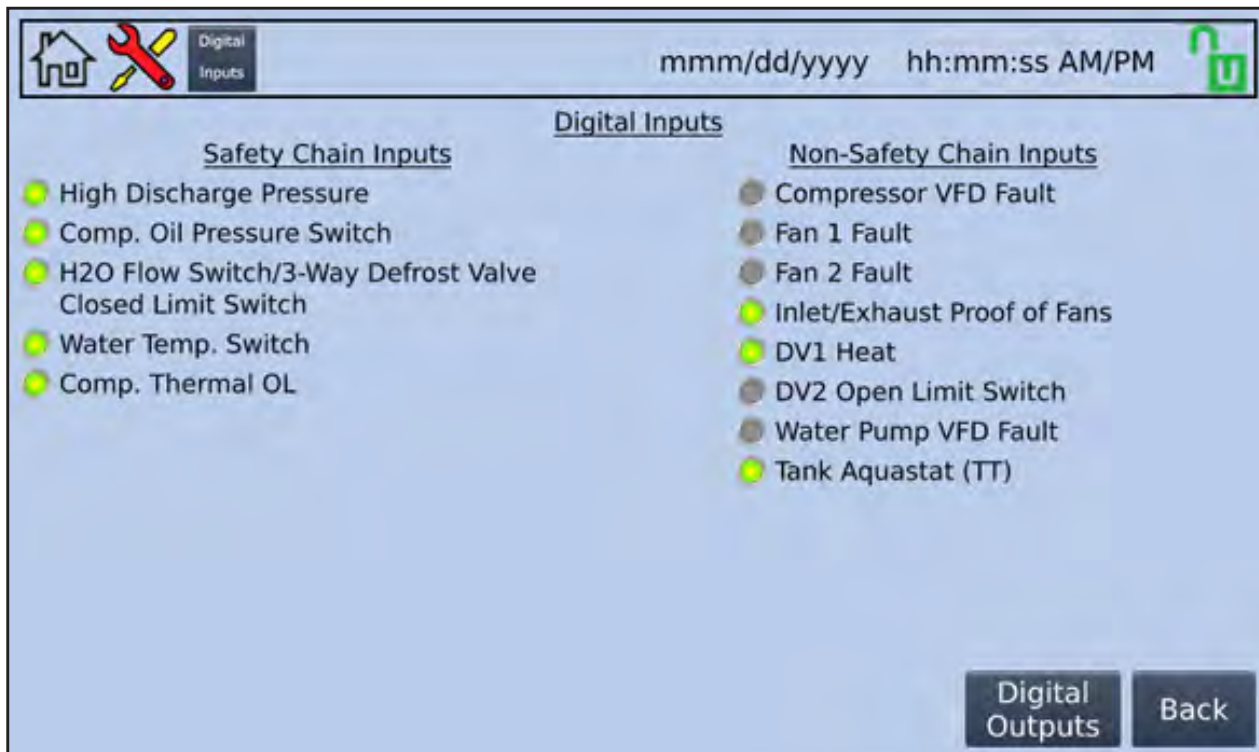



6.D.4.b Outputs

Indicates the status of each digital output (grey indicates an inactive output)

Digital Inputs

Digital Outputs

mmm/dd/yyyy hh:mm:ss AM/PM

Digital Outputs

☐ Enclosure Circulation Fan
☒ Compressor VFD Enable
☒ Fan 1 Enable
☒ Fan 2 Enable
☐ 3-Way Defrost Valve
☐ Defrost Valve
☒ Oil Recovery Valve
☒ Gas Expansion Reservoir Shut-off Valve
☐ Accumulator Isolation Valve
☒ Water Pump VFD Enable
☒ Oil Level Differential Pressure

☐ Water Pipe Heat
☐ Evaporator-1 Drip tray Heater
☐ Evaporator-2 Drip tray Heater
☒ Inlet / Exhaust Fans Enable

Back

6.D.5 Data Logging

Data log files can be created, per the screen instructions.

Data Logging

mmm/dd/yyyy hh:mm:ss AM/PM

Log File	Status Code	Sample Count
H2O Heating	+0	3467
TempPressFlow	+0	3467
Superheat	+0	3467
TT5-TT2	+0	3467
TT10-TT25		
TT26-TT29_more		
Additional	+0	34668

Status Code Explanation: 0=No Error, -1=no SD card, -2=reserved, -3=Save file error


Logging will occur under the following conditions:

1. Automatically in heat mode
2. Automatically in defrost mode
3. Manually using the switch below

Off

Log

Back



6.D.6 IP Address

The IP addresses are read only, with the User security level. Additionally, the PLC logic and firmware versions are provided.

Heat Pump Number: 1

CPU IP Settings

IP Address: 192 . 168 . 100 . 101

Subnet Mask: 255 . 255 . 255 . 0

Default Gateway: 0 . 0 . 0 . 0

Refresh Apply

Panel IP Settings

IP Address: 10 . 4 . 7 . 21

Subnet Mask: 255 . 255 . 255 . 0

Default Gateway: 10 . 4 . 7 . 50

Refresh ☐ DHCP Apply

Logic Version: HPWH24219

Firmware Version: 1.37.79

Back

6.D.7 Diagnostics

This menu displays the total runtime hours on the major components, as well as the total on/off cycles

Diagnostics


Compressor	Fan 1	Fan 2	Pump
1 days	2 days	2 days	2 days
19 hours	1 hours	1 hours	17 hours
141 cycles	408 cycles	410 cycles	141 cycles

Back




6.E Service Menu (Installer Security Level)

The Service Menu, with Installer security level, shows additional functionalities.

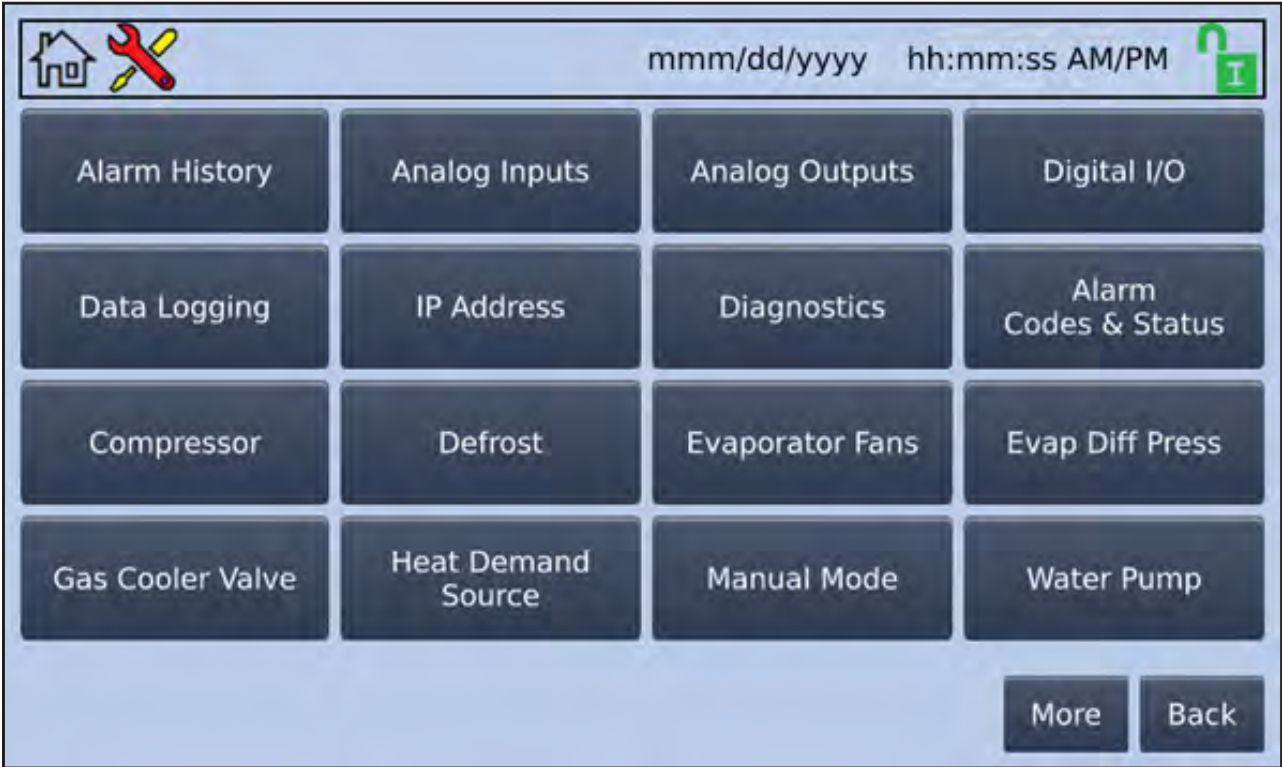

More





6.E.1 Alarm History

The Alarm Screen displays the Alarm History. Pressing the info (i) button will give a more detailed description of the alarm or fault condition.

Alarm History							
Severity	Alarm ID	Group ID	Name	Value	Date Time	Change	Info
Minor	60	0	Low Suction...Transducer)	0	5/5/24 21:29	OFF	
Minor	60	0	Low Suction...Transducer)	1	5/5/24 21:09	ON	
Major	1	0	High Discha...sure Switch	0	5/5/24 21:05	OFF	
Major	4	0	High Water Temperature	0	5/5/24 21:05	OFF	
Major	5	0	Compressor ...load Fault	0	5/5/24 21:05	OFF	
Major	6	0	Compressor ...ssure Fault	0	5/5/24 21:05	OFF	

Back


6.E.2 Analog Inputs

The Analog Input Menu shows the status of the various analog inputs to the heat pump, the temperature inputs, and the heat pump instantaneous power draw (when installed with the power meter option).

Analog Inputs		Temperature Inputs		Power Meter
Compressor Suction Pressure 47 bar	Redundant Comp Suction Pressure 46 bar	Inlet Water 85 °F	Outlet Water 175 °F	Heat Pump kW 27.5 kW
Compressor Discharge Pressure 95 bar	Gas Cooler Valve Position 59 %	Compressor Inlet 87 °F	Compressor Outlet 189 °F	
Evaporator Diff Pressure 0.0262 "WC		Compressor Oil 137 °F	Gas Cooler Outlet 108 °F	
		Control Panel 80.2 °F	Ambient Air 67 °F	
		Water Tank HD On 80 °F	Water Tank HD Off 80 °F	

Calibrate Inputs

Info Back



6.E.2.a Analog Inputs, Calibrate

Each pressure transducer can be calibrated by adding a positive or negative offset value. The upper limit of the installed flow meter can be entered, as well.

Analog Inputs

Calibrate

mmm/dd/yyyy hh:mm:ss AM/PM

I

Uncalibrated Analog Inputs

Compressor Discharge Pressure
 51.9 bar
 Input Status: 0

Compressor Suction Pressure
 39.5 bar
 Input Status: 0

Redundant Comp Suction Pressure
 38.9 bar
 Input Status: 0

NOTE: Calibrated Value = Uncalibrated Value + Calibration

Discharge Pressure Calibration:

0.0 bar

Suction Pressure Calibration:

0.0 bar

Redundant Suction Pressure Calibration:

1.0 bar

Flow Meter Upper Limit:

150.00 GPM

Calibrated Analog Inputs

Compressor Discharge Pressure
 51.9 bar
 Input Status: 0

Compressor Suction Pressure
 39.5 bar
 Input Status: 0

Redundant Comp Suction Pressure
 39.9 bar
 Input Status: 0

Flow Meter
 -2.82 GPM
 Input Status: 16

Info

Back

6.E.2.b Analog Inputs, Info

Water Tank HD On
 *** °F
 Input Status: 17

If an Input Status shows on any parameter on the Analog Input screen, press the Info button to display error descriptions.

Analog Inputs

Info

mmm/dd/yyyy hh:mm:ss AM/PM

I

Input Status

0 = No Errors	8 = Input Under-range
1 = Contact Laars Technical Support	16 = Input Underflow
2 = Input Overflow	24 = Input Underflow & Under-range
4 = Input Over-range	32 = Connection Fault (Temperature Inputs Only)
6 = Input Overflow & Over-range	

Overflow or Underflow is when an input value exceeds the Over-range or Under-range boundaries respectively.

Input Overflow - The module measures values that are up to 1.5% higher than the nominal input range (i.e. Input Over-range). When an input overflow occurs, the input status will be "2", while the input value itself will show the maximum permissible value.


For example, if the specified input range is 0-10V, the Over-range values can reach up to 10.15V. If the input level exceeds 10.15V, the Input Status will be 6, while the input value itself will show the maximum permissible value.

Back



6.E.3 Analog Outputs

The values for GCV1 correspond to the percentage that the Gas Cooler Valve is open. All other outputs relate to the relative speed of the compressor, fans, and water pump.

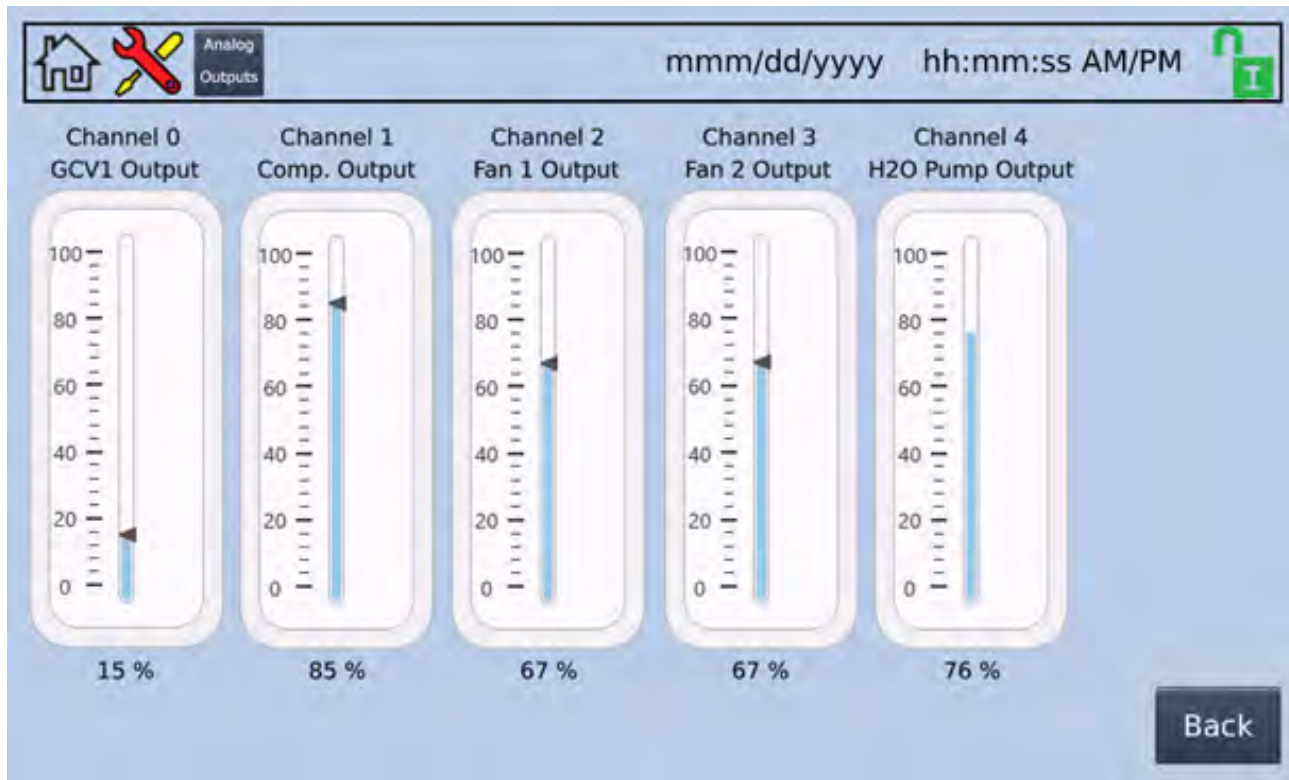



6.E.4 Digital I/O's

6.E.4.a Inputs

Displays the state of the digital inputs (grey indicates no connection or input present)

The screenshot shows the 'Digital Inputs' screen. At the top, there is a navigation bar with a home icon, a service icon (wrench and screwdriver), and a 'Digital Inputs' button. To the right of the navigation bar is a date/time display 'mmm/dd/yyyy hh:mm:ss AM/PM' and a green padlock icon. Below the navigation bar, the screen is titled 'Digital Inputs'. It is divided into two columns: 'Safety Chain Inputs' and 'Non-Safety Chain Inputs'. Each input is represented by a colored circle (yellow for active, grey for inactive) followed by the input name. At the bottom right, there are two buttons: 'Digital Outputs' and 'Back'.


Safety Chain Inputs	Non-Safety Chain Inputs
<input checked="" type="radio"/> High Discharge Pressure	<input type="radio"/> Compressor VFD Fault
<input checked="" type="radio"/> Comp. Oil Pressure Switch	<input type="radio"/> Fan 1 Fault
<input type="radio"/> H2O Flow Switch/3-Way Defrost Valve Closed Limit Switch	<input type="radio"/> Fan 2 Fault
<input type="radio"/> Water Temp. Switch	<input checked="" type="radio"/> Inlet/Exhaust Proof of Fans
<input type="radio"/> Comp. Thermal OL	<input checked="" type="radio"/> DV1 Heat
	<input type="radio"/> DV2 Open Limit Switch
	<input type="radio"/> Water Pump VFD Fault
	<input type="radio"/> Tank Aquastat (TT)

6.E.4.b Outputs

Indicates the status of each digital output (grey indicates an inactive output)

The screenshot shows the 'Digital Outputs' screen. At the top, there is a navigation bar with a home icon, a service icon (wrench and screwdriver), and two buttons: 'Digital Inputs' and 'Digital Outputs'. To the right of the navigation bar is a date/time display 'mmm/dd/yyyy hh:mm:ss AM/PM' and a green padlock icon. Below the navigation bar, the screen is titled 'Digital Outputs'. It is divided into two columns. Each output is represented by a colored circle (yellow for active, grey for inactive) followed by the output name. At the bottom right, there is a 'Back' button.

Digital Outputs
<input type="radio"/> Enclosure Circulation Fan
<input checked="" type="radio"/> Compressor VFD Enable
<input checked="" type="radio"/> Fan 1 Enable
<input checked="" type="radio"/> Fan 2 Enable
<input type="radio"/> 3-Way Defrost Valve
<input type="radio"/> Defrost Valve
<input checked="" type="radio"/> Oil Recovery Valve
<input checked="" type="radio"/> Gas Expansion Reservoir Shut-off Valve
<input type="radio"/> Accumulator Isolation Valve
<input checked="" type="radio"/> Water Pump VFD Enable
<input checked="" type="radio"/> Oil Level Differential Pressure
<input type="radio"/> Water Pipe Heat
<input type="radio"/> Evaporator-1 Drip tray Heater
<input type="radio"/> Evaporator-2 Drip tray Heater
<input checked="" type="radio"/> Inlet / Exhaust Fans Enable



6.E.5 Data Logging

Data log files can be created, per the screen instructions.

Log File	Status Code	Sample Count
H2O Heating	+0	3606
TempPressFlow	+0	3606
Superheat	+0	3606
TT5-TT2	+0	3606
TT10-TT25		
TT26-TT29_more		
Additional	+0	36059

Status Code Explanation: 0=No Error, -1=no SD card, -2=reserved, -3=Save file error

Logging will occur under the following conditions:

1. Automatically in heat mode
2. Automatically in defrost mode
3. Manually using the switch below

Off Log

Prior to moving files to USB, make sure logging has stopped and a USB memory stick has been installed

Move files to USB **Back**

6.E.5.a Outputs

Data log files can be found and moved to a USB memory stick

SD: 247.1 MB

DOK

Back



6.E.6 IP Address

When multiple (cascaded) heat pumps are installed, this screen is used to assign sequential numbers for each individual heat pump. The CPU IP settings can be changed, but the assigned Heat Pump Number (between 1 and 16) will automatically configure a unique IP address. The Panel IP settings are for remote communication to each heat pump, if desired. Additionally, the PLC logic and firmware versions are provided.

The screenshot shows the 'IP ADDRESS' configuration screen. At the top, there is a header bar with a home icon, a wrench and screwdriver icon, the text 'IP ADDRESS', and a date/time display 'mmm/dd/yyyy hh:mm:ss AM/PM' followed by a lock icon. Below the header, on the left, is a 'Heat Pump Number' field with the value '1'. To the right of this field are two sections: 'CPU IP Settings' and 'Panel IP Settings'. The 'CPU IP Settings' section includes fields for 'IP Address' (192.168.100.101), 'Subnet Mask' (255.255.255.0), and 'Default Gateway' (0.0.0.0), with 'Refresh' and 'Apply' buttons below. The 'Panel IP Settings' section includes fields for 'IP Address' (10.4.7.21), 'Subnet Mask' (255.255.255.0), and 'Default Gateway' (10.4.7.50), with 'Refresh', a 'DHCP' checkbox, and an 'Apply' button below. To the right of these sections, the 'Logic Version' is 'HPWH24219' and the 'Firmware Version' is '1.37.79'. A 'Back' button is located at the bottom right of the screen.

Field	Value
Heat Pump Number	1
CPU IP Address	192.168.100.101
CPU Subnet Mask	255.255.255.0
CPU Default Gateway	0.0.0.0
Panel IP Address	10.4.7.21
Panel Subnet Mask	255.255.255.0
Panel Default Gateway	10.4.7.50
Logic Version	HPWH24219
Firmware Version	1.37.79



6.E.7 Diagnostics

6.E.7.a Diagnostics Menu A

This menu displays the total runtime hours on the major components, as well as the total on/off cycles of components and safety switches.

Diagnostics			
<u>Compressor</u> 1 days 19 hours 141 cycles	<u>Fan 1</u> 2 days 1 hours 408 cycles	<u>Fan 2</u> 2 days 1 hours 410 cycles	<u>Pump</u> 2 days 17 hours 141 cycles
<u>High Discharge Pressure Switch</u> 307 cycles	<u>Compressor Oil Diff. Pressure Switch</u> 110 cycles	<u>Water Flow/3-Way Defrost Limit Switch</u> 187 cycles	<u>High Water Temperature Switch</u> 105 cycles
<u>Compressor Thermal Overload Switch</u> 128 cycles	<u>Compressor Thermal Overload Trips</u> 12 trips		

More Back

6.E.7.b Diagnostics (More Menu A)

Displays the total cycles of several control components, as well as hours of various machine states.

Diagnostics (continued)			
<u>3-Way Heat/Defrost Valve</u> 9 cycles	<u>Defrost Valve</u> 7 cycles	<u>Gas Expansion Tank Shut-off Valve</u> 41 cycles	<u>Accumulator Isolation Valve</u> 66 cycles
<u>Oil Recovery Valve</u> 3248 cycles	<u>Gas Cooler & Water Piping Heat Trace</u> 64 cycles	<u>Evaporator Trays Heat Trace</u> 0 cycles	<u>Compressor Starts (Past Hour)</u> 0 starts
<u>Startup Phase</u> 0 hours	<u>Idle Phase</u> 0 hours	<u>Heat Phase</u> 1 hours	<u>Defrost Phase</u> 0 hours
<u>Fault</u> 7 hours			

Back



6.E.8 Alarm Status Viewer

Displays the state of all possible alarms. The arrow button on the upper left corner of the screen will allow the list to be sorted.

Severity	Alarm ID	Group ID	Name	Status	State	ACK Pending	Action
Major	1	0	High Discharge Pressure Switch	Enabled	OFF	No	
Major	3	0	Low Water Flow	Enabled	OFF	No	
Major	4	0	High Water Temperature	Enabled	OFF	No	
Major	5	0	Compressor Thermal Overload Fault	Enabled	OFF	No	
Major	6	0	Compressor Differ...il Pressure Fault	Enabled	OFF	No	
Major	7	0	Compressor VFD Fault	Enabled	OFF	No	

Back

Selecting the gear symbol under the action column allows to disable the fault from showing on the home screen's "banner" or to Shelve (delay) the message from appearing for an adjustable amount of minutes.

6.E.8.a Alarm Status Action

High Discharge Pressure Switch


Upon a heat demand, whether in heat or defrost mode, if the compressor discharge pressure exceeds the compressor high discharge pressure switch (PSH1) threshold, the unit will fault on a compressor high discharge pressure condition.

Enter Comment...

Duration (minutes):

Disable **Shelve**

Back



6.E.9 Compressor

Displays the compressor speed and logic

Service

COMP

mmm/dd/yyyy hh:mm:ss AM/PM

Compressor

Low Compressor Speed: 85 %

High Compressor Speed: 100 %

Current Compressor Speed: 85 %

The compressor has two possible speeds, High and Low. When suction pressure drops to 17 bar the compressor is set to High Speed. When suction pressure rises above 19 bar, the compressor is set to low speed.

Injection Time
00:45 Minute:Sec

Pause Time
00:10 Minute:Sec

Back

6.E.10 Defrost

This is a read only screen showing defrost parameters.

Defrost

mmm/dd/yyyy hh:mm:ss AM/PM

Defrost Parameters

Defrost Trigger Parameters

Saturation Temp Defrost SP: 28.4 °F

Start Defrost Delay Time: 00 min

Defrost Differential Pressure SP: 0.0000 "WC

Defrost Complete Parameters

Saturation Temperature Defrost Complete SP: 32.0 °F

Minimum Defrost Time: 05 min

Gas Cooler Defrost SP: 60.00 bar

Back



6.E.11 Evaporator Fans

This is a read only screen showing the evaporator fan(s) speed parameters.

EVAP FANS

mmm/dd/yyyy hh:mm:ss AM/PM

Evaporator Fans	
Read Only Parameters	
PT2: 40 bar	
Fan 1 Speed: 67 %	
Fan 2 Speed: 67 %	
Read/Write Parameters	
Fan Minimum Pressure:	35.00 bar
Fan Maximum Pressure:	60.00 bar
Manual Fan Speed Enable	<input type="checkbox"/>
Manual Fan Speed:	60 %

Back

6.E.12 Evap Diff Press

This screen provides the ability to change the evaporator clogging detection settings. Below the ambient temperature threshold, the defrost logic takes over control, and a clogged evaporator may initiate unnecessary defrost cycles.

Evap Diff Press

mmm/dd/yyyy hh:mm:ss AM/PM

Summertime Evaportator Clogged Settings	
Evap DP Clogged Pressure Threshold	0.4000 "WC
Evap DP Clogged Ambient Temp Threshold	60 °F

Back



6.E.13 Gas Cooler Valve

This is a read only screen showing the gas cooler operation and settings.

mmm/dd/yyyy hh:mm:ss AM/PM

Gas Cooler Valve

Discharge Pressure Set Point: 96 bar Gas Cooler Valve Output: 15 %

Low Ambient Temp Discharge Pressure at Gas Cooler Valve Output Low Limit: 15.00 %

Max allowed discharge pressure setpoint: 98.00 bar Gas Cooler Valve Output High Limit:

Discharge Pressure: 52 bar Manual Low Limit Value:

Kp: 0.1% Gas Cooler Valve Feedback: 15 %

Ki: 1 s

Kd: 1 s

PID Help
Back

6.E.14 Heat Demand Source

This screen is for selection of the heat demand source. The heat demand source will be ignored when the Not Commissioned (default) state is selected. Only select Commissioned when the heat pump is ready to operate. Additionally, the Heat Pump Temperature and Tank Temperature Setpoints can be adjusted, when the On/Off Sensors source of demand is selected.

mmm/dd/yyyy hh:mm:ss AM/PM

☐ Not Commissioned
 ☒ Commissioned

Note: All heat demand sources are ignored until the unit is commissioned

Heat Demand Source

☒ Tank wired directly to the heat pump

☐ Tank System Controller

☐ Manual

Source of Demand

☐ On/Off Aquastats

☒ On/Off Sensors

Heat Pump Temperature Setpoint:

Tank Temperature Setpoint:

Back



6.E.15 Manual Mode

Limited manual operation is permitted, when the Heat Demand Source is in the Not Commissioned state. Otherwise, these are read only screens.

MANUAL MODE 1

mmm/dd/yyyy hh:mm:ss AM/PM

Discharge Pressure 52 bar

Suction Pressure 40 bar

Gas Cooler Expansion Valve	Evaporator Fan 1	Water Pump
Touch to: Enable	Touch to: Enable	Touch to: Enable
	Fan1 Fault:	VFD Fault:

Compressor	Evaporator Fan 2
Touch to: Enable	Touch to: Enable
VFD Fault:	Fan2 Fault:

More Back


6.E.15.a Manual Mode, Menu 2

MANUAL MODE 2

mmm/dd/yyyy hh:mm:ss AM/PM

3-Way Heat/Defrost Valve	Oil Recovery Valve	Water Piping Heat	Evaporator 2 Heater
Touch to: Open	Touch to: Open	Touch to: Energize	Touch to: Energize
3-Way Heat/Defrost Valve Output Status	Oil Recovery Valve Output Status	Water Piping Heat Output Status	Evap 2 Heater Output Status
Flow Switch/3-Way Defrost Limit Switch	Gas Expansion Reservoir Shut-off Valve	Evaporator 1 Heater	Inlet / Exhaust Fans
3-Way Heat Limit Switch	Touch to: Close	Touch to: Energize	Touch to: De-energize
Defrost Valve	Shut-off Valve Output Status	Evap 1 Heater Output Status	Inlet / Exhaust Fans Status
Touch to: Open			
Defrost Valve Output Status	Control Panel Fan	Accumulator Isolation Valve	
Defrost Valve Open Limit Switch	Touch to: Energize	Touch to: Close	
	Control Panel Fan Output Status	Accumulator Isolation Valve Output Status	

Back



6.E.16 Water Pump

This screen allows the water temperature set point and the pump PID values to be changed. The screen also shows the output speed signal sent from the PLC to the water pump. Additionally, the heat pump uses minimum pump speed detection logic on every transition to a heat demand.

mmm/dd/yyyy hh:mm:ss AM/PM

Water Pump

Heat Pump Temperature Setpoint:
Water Pump Output: 46.00 %

Outlet Water Temperature: 86 °F

Kp: 0.1%

Ki: 1 s

Kd: 1 s

H2O Minimum Pump Output Detection Settings

Start	<input type="text" value="50.00 %"/>	Stop	<input type="text" value="5.00 %"/>
Step	<input type="text" value="1.00 %"/>	Margin	<input type="text" value="5.00 %"/>

Water PID: Integral wind-down

PID Help
Back

6.E.17 PID Help

mmm/dd/yyyy hh:mm:ss AM/PM

Proportional Band (Kp): Defines the proportional band, in units of 0.1%. The proportional band is a percentage of the total Process Value (PV). It is a range defined around the Set Point. When the PV is within this range, the PID function is active. Example: Kp = 100, Ki = 0, Kd = 0, PV = 82F, SV = 70F, PV Low = 0, PV High = 200, CV Low = 0%, CV High = 100%. Since the units of Kp are 0.1%, the proportional band is (100 * 0.1% = 10%) 10% of the PV range (200 - 0 = 200), which is 20F. With these settings, the proportional band is 70F + 20F = 90F. With PV = 82F and SV = 70, Error = 82F - 70F = 12F. 12F is 60% of the proportional band of 20F, therefore the control variable (CV) = 60%.

Integral Time (Ti): Defines the Integral time, in units of 1 second. Integral action responds to the rate of change in the controller's CV output relative to the change in Error. The integral time is the amount of time, as calculated by the controller, required to bring the PV to the Set Point.

NOTE: Integral wind up error may be via the "Force Error Integral" ladder function.

Derivative Time (Td): Defines the derivative time, in units of 1 second. Derivative action responds to the rate and direction of change in the Error. This means that a fast change in the error causes a strong response from the controller. The derivative action anticipates the PV in relation to the Set Point and adjusts the CV accordingly, shortening the PID function's response time.

Back



6.E.18 Other Settings

This screen allows for the installed elevation to be entered, which automatically increases the maximum fan speed at higher elevations. The Proof of water flow wait time (default 3 seconds) gives the ability to increase the time before the water pump flow switch indicates a fault. Increased wait times may be necessary, when longer pipes/plumbing is installed to the tank system.

Other Settings

mmm/dd/yyyy hh:mm:ss AM/PM

Heat Pump Elevation: 0 Feet

Startup Low Suction Pressure Threshold: 15.00 Bar

Proof of water flow wait time: 00:03

Heat Mode Gas Cooler Differential Temperature Trip Setpoint: 3 °F

Power Meter Installed: ☒

Low Suction Pressure Fault Threshold: 8.00 Bar

Export Retained Tags No Error

Import Retained Tags No Error

Back

6.E.19 Factory Reset

Factory Reset will return all settings (other than IP addresses) to factory defaults.

Factory Reset

mmm/dd/yyyy hh:mm:ss AM/PM

A factory reset will revert settings back to their factory values.
Any settings changes made for this installation will be lost.
A factory reset can only be performed when the heat pump is not running (Startup or Standby).

Perform Factory Reset


Back

6.E.20 Power Meter Option for Commercial Heat Pump Water Heater.

When the CTA-2045 option is selected, a factory installed and commissioned power meter will be added to the High Voltage panel. The meter monitors the voltage at each of the 3 phases of the 480V supply power. A current transformer donut which measures the Heat Pumps kW is wired to the power meter and set on the upper din rail for shipping. See Figure below.




The electrical contractor that is installing the Main service feed to the Heat Pump will need to route the 480V L1 leg through the current transformer before landing the wire on DB1. The current transformer can be removed from the DIN rail for easier installation around the service wires. See Figure below.

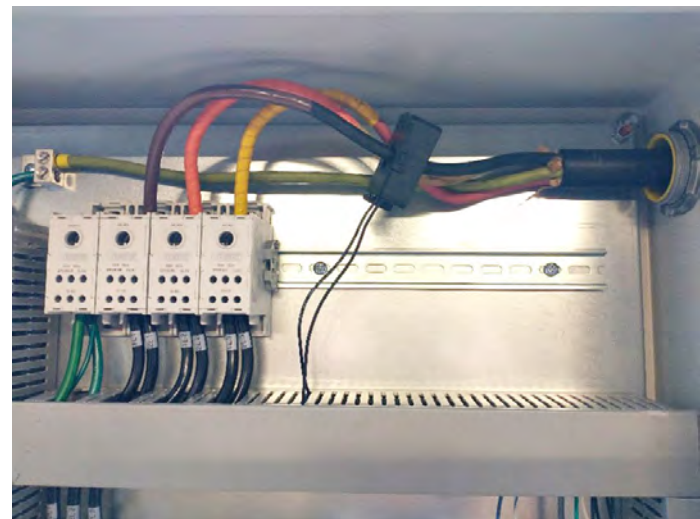

Communication between the Power meter and Heat Pump PLC is achieved via Modbus communication and the kW value is displayed on the Heat Pump Analog Inputs screen. The following passwords and user levels will allow access to the Analog Inputs screen within the Service menu to see this input.


User Level = user

Installer level = inst

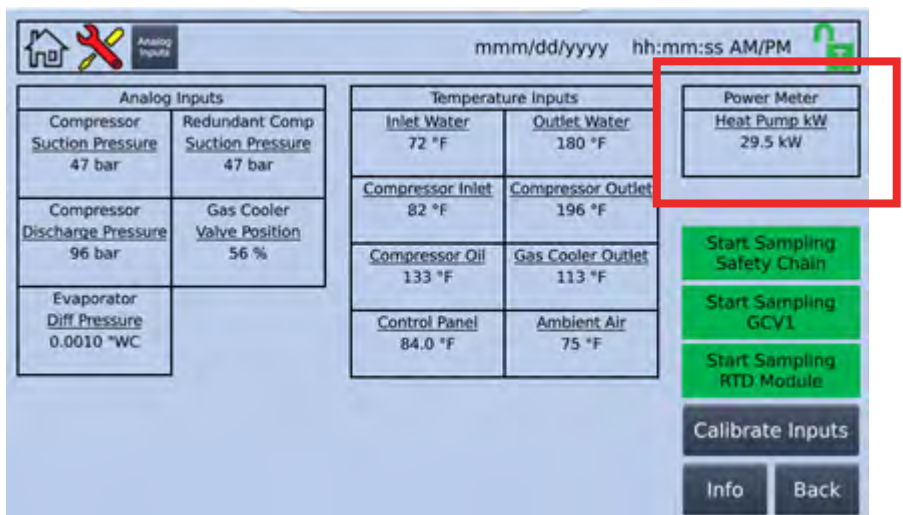


If the Power meter box in the upper right-hand corner of the screen is not present, follow the steps outlined below to ensure proper configuration.


1) From the home screen under the Installer level password, select the Service Icon.

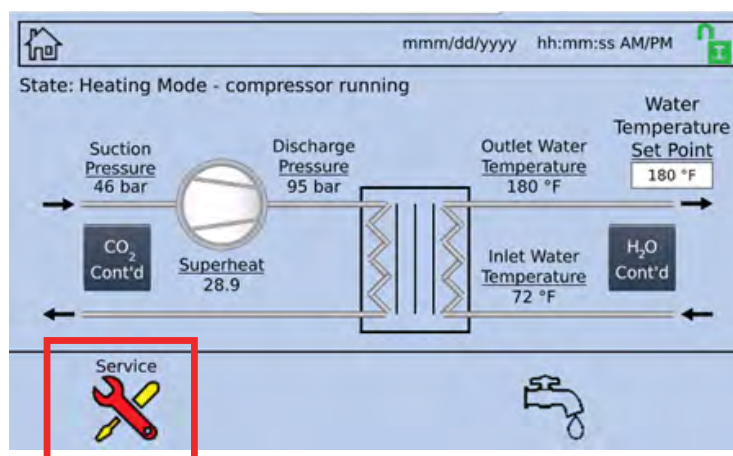


2) Next select the "More" button in the lower right-hand corner of the screen.

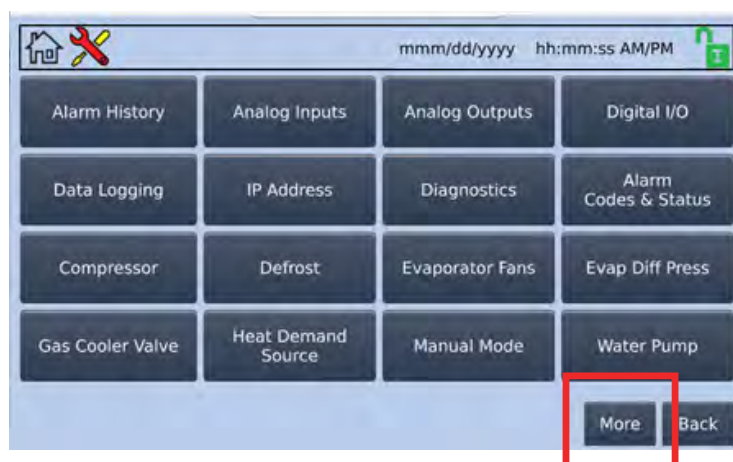

3) The following screen will appear. Select "OTHER SETTINGS" to jump to the next page.

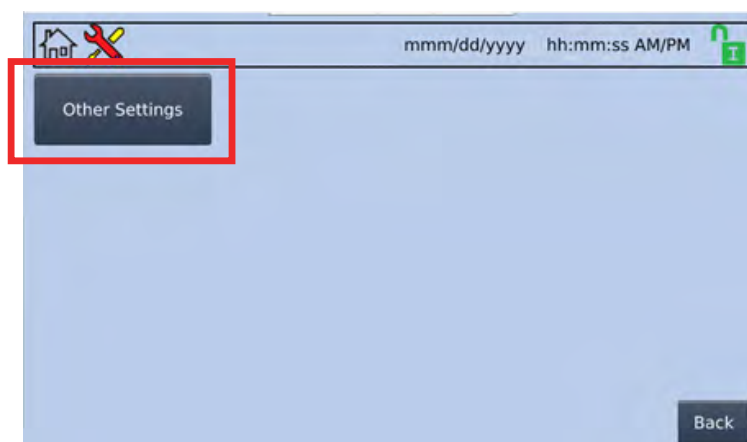

4) Check to make sure the box labeled "Power Meter Installed" is checked off.

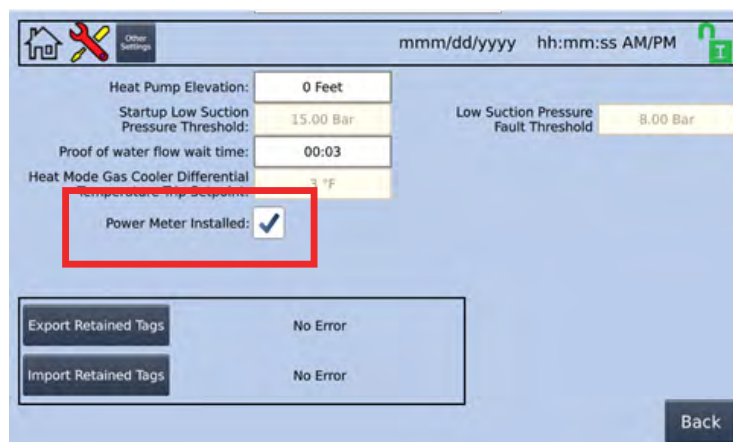

SECTION 7 Startup and Shutdown

7.A Initial Startup

⚠ WARNING

The HPWH should be started up only by authorized and qualified personnel.

7.A.1 Refrigerant Charge

The HPWH is shipped charged with refrigerant. The refrigerant pressure should be checked prior to operating the unit. There are two pressure gauges located on the left side of the unit directly behind the lower left rear panel. If these gauges read less than 500 psi, contact the manufacturer before proceeding with startup.

7.A.2 Power Phase Rotation

Since the compressor and water pump each have 3-phase motors, it is very important to check that the phase sequence results in the correct motor rotation. This can be checked by operating the water pump momentarily in manual mode. The water pump should rotate counterclockwise when looking down on the unit. The motor fan or pump shaft rotation can be easily seen. If pump rotation is wrong, stop the pump, shut off power at the breakers. Swap any two phases at the power panel main circuit breaker. Do not swap phases at the pump since the pump motor and compressor motor are set for the same phase sequence. If an external pump is used, phase sequence will need to be confirmed via phase rotation tester.

NOTE: When the system has been fully piped the installer must ensure that strainers are in place and clear so that heat pump components are supplied with clean potable water. Damage caused by debris entrained in the water is not covered by the warranty.

7.A.3 Water Side Fill

1. Before proceeding, the pump must be placed in manual mode. To do this, go to the Manual Control Screen and enable the pump. Set the pump percent speed to 75%.
2. Check that the water circuit flow switch has been satisfied by accessing to the Digital Inputs Screen and confirm that the Flow Switch radio button is illuminated green.
3. For the initial water charge, air must be removed via an external vent valve, service valves such as on Figure 12 on page 17, or by manually opening the pressure relief valve mounted internal to the unit.
4. Once all air is removed from the system, return the water pump to automatic mode.



Figure 24. Fan Rotation



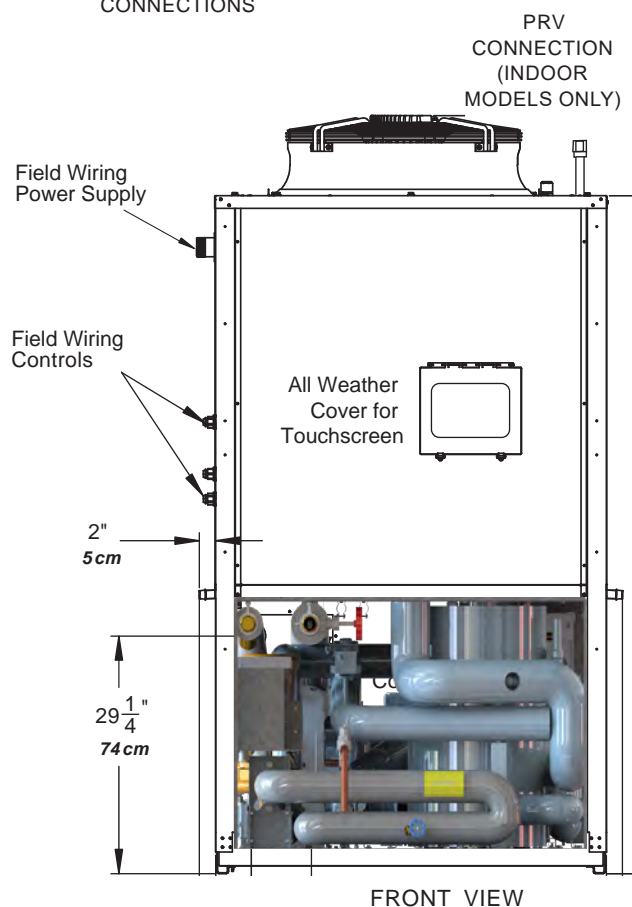


Figure 25. Shaft Rotation

7.A.4 Preliminary Electrical and Control Verification

NOTE: Before initializing startup sequence and/or sending a call for heat to the heat pump, all steps in this section must be completed.

- Verify electrical connections are secured in the proper terminal blocks.
- Electrically energize the unit with the three phase main electrical power supply.
- Verify that all three phases of the electrical power supply voltages are within +/-5% required voltage.
- Check that the pressure in the refrigerant circuits is shown on the control display and matches the gauge readings.
- Allow the compressor crankcase heater to run until the bottom of the compressor is noticeably warmer than the surrounding ambient temperature. This warms the compressor oil to ensure the compressor is lubricated. This is most important in colder climates. The HPWH will not allow the unit to start until the oil temperature criteria is met.

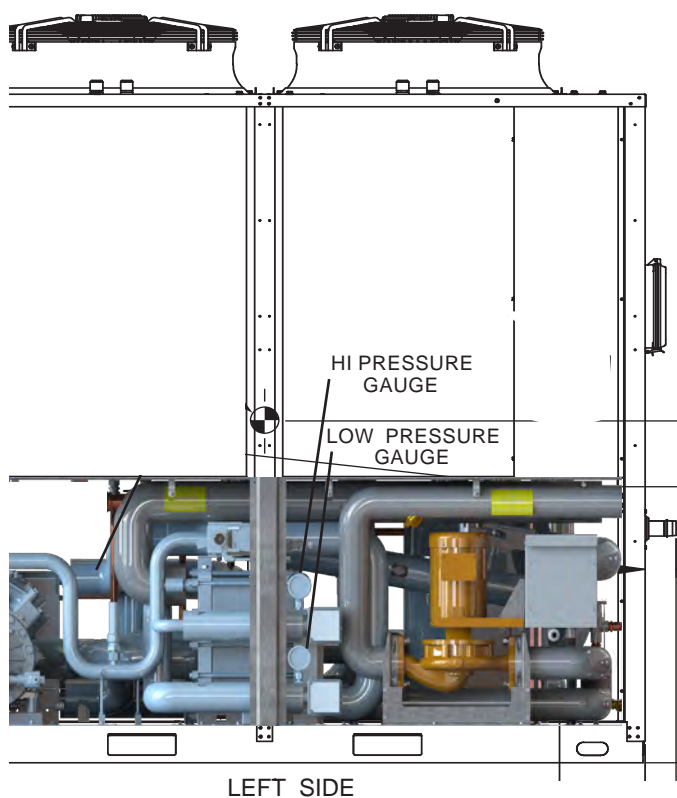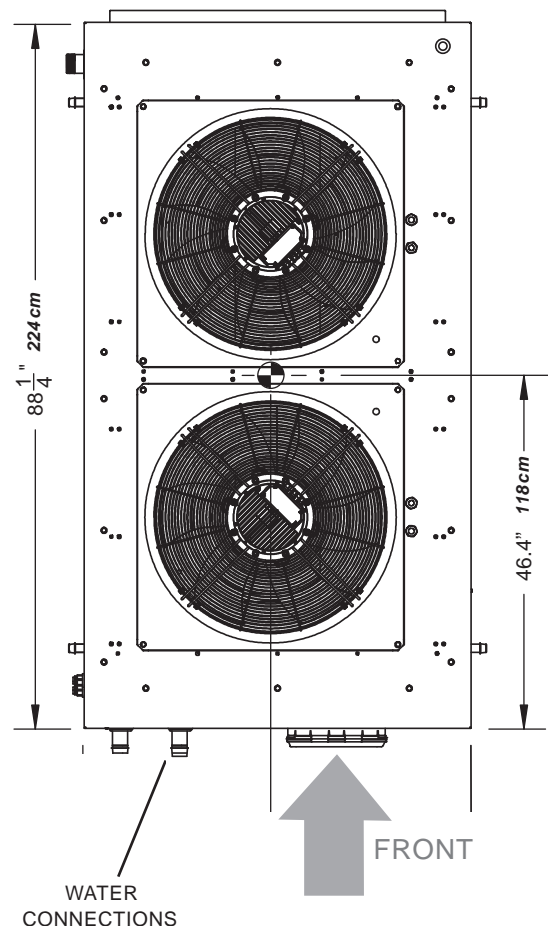

⚠ WARNING

Severe damage to the heat pump may occur during freezing temperatures. Preventative measures must be taken to ensure vulnerable components are protected from freezing.

⚠ AVERTISSEMENT

De graves dommages à la pompe à chaleur peuvent survenir par temps de gel. Des mesures préventives doivent être prises pour garantir que les composants vulnérables sont protégés du gel.

7.A.5 Initial Startup Sequence

- a. At initial start-up, or upon return of power after a power outage, the heat pump must go through a start-up sequence. The start-up sequence is initiated by a heat demand, generated by either a tank aquastat or tank sensors.
- b. Once the start-up sequence is initiated the heat pump moves through the following steps:
 1. The fans may cycle on depending on the outdoor ambient conditions.
 2. Gas Cooler Valve will fully open to 98%. (This is a fast-acting stepper motor valve with positional feedback that opens in 3 seconds.)
 3. Accumulator Isolation valve will begin to close. (This is a slow-acting rotary ball valve that closes in 75 seconds.)
 4. Gas expansion reservoir shut off valve will open.
 5. Once all valves are in their start up positions, the compressor will turn on.
 6. The suction pressure will begin to decrease until it reaches approximately 15 bar. The compressor will stop and the isolation and shut off valves will return to their operational positions.
 7. With the compressor off, the heat pump will transition to either standby mode (if there is no heat demand) or heat mode (if there is a heat demand)

7.B Normal Shut Down (Standby Mode)

Manually controlled shutdown or no heating demand, puts the following components in the following shutdown state:

- a. Compressor: Off
- b. Evaporator fans: Off
- c. Water pump: Off
- d. Heat trace: On, thermostatically controlled
- e. Compressor crankcase heater: On, thermostatically controlled

7.C Loss of Electrical Power Shut Down

1. If a non-planned loss of electrical power occurs to the heat pump it will put the following components in the following states:
 - a. Compressor: Off
 - b. Evaporator fans: Off
 - c. Water pump: Off
 - d. Heat trace: Off
 - e. Compressor crankcase heater: Off
 - f. Start-up valve: Will slowly open
 - g. Gas Cooler valve: Reverts to minimum position
2. If power is lost under freezing conditions take action to ensure the following components do not freeze.
 - a. The gas cooler heat exchanger.
 - b. The heat pump water piping.
 - c. Water pump (if included).
 - d. Condensate drains.

NOTE: An auto transfer switch is built into the heat pump. If emergency back-up power is available on site, the built in heat tracing can be powered to prevent freezing of components listed above. Reference wiring instructions in SECTION 5.

External water piping needs to be addressed separately.

SECTION 8 System Maintenance

1. Routine maintenance of the unit is essential to the life of the machine. A lack of maintenance can cause malfunctioning and/or damage to the unit and render the warranty null and void.
2. It is good practice to carry out periodic inspections to verify the proper operation of the unit.

FREQUENCY	OPERATION
Monthly	Check function of all control and safety devices.
Monthly	Visually inspect for corrosion and open circuits in the electrical panels and junction boxes. Check the tightness of interconnecting wires to component terminals if visually suspect.
Monthly	Check for oil leaks on or under the compressor.
Monthly	Check for water leaks in the hydronic system.
Monthly	Verify condensate pans and drains are clean and free draining.
Monthly	Verify there is no air in the water circuit.
Monthly	Verify crankcase heater operational.
Monthly	Check water filters, screens, and strainers.
Monthly	Check evaporator coil fin surface. Clean if dirty. Comb out fins if flattened and blocked. Check filters if used. Clean or replace if dirty. Check control display screen for coil air pressure drop when operating to confirm operation within proper range.
Monthly	Perform manual defrost test
4 Months	Verify fan operation for no unusual vibration or sound.
4 Months	Verify compressor operation for no unusual vibration or sound.
Seasonal	If the unit is to remain out of service for an extended period, drain the water from the pipes and the heat exchanger to prevent freezing. This is required to prevent damage to equipment especially when outdoor temperatures are expected to be below freezing during idle period.

SECTION 9 Alarms and Faults

Alarms - Annunciation Only				
Annunciated Alarm/Fault	Description	Indicates	Corrective Action	Alarm ID
Fan 1 Alarm	Fan 1 has faulted.	Fans will fault based on the following conditions: over temperature, locked rotor, overvoltage, under voltage, and power (over current).	Verify nothing is blocking fans from rotating. Verify evaporator fins are clean (clear of debris) Check fan wiring and that proper voltage is applied. Note: heat pump can continue to run at a reduced capacity on a single blower	8
Fan 2 Alarm	Fan 2 has faulted.	Fans will fault based on the following conditions: over temperature, locked rotor, overvoltage, under voltage, and power (over current).	Verify nothing is blocking fans from rotating. Verify evaporator fins are clean (clear of debris) Check fan wiring and that proper voltage is applied. Note: heat pump can continue to run at a reduced capacity on a single blower	9
Compressor High Oil Temperature Alarm	The compressor oil temperature is has exceeded normal operating temperature.	Compressor oil heater thermostat might be having issues or the oil temperature sensor is reading incorrectly.	Check compressor oil heater resistance and take an amperage reading of the heater. Compare compressor surface temperature with oil temperature reading on the HMI. If they are similar, then the oil temperature reading is most likely OK.	22
Compressor High Suction Pressure Alarm	The compressor suction pressure has exceeded normal operating pressure.	Faulty wiring/transmitter or potential refrigerant charge issue.	Verify PT2 reading on the HMI matches (+/- 5 bar) to PG2, the pressure gauge on the suction side of the compressor. Verify wiring.	15
Inlet Water Temperature Limit Exceeded	Inlet water temperature to the heat pump has exceeded the threshold.	Heat pump return temperature has exceeded its maximum allowable temperature.	Verify TT1 sensor is reading correctly and that the return temperature is below 135F.	30
GCV1 Feedback Out of Tolerance	The gas cooler valve feedback is more or less than 5% of commanded feedback position.	This could indicate that the valve fully closed/open positioning is off or that the valve might be stuck or blocked from moving to the correct position.	Verify valve is getting the correct supply voltage. Recalibrate valve.	16
Gas Cooler Outlet High Temperature Alarm	The gas cooler outlet temperature has exceeded the alarm threshold.	In heating mode, if the gas cooler temperature has exceeded 160F for a period of time, the unit will alarm on high gas cooler outlet temperature. This indicates poor heat transfer from the refrigerant to the water (refrigerant side of the gas cooler) or inadequate water flow (water side of the gas cooler).	Verify the water pump is sized properly. Verify the water pump PID loop is tuned properly. Verify all manual valves are in the correct position.	31
High Water Temperature Alarm	The water temperature supplied to the tank(s) has exceeded the alarm threshold.	In heat mode, the heat pump outlet water temperature has been higher than 10F above the set point for more than 20 minutes. This might indicate that the minimum speed of the pump is high enough to satisfy the heat pump flow switch, but too low for the amount of heat the heat pump is transferring to the water - improperly sized water pump. It could also indicate a poorly tuned heat pump water control PID loop. A manual valve may be in an incorrect position restricting water flow.	Verify the water pump is sized properly. Verify the water pump PID loop is tuned properly. Verify all manual valves are in t	33
High Superheat Alarm	Superheat has exceeded the alarm threshold for 5 minutes.	Potential sensor issues at TT6 - compressor suction temperature or at PT2 - compressor suction pressure. Might also indicate not enough refrigerant charge.	Adjust manual bypass (recuperator) valve. PT2 Troubleshooting: Verify PT2 supply voltage and wiring. Verify PT2 signal (4-20mA) to PLC. TT6 Troubleshooting: Verify thermocouple wiring. On a power cycle to the heat pump, verify the heat pump is properly transitioning through the start-up sequence.	35
High Pump Inlet Temperature Sensor Alarm	There is an issue with either the TC input module or the inlet water temperature TC.	A faulty analog input module, faulty wiring, failed temperature sensor, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify the TC sensor, verify 24 VDC.	40
Control Panel Enclosure Temperature Sensor Alarm	There is an issue with either the TC input module or the enclosure temperature sensor TC.	A faulty analog input module, faulty wiring, failed temperature sensor, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify the TC sensor, verify 24 VDC.	49
Control Panel High Temperature Alarm	Enclosure temperature has exceeded 125F. Extended exposure to high temperatures could reduce electronic lifetime.	Might be indicative of high ambient temperature conditions, enclosure temperature sensor issues, or the control panel circulating fan is not working properly.	Confirm the ambient temperatures have not exceeded heat pump design temperatures. Confirm the control panel circulating fan is working properly. Confirm the enclosure temperature sensor is reading correctly	50
Compressor Short Cycle Alarm	The compressor is short-cycling.	The compressor has started at least 10 times within the last hour.	Double check heat demand inputs for proper wiring, voltage and signal.	51
Inlet/Exhaust Proof of Fans Alarm	Inlet / Exhaust Fans have not proven for 10 minutes or proof has dropped out.	This may indicate a wiring issue with the proof of fans connection, or a faulty fan.	Double check Inlet / Exhaust fans output for proper wiring, voltage and signal. Double check Proof of Inlet / Exhaust Fans inputs for proper wiring, voltage and signal.	53
Low Ambient Temperature Alarm	Shutdown due to low ambient temperature.	Indicates that the ambient temperature sensor is reading a value equal to or less than -10F.	Unit will resume operations when ambient temperature is warm enough.	54

Alarms and Faults (continued)

Clogged Evaporator Alarm	Evaporators are dirty.	Possible blockage from dust, dirt, pollen that requires the coils to be cleaned. Evaporator differential pressure is high and ambient temperatures are warm.	Inspect and clean evaporator coils.	55
Tank Controller Communications Alarm	Communication connection lost to Tank Controller	This indicates an Ethernet communication disruption between the Tank System Controller and the heat pump	Inspect Ethernet cable connection between the heat pump and Tank System Controller	57
Battery Low Alarm	The internal PLC battery is low.	Retained settings have been saved to the SD card. Any further changes to retained settings may not be saved automatically.	Replace CR2032 battery. Then reboot the PLC. If retained settings were not maintained through battery replacement, import the retained settings manually.	56
Battery Not Detected Alarm	There is no battery detected.	Retained settings will not be saved through a power cycle of the PLC. Retained settings must be manually saved and re-imported upon PLC restart.	Add CR2032 battery. Then reboot the PLC. Import any retained settings manually.	58

Safety Chain Faults

Annunciated Alarm/Fault	Description	Indicates	Corrective Action	Alarm ID
[Auto-Reset] High Discharge Pressure Switch Trip	Upon a heat demand, whether in heat or defrost mode, if the compressor discharge pressure exceeds the compressor high discharge pressure switch (PSH1) threshold, the unit will exit heat or defrost on a compressor high discharge pressure condition. If conditions are safe to operate upon stopping the compressor, the unit may restart a heat or defrost cycle.	High pressure condition at the discharge side of the compressor.	Verify that SUV2 is energized and open. Verify manual ball valves are in the correct position. Verify GCV1 control parameters P, I, & D are at or near factory default settings.	1
Low Water Flow	In start-up or heat mode, if the flow switch open (indicating inadequate water flow) the heat pump will fault on a low flow condition. If defrost mode, the water pump is off, but Defrost Valve 1 (DV1) must be open for proper defrost operations - if DV1 doesn't open, the heat pump will fault on a DV1 Open fault.	Flow Fault: There may be an issue with safety chain voltage (24VDC), flow switch wiring, or the water pump/VFD. DV1 Open Fault: The valve may be in the incorrect position, or the limit switches may need adjustment.	Flow Fault: Verify manual valves in the water loop are open. Verify flow switch wiring and voltage (24VDC). Check water pump VFD and pump wiring. Verify VFD settings. Verify proper voltage is applied to the VFD. Confirm correct rotation of pump motor. DV1 Open Fault: If the valve position indicator is in the correct position (based on the current operating state of the heat pump as well as indication on the HMI), verify limit switch position at the switch - adjust as needed. Verify both wiring (continuity) and voltage (24VDC) for proper feedback to the PLC.	3
High Water Temperature	If the water temperature leaving the gas cooler exceeds the high temperature setting of the high water temperature aqua stat, the heat pump will fault on a high water temperature condition.	Low flow on the water side of the GC1 or high temperature on the refrigerant side.	Water Flow: Verify water pump VFD settings. Refrigerant: Verify GCV1 PID settings.	4
Compressor Thermal Overload	The compressor thermal overload monitors the internal temperature of the compressor.	Compressor working too hard, creating a high internal compressor temperature or faulty wiring/overload.	Verify the compressor VFD settings are correct. Verify compressor voltage. Verify manual ball valves are in the correct position. Verify GCV1 is operating correctly. Verify voltage (24VDC) and wiring at the overload.	5
Compressor Oil Level	Compressor oil level is low.	The compressor oil differential pressure switch monitoring the oil level in the compressor has detected inadequate oil level in the compressor or a faulty oil differential pressure switch	On the first occurrence of this condition, verify the oil level in the sight glass on the compressor. With the compressor not running, the oil level may not be visible in the sight glass. Press the reset button on the oil differential pressure switch, as well as on the heat pump display. Allow the compressor to operate and verify the oil level is visible in the sight glass. If there is no oil visible in the sight glass, the unit should trip again and oil should be added to the system. If there is oil visible in the sight glass and the unit trips again, the oil differential pressure switch is most likely faulty and will need to be replaced.	6

Non-safety Chain Faults

Annunciated Alarm/Fault	Description	Indicates	Corrective Action	Alarm ID
GCV1 Open Timeout Fault	Upon a heat demand, once minimum water flow has been achieved, if the gas cooler valve doesn't open in time, shut down on a gas cooler valve fault.	This is indicative of the gas cooler or controller not functioning properly	Verify 24VDC supply power at the gas cooler valve, verify 0-10VDC control signal, verify gas cooler valve parameter settings.	14
Compressor Delta_P Timeout Fault	Upon a heat demand, once minimum water flow has been achieved and GCV1 has opened, but the differential pressure across the compressor isn't within allowable differential pressure threshold in time, shut down on a compressor differential pressure fault.	A valve might be in the incorrect position.	Verify that SUV2 is energized and open. Verify manual ball valves are in the correct position.	13

Alarms and Faults (continued)

[Auto-Reset] Compressor High Discharge Pressure Sensor Trip	Upon a heat demand, whether in heat or defrost mode, if the compressor discharge pressure gets too high, shut down on a compressor high discharge pressure fault. If conditions are safe to operate upon stopping the compressor, the unit may restart a heat or defrost cycle.	High pressure condition at the discharge side of the compressor.	1. Verify manual valves V03 and V04 valve stems are in "open" position. 2. Verify gas cooler valve and accumulator isolation valve operation. 3. Verify PG1 and the discharge pressure values approach the high discharge pressure switch lockout value just prior to lockout.	17
[Auto-Reset] High Suction Pressure	Upon a heat demand, whether in heat or defrost mode, if the compressor suction pressure gets too high, shut down on a compressor high suction pressure fault. If conditions are safe to operate upon stopping the compressor, the unit may restart a heat or defrost cycle.	High pressure condition at the suction side of the compressor.	Verify inlet water temperature is not too high. May also indicate a high ambient condition.	19
Low Suction Pressure (Transducer)	If the compressor suction pressure gets too low, shut down on a compressor low suction pressure fault.	This might indicate the fan speed is too low or that there is an air lock. The unit might also be iced up, requiring a defrost cycle. The lowest suction pressure as measured by either suction pressure transducer is used to set this fault.	Verify fan operations. There is potentially an issue with the refrigerant charge - please contact the factory for guidance.	60
Low Suction Pressure Transducer Difference	The two suction pressure transducers disagree by more than 1 bar.	Likely one sensor is inaccurate.	Verify readings of the compressor and redundant pressure transducers in the Analog Inputs menu. The readings should not differ by more than 1Bar. When the heat pump compressor is not running, the compressor discharge and suction pressure readings should be the same.	61
Compressor High Oil Temperature Fault	The compressor oil temperature is too high.	Compressor oil heater thermostat might be having issues or the oil temperature sensor is reading incorrectly.	Check compressor oil heater resistance and take a amperage reading of the heater. Compare compressor surface temperature with oil temperature reading on the HMI. If they are similar, then the oil temperature reading is most likely OK.	23
Low Superheat Fault	Superheat is too low.	Potential gas cooler outlet temperature sensor issue or compressor suction pressure sensor issue. Low superheat potentially indicates too much charge.	Adjust manual bypass (recuperator) valve. Compressor suction pressure sensor troubleshooting: Verify supply voltage and wiring. Verify signal (4-20mA) to PLC. Gas cooler out temperature troubleshooting - verify thermocouple wiring.	29
3-Way Heat/Defrost Limit Switch Fault	Whether in heating or defrost, the heat/defrost valve is in the incorrect position.	The valve may be in the incorrect position, or the limit switches may need adjustment.	If the valve position indicator is in the correct position (based on the current operating state of the heat pump as well as indication on the HMI), verify limit switch position at the switch - adjust as needed. Verify both wiring (continuity) and voltage (24VDC) for proper feedback to the PLC.	24
Defrost Valve Limit Switch Fault	Whether in heating or defrost, the defrost valve is in the incorrect position.	The valve may be in the incorrect position, or the limit switches may need adjustment.	If the valve position indicator is in the correct position (based on the current operating state of the heat pump as well as indication on the HMI), verify limit switch position at the switch - adjust as needed. Verify both wiring (continuity) and voltage (24VDC) for proper feedback to the PLC.	25
Compressor Low Oil Temperature Fault	Upon a heat demand (or defrost cycle), if the compressor oil temperature takes too long to heat up, shutdown on a compressor low oil temperature fault.	The compressor oil heater isn't working properly	Check heater resistance, verify heater power	27
Fan 1 & Fan 2 Fault	If both fans are faulted, shut down on a fan fault.	Fans will fault based on the following conditions: over temperature, blocked rotor, overvoltage, under voltage, and power (over current).	Verify nothing is blocking fans from rotating. Verify evaporator fins are clean (clear of debris) Check fan wiring and that proper voltage is applied.	10
H2O Pump VFD Fault	Shutdown on a water pump VFD fault.	VFD will fault based on the following conditions: over temperature, blocked impeller, under/over voltage and/or current.	Verify manual valves in the water loop are open. Check VFD and pump wiring. Verify VFD settings. Verify proper voltage is applied to the VFD. Confirm correct rotation of pump motor.	11
High Superheat Fault	Superheat is too high.	This could be indicative of a potential compressor suction temperature sensor issue or compressor suction pressure transmitter issue. High superheat could also indicate that there is not enough refrigerant charge.	Adjust manual bypass (recuperator) valve. Compressor Suction Pressure Troubleshooting: Verify supply voltage and wiring. Verify signal (4-20mA) to PLC. Compressor Suction Temperature Sensor Troubleshooting: Verify thermocouple wiring.	36
Compressor VFD Fault	Shutdown on a Compressor VFD fault.	VFD will fault based on the following conditions: over temperature, blocked impeller, under/over voltage and/or current.	Verify manual valves in the refrigeration loop are in the correct position for the current state of the heat pump (start-up/heat/defrost modes). Check VFD and pump wiring. Verify VFD settings. Verify proper voltage is applied to the VFD. Cycling power to heat pump off for 5-10 minutes should reset VFD faults once problem corrected.	7
H2O Flow Switch Fault	While trying to determine the minimum water pump speed, the flow switch did not open properly.	There may be an issue with the flow switch wiring, or the water pump/VFD.	Verify flow switch wiring and voltage (24VDC). Check water pump VFD and pump wiring. Verify VFD settings. Verify proper voltage is applied to the VFD. Confirm correct rotation of pump motor.	12
Gas Cooler High Outlet Temperature Fault	The gas cooler outlet temperature has exceeded the alarm threshold.	In heating mode, if the gas cooler temperature has exceeded 170F for a period of time, the unit will alarm on high gas cooler outlet temperature. This indicates poor heat transfer from the refrigerant to the water (refrigerant side of the gas cooler) or inadequate water flow (water side of the gas cooler).	Verify the water pump is sized properly. Verify the water pump PID loop is tuned properly. Verify all manual valves are in the correct position.	32



High Water Temperature Fault	The water temperature supplied to the tank(s) has exceeded the shutdown threshold.	This indicates low water flow on the water side of the gas cooler or high temperature on the refrigerant side. There could also be an issue with the heat pump outlet water temperature sensor.	Water Flow: Verify water pump VFD settings. Refrigerant: Verify GCV1 PID settings. Temperature Sensor: Verify sensor wiring	34
High Discharge Pressure Sensor Fault	There is an issue with either the analog input module or the pressure transmitter.	A faulty analog input module, faulty wiring, faulty transmitter, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify transmitter functionality, verify 24 VDC.	37
Low Suction Pressure Sensor Fault	There is an issue with either the analog input module or the pressure transmitter.	A faulty analog input module, faulty wiring, faulty transmitter, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify transmitter functionality, verify 24 VDC.	38
Gas Cooler Valve Feedback Failure Fault	There is an issue with either the analog input module or the gas cooler valve positional feedback signal.	A faulty analog input module, faulty wiring, faulty gas cooler valve controller, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify gas cooler valve functionality, verify 24 VDC.	39
Heat Pump Supply Water Temperature Fault	There is an issue with either the TC input module or the heat pump outlet water temperature sensor TC.	A faulty analog input module, faulty wiring, failed temperature sensor, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify the TC sensor, verify 24 VDC.	41
Gas Cooler Outlet Temperature Sensor Fault	There is an issue with either the TC input module or the gas cooler outlet temperature sensor TC.	A faulty analog input module, faulty wiring, failed temperature sensor, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify the TC sensor, verify 24 VDC.	42
Compressor Inlet Temperature Sensor Fault	There is an issue with either the TC input module or the compressor inlet temperature sensor TC.	A faulty analog input module, faulty wiring, failed temperature sensor, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify the TC sensor, verify 24 VDC.	43
Ambient Air Temperature Sensor Fault	There is an issue with either the TC input module or the ambient air temperature sensor TC.	A faulty analog input module, faulty wiring, failed temperature sensor, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify the TC sensor, verify 24 VDC.	44
Suction Pressure Exceeds Discharge Pressure Fault	In heat or defrost mode, if the compressor is running, if the suction pressure is greater than the discharge pressure, after a short time delay lockout the heat pump on compressor differential condition.	Faulty wiring or swapping of sensor wiring (either at the sensor(s) or in the control panel) or a faulty pressure transmitter.	Verify pressure transmitter reading on the display versus actual gauges for accuracy. Verify wiring and transmitter functionality.	46
Heat Pump Heat Demand On Sensor Fault	There is an issue with either the TC input module or the heat pump heat demand on temperature sensor TC.	A faulty analog input module, faulty wiring, failed temperature sensor, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify the TC sensor, verify 24 VDC.	45
Heat Pump Heat Demand Off Sensor Fault	There is an issue with either the TC input module or the heat pump heat demand off temperature sensor TC.	A faulty analog input module, faulty wiring, failed temperature sensor, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify the TC sensor, verify 24 VDC.	47
Compressor Oil Temperature Sensor Fault	There is an issue with either the TC input module or the compressor oil temperature sensor TC.	A faulty analog input module, faulty wiring, failed temperature sensor, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify the TC sensor, verify 24 VDC.	48
Compressor Short Cycle Fault	The compressor is short-cycling.	The compressor has started at least 10 times per hour for the last two hours or has started 20 times in the last hour.	Double check heat demand inputs for proper wiring, voltage and signal.	52
Low Gas Cooler Temperature Differential	The compressor outlet temperature (TT4) and the gas cooler outlet temperature (TTS) are close to the same temperature.	Indicates an operational condition that is not expected. The two sensors are not expected to be within 3F of each other, in heat mode.	Check that DV1 is installed correctly and is operating properly.	59
Evaporator Differential Pressure Sensor Fault	There is an issue with either the analog input module or the evaporator differential pressure signal.	A faulty analog input module, faulty wiring, faulty evaporator differential pressure sensor, or an issue with the VDC power supply.	Check that DPT1 is installed correctly and is operating properly.	2
Compressor Outlet Temperature Sensor Fault	There is an issue with either the TC input module or the compressor outlet temperature sensor TC.	A faulty analog input module, faulty wiring, failed temperature sensor, or an issue with the VDC power supply.	Verify the power LED on the analog input module is illuminated green, verify the TC sensor, verify 24 VDC.	18

Start-up Faults

Annunciated Alarm/Fault	Description	Indicates	Corrective Action	Alarm ID
Start-up Low Oil Temperature Fault	If a start-up sequence is initiated, but the compressor oil temperature takes too long to heat up, shutdown on a start-up compressor oil temperature fault.	The compressor oil heater isn't working properly	Check heater resistance, verify heater power Note: Compressor heater has a built-in thermostat.	26
Start-up Gas Cooler Valve Timeout Fault	If a start-up sequence is initiated and compressor oil temperature has been achieved, but the gas cooler has not opened in time, the heat pump will shutdown on a start-up gas cooler fault.	The gas cooler valve or controller aren't working properly.	Verify 24VDC supply power at the gas cooler valve, verify valve 0-10VDC control signal, verify the gas cooler valve PID parameter settings.	28
Start-up Low Suction Pressure Timeout Fault	If a start-up sequence is initiated, compressor oil temperature has been achieved, minimum water flow established, and the gas cooler valve has opened properly, but the compressor suction pressure doesn't drop in time, the heat pump will shutdown on a start-up suction pressure fault.	This is indicative of the compressor not working properly, an issue with the suction pressure transmitter value or wiring, or the accumulator isolation valve is in the wrong position.	Compressor Troubleshooting: Verify power at compressor VFD and VFD settings. Verify compressor VFD enable (dry contact) and speed wiring (0-10VDC). Suction Pressure Transmitter Troubleshooting: Verify transmitter supply voltage and wiring. Verify transmitter signal (4-20mA) to PLC. Accumulator Isolation Valve Troubleshooting: Verify valve is in the correct position	20
Start-up Low Suction Pressure Switch Timeout Fault	If a start-up sequence is initiated, compressor oil temperature has been achieved, minimum water flow established, and the gas cooler valve has opened properly, compressor suction pressure lowered beyond the low suction pressure threshold, but it has taken too long for the low suction pressure switch to open or close, shutdown on a start-up low suction pressure switch timeout.	This indicates that low suction pressure switch trip point isn't set correctly or is not wired correctly.	Verify suction pressure reading on the HMI matches (+/- 5 bar) to PG2, the pressure gauge on the suction side of the compressor. Verify wiring.	21

SECTION 10 Replacement Parts


10.A Outer Components

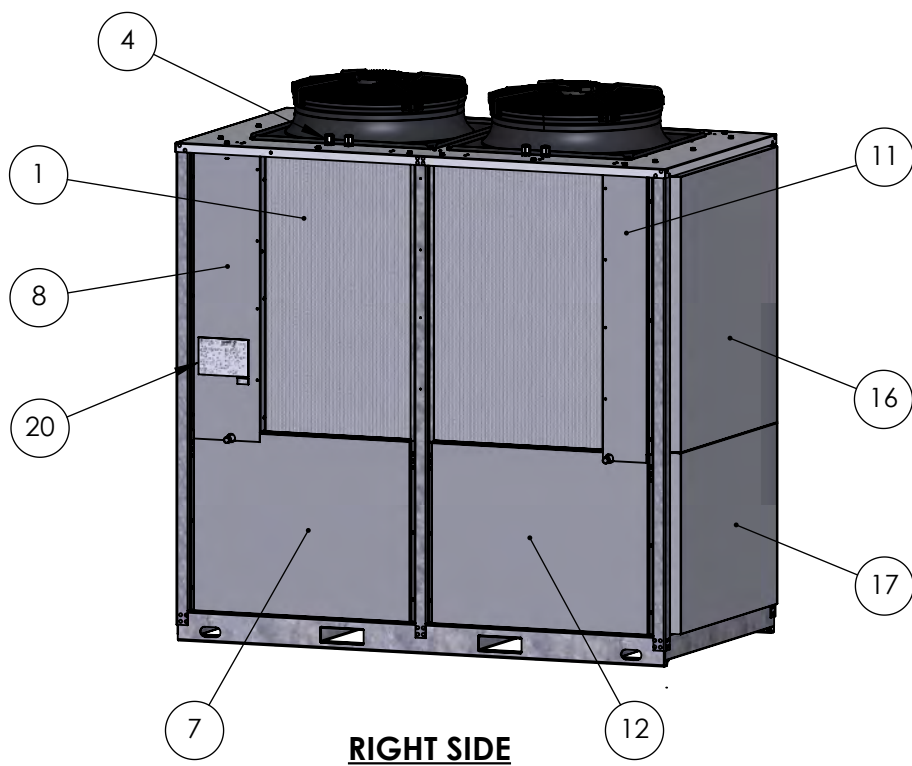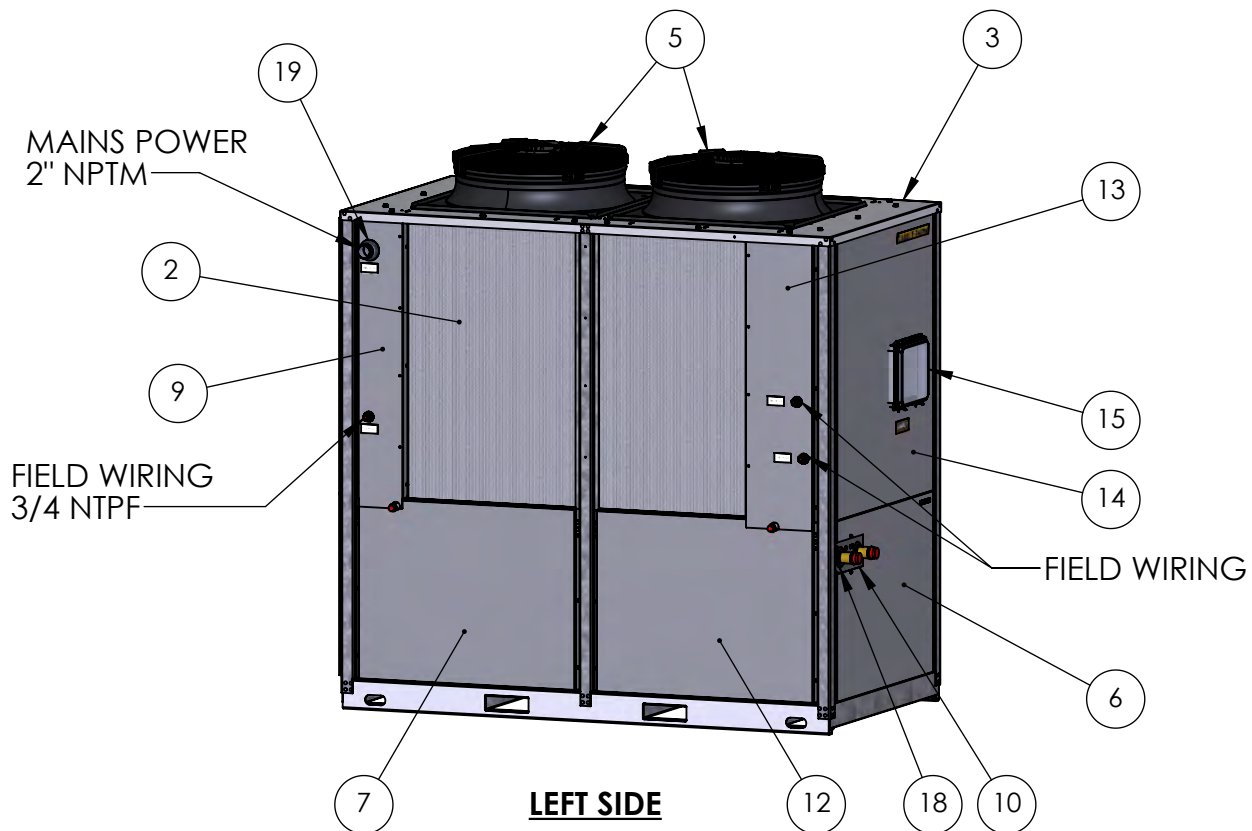

<u>OUTSIDE COMPONENTS PARTS LIST</u>			
Item #	Part Number	Description	Qty
1	A2137300	EVAPORATOR, LEFT SIDE	1
2	A2137400	EVAPORATOR, RIGHT SIDE	1
3	25Y2010	COVER, TOP, FAN MOUNTING, AKFG710	1
4	E2354100	STRAIN RELIEF, BULKHEAD FITTING, 3/4 "	4
5	E2431300	FAN, AXIAL, AKFG710, CHV325	2
6	25Y3001	PANEL, LOWER, DISPLAY END	1
7	25Y3003	PANEL, SIDE, LOWER, LEFT CUTOUT	2
8	25Y3004	PANEL, FILLER, RIGHT CUTOUT	1
9	25Y3012	PANEL, FILLER, ELECTRICAL OUTLET	1
10	25Y3008	PANEL, WATER PIPE, CHV325	1
11	25Y3009	PANEL, FILLER, RIGHT CUTOUT	1
12	25Y3010	PANEL, SIDE, LOWER, RIGHT CUTOUT	2
13	25Y3014	PANEL, FILLER, LEFT CUTOUT	1
14	25Y3002	PANEL, UPPER, CONTROL END, CHV325	1
15	E2436900	COVER, GASKETED, POLYCARBONATE, NEMA	1
16	25Y3032	PANEL, UPPER, HV	1
17	25Y3033	PANEL, LOWER, HV	1
18	S2139300	GROMMET, PIPE, 2"	2
19	S2116500	GROMMET, 2" PIPE, FLEX	2
20	H2427700	RATING PLATE, HEAT PUMP	1



10.B Refrigerant and Water Components

REFRIGERANT AND WATER COMPONENTS
FRONT SIDE, PANELS REMOVED
(PIPE INSULATION NOT SHOWN)

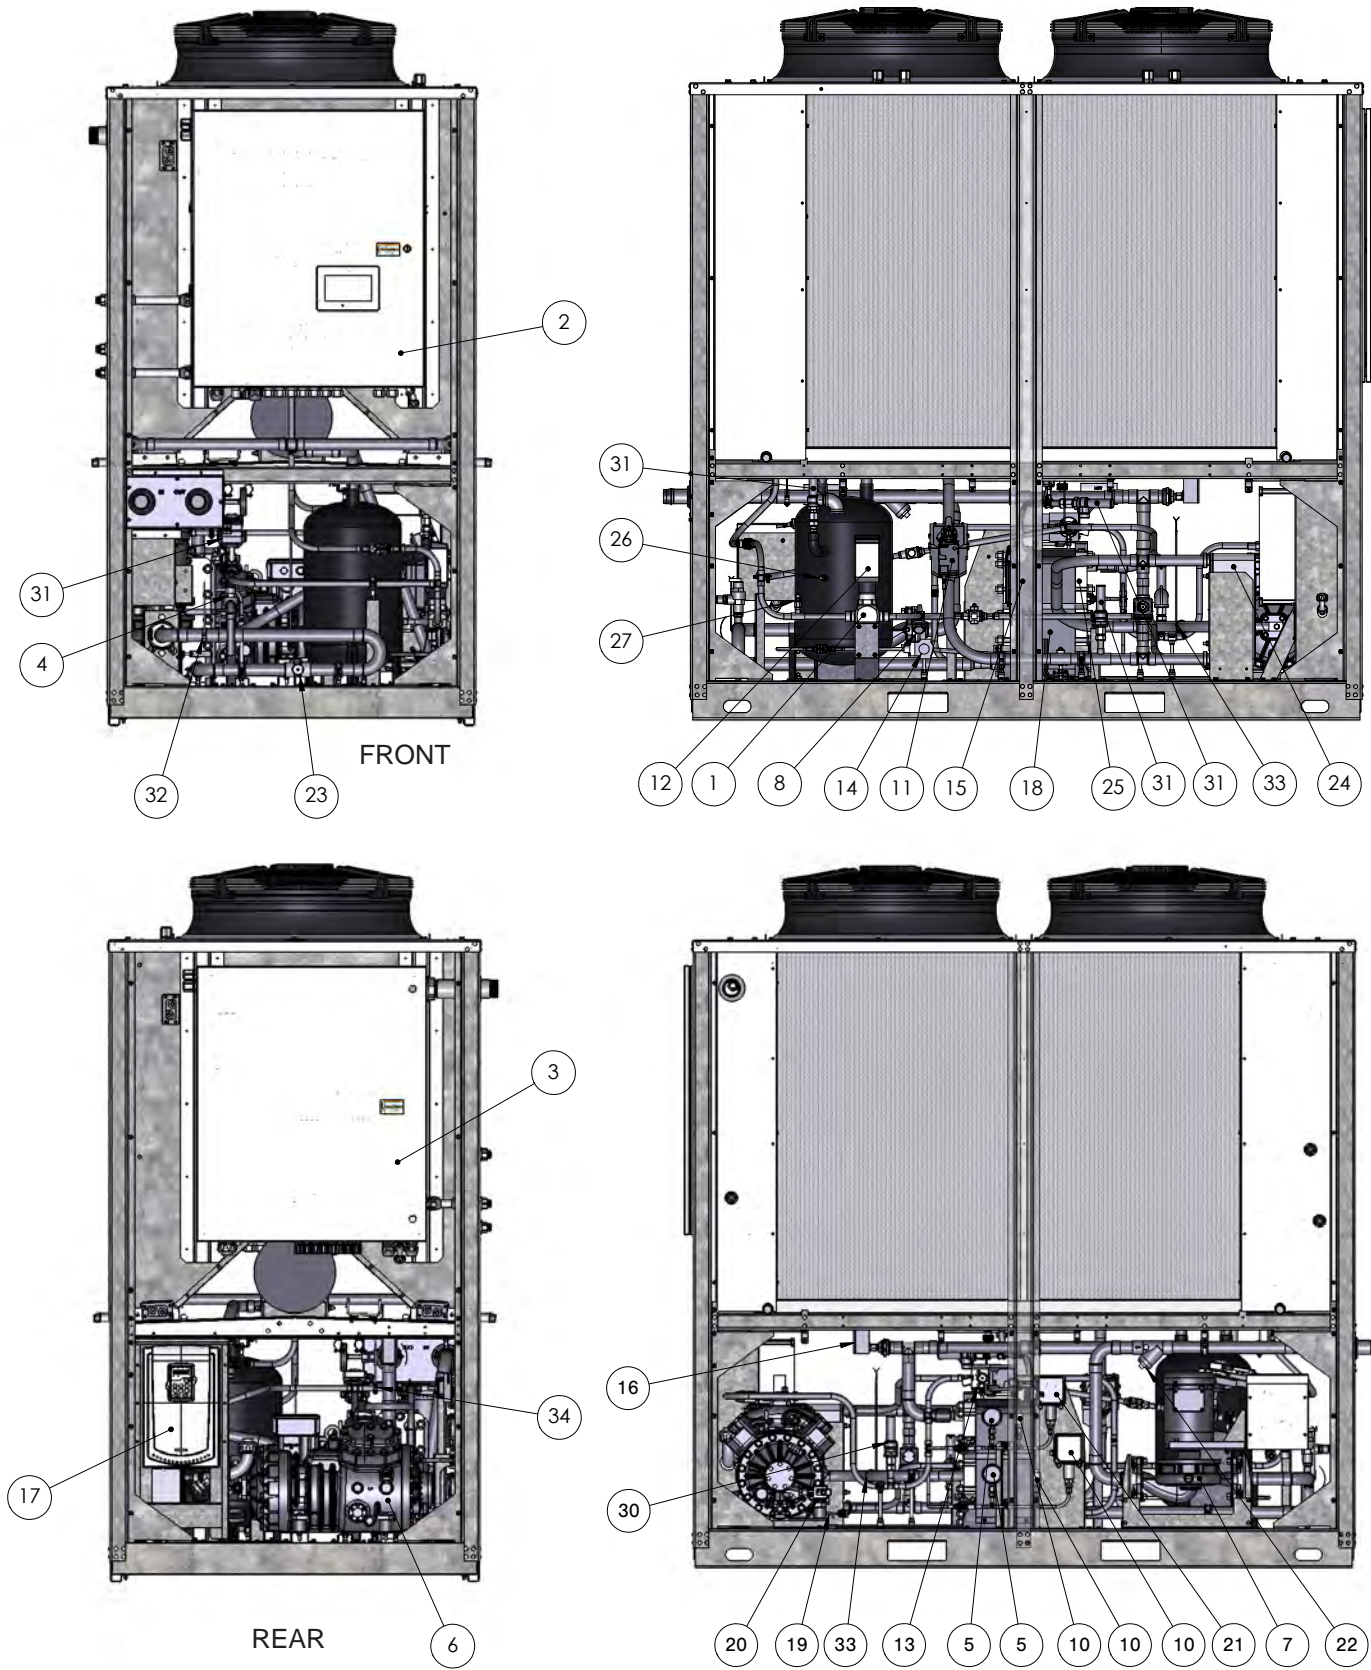

REFRIGERANT AND WATER COMPONENTS

Item #	Part Number	Description
1	25Y4048	BODY AND FITTING WELDMENT, EXPANSION VALVE
2	25Y7100	CONTROL PANEL, HEAT PUMP
3	25Y7200	ENCLOSURE-PANEL, HIGH VOLTAGE, ASSEMBLY
4	A2114800	PRV, NSF CERTIFIED / LOW LEAD, 3/4" NPT FEMALE
5	A2136200	GAUGE, PRESSURE, 2000 PSI, .25 NPT, 2.5 DIA
6	A2136300	COMPRESSOR, DORIN TRANSCRITICAL CO2
7	A2136400	PUMP, TACO MODEL 1915, STAINLESS STEEL, WITH VFD
8	A2136800	Y-STRAINER, 3/4" ODS CuFe2P CONNECTIONS, CO2 TRANSCRITICAL
10	E2403100	SENSOR, PRESSURE, 0-2000 PSI, 1/4 NPT, SST
11	E2407700	ACTUATOR, VALVE, FOR VALVE ASSEMBLY V20314
12	E2408000	ACTUATOR, EXPANSION VALVE, CO2 TRANSCRITICAL
13	E2408100	ACTUATOR, GAS COOLER, HX
14	E2408300	SOLENOID COIL, VALVE ACTUATOR
15	E2408800	ACTUATOR, VALVE, SUV1, CO2 TRANSCRITICAL
16	E2419000	TEMPERATURE CONTROLLER, AQUASTAT, HIGH OR LOW LIMIT
17	E2419100	VFD, 40 HP, 380-480VAC, 3 PH
18	E2429500	HEAT TRACE, EH2-GAS COOLER
19	E2431900	COMPRESSOR HEATER ASSEMBLY
20	E2432200	DIFFERENTIAL PRESSURE SWITCH
21	E2436700	SWITCH, PRESSURE, UNITED ELECTRIC CONTROLS H100-16260
22	P2143200	Y-STRAINER, 1 1/2" SOLDER ENDS, BRASS, LEAD FREE
23	P2154100	VALVE, W/SHUTOFF, HI-FLOW DRAIN
24	S2137900	HEAT EXCHANGER, FLAT PLATE, SWEP B18H, CO2
25	S2138900	HEAT EXCHANGER, DOUBLE WALL, SWEP BDW16D, CO2
26	V2030400	ACCESS VALVE ASSEMBLY, 1/4 NPT CONNECTION
27	V2030500	ACCESS VALVE ASSEMBLY, 3/8" CONNECTION, BRASS
28	V2030900	VALVE, MANUALLY ACTUATED, BALL, BRASS, 3/4" ODS, K65 CuFe2P
29	V2032700	VALVE, EXPANSION, CO2 TRANSCRITICAL
30	V2033400	PRV, TRANSCRITICAL, CO2, 120 BAR

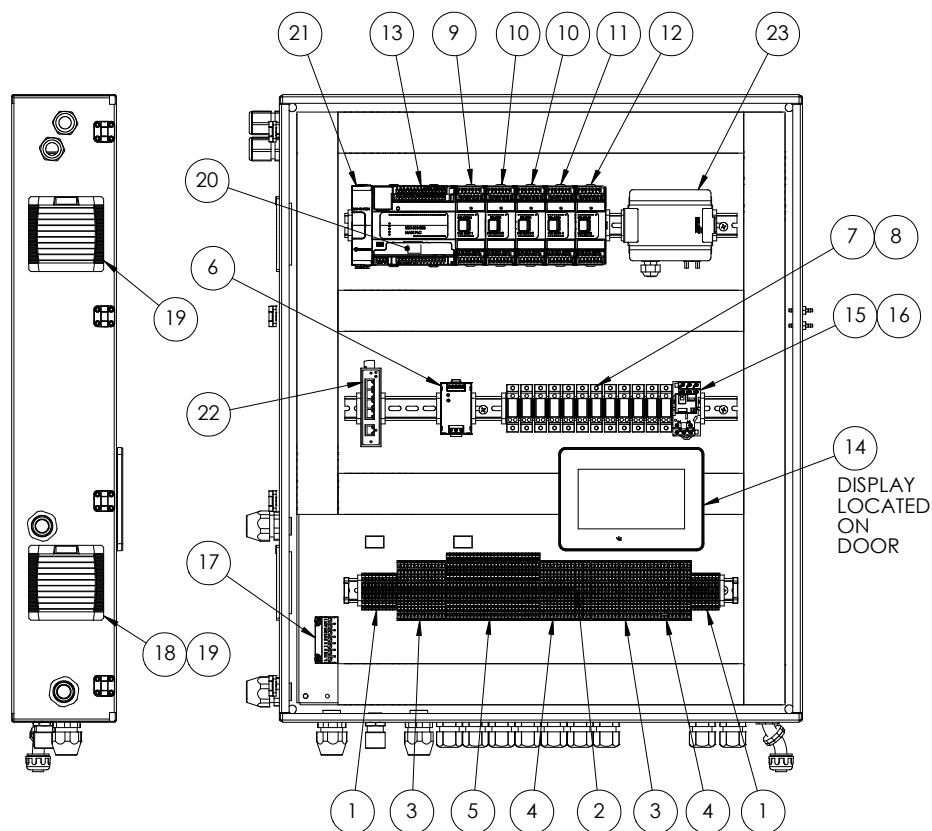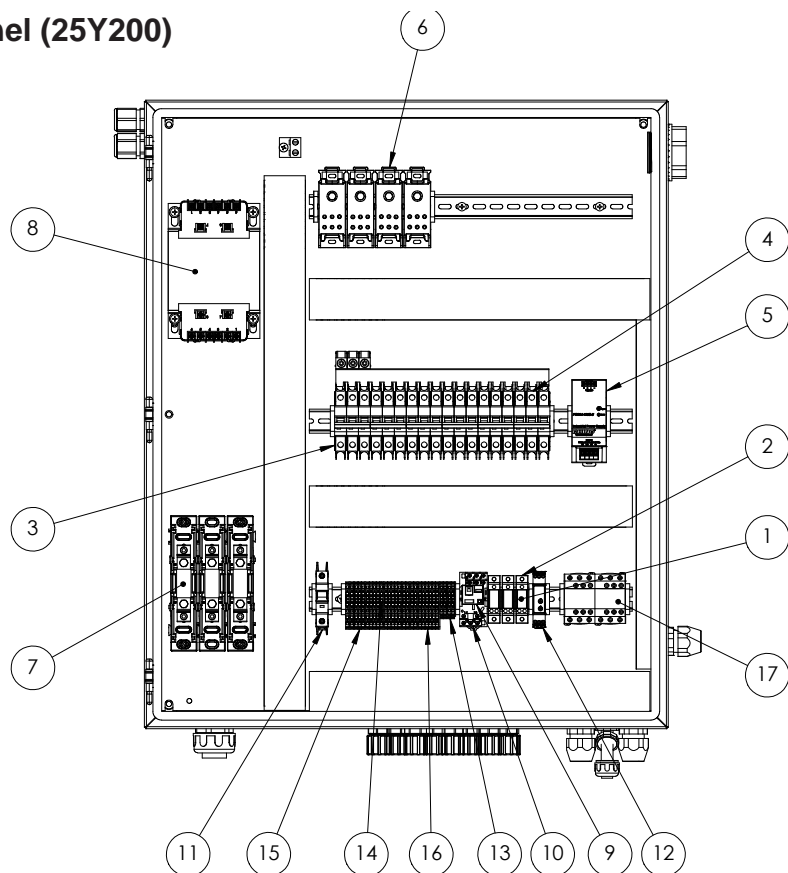10.C Control Panel (25Y7100)**10.D High Voltage Panel (25Y200)**

CONTROL PANEL PARTS LIST

Item #	Part Number	Description
1	E2367200	TERMINAL BLOCK, 2 CONDUCTOR, GRAY
2	E2367500	JUMPER, TERMINAL BLOCK, DIN RAIL
3	E2409100	TERMINAL BLOCK, 4 CONDUCTOR, GREY
4	E2409200	TERMINAL BLOCK, 4 CONDUCTOR, GROUND, GREEN
5	E2409300	TERMINAL BLOCK, 4 CONDUCTOR, UPPER COMMON, LWR COMMON
6	E2410100	CONVERTER, DC TO DC, 60W
7	E2410200	RELAY, 24VDC COIL, SPDT, 10 AMP CONTACT
8	E2410300	SOCKET, RELAY, SPDT
9	E2410400	I/O MODULE, UNISTREAM, 8 ANALOG INPUTS, (UIA-0800N)
10	E2410401	I/O MODULE, UNISTREAM, 8 THERMOCOUPLE INPUTS, (UIS-08TC)
11	E2410402	I/O MODULE, UNISTREAM, 6 ANALOG OUPUTS, (UIA-0006)
12	E2410403	I/O MODULE, UNISTREAM, 16 RELAY OUTPUTS, (UID-0016R)
13	E2410500	UNISTREAM PLC
14	E2410600	DISPLAY, UNISTREAM, HMI
15	E2413400	RELAY, 3 POLE, DOUBLE THROW
16	E2413500	BASE, RELAY, 3 POLE
17	E2418100	MODULE, PROTECTOR, MOTOR
18	E2419500	FAN, CONTROL ENCLOSURE, CHV325
19	E2419600	FILTER, CONTROL ENCLOSURE, CHV325
20	E2421900	MEMORY CARD, MICROSDHC, 32GB
21	E2431100	UNI-COM, MODULE, UNISTREAM
22	E2431200	SWITCH, ETHERNET
23	E2439000	PRESSURE TRANSDUCER, LOW DIFFERENTIAL, BELIMO

HV PANEL PARTS LIST

Item #	Part Number	Description
1	E2410200	RELAY, 24 VDC COIL, SPDT, 10 AMP CONTACT
2	E2410300	SOCKET, RELAY, SPDT
3	E2411400	CIRCUIT BREAKER, 10 AMP, 3 POLE, 480Y/277VAC
4	E2411500	CIRCUIT BREAKER, 6 AMP, 3 POLE, 480Y/277VAC
5	E2411900	POWER SUPPLY, 24VDC OUTPUT, 120W, 480 VAC/3 PHASE INPUT
6	E2412000	POWER DISTRIBUTION BLOCK, ENCLOSED, 380A, 1 POLE
7	E2412100	FUSE, FAST ACTING, CLASS T, 70 AMP
8	E2412300	TRANSFORMER, 240X480V - 120X240V, 1500VA
9	E2413400	RELAY, 24VDC COIL, 3PDT 15 AMP CONTACT RATING
10	E2413500	SOCKET, RELAY, 3PDT
11	E2418900	CIRCUIT BREAKER, 20 AMP, SINGLE POLE, 277VAC
12	E2440800	TIMER, DELAY
13	E2367200	TERMINAL BLOCK, 2 CONDUCTOR, GREY
14	E2367500	JUMPER, TERMINAL BLOCK, DIN RAIL
15	E2373400	TERMINAL BLOCK, 3 CONDUCTOR, GREY
16	E2384800	TERMINAL BLOCK, 3 CONDUCTOR, GREEN
17	E2440900	CONTACTOR, 25A 3PH

Notes:

All Manuals (Install & Operate, Start Up, and Service Manuals) can be downloaded at



www.laars.com

For LAARS Product and Service VIDEOS



<https://www.youtube.com/user/LaarsHeating>

Dimensions and specifications subject to change without notice in accordance with our policy of continuous product improvement.



H2422300B



Customer Service and Product Support: 800.900.9276 • Fax 800.559.1583
Headquarters: 20 Industrial Way, Rochester, NH, USA 03867 • 603.335.6300 • Fax 603.335.3355
9 Bridgen Gate, Halton Hills, Ontario, Canada L7G 0A3 (905) 203-0600 Fax: (905) 636-0666
www.Laars.com

Litho in U.S.A. © Laars 24-08 Document 2186B