














## Installation and Instruction Manual

# ***Pipe Cover***



Model    LT199NXX1 / LT199PXX1  
            LT199NRX1 / LT199PRX1  
            RTGS199N1 / RTGS199X1  
            RTGR199N1 / RTGR199X1

**Included Pipe Cover Kit**

Part		Shape	Q'ty
1	Front Cover		1
2	Left Plate		1
3	Right Plate		1
4	Front Cover Bracket		1
5	Case Bracket		2


Part		Shape	Q'ty
6	Frame Bracket 1		2
7	Frame Bracket 2		1
8	Dry Wall Anchor		2
9	Screws (M4x10L)		12
10	Knob		1
11	Installation Instruction		1

**Pipe Cover Kit Components & Dimension**

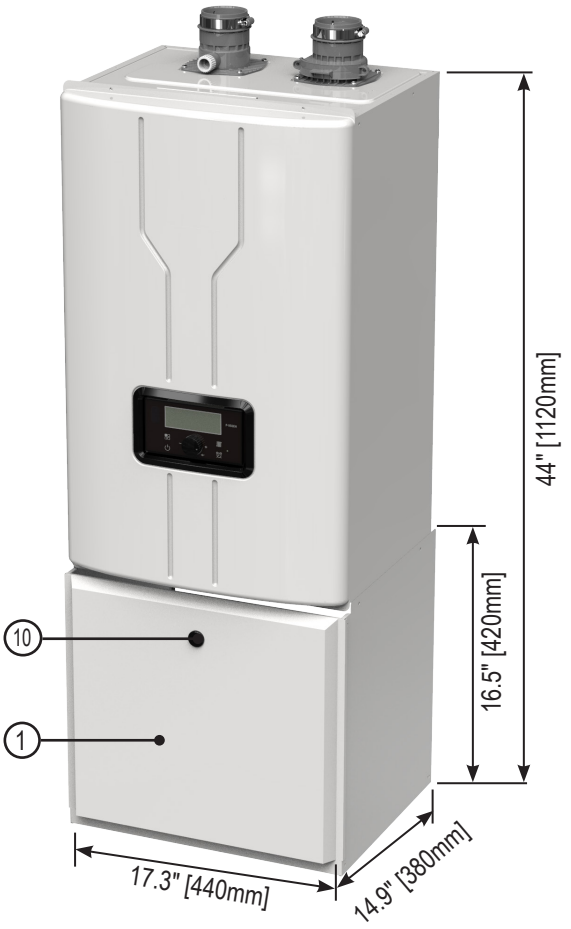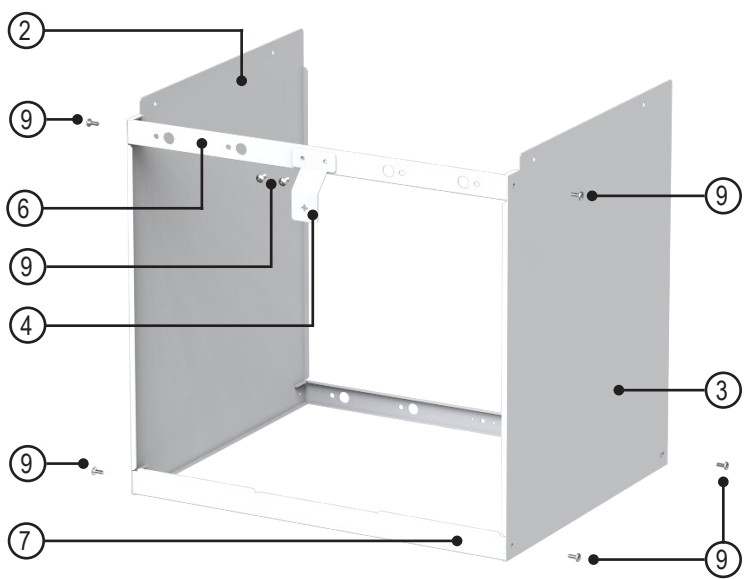

## Installing the Pipe Cover

### 1. Pre-Assemble Frame before installation

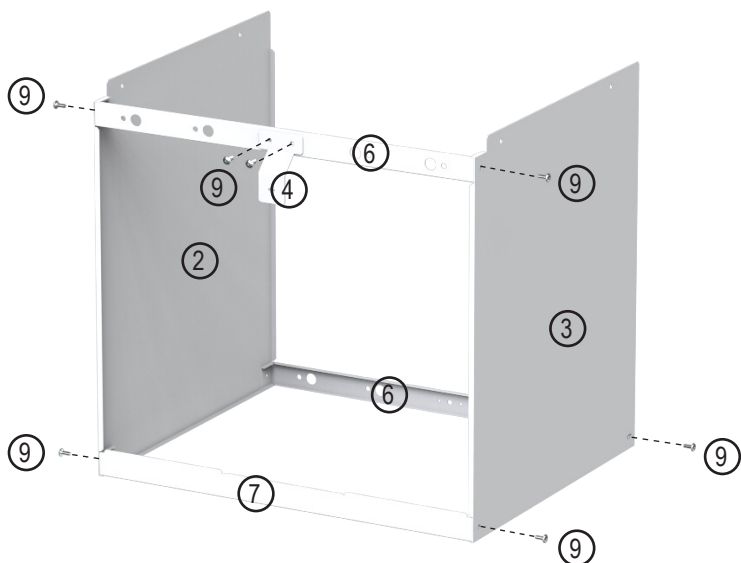

- 1) Assemble the Front Cover Bracket (4) to the one of the Frame Bracket 1 (6).
- 2) Assemble this Frame Bracket 1 (6) assembled Front Cover Bracket (4) to the Left and Right Plate (2,3) with Screws-M4x10L (9).
- 3) Secure the two Frame Brackets 1, 2 (6,7) to the Left and Right Plate (2,3) with Screws-M4x10L (9).

### 2. Install Pipe Cover onto Water Heater

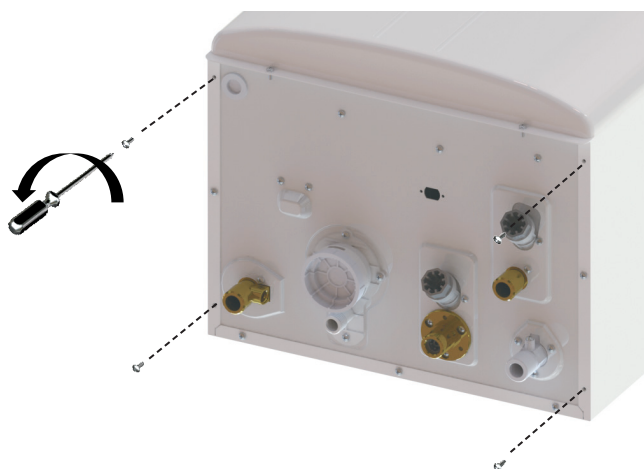


Figure 1

- 1) Remove the mounting 4 screws (A) from the bottom and sides of the appliance. Refer to Figure 1.
- 2) Install the two Case Brackets (5) to the bottom of the appliance with the 4 screws (A) removed in the previous step. Refer to Figure 2.

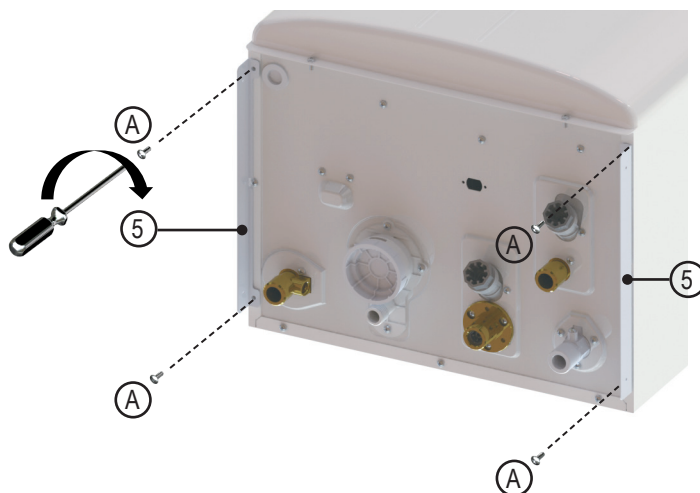


Figure 2

- 3) Slide the Pipe Cover assembly onto the bottom of the appliance. Align the mounting holes and temporarily mount the Pipe Cover with the 4 Screws-M4x10L (9). Refer to Figure 3.
- 4) The 'back' bottom Frame Bracket 1(6) inserts into the temporarily mounted Pipe Cover. Mark the locations to attach the Pipe Cover to the wall onto the 'back' bottom Frame Bracket 1(6).
- 5) Remove the Pipe Cover from the wall and then drill two holes on the wall as marked. For drywall, drill two 3/16-in. holes (other wall materials will require alternate mounting methods).

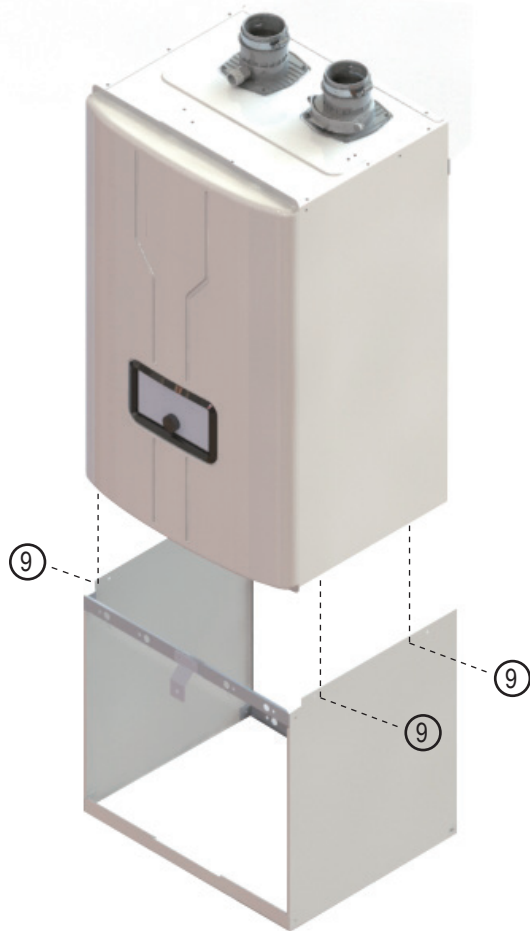


Figure 3

6) Attach 'back' bottom Frame Bracket 1(⑥) to the wall with two dry wall anchors (⑧). Refer to Figure 4.

7) Attach the pre-assembled Pipe Cover onto the bottom of the appliance. Tighten the 4 Screws-M4x10L (⑨) on the both sides of pre-assembled Pipe Cover.

8) Attach the Front Cover (①) to the Pipe Cover with the Knob (⑩). Refer to Figure 5.

9) With the Pipe Cover flush with the appliance, tighten the screws on the bottom Frame Bracket 1(⑥) see Figure 5.



Figure 4

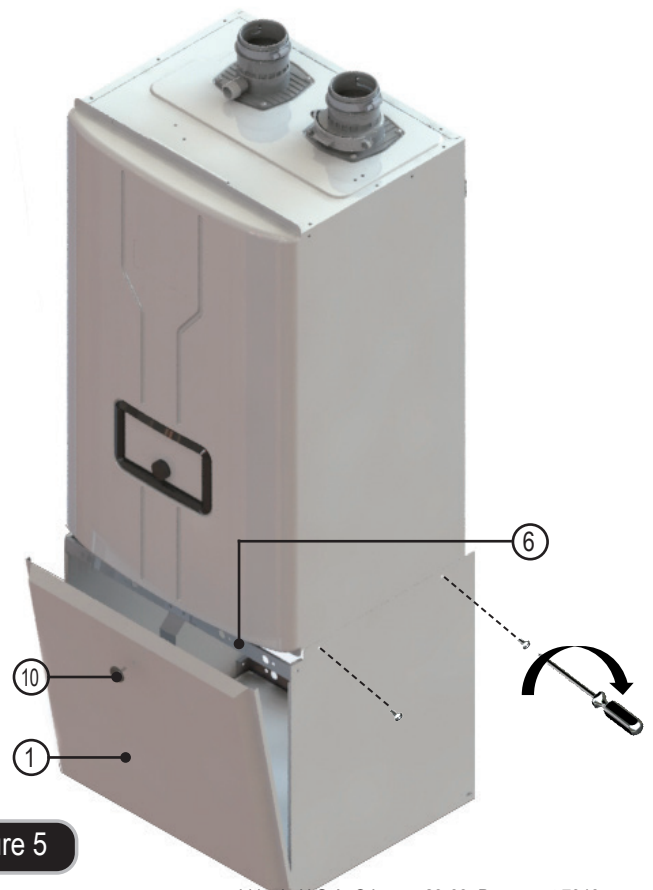


Figure 5