

FOR YOUR SAFETY: This product must be installed and serviced by a professional service technician, qualified in hot water boiler and heater installation and maintenance. Improper installation and/or operation could create carbon monoxide gas in flue gases which could cause serious injury, property damage, or death. Improper installation and/or operation will void the warranty.

A WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a nearby phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or gas supplier.

Assurez-vous de bien suivres les instructions données dans cette notice pour réduire au minimum le risque d'incendie ou d'explosion ou pour éviter tout dommage matériel, toute blessure ou la mort.

Ne pas entreposer ni utiliser d'essence ou ni d'autres vapeurs ou liquides inflammables dans le à proximité de cet appareil ou de tout autre appareil.

QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ:

- Ne pas tenter d'allumer d'appareils.
- Ne touchez à aucun interrupteur. Ne pas vous servir des téléphones dans le bâtiment où vous vous trovez.
- Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur.
- Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le sservice des incendies.

L'installation et l'entretien doivent être assurés par un installateur ou un service d'entretien qualifié ou par le fournisseur de gaz.



Heating Systems Company A subsidiary of BRADFORD WHITE[®] Corporation

TABLE OF CONTENTS

SECTION 1 Product Accessories

1.1	Introduction	.3
1.2	Included with the Unit	.3

SECTION 2 Product Characteristics

2.1	Model Nomenclature	4
2.2	Specifications	5
2.3	Dimensions	6
2.4	Names of Components	7

SECTION 3 Safety Regulations

3.1	Safety Symbols8
3.2	Safety Precautions and Proper Use

SECTION 4 Installation

NOTE: For Cascading Installations, please refer to document 1351 'Cascading the Mascot ST', available online.		
4.1	Location and Clearances12	
4.2	Wall Mount Bracket13	
4.2.1	The installation height and location13	
4.2.2	Hang the Water Heater13	
4.3	Combustion Air14	
4.3.1	Combustion Air from Room14	
4.3.2	Ducted Combustion Air14	
4.4	Venting (Exhaust)16	
4.5	General Location Guideline17	
4.6	Locations for Vent Pipe Terminator18	
4.6.1 4.6.2	Direct Venting Clearances	
4.6.3	Venting Requirements in the Commonwealth of Massachusetts20	
4.6.4	Common Vent Test21	
4.7	Air Supply and Vent Connections22	
4.7.1	Vent / Air Pipe Lengths22	
4.7.2	Direct Venting22	
4.7.3	Single Venting23	
4.8	Vent / Air Pipe Termination23	
4.9	Gas Supply and Piping26	
4.10	Gas Supply Pressure29	
4.11	Gas Setup and Adjustment29	

4.12	Gas High Altitude Setting	
4.13	Gas Conversion	
4.14	Plumbing Guidelines.	31
4.15	Disposal of Condensate	
4.16	Pressure Relief Valve	34
4.17	Electrical Wiring Connections	34
4.18	DIP Switches	35
4.19	Wiring Diagram	
4.20	Ladder Diagram	
4.21	Electrical Connections	

SECTION 5 Control Display and Operation

Control Dial and Buttons	.39
LCD Overview	.41
Operating Mode	.42
Status Display Mode	.43
DHW Set Point Change Mode	.44
Installer Mode	.45
Error Mode	.46
	Control Dial and Buttons LCD Overview Operating Mode Status Display Mode DHW Set Point Change Mode Installer Mode Error Mode

SECTION 6 Error Codes

6.1	Error Codes	47
6.2	Fault Tree Analysis	50
6.2.1	Flame Detection	50
6.2.2	Gas Detection	50
6.2.4	'I/T', 'DHW', 'OP' Sensor detects	51
6.2.3	Fan / Air Proving	51

SECTION 7 Troubleshooting

7.1	Diagnostics	52
-----	-------------	----

SECTION 8 Maintenance

8.1	Annual Startup an	d General	Maintenance	55
-----	-------------------	-----------	-------------	----

SECTION 9 Installation Check

9.1	Quick View	58
9.2	Final check lists	

SECTION 10 Repair Part List and Diagrams

10.1	Parts List	60
------	------------	----

SECTION 1 Product Accessories

1.1 Introduction

This manual provides information necessary for the installation, operation, and maintenance of the LAARS Heating Systems **Mascot ST**. All application and installation procedures must be read and reviewed completely before proceeding with the installation. Consult the LAARS Heating Systems factory, or your local factory representative, with any problems or questions regarding this equipment. Experience has shown that most operating problems are caused by improper installation.

All installations must be made in accordance with 1) American National Standard Z223.1/NFPA54-Latest Edition "National Fuel Gas Code" or 2) CSA B149.1 "Natural Gas and Propane Installation Code" and with the requirement of the local utility or other authorities having jurisdiction. Such applicable requirements take precedence over the general instructions contained herein.

All electrical wiring is to be done in accordance with the local codes, or in the absence of local codes, with: 1) The National Electrical Code ANSI/NFPA No. 70-latest Edition, or 2) CSA STD. C22.1 "Canadian Electrical Code - Part 1". This appliance must be electrically grounded in accordance with these codes.


Items	Descriptions	Qty
LAARS Tankless Water Heater		1
Installation Instructions and User's Manual		1
Condensate Hose		1
Wall Mount Bracket		1
Bolts w/Anchors		4
Vent terminal cap 3"		2
Parts Kit		1

1.2 Included with the Unit

SECTION 2 Product Characteristics

2.1 Model Nomenclature

The Model Nomenclature is shown on your Rating Plate and consists of a series of letters and numbers (Nomenclature) that further identifies the characteristics of your Mascot ST.

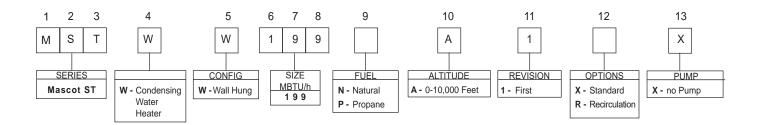




2.2 Specifications

Model Name		MSTW	W199
Coo Innut Doto	MAX	199,000 Btu/h	
Gas Input Rate	MIN	19,900 Btu/h	
	35°F Rise	11.0 GPM	
Hot Water Capacity	45°F Rise	8.5 0	6PM
	77°F Rise	5.0 G	6PM
Instal	lation	Indoor Wa	all Hung
Flue S	System	Sealed Combustion E	Direct & Single Vnet
Vent	Run	2"(50ft) / 3"(100ft) Schedule	40 PVC, CPVC, PP, ABS
Gas Supply Pressure	NG	3.5″ WC to	10.5″ WC
	LP	8.0″ WC to	13.0″ WC
	Gas Type	NG	LP
Manifold Pressure	MAX Fire	-0.11" to -0.17" WC	-0.07" to -0.11" WC
	MIN Fire	-0.10" to -0.16" WC	-0.06" to -0.10" WC
	Main Supply	120V 60I	Hz / 4A
Power Supply	Maximum Power Consumption	135W(82W+53W_	Ceramic heater)
Ignition	System	Direct Electronic Ignition / Automatic Flame Sensing	
Burner	System	Single Orifice Premixed Fuel Modulation Metal Fiber Infrared	
Gas Valv	e System	Air ratio	valve
Minimum	Flow Rate	0.5 G	PM
Internal Pi	pe Material	STS :	304
Dimer	nsions	W17.3 " – H28.	7 " – D14.8 "
Product	Weight	88 lbs (<i>40</i> kg)	
Shipping	g Weight	100 lbs (<i>45</i> kg)	
Sub Heat Exchang	ger Water Capacity	Under 2 Gallon	
Control Panel /	Main Controller	P-920C / GTH-9500C	
Motor Drocouro	MAX	Hot water	150 psi
Water Pressure	MIN	15 p	si
Connection Sizes	Cold Water Inlet / Hot Water Outlet	3/4"NPT	
	Gas Inlet	3/4″N	PT
	Casing	Cold Rolled C	arbon Steel
Materials	Heat Exchanger	Primary Heat Exchanger : STS 304 Secondary Heat Exchanger : STS 304	
Safety Devices		Flame Rod, Overheat Cut Off Lir sensor, Exhaust Temperature H perature High Limit Switch, Fro	ligh Limit Switch, Water Tem-

• Temperature


Operating ambient Temperature Range : -10 to 60°C. Operating Relative Humidity up to: 90% at 40°C. Shipping & Storage Temperature Range of : -20 to 80°C.

2.3 Dimensions

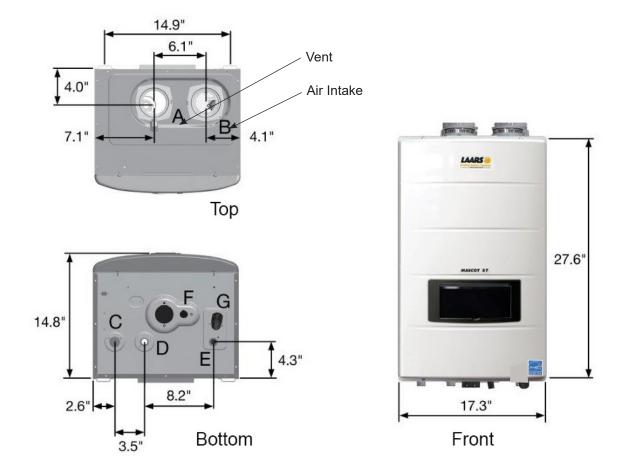

	Description	Diameter
А	Vent Pipe Collar	3"
В	Air Intake Collar	3"
С	Gas Inlet	3/4"
D	DHW Outlet	3/4"
Е	DHW Inlet	3/4"
F	Condensate Drain	1/2"
G	Cold Water Inlet Filter	-

2.4 Names of Components

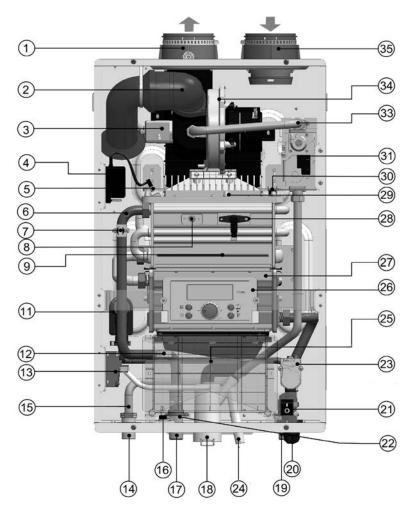


#	Name of Component
1	Vent Pipe Collar
2	Combustion Air Intake Assembly
3	Air Gas Mixture (AGM) Actuator
4	Ignition Transformer
5	Igniter
6	Operating Temperature Sensor
7	Switch High Limit
8	Sight Glass
9	Primary Heat Exchanger
11	Mixing Valve
12	Frost Protection
13	Air Pressure Switch
14	Gas Inlet
15	Gas Inlet Pipe
16	Freeze Protector Sensor
17	Domestic Hot Water (DHW) Outlet
18	Condensate Trap Cleanout

#	Name of Component
19	Cold Water Inlet
20	Cold Water Inlet Filter
21	Manual Power Switch
22	DHW Temperature Sensor
23	Water Adjustment Valve
24	Condensate Trap Hose
25	Main Controller
26	Control Panel
27	Secondary Heat Exchanger
28	Flame Detection Sensor
29	Burner Case
30	Burner Overheat Switch
31	Gas Valve
32	Venting (exhaust) Duct
33	Gas Manifold
34	Blower
35	Air Intake Collar

_____ N.

. .

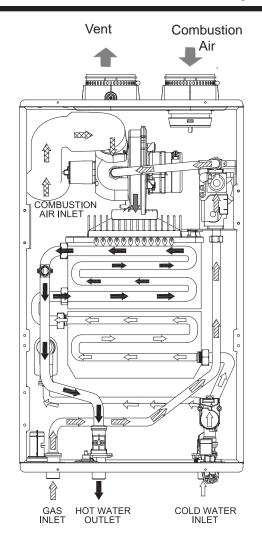

SECTION 3 Safety Regulations

3.1 Safety Symbols

To avoid product damage, personal injury, or even possible death, carefully read, understand, and follow all the instructions in the Installation and Operation manual before installation, operation and service the Water Heater.

Laars cannot anticipate every circumstance that might involve a potential hazard. Therefore, all possible incidents are not included in our warnings. Proper installation, operation, and service are your responsibility.

You must make sure that the operation and settings of the Water Heater are safe for you and for others.

This manual provides Safety Symbols. When the user fails to adhere to the following requirement, it may cause death, serious injury, and substantial property damage.

For safety symbols, 'DANGER', 'WARNING', CAUTION' are indicated and the definitions for these terms are as follow:

▲ DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is limited to the most extreme situations.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It is also used to alert against unsafe practices and hazards involving only property damage.

\Lambda WARNING

Cancer and Reproductive Harm. www.P65WARNINGS.CA.GOV. as required by the state of California Proposition 65.

🔥 WARNING

FOR YOUR SAFETY READ BEFORE OPERATING

If you do not follow these instructions exactly, a fire or explosion could result causing property damage, personal injury or loss of life.

- A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
- B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

This appliance must be installed in accordance with local codes if any; if not, follow ANSI Z224.1/NFPA 54 or CAN/CSA B149.1, Natural Gas and Propane Installation Code, as applicable.

This appliance is certified for use at altitudes up to 4,500ft(1,370m) in accordance to the latest CSA/ CGA 2.17-M91 Gas-Fired Appliances for Use at High Altitudes.



▲ DANGER

Vapors from flammable liquids will explode and catch on fire. These will cause death or severe burns.

Do not use or store flammable products such as gasoline, solvents or adhesives in the same room or area near the appliance.

Keep flammable products

- Far away from water heater
- In approved containers
- Tightly closed
- Out of children's reach

Vapors

- Cannot be seen
- are heavier than air
- spread on the floor
- Can spread from other rooms to the main burner by air currents

Do not install the appliance where flammable products will be stored.

Read and follow water heater warnings and instructions thoroughly. If owner's manual is missing, contact the retailer or manufacturer.

 The Laars Water Heater must be installed by a qualified plumber, a licensed gas fitter, and/or a professional service technician.
 Improper installation and/or operation will cause a potentially hazardous situation, such as serious injury or death. Also, it will void the warranty.

- The National Fuel Gas Code NFPA 54 / ANSI Z224.1
- National Electric Code ANSI/NEPA 70
- All applicable local, state, national and provincial codes, regulations and laws.
- Proper care is your responsibility. Carefully read and understand the Operating Information in this manual before operating the Laars Water Heater.
- Be aware of the location of the gas shut-off valve and operation method. Close the gas shut-off valve immediately if the appliance is subjected to fire, overheating, flood, physical damage, or any other

damaging condition that might affect the operation of the unit. Water Heater must be checked by a qualified technician before resuming operation.

- DO NOT use this Water Heater if any part has been under water. Immediately call a qualified technician for inspecting the Water Heater and replacing any part of the control system and gas control which have been under water.
- Do not power up the unit until the gas and water supply valves are fully opened. Make sure that the fresh air intake port and exhaust gas port are opened and functional.
- DO NOT attempt to install, repair, or service this Water Heater by yourself.
 Do not change any part of the Water heater.
 Contact a qualified technician if the Water Heater needs repair or maintenance.
 Ask your gas supplier for a list of qualified service providers.
- DO NOT use spray paint, hair spray, or any other flammable spray near Water Heater or near the exterior fresh air inlet port. DO NOT place any items in or around the exterior exhaust gas outlet port and/ or fresh air inlet port. These could restrict or block the flow in or out of the vent system.
- "Caution: While repairing control, all wires are labeled. You must connect the wires in accordance with the instruction.
 Wiring errors can cause improper and dangerous

operation.

- "Verify proper operation after servicing operation"
- This consists of the gas ignition system components which are protected from water (dripping, spraying, rain, etc.) during operation and service (circulator replacement, condensate trap, control replacement, etc.).
- After installing the heater, safety device must be tested.
- This water heater is equipped with a blocked vent shutoff system.

If the error code '41' occurs, follow the instructions below.

- First, turn off the manual gas valve.
- Make sure that there is no foreign object in the vent passage or rodent screen.
- If you do not find any problem, do the following.
- Turn off the error state by pressing the power button of control panel.
- If the error occurs repeatedly, call your service technician or gas supplier.

3.2 Safety Precautions and Proper Use

Before Operation

1. Check the Gas Type (NG/LP)

When using or moving the unit for the first time, check if gas type matches with the gas type of the Water Heater. Check whether the gas type which is supplied is NG (Natural Gas) or LP (Propane) and also check the Water Heater gas type.

The gas type is indicated on the rating plate on side of the Water Heater.

2. Check the Power (120V 60Hz) Check that the appliance is connected properly.

3. Check the Cold Water Inlet valve. Please keep the appliance water inlet valve open at all times. The appliance will not ignite when insufficient water or no water is in the heating pipes.

4. Check the Gas Valve Check that the manual gas shut-off valve that supplies the Mascot ST is opened.

5. Check the area around the appliance and remove any combustible or flammable materials. Remove laundry or any other items that are on or near the water heater or exhaust vent.

When in Operation A CAUTION

1. Caution for Gas leak

Frequently check for a gas leak at the gas connection portion with soapy water.


2. Caution for Ventilation

Make sure that there is sufficient inflow and outflow of air ventilation while using the unit.

If the ventilation is improper, combustion quality may deteriorate inside the appliance and cause shortened life of the appliance.

3. Burn Warning

Be careful not to burn yourself on the flue or pipes. They become extremely hot during operation.

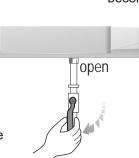

WARNING

Do not use the appliance for any other purpose than for heating and hot water.

Do not store combustibles or flammable material such as gasoline near the appliance.

Do not store other items on or near this water heater.

Do not store combustible (flammable) materials such as papers. Do not hang clothes on the exhaust stack. This may start a fire.

Scalding Risk: Manufacturer strongly recommends the use of an anti-scald mixing valve at domestic hot water outlet (boiler location) to reduce potential for scalding. Contact Manufacturer for recommended models. Check with local codes.



After repair of gas pipeline or gas regulator replacement, call a qualified contractor for inspection before starting it up.

Carbon monoxide poisoning

If exhaust fumes enter the room, it could cause poisoning by carbon monoxide gas. Check that the exhaust tubes are properly connected. Open windows for ventilation. Call a qualified service technician for immediate repair.

Steps to take if you have a Gas leak.

- 1. Shut down the water heater as soon as gas fumes are detected.
- 2. Close the intermediate gas valve.
- 3. Open windows for ventilation.
- 4. Call a qualified service technician for immediate repair.

Gas leakage test. Gas supply line must be inspected regularly.

Do not shut off the Water Heater.

When you leave home for a long time, do not shut off Water Heater. The Water Heater has a freeze protection function. The ceramic heater is installed inside of the heater's internal pipe to protect the heater from freezing.

Do not wipe the appliance or control panel with wet cloth. Electric shock may occur, or internal parts may fail due to the exposure to moisture.

Do not disassemble the Water Heater. If repair is required, call your local qualified technician.


SECTION 4 Installation

4.1 Location and Clearances

The Mascot ST must be mounted to a suitable wall by a qualified heating contractor under the guidelines of a wall mounted water heater.

The wall may be of concrete or wood. Suitable fasteners for concrete or wood must be used. Failure to wall mount this water heater using correct fasteners will affect the performance and life expectancy of the water heater and will void the warranty.

NOTE: For Cascading Installations, please refer to document 1351 'Cascading the Mascot ST', available online.

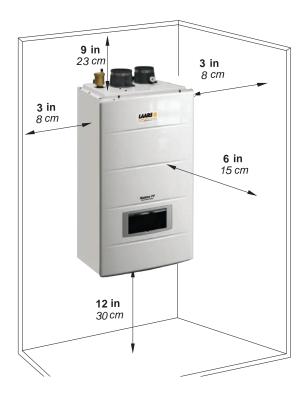

Minimum clearances to Combustibles.

For installatior Non-Combustib Combustib	Suggested Service Clearance	
TOP 9 in (23 cm)		18 in (46 cm)
BACK ⁵ / ₈ in (1.5 cm)		⁵ /8 in (1.5 cm)
FRONT 6 in (15 cm)		40 in (101 cm)
SIDE 3 in (7 cm)		8 in (20 cm)
BOTTOM 12 in (30 cm)		24 in (61 cm)

Table 1. **Minimum Clearances** to Combustibles and for Service.

WARNING

- Installations must comply with
- National Fuel Gas Code, ANSI Z224.1 The latest
- National Electrical Code.
- A National Standard of Canada CAN/CSA-B149.1-05
- Check before placing the Water Heater
- · Always check the connected components which are near to the heater. The components are below.

■Water piping position / Venting adapter / Gas supply

- Water piping position / Venting adapter / Gas supply piping / Electrical power / Condensate drain hose.
 Confirm area around Water Heater. Remove any combustible materials, gasoline and other flammable liquids. Failure to keep Water Heater area clear and free of combustible materials, gasoline and other flammable liquids and vapors can result in severe personal injury, death or substantial property damage.
 The Water Heater which has gas control system components must be protected from any possible
- danger during operation and service.
- If new Water Heater replaces the existing appliance,
- Do not install : System leaks causing oxygen corrosion or heat exchanger cracks from hard water deposits.
- Provide clearances as outlined in Table 1
- qualified technician.
- If the heater was installed in a narrow space or corner, please ensure that there is sufficient space for service and maintenance access. For regular maintenance, there should not be any problem to approach gas and water line.
- The water heater must be installed on a wall that can bear its weight.

🛕 WARNING

CLEARANCES FOR SERVICE ACCESS

- The water heater must be installed on a wall that can bear its weight.
- Adequate service clearance must be considered.
- internal wall (sound proofing may be required when installing onto a stud partition wall).

4.2 Wall Mount Bracket

4.2.1 The installation height and location

The installation height depends on your installation scenario. With all clearances considered, and given adequate positioning for air supply and venting, you will need to determine the best position to mount the Wall Mount Bracket. The wall must be concrete, wood, or plywood over studs, and must be strong enough to hold the water heater!

- Start by familiarizing yourself to how the included Wall Mount Bracket hooks underneath the two Hangers that are attached to the back of the water heater. The 'hooks' of the Wall Mount Bracket will be **3**" from the Top of the water heater once the water heater is hung.
- Position the Wall Mount Bracket at the location that it will go, being sure that it is level, and then drill 4 holes (0.47"dia) with a 1/2" drill bit, into the wall through the Bracket.
- If mounting to a concrete wall, then use the concrete anchors. If onto wood or 5/8" (16 mm) plywood, then use the wood screws.

Do not hang the Mascot ST onto sheetrock unless it is possible to fasten directly into the structural studs. If the included anchors do not suit your installation, you must use 'Field Supplied' anchors that are appropriate for the wall's construction.

> Hangers (2) (fastened to the back of unit)

4.2.2 Hang the Water Heater

• Lift the water heater up, align the Hangers on the back of the water heater with the hooks on the Wall Mount Bracket, and hang the water heater onto the Wall Mount Bracket. Do a visual inspection to make sure that the water heater is hanging properly onto the hooks of the Wall Mount Bracket.

• Fasten the bottom of the water heater to the wall using 2 suitable wall anchors (field supplied).

3" to Top

Concrete

or 5/8" Plywood

Wall Mount

Bracket

Wood.

Anchors*

(4)

Wall Mount

Bracket

SECTION 4. Installation (continued)

4.3 Combustion Air

Mascot ST water heaters must have provisions for combustion and ventilation air in accordance with the applicable requirements for Combustion Air Supply and Ventilation in the National Fuel Gas Code, ANSI Z223 1; or in Canada, the Natural Gas and Propane Installation Code, CSA B149.1. All applicable provisions of local building codes must also be adhered to.

A Mascot ST unit can take combustion air from the space in which it is installed, or the combustion air can be ducted directly to the unit. Ventilation air must be provided in either case.

4.3.1 Combustion Air from Room

In the United States, the most common requirements specify that the space shall communicate with the outdoors in accordance with method 1 or 2, which follow. Where ducts are used, they shall be of the same crosssectional area as the free area of the openings to which they connect.

Method 1: Two permanent openings, one commencing within 12" (300mm) of the top and one commencing within 12" (300mm) of the bottom, of the enclosure shall be provided. The openings shall communicate directly, or by ducts, with the outdoors or spaces that freely communicate with the outdoors. When directly communicating with the outdoors, or when communicating to the outdoors through vertical ducts, each opening shall have a minimum free area of 1 square inch per 4000 Btu/hr (550 square mm/kW) of total input rating of all equipment in the enclosure. When communicating to the outdoors through horizontal ducts, each opening shall have a minimum free area of not less than 1 square inch per 2000 Btu/hr (1100 square mm/kW) of total input rating of all equipment in the enclosure.

Method 2: One permanent opening, commencing

within 12" (300mm) of the top of the enclosure, shall be permitted. The opening shall directly communicate with the outdoors or shall communicate through a vertical or horizontal duct to the outdoors or spaces that directly communicate with the outdoors and shall have a minimum free area of 1 square inch per 3000 Btu/hr (734 square mm/kW) of the total input rating of all equipment located in the enclosure. This opening must not be less than the sum of the areas of all vent connectors in the confined space.

Other methods of introducing combustion and ventilation air are acceptable, providing they conform to the requirements in the applicable codes listed above.

In Canada, consult local building and safety codes or, in absence of such requirements, follow CAN/CGA B149.

4.3.2 Ducted Combustion Air

The combustion air can be taken through the wall, or through the roof. When taken from the wall, it must be taken from out-of-doors by means of the LAARS horizontal wall terminal. When taken from the roof, a field-supplied rain cap or an elbow arrangement must be used to prevent entry of rain water.

Use ABS, PVC, CPVC, polypropylene, or galvanized pipe for the combustion air intake. Route the intake to the water heater as directly as possible. Seal all joints. Provide adequate hangers. The unit must not support the weight of the combustion air intake pipe. Maximum linear pipe length allowed is shown in Table 6. Subtract 5 allowable linear ft. (1.5m) for every elbow used.

The connection for the intake air pipe is at the top of the unit.

In addition to air needed for combustion, air shall also be supplied for ventilation, including air required for comfort and proper working conditions for personnel.

MATERIAL	UNITED STATES	CANADA
ABS	ANSI/ASTM D1527	
PVC, sch 40	ANSI/ASTM D1785 or D2665	Air pipe material must be chosen
CPVC, sch 40	ANSI/ASTM F441	CPVC, sch 40, ANSI/ASTM, Polypropylene
Polypropylene	UL1738, ULC S636.	based upon the intended application of the water heater.
Single wall galv. steel	26 gauge	

COMBUSTION AIR INSTALLATION STANDARDS

 Table 2.
 Required Combustion Air Pipe Material.

The instructions for the installation of the venting system shall specify that the horizontal portions of the venting system shall be supported to prevent sagging; the methods of and intervals for support shall be specified. These instructions shall also specify that the venting system:

Category I, II and IV water heaters must be installed so that horizontal sections have a slope of at least 1/4 inch per foot (21 mm/m) to prevent accumulation of condensate; and

For Category II and IV water heaters, where necessary, have means provided for drainage of condensate.

• The Mascot ST is standard as a Natural Gas Water Heater and must be converted if propane is the desired gas, unless specifically manufactured for propane.

- Adequate drainage
- The appliance should be installed not to damage the adjacent area. If such locations cannot be avoided, it is recommended that a suitable drain pan, adequately drained, be installed under the appliance. The pan must not block combustion air flow.
- Connecting the Water Supply
- To conserve water and energy, insulate all water piping—especially the hot and recirculation water lines. Never cover the drain or pressure relief valve. Having a backflow preventer in the cold water supply line means that it prevent from thermal expansion backflow. Contact the water supplier or local plumbing inspector for information about how to control this situation. If overheating occurs or the gas supply fails to shut off, turn off the manual gas valve.
- This installation must conform with below section
- "Air for Combustion and Ventilation" of the National Fuel Gas Code, ANSI Z224.1/NFPA 54, or Sections 8.2, 8.3 or 8.4 of Natural Gas and Propane Installation Code, CAN/CSA B149.1, or applicable provisions of the local building codes.

Les instructions d'installation du système d'évacuation doivent préciser que les sections horizontales doivent être supportées pour prévenir le fléchissement. Les méthodes et les intervalles de support doivent être spécifiés. Les instructions doivent aussi indiquer les renseignements suivants:

les chaudières de catégories I, II et IV doivent présenter des tronçons horizontaux dont la pente montante est d'au moins ¼ po par pied (21 mm/m) entre la chaudière et l'évent; les chaudières de catégories II et IV doivent être installées de façon à empêcher l'accumulation de condensat;

et si nécessaire, les chaudières de catégories II et IV doivent être pourvues de dispositifs d'évacuation du condensat.

4.4 Venting (Exhaust)

The flue temperature of the Mascot ST changes dramatically with changes in operating water temperature. Therefore, it is necessary to assess the application of the water heater to determine the required certified vent class. If the Mascot ST is installed in an application where the ambient temperature is elevated, and/or installed in a closet/alcove, CPVC, polypropylene, or stainless steel material is required. If the system temperatures are unknown at the time of installation, stainless, polypropylene or CPVC material is recommended.

The Mascot ST is a Category IV appliance and may be installed with PVC, CPVC or polypropylene that complies with ULC-S636, ANSI/ASTM D1785 F441 (see Table 3) or a stainless steel venting system that complies with UL 1738 Standard.

INSTALLATIONS IN CANADA require the use of venting material certified to ULCS636. All Gas vents connected to the Mascot ST, plastic, stainless steel or otherwise must be certified to this ULC standard. Appropriate selection of vent material is very important for proper performance and safe operation of the Mascot ST.

The flue temperature of the Mascot ST changes dramatically with changes in operating water temperature. Therefore, it is necessary to assess the application of the water heater to determine the required certified vent class. If the Mascot ST is installed in an application where the outlet water temperature exceeds 145°F, and/or installed in a closet, class IIB or higher vent material is required. If the system temperatures are unknown at the time of installation, class IIB or higher venting material is recommended.

IN CANADA all venting used must meet the following requirements:

- 1. ULC-S636 certified and marked
- 2. The first 3 feet of venting must be accessible for visual inspection.
- 3. All components used in the vent system must be from a certified manufacturer.

NOTE: For Cascading Installations, please refer to document 1351 'Cascading the Mascot ST', available online.

A WARNING

Use of cellular core PVC (ASTM F891), cellular core CPVC, or Radel® (polyphenolsulfone) in venting systems shall be prohibited.

Failure to use the appropriate vent material, installation techniques, glues/sealants could lead to vent failure causing property damage, personal injury or death.

All venting must be installed according to this manual and any other applicable local codes, including but not limited to, ANSI Z224.1/NFPA 54, CSA B149.1, CSAB149.2 and ULC-S636. Failure to follow this manual and applicable codes may lead to property damage, severe injury, or death.

DO NOT COMMON VENT MASCOT ST UNITS. Mascot ST units are never permitted to share a vent with Category I appliances.

NE PAS ÉVENT COMMUNE MASCOTTE ST <u>UNITÉS</u>. Mascotte ST unités ne sont jamais autorisés à partager un évent Catégorie I avec les appareils.

MATERIAL	UNITED STATES	CANADA
Stainless Steel	UL 1738	Venting must be ULC-S636 certified for use as
PVC, sch 40	ANSI/ASTM D1785	venting material. The venting material must be chosen
CPVC, sch 40	ANSI/ASTM F441	based upon the intended application of the water heater.
Polypropylene	UL1738 or ULC-S636	

VENTING INSTALLATION STANDARDS

 Table 3.
 Required Exhaust Vent Material.

- 4. Vent system components must not be mixed with alternate manufacturers certified components and/or unlisted components.
- 5. The venting must be installed according to the vent manufacturers installation instructions.

The unit's vent can terminate through the roof, or through an outside wall.

Vent pipe must pitch upward, toward the vent terminal, not less than 1/4" per foot, so that condensate will run back to the Mascot ST to drain. Route vent pipe to the heater as directly as possible. Seal all joints and provide adequate hangers as required in the venting system manufacturer's Installation Instructions. Horizontal portions of the venting system must be supported to prevent sagging and may not have any low sections that could trap condensate. The unit must not support the weight of the vent pipe.

4.5 General Location Guideline

- 1. Vent system installation must be in accordance with Local codes or, in the absence of local codes, the National Fuel Gas Code, ANSI Z224.1 /NFPA 54 and/or CSA B149.1, Natural Gas and Propane Installation Code.
- The Water Heater is designed to be installed as a Direct Vent (sealed combustion) type. The air for combustion must be supplied directly from the outside to the burner. Also, the flue gases must be vented directly to the outdoors (through wall or roof).
- 3. Do not install venting system components on the exterior of building except as specifically required by these instructions
- Vent terminals must be at least 1 foot from any door, window, or gravity inlet into the building.
- Maintain the correct clearance and orientation between the vent and air intake terminals. The vent and air intake terminals must be at the same height and their center lines must be spaced apart 12" minimum.
- The bottom of the vent and air intake terminal must be at least 12" above the normal snow line. In no


▲ WARNING

- Failure to vent this Water Heater in accordance with these instructions could cause a fire, resulting in severe property damage, personal injury or death.
- Do not interchange vent systems or materials unless it is specified.
- The use of thermal insulation covering pipe and fittings is prohibited.
- Do not apply an electric damper, draft hood or vent damper with this Water Heater.
- Do not locate vent termination where exposed to prevailing winds. Moisture and ice may fall on surface around vent termination. To prevent deterioration, surface must be in good repair (sealed, painted, etc.).

case should they be less than 12" above grade level.

- Do not install the vent terminal directly over windows or doors.
- Air intake terminal must not terminate in areas that might contain combustion air contaminates, such as near swimming pools.
- For sidewall venting, the minimum horizontal distance between any adjacent individual Module (Water Heater) vent terminations is twelve (12) inches. It is better to be far more than 12 inches for avoiding frost damage to building surfaces where vent terminations are placed.
- The minimum horizontal distance between any adjacent individual module (water heater) roof vent endpiece is one (1) foot.

4.6 Locations for Vent Pipe Terminator

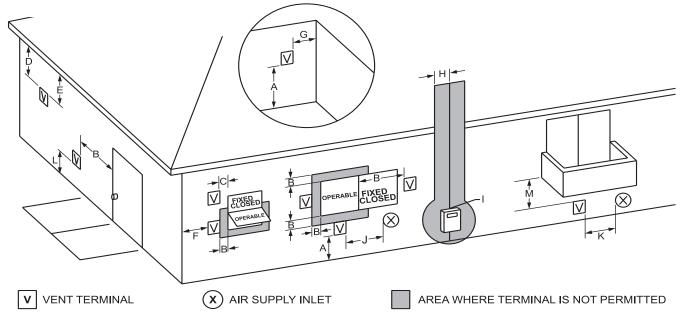

4.6.1 Direct Venting Clearances

		U.S. Installations (see note 1)	Canadian Installations (see note 2)
A=	Clearance above grade, veranda, porch, deck, or balcony	12 inches (30 cm) See note 6	12 inches (30 cm) See note 6
B=	Clearance to window or door that may be opened	Direct vent only: 12 inches (30cm); Other than Direct vent: 4 ft (1.2m) below or to side of opening; 1 ft (30cm) above opening	36 inches (91 cm) NT 80 only - 12 inches (30 cm)
C=	Clearance to permanently closed window	See note 4	See note 5
D=	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (61cm) from the center line of the terminal	See note 4	See note 5
E=	Clearance to unventilated soffit	See note 4	See note 5
F=	Clearance to outside corner	See note 4	See note 5
G=	Clearance to inside corner	See note 4	See note 5
H=	Clearance to each side of center line extended above meter/regulator assembly	See note 4	3 feet (91 cm) within a height 15 feet above the meter/regulator assembly
I=	Clearance to service regulator vent outlet	See note 4	3 feet (91 cm)
J=	Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance	Direct vent only: 12" (30cm) 80-285; 36" (91cm) 399-850. Other than Direct vent: 4 ft (1.2m) below or to side of opening; 1 ft (30cm) above opening	36 inches (91 cm) NT 80 only - 12 inches (30 cm)
K=	Clearance to a mechanical air supply inlet	3 feet (91 cm) above if within 10 feet (3 m) horizontally	6 feet (1.83 m)
L=	Clearance above paved sidewalk or paved driveway located on public property	Vent termination not allowed in this location for category IV appliances.	7 ft (2.1 m) See note 5
M=	Clearance under veranda, porch, deck, or balcony	See note 4	12 inches (30 cm) (see note 3)

Notes:

1. In accordance with the current ANSI Z223.1 / NFPA 54 National Fuel Gas Code.

2. In accordance with the current CAN/CSA-B149.1 Installation Codes.

3. Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

4. For clearances not specified in ANSI Z223.1 / NFPA 54, clearance is in accordance with local installation codes and the requirements of the gas supplier.

5. For clearances not specified in CAN/CSA-B149, clearance is in accordance with local installation codes and the requirements of the gas supplier.

6. IMPORTANT: Terminal must be placed such that it remains a minimum 12" above expected snow line. Local codes may have more specific requirements, and must be consulted.

4.6.2 Non-Direct Venting (Single Pipe) Clearances

	Description	US Non-Direct	Canadian Non-Direct
А	Clearance above grade, veranda, porch, deck, or balcony	12 in (30 cm)	12 in (30 cm)
В	Clearance to window or door that may be opening	48 in (120 cm) below or to side of opening; 12 in (30 cm) above opening	36 in (91 cm)
С	Clearance to permanently closed window	*	*
D	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet from the center line of the terminal	*	*
Е	Clearance to unventilated soffit	*	*
F	Clearance to outside corner	*	*
G	Clearance to inside corner	*	*
н	Clearance to each side of center line extended above meter / regulator assembly	*	36 in (91 cm) within a height 15 ft (4.57 m) above the meter/ regu- lator assembly
I	Clearance to service regulator vent outlet	*	36 in (91 cm)
J	Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance	48 in (120 cm) below or to side of opening; 12 in (30 cm) above opening	36 in (91 cm)
К	Clearance to a mechanical air supply inlet	36 in (91 cm) above if within 10 ft (3 m) horizontally	6 ft (1.83 m)
L	Clearance above paved sidewalk or paved driveway located on public property	*	7 ft (2.13 m)
Μ	Clearance under veranda, porch, deck, or balcony	*	12 in (30 cm)

Table 5. Non-Direct Vent Clearances

4.6.3 Venting Requirements in the Commonwealth of Massachusetts

In Massachusetts the following items are required if the side-wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches. From Massachusetts Rules and regulations 248 CMR 5.08

1. Installation of Carbon Monoxide Detectors

At the time of installation of the side wall vented gas fueled appliance, the installing plumber or gasfitter shall observe that a hard-wired carbon monoxide detector with an alarm battery back-up is installed on the floor level where the gas appliance is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard-wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side-wall horizontally vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for installation of hard-wired carbon monoxide detectors.

a. In the event that the side-wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard-wired carbon monoxide with alarm and battery back-up may be installed on the next adjacent floor level.

b. In the event that the requirements of the subdivision cannot be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements, provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm be installed.

2. Approved Carbon Monoxide Detectors

Each carbon monoxide detector shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

3. Signage. A metal or plastic identification plate

shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print no less than one-half (1/2) inch in size: "GAS VENT DIRECTLY BELOW, KEEP CLEAR OF ALL OBSTRUCTIONS".

4. Inspection The state or local gas inspector of the side-wall horizontally vented gas fueled appliance shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a) 1-4.

DO NOT COMMON VENT MASCOT ST UNITS. Mascot ST units are never permitted to share a vent with Category I appliances.

4.6.4 Common Vent Test

NOTE: This section does not describe a method for common venting Mascot ST units. It describes what must be done when an existing unit is **removed** from a common vent system.

At the time of removal of an existing water heater, the following steps shall be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

- 1. Seal any Not Used openings in the common venting system.
- 2. Visually inspect the venting system for proper size and horizontal pitch and determine there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
- 3. Insofar as is practical, close all building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building. Turn on clothes dryers and any appliance not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed.
- 4. Place in operation the appliance being inspected. Follow the lighting instructions. Adjust thermostat so the appliance will operate continuously.
- 5. Operate the main burner for 5 minutes then, determine if the cut-draw overflows to the discharge opening. Use the flame of a match or a candle or the smoke of a cigarette, a cigar or a pipe
- 6. Once it has been determined, according to the method indicated above, that each device connected to the drainage system is placed in the open air in an adequate manner. Install the doors and windows, fans, the registers of chimneys and gas appliances to their original position
- 7. Any malfunction of the venting system should be corrected so that the installation conforms to the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and (or) the installation codes CAN/ CSA-B149.1. If the size of a section of the evacuation system must be changed, the system should be modified to comply with the minimum values of the relevant tables of appendix F of the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and (or) the installation codes CAN/CSA-B149.1

<u>NE PAS ÉVENT COMMUNE MASCOTTE ST UNITÉS</u>. Mascotte ST unités ne sont jamais autorisés à partager un évent Catégorie I avec les appareils.

Au moment du retrait d'une chaudière existante, les mesures suivantes doivent être prises pour chaque appareil toujours raccordé au système d'évacuation commun et qui fonctionne alors que d'autres appareils toujours raccordés au système d'évacuation ne fonctionnent pas:

- 1. Sceller toutes les ouvertures non utilisées du système d'évacuation.
- Inspecter de façon visuelle le système d'évacuation pour déterminer la grosseur et l'inclinaison horizontale qui conviennent et s'assurer que le système est exempt d'obstruction, d'étranglement, de fuite, de corrosion et autres défaillances qui pourraient présenter des risques.
- 3. Dans la mesure du possible, fermer toutes les portes et les fenêtres du bâtiment et toutes les portes entre l'espace où les appareils toujours raccordés au système d'évacuation sont installés et les autres espaces du bâtiment. Mettre en marche les sécheuses, tous les appareils non raccordés au système d'évacuation commun et tous les ventilateurs d'extraction comme les hottes de cuisinière et les ventilateurs des salles de bain. S'assurer que ces ventilateurs fonctionnent à la vitesse maximale. Ne pas faire fonctionner les ventilateurs d'été. Fermer les registres des cheminées.
- 4. Mettre l'appareil inspecté en marche. Suivre les instructions d'allumage. Régler le thermostat de façon que l'appareil fonctionne de façon continue.
- 5. Faire fonctionner le brûleur principal pendant 5 min ensuite, déterminer si le coupe-tirage déborde à l'ouverture de décharge. Utiliser la flamme d'une allumette ou d'une chandelle ou la fumée d'une cigarette, d'un cigare ou d'une pipe.
- 6. Une fois qu'il a été déterminé, selon la méthode indiquée cidessus, que chaque appareil raccordé au système d'évacuation est mis à l'air libre de façon adéquate. Remettre les portes et les fenêtres, les ventilateurs, les registres de cheminées et les appareils au gaz à leur position originale.
- 7. Tout mauvais fonctionnement du système d'évacuation commun devrait être corrigé de façon que l'installation soit conforme au National Fuel Gas Code, ANSI Z223.1/NFPA 54 et (ou) aux codes d'installation CAN/CSA-B149.1. Si la grosseur d'une section du système d'évacuation doit être modifiée, le système devrait être modifié pour respecter les valeurs minimales des tableaux pertinents de l'appendice F du National Fuel Gas Code, ANSI Z223.1/NFPA 54 et (ou) les codes d'installation CAN/CSA-B149.1

4.7 Air Supply and Vent Connections

4.7.1 Vent / Air Pipe Lengths

Water Heater	3" Combustion Air / Vent Pipe	2" Combustion Air / Vent Pipe
model	Max	Max
MSTWW199	100´ (30M)	50´ (15M)

Table 6. Maximum Vent / Air Pipe Lengths for either 3" or 2 " Pipes

Note : For each elbow, reduce maximum allowable length

- 5 feet (1.5M) for each 3-inch 90-degree elbow
- 2.5 feet (0.75M) for each 3-inch 45-degree elbow
- 5 feet (1.5M) for each 2-inch 90-degree elbow
- 4 feet (1.2M) for each 2-inch 45-degree elbow
- Max 6 elbows for 3" vent, Max 4 elbows for 2" vent

4.7.2 Direct Venting

The water heater uses 3" or 2" diameter exhaust and 3" or 2"diameter intake air ducts. To ensure the draw of air directly from and exhaust of air directly to the outside of the building, create an airtight seal from the water heater collar to the vent termination.

(For installations in Canada) field-supplied plastic vent piping must comply with CAN/CGA B149.1 (latest edition) and be certified by the Standard For Type BH Gas Venting Systems, ULC-S636. Components of this listed system must not be interchanged with other vent systems or unlisted pipes or fittings. All plastic components and specified primers and glues of the certified vent system must be from a single system manufacturer and must not be intermixed with another system manufacturer's parts.

This water heater has a built-in control to limit the exhaust temperature.


■Tightening — Water Heater Collar (Socket) to Vent Pipe & Inlet Pipe

Canada has adopted standard ULC S636 which requires the following additional items. The following steps for cement application are highlighted:


■Clean and dry your selected PVC, CPVC vent pipe and Laars Water Heater collar (socket).

- You can select to the size of vent pipe(2" & 3"), according to the installation conditions.
- Push the pipe into the collar (socket) until it touches the bottom of the socket fitting.

3" pipe

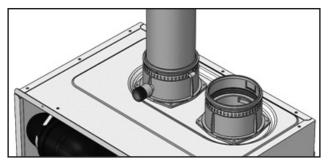

2" pipe connected, using an adapter

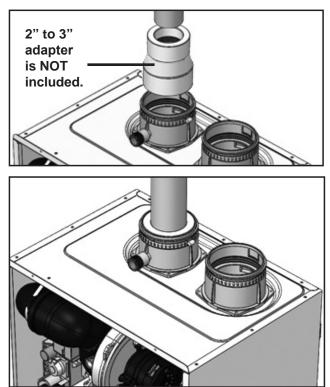

4.7.3 **Single Venting**

Read and Follow Sections 4.3 Guidelines First.

1. Insert the termination end cap into the intake air duct.

2. Provide two openings to allow for circulation of combustion air as specified by ANSI Z224.1/NFPA 54 or CAN/CGA B-149.1:

Model	MSTWW199
Maximum Input (BTU/H)	199,000
Indoor make up air is provided, a minimum free area of 1 in 2 per 1,000 BTU/H	199 in 2 14 1/4" (W) x 14 1/4" (H)




4.8 Vent / Air Pipe Termination

All Terminations:

• After connecting terminals, install vent screens on both the vent and air inlet.

Two 3" vent screens are included with each unit. Additional replacement screens are available for purchase.


2" Vent Screen P/N - FT1508 3" Vent Screen P/N - FT1730

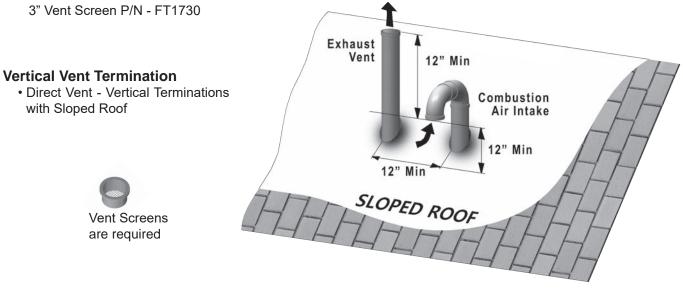


Horizontal Vent Termination

• Direct Vent - Sidewall Termination



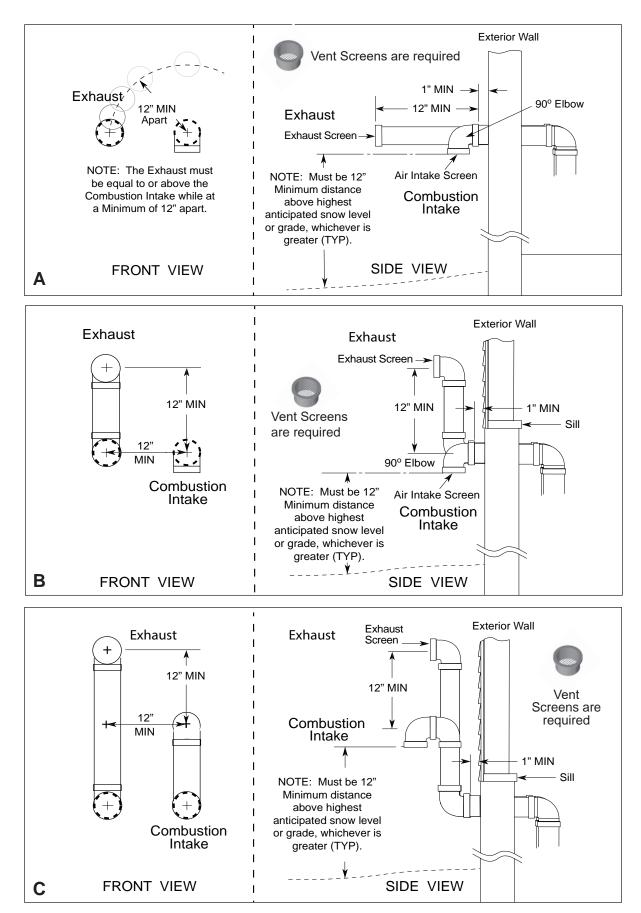

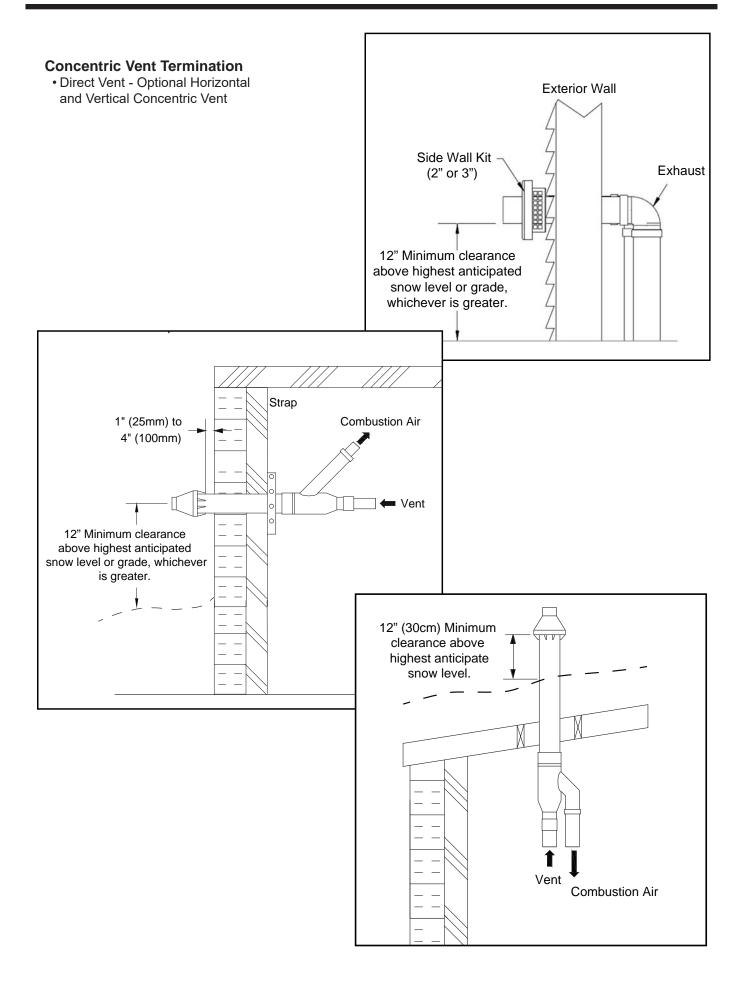

4.9 Gas Supply and Piping

Gas piping should be supported by suitable hangers or floor stands, not the appliance.

Review the following instructions before proceeding with the installation.

- Verify that the appliance is fitted for the proper type of gas by checking the rating plate. Mascot ST will function properly at elevations up to 10,000 feet (3050 m). Refer to Section 4.12 for High Altitude Settings.
- 2. Refer to Table 7, Table 8, and Table 9 to size piping.
- 3. For minimum and maximum gas supply pressures, see Table 10.
- 4. Run gas supply line in accordance with all applicable codes.
- 5. Locate and install manual shutoff valves in accordance with state and local requirements.
- 6. A sediment trap must be provided upstream of the gas controls.
- 7. All threaded joints should be coated with piping compound resistant to action of liquefied petroleum gas.
- The appliance and its individual shutoff valve must be disconnected from the gas supply piping during any pressure testing of that system at test pressures in excess of 1/2 PSIG (3.45kPa).
- The unit must be isolated from the gas supply system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 PSIG (3.45kPa).
- 10. The appliance and its gas connection must be leak tested before placing it in operation.
- 11. Purge all air from gas lines.

A CAUTION

PRV (included) must be installed immediately at water heater outlet with no valves between.

PRV (inclus) doit être installé immédiatement à sortie chaudière avec pas de vannes entre.

WARNING:

Open flame can cause gas to ignite and result in property damage, severe injury, or loss of life.

NOTE: The Mascot ST appliance and all other gas appliances sharing the gas supply line must be firing at maximum capacity to properly measure the inlet supply pressure. The pressure can be measured at the supply pressure port on the gas valve. Low gas pressure could be an indication of an undersized gas meter, undersized gas supply lines and/or an obstructed gas supply line.

SCHED 40 METAL PIPE CAPACITY FOR 1.50 SPECIFIC GRAVITY					
UNDILUTED PROPANE					
NOMINAL PIP	NOMINAL PIPE SIZE @ 11" W.C. INLET AND 0.5" W.C. PRESSURE DROP				
SIZE	1/2"	3/4"	1"		
LENGTH	MAXIMUN	/ CAPACIT	Y IN THOUSANDS OF BTU PE		
HOUR					
20	200	418	787		
40	-	287	541		
60	-	231	434		
80	-	197	372		
100	-	175	330		
· · · · · · · · · · · · · · · · · · ·					

NOTES: 1. Follow all local and national propane gas codes for line sizing and equipment requirements. 2. Verify that inlet gas pressure remains between 4 and 13 inches of water column before and during operation. *Source: ANSI Z223.1-80 National Fuel Gas Code.*

Table 7. Nominal Pipe Size, Propane

SCH 40 METAL PIPE CAPACITY FOR 0.60 SPECIFIC GRAVITY NATURAL GAS

		.30 W.C. I INEGOUNE DINOT
LENGTH	3/4"	1"
FT	CUBIC FEET O	F GAS PER HOUR
20	190 3	50
40	130 2	45
60	105 1	95
80	90 1	70
100		

Table 8. Nominal Pipe Size, Natural Gas

EQUIVALENT LENGTHS OF STRAIGHT PIPE FOR TYPICAL SCH 40 FITTINGS

NOMINAL PIPE SIZE				
FITTING	1/2"	3/4"	1"	
LINEAR FEET				
90° ELBOW	3.6	4.4	5.2	
TEE	4.2	5.3	6.6	

Table 9. Equivalent Pipe Lengths

4.9 Gas Supply and Piping (continued)


The gas connection fitting on the unit is 3/4" male NPT.

- The supply line must be sized for the maximum output of the water heater model being installed. If there are additional gas appliances from the main supply line, you must measure sizes of the supply line according to the COMBINED total maximum BTUH draw for the appliances as if they were all operating at the same time.
- Measure the length of the gas supply line from the gas meter to the Water Heater.
 Use the tables in this manual or refer to the gas line manufacturers sizing information to determine the correct supply pipe size.
- The gas shut-off valve in the gas supply line should be installed close to the unit.


- To facilitate any future maintenance, it is also recommended that an approved gas union fitting be installed in the supply line between the shut-off valve and the 3/4" male NPT connection on the Water Heater.
 - Install an approved gas line pipe to gas line connection under the Water Heater. Include manual shut off valve and gas union connection, as shown.
 - 2) Test gas pressure to make sure it meets the minimum standards and does not exceed the maximum standards for the water heater.
 - Leak test the gas line pipe before placing the unit in operation. Use approved leak detector liquid solutions only to check for leaks.


Do not operate the water heater until all connections have been completed and the heat exchanger is filled with water.

■ Water Heater MUST be installed downstream of the gas meter for adequate gas supply.

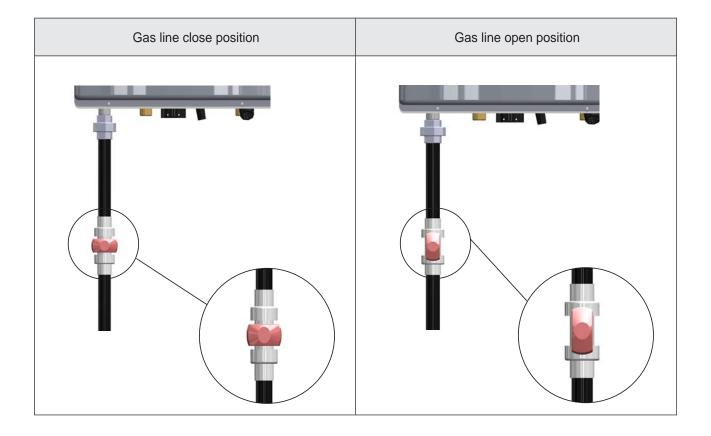



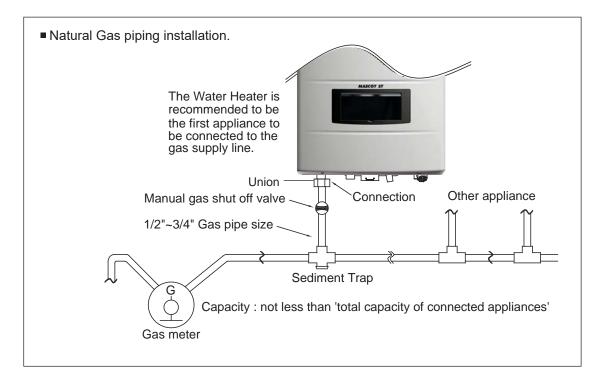

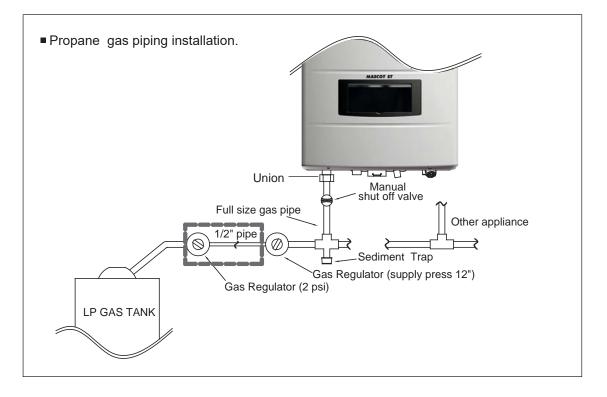

4.10 Gas Supply Pressure

- Refer to the illustration. Check the gas inlet pressure measurement from inlet gas pressure port.(Loosen the port bolts before you check the gas inlet pressure.)
- 1. The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5 kPa).
- 2. The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa).

Natural Gas		LP Gas	
Maximum	10.5″	Maximum	13.0″
Pressure	WC	Pressure	WC
Minimum	3.5″	Minimum	8.0″
Pressure	WC	Pressure	WC

4.11 Gas Setup and Adjustment

Follow these steps.

Continue to next page.

- 1. Establish a call for heat. You may need to disconnect the outdoor reset if you are making this gas conversion during warm weather.
- 2. Set up your combustion analyzer and place the sensor in the combustion test port.
- 3. Per Table 15 for Max fire, change dip switch 6 to ON and 7 to OFF. The unit will cycle up to MAX fire.
- 4. Wait for your combustion analyzer to stabilize (This may take up to 3 minutes depending on your analyzer). Then measure your CO₂ for Max fire. Refer to Table 10 for acceptable MAX fire combustion readings. DO NOT ADJUST CO2 AT MAX FIRE, ONLY AT MIN FIRE.

Manifold pressure Inlet Gas pressure port Offset Fire Adjustment Screw Adjust ONLY when in MIN Fire and when using a combustion



port.

analyzer.

See Section 4.13 for step by step details.

> Installer is required to verify combustion settings as part of the installation process. CO should not exceed 300 ppm.

Standard Factory Setting is for MIN Fire. 9.0% $CO_2 @ 0 - 2,000$ ft altitude (Natural Gas).

CO2 Val	1105	Natural Gas (NG)	Propane Gas (LP)
CO2 values		2" or 3" VENT	2" or 3" VENT
FTCW (all sizes	MAX FIRE	8.5 - 10.5%	9.5 - 11%
and all altitudes	MIN FIRE	8 - 10%	9 - 10.5%

Table 11. CO₂ Values

Manifold pressure		'NG' type combustibility	'LP' type combustibility
MAX FIRE MAX FIRE MIN FIRE	-0.11" to -0.17" WC	-0.07" to -0.11" WC	
	MIN FIRE	-0.10" to -0.16" WC	-0.06" to -0.10" WC


Table 12. Manifold Pressures

- 5. Change dip switch 6 to OFF and 7 to ON. The unit will cycle down to MIN fire.
- Wait for your combustion analyzer to stabilize. Then measure the CO₂ for MIN fire. Refer to Table 10 for acceptable MIN fire combustion readings.
- 7. Open the gas valve adjustment port by removing the cap screw with a 4mm Allen wrench
- 8. Use the Allen wrench to make a minor adjustment (1/8) to increase or decrease CO₂.
- 9. It may be necessary to go back and forth between MAX fire and MIN fire several times (making adjustments only at MIN fire) before CO2 levels are acceptable. Be sure to put the adjustment port cap screw back into the valve when done.
- Once the CO₂ and manifold pressure measurements for both MIN and MAX fire are acceptable per Table c, set dip switches 6 and 7 to the OFF position for nominal fire (normal operation).

4.12 Gas High Altitude Setting (no adjustment is needed below 2000 feet)

The Mascot ST has been set up at the factory for altitudes of less than 2,000 ft, but it may be installed at elevations up to 10,000 ft for use with Natural Gas or Propane. If the installation is at an altitude of greater than 2,000 ft, then altitude settings need to be adjusted in the Installer Mode as describe below.

NOTE: Above 2,000 ft (610 m), the water heater will de-rate by 2-4% for each 1,000 ft (305 m) of altitude gain.

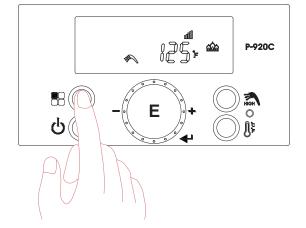

- High Altitude settings (2,000 ~ 10,000 ft)
- 1. With the Power 🖒 turned OFF, press the 'Modes button' 🗗 for 5 seconds to get into the Installer Parameters Mode.
- 2. Turn the dial (E) until '9:HA' appears.
- 3. Press the dial (E).
- 4. Set the high altitude value by turning the dial. Refer to table.
- 9:HAChoose the correct value from the
following four options.0 20 ~ 1,999 ft (0 609 m)2 52,000 ~ 4,999 ft (610 1,523 m)5 85,000 ~ 7,999 ft (1,524 2,438 m)8 108,000 ~ 10,000 ft (2,439 3,048 m)
- 5. Press the dial again (E) to save the setting.
- 6. Press the 'Modes button' 🗖 for one second, to Save the number and to go back to initial status.

4.13 Gas Conversion.


The Mascot ST cannot be converted from Natural Gas to Propane (or vise-versa) in the field by non-certified technicians. Contact the Factory or your manufacturer's representative.

4.14 Plumbing Guidelines.

- Ensure pipe material is suitable for the local codes and industry standards.
- The pipe must be cleaned and without any debris.
- Do not apply torch heat within 12" of the bottom connections of the unit.
- The pipe size used for supply heating water should be the same size used for the return heating water.
- The size of the hot water pipe should be 3/4" diameter.
- Isolation valves(Shutoff valve) will be used.
- All piping should be insulated.

Applicable Backflow Preventer

- Apply a backflow preventer valve in the make-up water supply (water Inlet) to the unit as required by local codes.

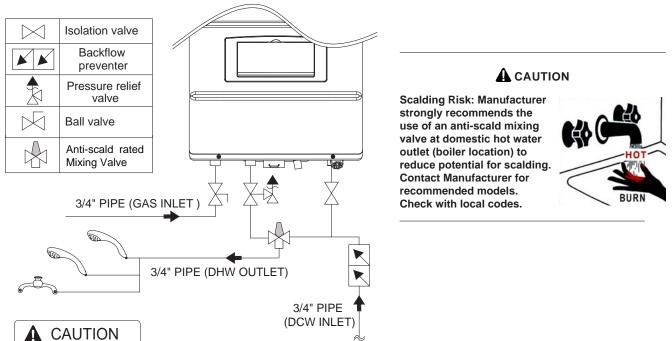

- Use at least the MINIMUM pipe size for all Water Heater loop piping
- DWH pipe minimum size: 3/4"

When using external recirculation mode with the built-in pump, observe the following maximum recirculation pipe lengths including fittings (3/4" pipe is recommended):

-1/2" Pipe- 100' (30m) of equivalent length -3/4" Pipe- 500' (150m) of equivalent length. Lengths in excess of these limits will require an external recirculation pump.


Water Quality

Potable water is defined as drinkable water supplied from a utility or from a well, in compliance with EPA secondary maximum contaminant levels (40 CFR Part 143.3) as shown in Table 13. Water quality must be within these maximum allowable parameters. If your water contains contaminants in quantities greater than outlined by EPA, then water treatment is required and additional maintenance may also be required. If you suspect that your water is contaminated in any way, discontinue use of the appliance and contact a qualified technician.

Contaminant	Maximum Allowable Level	Contaminant	Maximum Allowable Level
Total Hardness	200 mg/l (12 grains/gallon)	Manganese	0.05 mg/l
Aluminum	0.05 to 0.2 mg/l	рН	6.5 - 8.5
Chloride	250 mg/l	Sulfate	205 mg/l
Copper	1 mg/l	Total Dissolved Solids (TDS)	500 mg/l
Iron	0.3mg/l	Zinc	205 mg/l

Page 31

Table 13. Water Quality Specifications

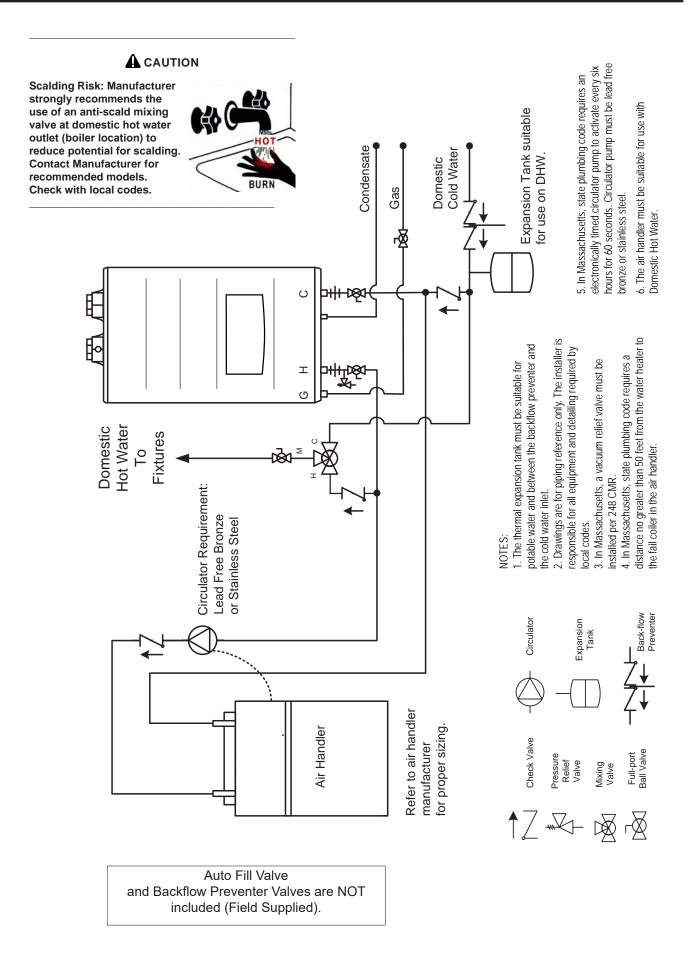

4.15 Disposal of Condensate

- High efficiency gas condensing Water Heaters create condensation when operating. Condensation has acidic (pH) of approximately 4-5.
- Condensate must be drained in accordance with all local regulations. Follow your local code with regards to the disposal of condensation.
- One of 4 disposal methods must be followed 1. to floor drain
- 2. to neutralizer drain (optional kit *)
- 3. to laundry tub
- 4. to condensate pump (field supplied)
- If a neutralizer is installed, periodic replacement of the lime stone (or neutralizing agent) will be required. The rate of depletion of the lime stone varies upon usage of the Water Heater.

During the first year of operation, please check the neutralizer every few months for depletion.

Apply only corrosion-resistant materials for the condensate drain lines such as 1/2" PVC, CPVC, Polypropylene pipe or included plastic hose.



Category II & IV water heaters must be installed with a means provided for the drainage of condensate.

Catégorie II & ; IV chauffe-eau doit être installé avec une moyens prévus pour l'évacuation des condensats.

Condensate is mildly acidic (pH=5), and may harm some floor drains and/or pipes, particularly those that are metal. Ensure that the drain, drainpipe, and anything that will come in contact with the condensate can withstand the acidity, or neutralize the condensate before disposal. **Damage caused by failure to install a neutralizer kit or to adequately treat condensate will not be the manufacturer's responsibility.**

* Contact Laars to order Kit# A2123601

4.16 Pressure Relief Valve

🚺 WARNING


An approved 'Pressure Relief Valve' must be included in this installation. The Valve must be an approved ASME HV Relief Valve, installed on the DHW supply line for domestic hot water loop as close to the unit as possible. (Valve size 3/4", maximum 150psi).

4.17 Electrical Wiring Connections

WARNING

- Install wiring and electrically ground Water Heater in accordance with authority having jurisdiction or in the absence of such requirements follow the National Electrical Code, NFPA 70, and/or CSA C22.1 Electrical Code-Part 1 in Canada.
- ELECTRICAL SHOCK HAZARD For your safety, turn off electrical power supply at service entrance panel before making any electrical connections to avoid possible electric shock hazard. Failure to do so can cause severe personal injury or death.
- This appliance must be electrically grounded. Ensure the electrical receptacle, in which the water heater will be plugged into, is properly grounded; if wiring directly.
- Do not attach the ground wire to the gas or the water piping as plastic pipe or dielectric unions may isolate the Water Heater electrically.
- The wiring diagrams contained in this manual are for reference purposes only.
- Refer to this diagram and the wiring diagram of any controls used with the Water Heater. Read, understand and follow all wiring instructions supplied with the controls.

- Do not disconnect the power supply when the unit is in normal operation.
- Damage caused by freezing is not covered under the warranty.
- Manual(Rocker) switch maximum allowable current for each circulator is 16 amps at 125VAC.
- (Housing : Nylon #66 UL 94V-2, Rocker : Nylon #66 UL 94V-2, Terminal : Copper Alloy)

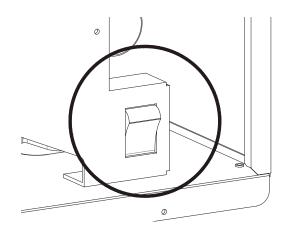

4.18 DIP Switches

There is one set of DIP switches.

DIP switches 6 and 7 must be set to OFF when operating the water heater normally.

DIP Switch Function		OFF	ON
1-3	Machine power Do NO		Move.
4	OVER-RIDE Inlet DHW Flow Limiter	OFF	ON
5	Propane or Natural Gas	LP	NG
6	Max.	Normal	MAX Fire
7	Min.	Normal	MIN Fire







Shown in it's actual orientation in the unit.



Maximum flame detecting voltage	2.4V
Pre-purge time (Tp)	Maximum 10s, minimum 1s
Safety Time (igniting time) (Ts)	3.5s
Igniting interval time	<10s
Post-purge time (Tip)	180s
Over-heating 1,2,3 protection detection time	<1s
Temperature sensor fault detection time	<2s
Nr. of trial for ignition (Ntl)	10
DHW water SET temperature range	35°C~ maximum DHW setpoint temperature(default: 60°C)
DHW water OFF temperature	DHW target temperature + DHW differential temperature(15°C)
DHW water ON temperature	Below DHW target temperature +3°C
DHW water ON minimum water flow	2ℓ(12Hz)
DHW water OFF minimum water flow	1.5ℓ(8Hz)

Table 14. System Control Settings

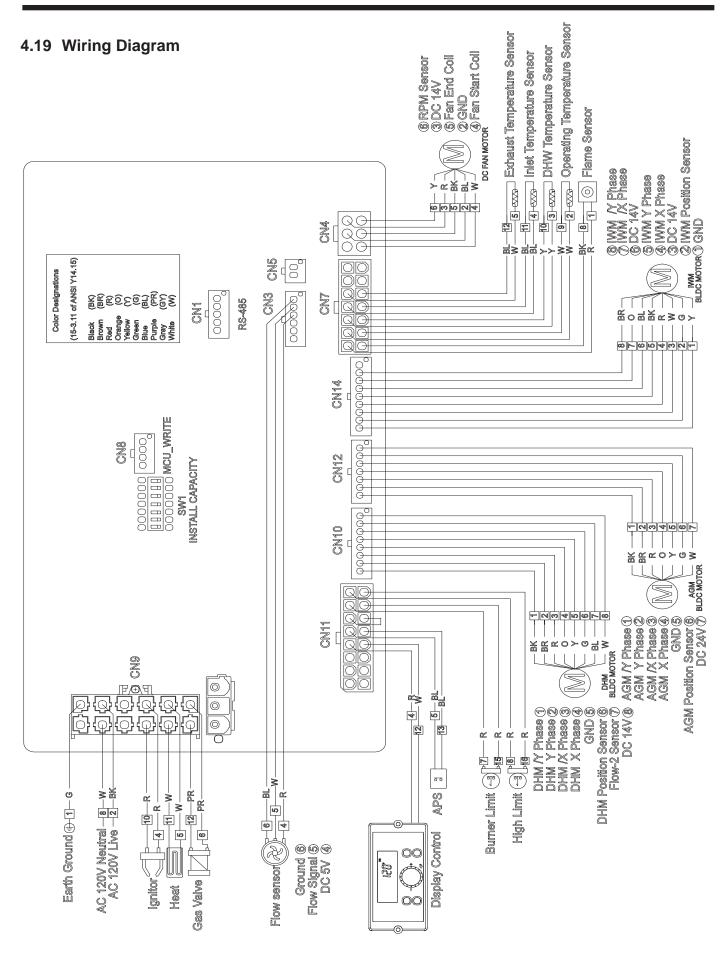

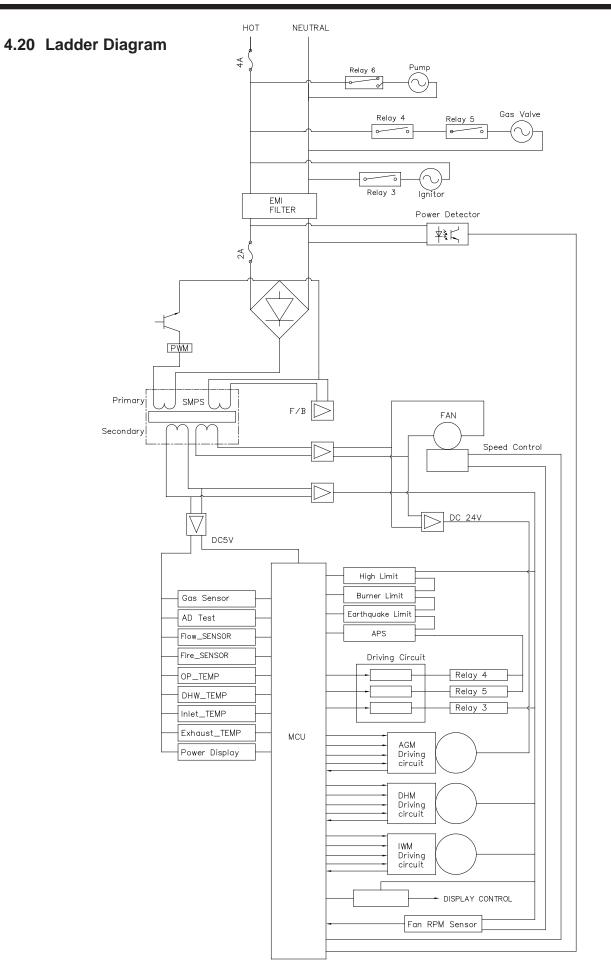

4.21 Electrical Connections


Connector				
#, Location, Type	PIN	Label	Descriptions	HT SELV
	1	-	CASE GROUND	-
	2	L	Power Supply Line	HT (120VAC)
	3	CP1	Not Used	HT (120VAC)
CN9	4	IT	Igniter	HT (120VAC)
65001WS-12	5	L(HT)	Heater	HT (120VAC)
	6	GV	Gas Valve	HT (120VAC)
	7		EARTH GROUND	HT (120VAC)
	8	N	Power Supply Neutral	HT (120VAC)
	9-12	<u>∽</u> N <i>→</i>	AC Power COM Line	HT (120VAC)
CN1	1	DO (05	RS485 +	SELV (5VDC)
SMW250-03	2	RS-485	RS485 -	SELV (5VDC)
	3		-	-
	1		Not Used	-
	2	FAN	GND	SELV (30VDC)
CN4 LWD1140-06	3		VDD	SELV (14VDC)
LVVD1140-00	4		Fan power(start coil)	SELV (30VDC)
	5		Fan power(end coil)	SELV (30VDC)
	6		Fan speed feedback signal	SELV (14VDC)
	1		GND	SELV (5VDC)
	2	MCU ISP	ISP /Reset port	SELV (5VDC)
SMW250-04	3		ISP TOOL0 Data port	SELV (5VDC)
	4		VCC	SELV (5VDC)
	1	HWL	Not Used	-
	2 10	LWL	Not Used	-
	3	HD	Not Used	-
CN11 LWD1140-16	4	ТН	Connect to the Display Control(Thermostat)	SELV (14VDC)
	5	APS	Air Pressure Switch	SELV (14VDC)
	7	BL	Burner Limit	SELV (14VDC)
	8	HL	High Limit	SELV (14VDC)

4.22 Electrical Connections (continued)

Connector				
#, Location, Type	PIN	Label	Description	HT SELV
1		F.S	Flame Detect Sensor	SELV (5VDC)
	2	OP.S	Operation water temperature sensor	SELV (5VDC)
	9	01.0		
	3	DH.S	DHW temperature sensor	SELV (5VDC)
	10			
CN7	4	I.S	Inlet water temperature sensor	SELV (5VDC)
LWD1140-14	11		·	
	5	BG.S	Exhaust temperature sensor	SELV (5VDC)
	12			
	6	ST.S	Not Used	-
	13			
	7	SP.S	Not Used	-
	14		AGM Stepper motor coil /Y phase	SELV (24VDC)
	2	-	AGM Stepper motor coil Y phase	SELV (24VDC)
	3	-	AGM Stepper motor coil /X phase	SELV (24VDC)
CN12	4	AGM	AGM Stepper motor coil X phase	SELV (24VDC)
SMW250-07	5		GND	SELV (24VDC)
	6	-	AGM Stepper motor position	SELV (24VDC)
	7	-	VDD	SELV (14VDC)
	1		DHM Stepper motor coil /Y phase	SELV (24VDC)
	2	-	DHM Stepper motor coil Y phase	SELV (14VDC)
	3	-	DHM Stepper motor coil /X phase	SELV (14VDC)
0140	4	-	DHM Stepper motor coil X phase	SELV (14VDC)
CN10 SMW250-08	5	DHM	GND	SELV (14VDC)
	6	-	DHM Stepper motor position	SELV (14VDC)
	7	-	Not Used	SELV (14VDC)
	8		VDD	SELV (14VDC)
	1		GND	SELV (14VDC)
	2	-	IWM Stepper motor position	SELV (14VDC)
	3	-	VDD	SELV (14VDC)
	4	-	IWM Stepper motor coil X phase	SELV (14VDC)
CN14	5	IWM	IWM Stepper motor coil Y phase	SELV (14VDC)
SMW250-09	6		VDD	SELV (14VDC)
	7	-	IWM Stepper motor coil /X phase	SELV (14VDC)
	8	-	IWM power IWM Stepper motor coil /Y phase	SELV (14VDC)
	9	-	Not Used	-
	1		Not Used	SELV (5VDC)
	2	WPS	Not Used	SELV (5VDC)
CN3	3		Not Used	SELV (5VDC)
SMW250-06	4		VCC	SELV (5VDC)
	5	FLUX1	Water Flow Sensor	SELV (5VDC)
	6		GND	SELV (5VDC)
CN5	1		FAN RPM Check	SELV (5VDC)
SMW250-10	2	RPM	GND	SELV (5VDC)

SECTION 5 Control Display and Operation


5.1 Control Dial and Buttons

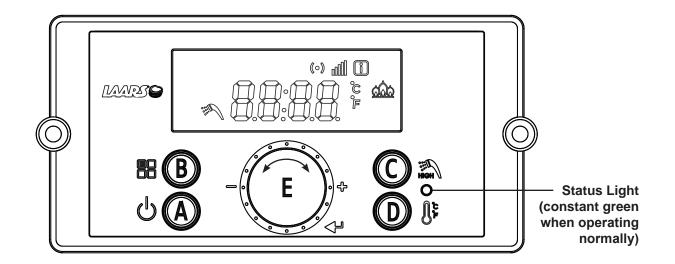

The Control Display has a Control Dial (E), 4 buttons (A, B, C, D), and a Liquid Crystal Display (with 72 back-lit segments). This section of this manual gives instruction on how to navigate into the many functions of the Mascot ST and to change temperature set points, set system variables and controller parameters.

Buttons		ttopo	Functionality		
	PRESS (Tap)		PRESS (Tap)	PRESS and HOLD (5 seconds)	
А	Q	Display Power	Turns Control Display ON/OFF		
В		Modes	Tap to return to menu	(If Display Power was On) Status Display Mode (If Display Power was Off) Installer Mode	
С	iii	Hot Water	DHW Set-Point LOW Range 95 - 120°F (35 - 49°C)	DHW Set-Point HIGH Range 121 - 140°F (49.5 - 60°C) (Only accessible from "DHW Set-Point LOW Range)	
D	<u>ا</u> ب			Toggle (°C / °F)	
E	\bigcirc	Scroll / Select	Turn to scroll, tap to select (clockwise or counterclockwise)		

5.2 LCD Overview

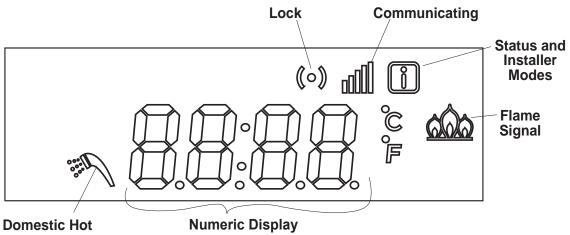

Water Mode

Lock mode	Buttons-locked mode icon
Communication	Communication icon
Status and Installer mode	The Status Mode or the Installer Mode is Active (all parameters)
Flame signal	Flame Signal icon
Numeric Display	Number and character display, to display all parameters
DHW mode	Water heater Set Point, can be adjusted

The LCD will illuminate when a user action is detected (a button is pressed) and will turn back off after 20 seconds.

* NOTE: The display will not allow changes when the lock mode () is activated.


To exit the Lock mode, press the **P** button.

Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that may have been under water.

5.3 Operating Mode


Operating Mode

After the Power is turned on, and/or the Control Display is turned on , the Control Display will go through a 'Start Up' checklist and briefly show a sequence of diagnostic codes before entering into the 'Operating Mode. It will then display the following information.

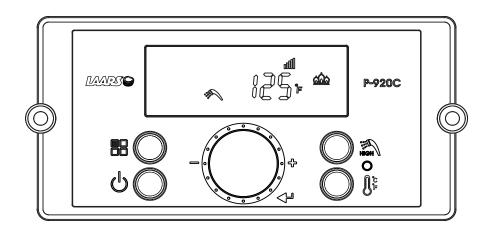

Indicate	Example
Current DHW temperature	125°F
If the flow is present	iiii Hool
If flame detected	<u>a</u> âa
Temperature sign Celsius or Fahrenheit letter	°C or °F
Communication state indicate	lha

5.4 Status Display Mode

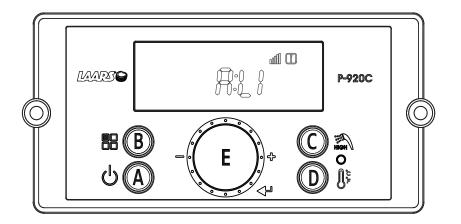

Ind	Index Parameter		Description
A: Li or	A: GA	Flow 1	Current flow value(Li: L/m, GA: GPM)
b: Fr Fan rpm C		Fan rpm	Current fan rpm value
C: Lc		Lock Mode	Lock mode is used(On) or unused(oFF)
d: OP		OP Temperature	Current Operating Temperature
E: dH		DHW temperature	Current DHW temperature
F: Eh		Exhaust Temperature	Current Exhaust temperature
h: In		Inlet Temperature	Current Inlet Temperature
L:rt		Running Time	Display Running Time
	1: PH	Power Supply Time	Power Supply Time: 100 hour increments
	2: rh	Burner Operating Time	Burner Operating Time: 1 hour incre- ments
L:rt	3: rH	Burner Operating Time	Burner Operating Time: 1,000 hour increments
	4: It	Ignition Attempts Number	Ignition Attempts Number: 10 times unit displayed
	5: IH	Ignition Attempts Number	Ignition Attempts Number: 10,000 times unit displayed
J: AG AGM Position AGM Parameter calibration		AGM Parameter calibration	

To change any of the above listed Status Parameters,

Press and Hold Button B 🚼 to get into the Status Display Mode.

Rotate Dial E until you find the Parameter that you wish to change. Tap Dial E to enter that Parameter.

Adjust to the setting that you require and then press (tap) Dial E to save and to Exit.

5.5 DHW Set Point Change Mode


The Mascot ST has a built in *INLET* DHW Flow Limiter and will automatically adjust the DHW flow rate up or down based on DHW outlet temperature at the inlet side of the water heater. If the temperature drops below the DHW setpoint, and the Mascot ST is at full fire, the inlet flow to the heat exchanger will be reduced. Therefore, the DHW outlet temperature will begin to rise to the desired setpoint. If the temperature begins to rise above the setpoint the flow will increase until full flow is reached. This feature ensures that the DHW is always the ideal temperature for the user.


If this feature is not desired, then the 'over-ride' to this feature must be turned ON. To turn ON the over-ride to the INLET DHW Flow Limiter. **Refer to Section 4.18**

- 1. Turn off the power to the Control Display.
- 2. Move DIP switch 4 to the OFF Position.

DHW Set Point Change Modes

The display shows the following information when changing water heating temperature set points.

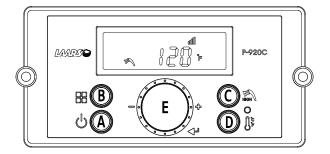

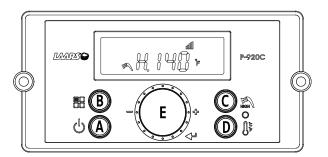

Indicate	Example
Current DHW set-point temperature	120°F
Temperature sign Celsius or Fahrenheit letter	°C or °F
If water heater display is communicating with the main controller normally, the communication icon will be indicated.	llin
When DHW set-point range is high : from 123°F (50.5°C) to 140°F (60.0°C)	H . 140°F
When changing DHW setpoint, the DHW icon will flash	HIGH

* Default DHW set-point is 120°F (49°C)

Changing between Celsius and Fahrenheit. When the button D \bigcup_{F}^{c} is pressed (for more than 5 seconds), temperature unit will toggle between °C and °F.

• DHW 95-120°F (35 - 49°C) LOW range (Default)

-To change LOW range, press the C Button. The DHW icon and current DHW LOW will flash (a flashing value means it can be changed).

-Turn dial E clockwise to increase and counterclockwise to decrease until desired temperature is reached. -Press dial E to save setpoint changes.

• DHW 121 - 140°F (49.5 - 60°C) HIGH range


-To change HIGH range, press and **HOLD** the C button for more than 5 seconds. The DHW icon and current DHW HIGH will flash (a flashing value means it can be changed).

-Turn dial E clockwise to increase and counterclockwise to decrease until desired temperature is reached. -Press dial E to save setpoint changes and to Exit.

Scalding Risk: Manufacturer strongly recommends the use of an anti-scald mixing valve at domestic hot water outlet (boiler location) to reduce potential for scalding. Contact Manufacturer for recommended models. Check with local codes.



5.6 Installer Mode

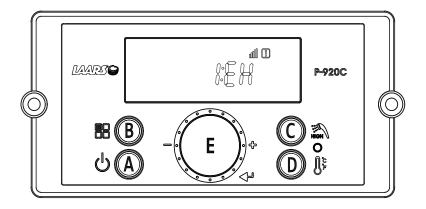

These changes are to be made only by a qualified technician.

To change any of the Installer Parameters, Start by turning OFF the Power to the

Display Control.


Then, with the power OFF, Press and HOLD (5 seconds) the Button B 🔀 to get into the Installer Mode. Rotate Dial E until you find the Installer Parameter that you wish to change. Tap Dial E to enter that Parameter. Adjust to the setting that you require and then press (tap) Dial E to save and to Exit. Finish by pressing button B

Index Numbers	Parameters	Description	
1: EH	History entry History fault code (E0~E9)		
2: cE	Clear Error History	Clearing of error History buffer	
3: In	System initialize	System initialize to default	
4: Fu	Flow unit	L/m or GPM	
5: FH	Max fan	Max fan Maximum fan parameter calibration	
6: FL	Min fan Minimum fan parameter calibration		
7: dr	Reset Number of Ignition Reset Number of Ignition		
8: dl	Maximum fan Adjust to maximum fan value(default: 0)		
9: HA High Altitude Settings		Choose from 0-2, 2-5, 5-8, and 8-10 (thousands) ft of altitude.	

10:Cn – Set the Cascade Address on the Master water heater. The Master should always be addressed 01. Then, Other water heaters should be addressed from 02 to 18 Sequentially.

- 11:CI This option dictates the numbers of units that will operate during every demand (during start-up, it is recommended to leave 01 [default] to avoid issues with low flows).
- 12:Eh Choose the vent option (ON Common vent; OFF individual vent) It is very important to choose the proper settings to avoid safety issues. NOTE: When common vent is selected, there will be a safety shutdown if one of the units loses power, or if there is an error with fan and or control board.
- 13: Ct Choose the total number of units in the cascade system (if incorrect number of units is selected, Er. 78 will occur).

5.7 Error Mode

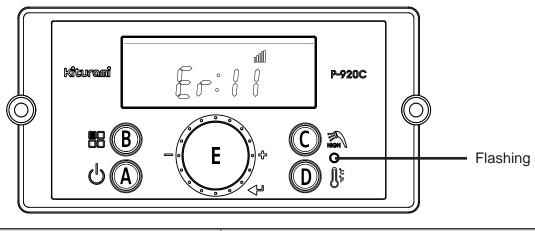

Indicate	Example
Error ' Er : ' will flash	Er:11
Error Code	Er:11
Display and Controller are communicating	- Line

NOTE: When communication between the Control Display and the main controller is lost, the will not be displayed.

SECTION 6 Error Codes

		(6

Error Code	Error Code Description	Possible Remedies	Recover methods
11	Ignition has Failed 10 (Ten) Times	 Press the Power button to clear the Error Code. If Error happens again: Monitor the gas pressure to the water heater while in operation. Ensure pressure is between 3.5 and 14" WC. Check gas valve wire. Ensure connection is secure. Check flame detection sensor. Ensure connections are secure. Normal operating settings are more than 2.5DC before ignition, less than 2.5DC after ignition. Check igniter transformer for proper connection. Clean the spark igniter with steel wool to remove oxides. Ensure proper separation (3-4 mm). Replace the spark igniter if damaged. Assure that the flame is stable when lit. If the problem persists, replace the main control. 	Hard Lock
16	Operating Temperature Sensor or DHW Sensor detects Water Temperature Greater than 199°F (93°C)	 This Error Code will go away when the DHW temperature decreases. If Error happens again: 1. Check if dip switch MAX Fire setting is ON. Switches 6 and 7 should be OFF for normal operation. 2. Check if DHW pipe is blocked. Ensure there is enough water flowing to the water heater. 3. Check DHW sensor at DHW outlet. If resistance is zero, replace the sensor. 4. Check Operating Temperature sensor at the heat exchanger. If resistance is zero, replace the sensor. 5. If the problem persists, replace the main control. 	Soft Lock
20	High Limit Overheat Switch – Closed is Normal, Open is Fault	Press the Power button to clear the Error Code.1. Inspect the High Limit Overheat switch. Ensure proper connections.2. Check High Limit Overheat switch resistance. If resistance is zero, replace the switch.3. If the problem persists, replace the main control.	Hard Lock
29	APS/Condensate – Closed is Normal, Open is Fault (Condensate Drain Trap)	 Press the Power button to clear the Error Code. 1. Check APS/Condensate and main controller connections. Ensure all are secure. 2. Check APS/Condensate resistance. If resistance is zero, replace the switch. 3. Check APS/Condensate hose. Ensure it is connected and in good condition. 4. Check condensate line and termination for blockages. 5. Check exhaust vent for blockages. 6. If the problem persists, replace the main control. 	Hard Lock
31	Inlet Water Sensor Open or Short	This Error Code will go away when inlet water temperature decreases.If Error happens again:1. Check inlet water temperature sensor. Ensure connections are secure.2. Check sensor resistance. If resistance is zero, replace the sensor.3. If the problem persists, replace the main control.	Soft Lock
32	DHW Sensor Open or Short	 This Error Code will go away when outlet water temperature decreases. If Error happens again: 1. Check DHW outlet temperature sensor. Ensure connections are secure. 2. Check sensor resistance. If resistance is zero, replace the sensor. 3. If the problem persists, replace the main control. 	Soft Lock

6.1 Error Codes


Error Code	Error Code Description	Possible Remedies	Recover methods
33	Operating Temperature Sensor Open or Short	This Error Code will go away when outlet water temperature decreases.If Error happens again:1. Check operating temperature sensor. Ensure connections are secure.2. Check sensor resistance. If resistance is zero, replace the sensor.3. If the problem persists, replace the main control.	Soft Lock
35	Exhaust Sensor Open or Short	 This Error Code will go away when exhaust temperature decreases. If Error happens again: 1. Check exhaust temperature sensor. Ensure connections are secure. 2. Check sensor resistance. If resistance is zero, replace the sensor. 3. Check exhaust vent for blockage. 4. If the problem persists, replace the main control. 	Soft Lock
39	Flame Detected after Exiting a Flame On Condition	 This Error Code will go away when the false flame condition is remedied. If Error happens again: 1. Check the water heater cover. Ensure it is secure. Flame detection sensor can detect an external light source. 2. Check flame detection sensor. Ensure connections are secure. Normal operating settings are more than 2.5DC before ignition, less than 2.5DC after ignition. 3. If the problem persists, replace the main control. 	Soft Lock
40	Gas Leakage is Detected in 10 Minutes, or three times within One Hour (Greater than 5 Seconds Each Time)	 IMPORTANT: If you smell gas, STOP! Follow the instructions on page 2, this manual, and call a qualified service technician or the fuel gas utility. Press the Power button to clear the Error Code. If Error happens again: 1. Check the water heater cover. Ensure it is secure. 2. Check gas connections for leakage with a soapy solution. Fix any leaks. 3. Check condition of the burner assembly. 4. If the problem persists, replace the main control. 	Hard Lock
41	Fan Speed too High with Flame On	 Press the Power button to clear the Error Code. If Error happens again: 1. Check the vent connections for blockages. 2. Check the burner assembly. 3. Check fan operation. If fan appears to be operating normally but RPMs are too low or too high, replace the fan. 4. If the problem persists, replace the main control. 	Hard Lock
43	Burner Overheat Switch Open	Press the Power button to clear the Error Code.If Error happens again:1. Check burner overheat switch connections. Ensure connections are secure.2. Check switch resistance. If resistance is zero, replace the switch.3. If the problem persists, replace the main control.	Hard Lock
61	Fan Speed Feedback Signal Abnormal	 This Error Code will go away when the condition is remedied. If Error happens again: 1. Check the connections to the fan. Ensure all are secure. 2. If the fan does not rotate during the ignition sequence, check for 120V power at the fan connection. If 120V power is present at the control, replace the fan. If the blower does not have 120V power, check power at the control. If 120V power is not present at the control, replace the control. 3. If the problem persists, replace the main control. 	Soft Lock

6.1 Error Codes (continued)


Error Code	Error Code Description	Possible Remedies	Recover methods
65	Supply Water Valve Error	 Press the Power button to clear the Error Code. If Error happens again: 1. Turn power OFF and ON at the main power switch internal to the water heater. 2. Check wiring connections to supply water valve. Ensure all are secure. 3. Replace supply water valve. 4. If the problem persists, replace the main control. 	
66	Mixing Valve Error	 Press the Power button to clear the Error Code. If Error happens again: 1. Turn power OFF and ON at the main power switch internal to the water heater. 2. Check wiring connections to mixing valve. Ensure all are secure. 3. Replace mixing valve. 4. If the problem persists, replace the main control. 	
67	AGM Error	 Press the Power button to clear the Error Code. If Error happens again: Turn power OFF and ON at the main power switch internal to the water heater. Ensure fan inlet hole is completely open after turning the power OFF and ON. Check wiring connections to the AGM. Ensure all are secure. Check AGM operation. Replace AGM components. If the problem persists, replace the main control. 	
72	Flame Signal Detected before Ignition	 This Error Code will go away when the condition is remedied. If Error happens again: 1. Check the water heater cover. Ensure it is secure. Flame detection sensor can detect an external ligh source. 2. Check flame detection sensor. Ensure connections are secure. Normal operating settings are more than 2.5DC before ignition, less than 2.5DC after ignition. 3. If the problem persists, replace the main control. 	
73	DIP Switch is abnormal	 This Error Code will go away when the condition is remedied. If Error happens again: 1. Check dip switches. Ensure switches match the ratings plate requirements of the water heater. See dip switch details, this manual, for default settings. 2. If the problem persists, replace the main control. 	
76	Poor Communication	Poor Communication This Error Code will go away when the condition is remedied. If Error happens again: If Error happens again: 1. Check connections from main control to display panel. If the problem persists, replace the display and/or the main control.	
94	Exhaust NTC detects This Error Code will go away when the condition is remedied. If Error happens again: If Error happens again: 1. Check if dip switch MAX Fire setting is ON. Switches 6 and 7 should be OFF for normal operation. 2. Check exhaust temperature sensor. Ensure connections are secure. 3. Check sensor resistance. If resistance is zero, replace the sensor. 4. Check exhaust vent for blockage. 5. If the problem persists, replace the control. 6. If the problem persists, replace the heat exchanger.		Hard Lock

6.2.1 Flame Detection

6.2 Fault Tree Analysis

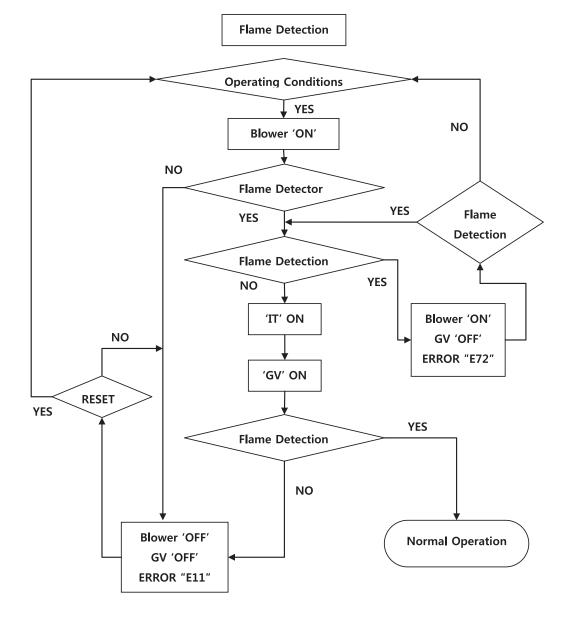


6.2.2 Gas Detection

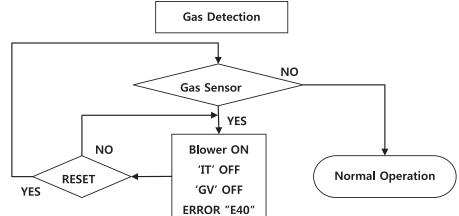


6.2 Fault Tree Analysis (continued)

6.2.3 Fan / Air Proving

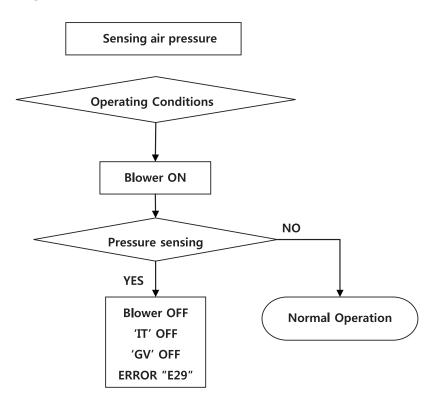

6.2.4 'I/T', 'DHW', 'OP' Sensor detects

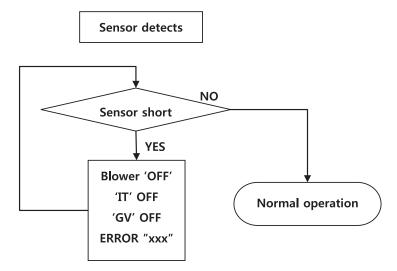

Error code	contents
E31	Inlet water NTC open or short
E32	DHW NTC open or short
E33	OP NTC open or short
E35	Exhaust NTC open or short

SECTION 7 Troubleshooting

7.1 Diagnostics

Before calling for service, review the following diagnostic steps first for saving time and money.

Question & Answer

Indicate	Indicator		
	Make sure that the ON/OFF button on the Control Panel has been turned ON.		
	If the monitor on the Control Panel is blank, make sure the power cord is plugged and fuses on the main controller in the units are good.		
Burner does not ignite even if hot water is opened.	Make sure that there is water supplied to the unit. The heater will be running when the inlet water flow sensor detects the flow over 0.5gpm.		
	Make sure the cold and hot water valve are not plumbed in reverse side.		
	Make sure that cold water and gas supply lines are opened.		
	Make sure that water lines are not frozen.		
	Make sure that the setting temperature on the unit is not too low.		
	Make sure that the filter in the cold water inlet line is not clogged with debris.		
Outlet water is not hot enough.	Make sure that the gas supply type is correct.		
	Check if the supply and manifold gas pressures are in accordance with specifications.		
	Make sure that the water flow sensor with three wires has been properly connected on the top of heat exchanger.		
	Make sure that the setting temperature on the unit is not too hot.		
Outlet water is too hot.	Make sure that the filter in the cold water inlet line is not clogged with debris.		
	Make sure that the gas supply type is correct.(Check the provided gas with the water heater model)		
Llat water temperature	Make sure that the filter in the cold water inlet line is clean.		
Hot water temperature	Check if the supply gas pressure is sufficient.		
The blower is still operating after the combustion stops.	This is normal because the blower still keeps operating for 3 minutes. If a BLDC motor is not running in 120VAC, replace the BLDC motor.		
	A leak of combustion gas between sealed chamber and exhaust duct inside the unit. Immediately call a qualified service technician for evaluation.		
Abnormal sounds come from unit during operation.	Improper venting termination, make sure that the venting termination complies with specification.		
	Check if the supply gas pressure is sufficient. Insufficient gas pressure will cause unstable burner flame and noise.		

7.1 Diagnostics (continued)

 Diagnostics and suggested corrective actions
 This controller is able to record information about the water heater's condition for the ten previous faults or errors. Refer to the 'Error Code' section of this Manual, (Section 6).

Display	Condition	Diagnostic	Corrective Action(s)	
Nothing shown on display control panel	Panel is not receiving power.	Check wiring for short circuit or incorrect wiring.	Correct wiring per wiring diagram including con- nection of transformer to the control.	
and blower running at full speed.		Check for 14V output of panel wire.	Push the 'A' button of control panel.	
Nothing is shown in display control panel and no	Control is not receiving 120V power.	Is there 120 Volts at the manual switch?	Correct the power supply from the manual switch.	
other Water Heater components are operating.		Check the water heater inside power manual switch.	Turn on the manual power switch inside the water heater case.	
		Check for 120 volts at the line voltage terminal inside the water heater case.	Correct wiring inside the water heater case using the wiring diagram in this manual.	
Nothing is shown on control panel, but water heater is oper-	Occurs when the communication is lost from the control er- to the display.	Check for loose connec- tions and proper pin alignment/ engagement on the Control's plug.	Check for continuity on the wire harness from the display to the control panel. See repair parts section for proper replacement part.	
ating.		Cycle power off and on using water heater power switch and check for operation.	Replace with new display module. See repair parts section for proper replacement part.	
TEMPERATURE RISE TOO QUICKLY	Occurs when supply water temperature in heat exchanger rises faster than 2°F per second during the first two minutes the burner is on.	Automatically resets after a few minutes delay or use manual reset.	See the message displayed TEMPERATURE SENSOR and follow procedures for loose connections.	
TEMPERATURE SENSOR	Occurs when a temperature sensor has electrically shorted(SHORT) or has become disconnected (OPEN).	NSOR temperature sensor F has electrically p shorted(SHORT) or has become disconnected	Reset using manual. Reset screen on control panel. (Power button)	Check all the temperature readings of the water heater on the DIAGNOSTICS - TEMPERA- TURES menu to determine if any sensors are currently displayed as SHORT or OPEN.
				Check wire harness for loose connections and pin engagement at sensor Connection and Control module.
			If problem persists after checking items above, replace Control. Refer to the installation manual 32~36page.	

Display	Condition	Diagnostic	Corrective Action(s)
	Occurs when flame is detected when there should be no flame	Reset using manual switch. Reset screen on control panel. (Power button)	Burner may be operating too hot due to incorrect combustion.
FLAME FAULT			Check for flame at burner via flame current with burner off. Turn off and watch flame through observation port. If flame continues after shutdown, replace gas valve.
BLDC Fan FAULT	BLDC Fan is unable to reach required speed or 0 RPM when it is turned off.	Reset using manual switch. Reset screen on control panel. (Power button)	Check wire harness for loose connections and pin engagement at blower connections.
			Water heater is in standby mode and fan is not running. If FAN SPEED is not 0 RPM then replace the fan.
IGNITION FAULT	Even if water heater went through 8 ignition attempts, but cannot detect flame.	Manual switch Power off and on.	Visual inspection of flue ways often will not be able to diagnose condition.
			Check incoming gas pressure with water heater off and at MAX fire. Adjust within limits on rating plate.
			Check for vent pipe and intake pipe restrictions or blockage
			Check burner fasteners and gaskets
			Check air intake pipe and orifice
GAS VALVE FAULT	The Control has detected a problem with its gas valve output circuit	Reset using manual switch. Reset screen on control panel. (Power button)	Check wire harness connections between gas valve and Control.
			If lockout reoccurs, replace Gas valve.

SECTION 8 Maintenance

Regular Maintenance

After Water Heater installation is completed, this manual should be placed in safe dry location near the water heater. Maintenance instructions should be carried out by these guidelines annually by a qualified technician.

Maintenance details, please refer to the instructions below.

Periodically	Please check installation location. Please check if water heater casing is closed. Please check power source.
Monthly	Please check vent pipe. Please check air inlet pipe. Please check relief valve. Please check condensate outlet.
Every 6 Months	Please check water heater piping (gas and water) Please check operate relief valve
No plan for long- term use.	Do not shut Water Heater down.

Maintenance procedures [Periodically]

- Check installation location

To prevent potential severe personal injury, death or substantial property damage, remove all contaminated materials.

If contaminants are found :

Remove products immediately from the area. In order to check the status of Water Heater, call a qualified service technician to inspect the Water Heater for possible damage from acid corrosion.

- Check if WATER HEATER casing is closed.

Check if there is any problem with the Water Heater casing and the two upper and lower screws are tightened well. Water Heater casing must be closed while it is running.

WARNING

DO NOT store combustible materials, gasoline or any other flammable vapors or liquids near the Water Heater. Remove them immediately or store them other places.

8.1 Annual Startup and General Maintenance

Maintenance procedures [Periodically]

- Check power source.

Make sure that the power cord is correctly connected. The main power line is connected to the manual switch box inside the Water Heater.

- Check status of the control panel.

Check status of the power supply. Please check for any debris on the button.

Maintenance procedures [Monthly]

- Check vent pipe.

Visually inspect the flue gas vent piping for detecting any signs of blockage, leakage or deterioration of the piping. Please contact a qualified service technician immediately if you find any problem.

- Check air inlet pipe.

Visually inspect the air inlet to be sure it is unobstructed. Inspect entire length of air piping for ensuring that piping is intact and all joints are properly sealed. Call your qualified service technician if you notice any problems.

- Check relief valve.

Inspect the Water Heater relief valve and the relief valve discharge pipe for any signs of weeping or leakage. If the relief valve often weeps, immediately contact your qualified service technician for inspecting the Water Heater and system.

- Check the condensate outlet.

While the Water Heater is running, check the discharge end of the condensate drain tubing.

Make sure that no flue gas is escaping from the condensate drain tubing.

If flue gas is continuously escaping, it is a serious problem. Call your qualified service technician for inspecting the Water Heater and condensate line. Also, refill the condensate trap if problem persists regularly.

- Visually inspect the vent terminal rodent screen.

If clogged with debris, clean the screens or replace it with spare parts.




- Cleaning Air Intake Filter

- To properly maintain the water heater, you should clean the air intake filter every 3 months. If not, you may encounter combustion issues

To clean air intake filter:

- 1. Press Power button on the control panel to turn off the water heater.
- 2. Disconnect power supply to water heater.
- 3. Remove front cover of water heater.
- 4. Pull the filter out of air intake adapter.

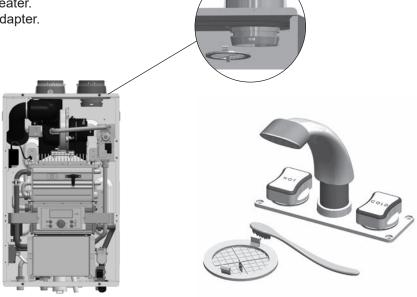

- 5. Remove the filter from the plastic assembly and clean it with a toothbrush and clean running water.
- 6. Dry the filter completely. And then reinsert the filter into the plastic assembly.
- 7. Replace the front cover. And then reconnect the power supply to the water heater.
- 8. Press Power button on the front panel to turn on water heater.
- Cleaning cold water Inlet Filter (Draining the Water Heater)
- 1. Place a bucket under the appliance to collect the residual water inside the water heater.
- 2. Press Power button on the front control panel to turn off the electrical power to the water heater. And then turn off the gas valve.
- 3. Close water supply value on the inlet to the appliance. If there is no value, turn off main water value.
- 4. Please open the hot water faucets completely.
- 5. Remove the cold water inlet filter. And then clean it with a toothbrush and clean running water.






6. To refill the water heater, follow the steps of "Draining the Water Heater" in reverse.

8.1 Annual Startup and General Maintenance (continued)


- Flushing the Water Heater

Flushing the Heat Exchanger of water heater is a complicated procedure and should only be done by an authorized technician or licensed professional. Keep in mind that improper maintenance can void your warranty.

- 1. Disconnect electric power to the water heater.
- 2. Close the shutoff valves on both hot water outlet and cold water inlet lines. (V1 & V2)
- 3. Connect one hose "D1" to the valve "V3" and place the free end in the bucket. Connect one of the hoses "D3" to the circulation pump outlet and the cold water inlet line at the valve "V4". Connect other hose "D2" to the circulation pump inlet and place the free end in the bucket.

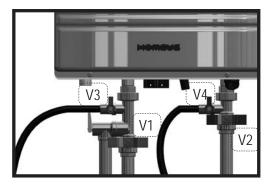

- 4. Pour the cleaning solution into the bucket. Place the drain hose (D1) and the hose (D2) to the pump inlet into the cleaning solution.
- 5. Open service valves (V3 & V4) on the hot water outlet and cold water inlet lines.
- 6. Turn on the circulation pump (Operate the pump and allow the cleaning solution to circulate through the water heater for at least 1 hour at a rate of 4 gallons per minute.)
- 7. Rinse the cleaning solution from the water heater as follows:
 - Remove the free end of the drain hose (D1) from the bucket.
 - Close service valve, (V4), and open shutoff valve, (V2). Do not open shutoff valve, (V1).
 - Allow water to flow through the water heater for 5 minutes.
 - Close shutoff valve (V2).

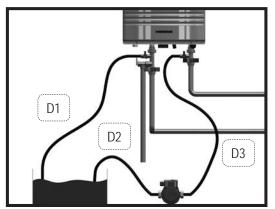

- 8. Disconnect all hoses.
- 9. Remove the cold water inlet filter from the water heater and clean out any residues.
- 10. Reinsert the filter and ensure the filter cap is securely tightened.
- 11. Connect electrical power to the water heater.

Maintenance procedures [Every 6 Months]

- Check piping. (gas and water)

Visually inspect for leaks around internal water piping. Also inspect external water piping, circulators, relief valve and fittings. Immediately call a qualified service technician to repair any leaks.

Leaks must be fixed by a qualified service technician immediately. Failure to comply with this instruction could result in severe personal injury, death or substantial property damage.

- Check relief valve operation

🔔 WARNING

Leaks must be fixed by a qualified service technician immediately. Failure to comply with this instruction could result in severe personal injury, death or substantial property damage. This discharge line must be installed by a qualified heating installer or a service technician.

🛕 WARNING

Before proceeding with maintenance, verify that the relief valve has be piped to a safe place, avoiding any possibility of scalding from hot water.

Before proceeding the procedures, verify that relief valve outlet has been piped to a safe place of discharge, avoiding any possibility of scalding from hot water.

If water flows freely, release the lever and allow the valve to seat. Watch the end of the relief valve discharge pipe to ensure that the valve does not weep after the line has had time to drain. If the valve weeps, lift the seat again to attempt to clean the valve seat. If the valve continues to weep, contact your qualified service technician for inspecting the valve and system. If water does not flow from the valve even though you have lifted the lever completely, the valve or discharge line may be blocked. Shut down the Water Heater immediately. Call your qualified service technician to inspect the water heater and system.

- Check burner condition

The burner should be cleaned or replaced by a qualified service technician when needed.

SECTION 9 Installation Check

9.1 Quick View


- Before Installing
- Make sure that there is enough space for installing Water and gas line.
- Verify vent/air termination is located as required.
- All models need for propane Conversion which requires a separate gas conversion manual.
- Install Water Piping
- Water Heater loop piping must be sized to the minimums listed in the Water Heater manual. Using smaller piping will cause performance problems. (Page 32)
- Install Vent & Air Piping
- Slide the air inlet pipe and vent pipe into the Water Heater pipe connector.
- Make sure the terminations are placed as required in the manual and that air intakes are at least 12 inches above normal snow line.
- Refer to the material check list in this guide for a list of items needed.
- Install Condensate Piping / Tubing & Components
- Fill out the material check list in this guide to ensure you have the tubing or PVC pipe and all components needed for the condensate piping.
- Connect internal components that are supplied with the Water Heater.
- Install Gas Piping
- Install a union and shutoff valve.
- Wire the Water Heater
- Connect power wiring and control wiring per water heater manual wiring diagram.(Section 5.17)
- Start up, Adjust & Test
- Follow the Water Heater manual instructions to clean the system if needed, then fill and check water chemistry.

9.2 Final check lists

- Final check : Installation Conditions.
- Is the Water Heater properly mounted on the wall?
- Is there space for a drain which is close to the Water Heater?
- Are there any combustible materials near the Water Heater and vent pipe?
- Is the air supply sufficient for proper operation of the Water Heater?
- Are the proper service clearances maintained?
- Is the distance between the Water Heater and point of vent termination minimized?
- Is the proper distance from windows, doors, and other intake vents maintained?
- Final check : Gas pipe installation
- Is the gas supply line equipped with a manual shut off valve?
- Is the gas supply line a minimum of 3/4" inner diameter?
- Is the gas supply line length and diameter adequacy to deliver the required BTU's?
- Has the gas supply line pressure been measured?
- Does the supply gas type match the type indicated on the water heater rating plate?
- Final check: Air/Vent pipe installation
- Has the Water Heater been vented with 3" or 2" PVC, CPVC, Polypropylene or BH Special Gas Vent (S636 PVC, CPVC) for Category IV appliances in accordance with this manual and/or your local code?
- Is the vent termination at least 12" above the exterior grade?
- Is the total vent length within the maximum vent length restriction?
- Have you checked the air/vent piping for leaks?
- Have you properly supported the vent termination?
- Are all vent runs properly supported?
- Is the vent sloped upward toward the vent termination at a rate of 1/4" per foot (2% grade)?
- Final check : Condensate drain installation
- Have you installed a condensate drain line from the Water Heater to a drain or laundry tub?
- Final check : Setting the DIP switches
- Are all DIP switches correctly set on the main board?

Final Check List (continued)


- Final check : Connecting the power supply
- Please check that the power is 120V AC.
- Have you checked the polarity of the electrical connection?
- Final check : Pressure relief valve
- · Have you installed an approved pressure relief valve on the water heater?
- Is the pressure relief valve of DHW Plumbing at least 3/4" in diameter?
- Have you installed the pressure relief valve on the hot water outlet pipe near the Water Heater?
- Final check : Burner flames
- The burner flame must be checked periodically for a constant proper blue color.
- If the flame does not appear normal, the burner may need to be cleaned.
- If the burner needs to be cleaned, it must be performed by a qualified service technician.

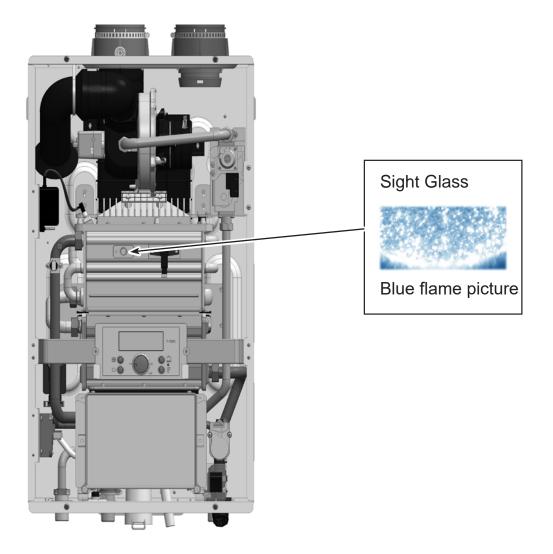


SECTION 10 Repair Part List and Diagrams

10.1 Parts List

IOM Ref	Laars #	Description
1	ST1001	Exhaust Vent Duct ASS'Y
2	ST1002	Case
3-1	ST1003	Front Cover
3-2	ST1004	Black Bezel
3-3	ST1005	Control display cover/window
4	ST1006	Ignition Transformer
5	ST1007	Gas Inlet Nipple
6	ST1008	Overheat Sensor
7	ST1009	DHW Supply Pipe ASS'Y
7-1	ST1010	DHW Supply Pipe
7-2	ST1011	Water Outlet Sensor
8	ST1012	Siphon ASS'Y
9	ST1013	Siphon Air Pressure Hose
10	ST1014	Air Pressure Switch
11	ST1015	Bracket for control display
12	ST1016	Control Display (920C)
13	ST1017	Printed Circuit Board
14	ST1018	PCB Bracket
15	ST1019	Manual Switch
16	ST1020	Flow Control Valve
17	ST1021	Water Inlet Pipe ASS'Y
17-1	ST1022	Water Inlet Pipe
17-2	ST1023	Water Inlet Sensor
17-3	ST1024	Water Inlet Filter
17-4	ST1025	Water Inlet Filter Cap
18	ST1026	Case Bracket (PAIR)
20	ST1028	Intake Inlet Duct ASS'Y
21	FT1894	Wall Mounting Bracket
31	ST1029	Heat Exchanger Assembly

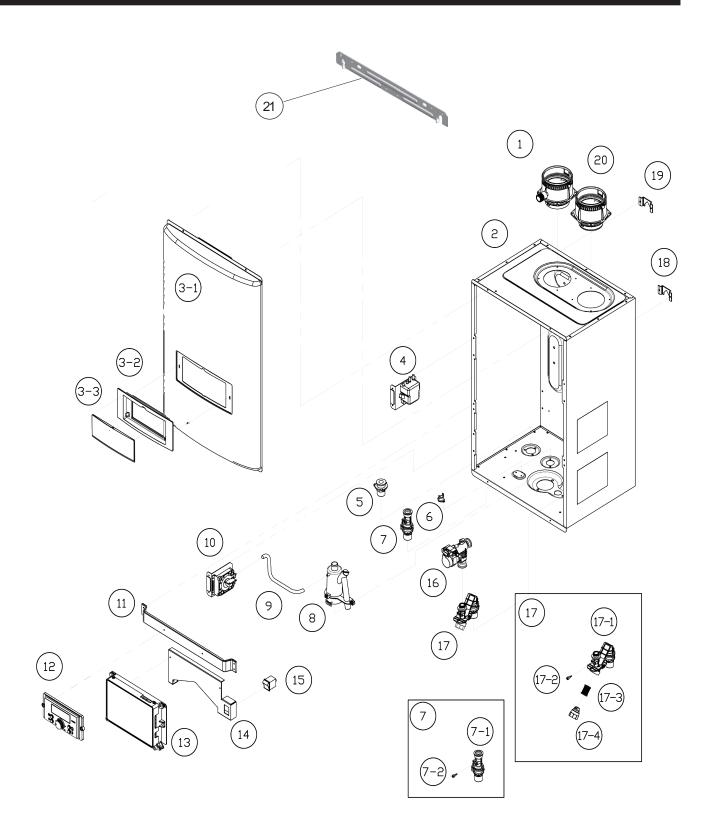


(31-1)

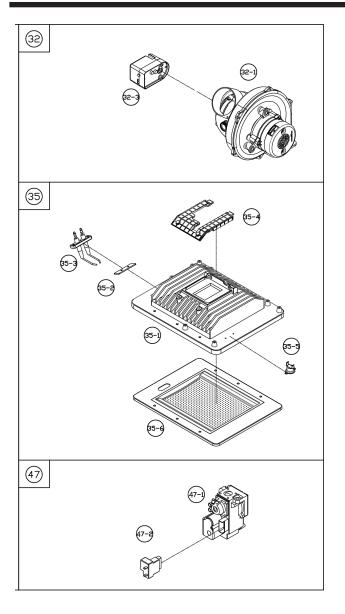

Part list

31-1	ST1030	Exhaust Pipe Assembly (upper)
31-2	ST1031	Exhaust Temperature Sensor
31-3	ST1032	Exhaust Packing 1
31-4	ST1033	Exhaust Pipe Assembly (lower)
31-5	ST1034	Exhaust Packing 2
31-6	ST1035	Condensate Gutter
32	ST1036	Blower Assembly
32-1	ST1037	Blower
32-2	ST1038	O-Ring
32-3	ST1039	AGM(Actuator)
33	ST1040	Silencer Elbow
34	ST1041	Silencer Body
35	ST1042	Burner Assembly
35-1	ST1043	Burner Head
35-2	ST1044	Ignition Rod Gasket
35-3	ST1045	Ignition Rod
35-4	ST1046	Burner Fixing Bracket
35-5	ST1047	Overheat Sensor (Burner)
35-6	ST1048	Burner Flange
36	FT1327	Flame Detector

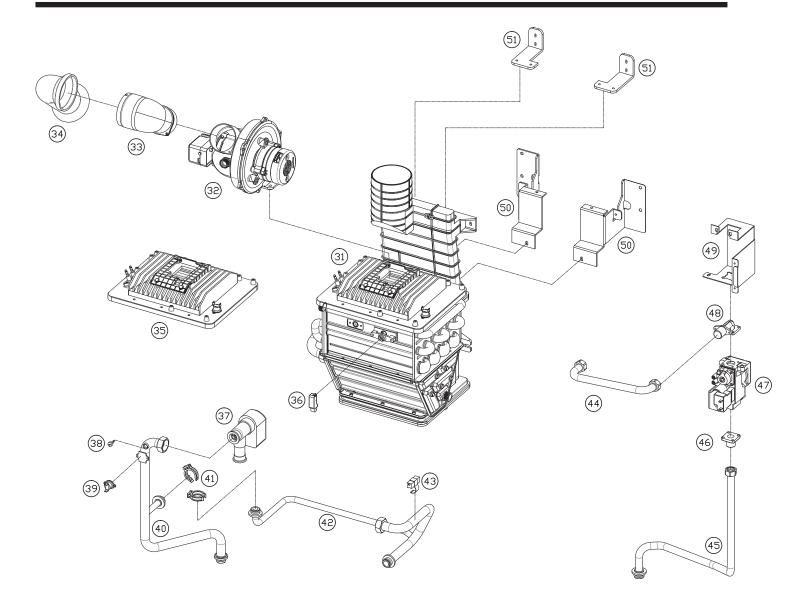

Part list

674.05.0	
ST1050	Mixing Valve
ST1051	Heat Exchanger Temperature Sensor
ST1052	Overheat Sensor (Heat Exchanger)
ST1053	DHW Outlet Pipe
ST1054	Water Hammer Clip
ST1055	DHW Inlet Pipe
ST1056	Ceramic Heater
ST1057	Gas Inlet Pipe (up)
ST1058	Gas Supply Pipe (to gas valve)
FT1538	Gas Valve Adapter (inlet)
ST1060	Gas Valve Assembly
ST1061	Gas Valve
ST1062	Gas Valve Plug
FT1728	Gas Valve Adapter(outlet)
ST1064	Gas Valve Bracket
ST1065	Case Bracket (Heat Exchanger) Left
ST1066	Case Bracket (Heat Exchanger) Right
ST1067	Case Bracket (Burner)
	ST1051 ST1052 ST1053 ST1054 ST1055 ST1056 ST1057 ST1058 FT1538 ST1060 ST1061 ST1062 FT1728 ST1064 ST1065 ST1066



Dimensions and specifications subject to change without notice in accordance with our policy of continuous product improvement.





Customer Service and Product Support: 800.900.9276 • Fax 800.559.1583 Headquarters: 20 Industrial Way, Rochester, NH, USA 03867 • 603.335.6300 • Fax 603.335.3355 9 Brigden Gate, Halton Hills, Ontario, Canada L7G 0A3 (905) 203-0600 Fax: (905) 636-0666